

## Adapters

Standard adapters are designed for analog and serial digital applications below 2 GHz. Shown below are some of the more popular types. Contact Bomar for a complete listing.

| Part Number     | 20 AL | Description                  | Fig. |
|-----------------|-------|------------------------------|------|
| 1303505         | ✓     | N Male to BNC Male           | 1    |
| 1313505         | ✓     | N Male to BNC Female         | 2    |
| 1323505         | ☑     | N Female to BNC Female       | 3    |
| 132A505         | ✓     | N Female to Female           | 4    |
| 151A505         | ✓     | N Right Angle Male to Female | 5    |
| 330A505         | ☑     | BNC Male to Male             | 6    |
| 332A505         | ☑     | BNC F/F 50Ω Splice           | 7    |
| 332A705         | ✓     | BNC F/F 75Ω Splice           | 7    |
| 335A544         | ☑     | BNC F/F 50Ω Panel            | 8    |
| 335A744         | ✓     | BNC F/F 75Ω Panel            | 8    |
| 335R544         | ☑     | BNC F/F 50Ω Isolated Panel   | 8    |
| 335R744         | ✓     | BNC F/F 75Ω Isolated Panel   | 8    |
| 343A505         | ✓     | BNC F/M/F "T" Adapter        | 9    |
| 345A505         | ✓     | BNC F/F/F "T" Adapter        | 10   |
| 5313501         | ☑     | TNC Male to BNC Female       | 11   |
| R0811           | ☑     | RCA Female to N Male         | 12   |
| R0842           | ✓     | RCA Male to BNC Male         | 13   |
| R0844           | ✓     | RCA Male to BNC Female       | 14   |
| R0847           | ✓     | RCA Male to F Male           | 15   |
| R0849           | ✓     | RCA Male to F Female         | 16   |
| ☑RoHS compliant |       |                              |      |







Fig. 1

Fig. 2

Fig. 3







