



## Description

The Model 63 Electronic Counter with 8 LCD digits brings more features to the user than ever before. Models are available that are simple 8-digit totalizers, while other models can bring together enough features to control a significant process.

Optional programmable alert or preset capability. The front end of the Model 63 Counter utilizes a high-contrast, reflective, 8-digit LCD with 0.32 inch [8mm] digits and seven icons, while at the back end Dry Contact, Low Voltage DC, and High Voltage DC and AC Inputs are available.

The Model 63 family is designed with a rugged plastic housing that is qualified to NEMA 4/4X when properly installed in a panel using a gasket that is supplied. In addition, the unit is compliant with CE EMC standards to EN61326:2001 for industrial applications, the unit is recognized by UL for U.S. and Canadian safety standards, and it is compliant to European RoHS and WEEE standards.

#### **Features**

- Reflective LCD Display with 8 large (8mm) digits
- · Choice of four counter types
  - Dual Range
  - Dual Counter
  - Up/Down Counter
- Choice of I/O compliment that includes
  - One or two inputs
    - Switch Input (No voltage)
    - Low DC Voltage (3-30VDC) <2mA</li>
    - High Voltage (20-300VAC or 10-300VDC) <2mA</li>

- Internal 15+ year battery
- Optional Front Panel Programming for flexible Redi-Alert or Preset Counter functionality
- Optional Redi-Alert Functions
  - 3 Redi-Alerts are available with Front Panel Programming option
- Optional Preset Counter Mode
  - Available with Front Panel Programming option or with Factory Programming
- NEMA 4/4X, 12, and IP66 rated
- EMC Compliant to EN61326:2001 for industrial environments
- CE compliant, UL and cUL recognized
- European WEEE & RoHS Compliant

## Capabilities

#### **Counter Operation**

Any of four different counting methods may be specified in each unit. These counting methods are factory set.

#### Dual Range

In the Dual Range Mode, the counter waits for a pulse on either Input A or Input B. The first input to have a pulse is recognized and its pulses are counted. The other input is ignored until the counter is reset. The rated speed for one of the inputs is 40 Hz and for the other input it is 500 Hz. This mode is best for single up-counter operation.

#### Dual Counter:

In the Dual Counter Mode, the pulses on Input A are counted in twocounters, Counter A and Counter B. Counter A is resettable and Counter B is not. Pressing and releasing the SEL switch swaps the counters on the display. This mode is good for maintenance applications where a total counts accumulated during operation is desired. The Dual Counter is only available with front panel programming.

## Up/Down Counter:

In the Up/Down Counter Mode, the pulses on Input A are added to the accumulated count and the pulses on Input B are subtracted from the accumulated count. The Up/Down Counter is capable of displaying negative numbers.

#### I/O Functions

The I/O functions can be mixed and matched to maximize the functionality of the counter. There are three types of inputs that the counter can accept. The interfaces for each are factory set. The inputs can be

- Switch open circuit or switch closure
- Low Voltage DC Low input is less than 1VDC and High Input is 3 30VDC.
- High Voltage DC or AC Low is less than 3VDC or 3VAC. A High Input is either 10 300VDC or 20-300VAC.



For the Switch and Low Voltage DC Counters, there are six screw terminals for all of the I/O. For the High Voltage Counters, there are four screw terminals for the I/O. The combinations of the I/O and power supply are factory set.

Pulse Inputs: The pulse inputs are those inputs that are counted.

Remote Reset: When the remote reset is at a high level, the counter will reset.

Front Panel Reset Enable: The counter will reset when the Front Panel Reset Enable is at a high level, and the Front Panel Reset Switch is

pressed.

The counter will not reset when the Front Panel Reset Enable is at a low level and the Front Panel Reset Switch is

pressed.

#### **Preset Function**

Each counter may be placed in a preset operating mode. This mode can be programmed through the front panel for those units that have the front panel programming option. It may also be factory programmed. IT IS NOT RECOMMENDED THAT THE PRESET FUNCTION BE USED AT THE SAME TIME THAT ALERTS ARE ENABLED.

The preset counters can be set up for either automatic reset or external (front panel or remote) reset.

#### **Alert Functions**

The Model 63 Counter can be programmed to operate as a maintenance device in which alerts notify the user of certain maintenance actions to be taken after accumulation of a predefined number of counts. When the accumulated count equals the predefined alert value, an icon is illuminated on the display. When the alert is reset, the icon is turned off, but the count value is not reset.

There are two types of alerts. The first is a break-in alert. A break-in alert only occurs once at the start of unit operation. The second type of alert is recurring. A recurring alert occurs continuously at a predefined period. When tied to a break-in alert, the recurring alert will not begin its count until the break-in alert has occurred.

The intervals for the recurring alert can be performed as start-to start or end-to-start. A start-to-start interval count starts when the last alert is turned on. The end-to-start interval count starts when the last alert is turned off.

The Model 63 Counter can support three alerts using front panel programming and four alerts when factory programmed. IT IS NOT RECOMMEDED THAT THE PRESET FUNCTION BE USED AT THE SAME TIME THAT ALERTS ARE ENABLED. In both cases, Alert #1 is a break-in alert that is tied to Alert #2, which is recurring. Alert #3 is recurring, and Alert #4 can be factory set as either break-in or recurring. If Alert #4 is break-in, then it is tied to Alert #3.

The Model 63 Counter can be programmed to be latched or kept on for a predetermined number of counts. When latched, an external reset is required to turn off the alert.

#### Front Panel

The liquid crystal display is reflective with dark characters on a light background. There are 8 digits on the display. The standard display contains seven icons which can be assigned as desired to either alerts or a preset.

Model 63 Counters with the front panel programming option are capable of being programmed for either alerts or the preset function. There are two front panel switches. To begin programming, the two switches are pressed simultaneously. The programming menu must be completed in its entirety to return to normal operation. The switch functions are described as follows:

SEL: During normal operation, the displayed counters will be swapped when the SEL switch is pressed and released. During programming, this switch is used to select options.

RST: During normal operation, the RST switch is used for front panel reset. During programming, the RST switch is used to enter an option.

#### Resets

Unless using alerts, a reset returns the display to zero. If using alerts, the reset turns an alert off. There are three different reset configurations available:

Non-Reset: The counter can never be reset. A non-reset unit also has no front panel programming option.

Remote Reset: A model with Remote reset has a dedicated terminal for performing the reset function. The unit resets when the remote reset signal is at a high level. When the reset signal is at a low level, accumulating counts can occur.

Manual Reset: Manual reset occurs when the RST switch on the front of the counter is pressed. Counting resumes upon release of the RST switch. The exception to this operation is in the Dual Counter case in which the non-resettable counter can not be reset.

Note: Some counters are equipped with a Manual Reset Enable Input. In this case, the Manual Reset Enable Input must be high for the RST switch to be functional.



# **Specifications**

Display: Figures: 8 LCD digits 0.32" [8mm] high

Annunciators Icon: A choice of 7 Icons 0.08" [2mm] high

Reset: Remote, manual & non-reset. Manual reset enable is available

on some models

Speed: Low speed: 0-40 counts per second (min. 12.5ms-on, 12.5ms-off

High speed: 0-500 counts per second (min. 1.0 ms-on, 1.0 ms-off

Inputs: Switch (no voltage)

DC Voltage:

Absolute voltage range: -0.5 VDC, minimum to

30.0VDC, maximum 3.0 VDC, maximum

VIH: 3.0 VDC, maximum VIL: 1.0 VDC, minimum

High Voltage AC/DC:

Absolute Maximum voltage: 300VAC/VDC

VIH: 10VDC/20 VAC, max. VIL: 3VDC/3 VAC, minimum

Power: Internally powered models: Self powered

(+15yrs lithium battery)

Battery Life: 15 years +
Mounting: Panel with clip
Terminations: Terminal block
Weight: 2 oz. [57q]

**Environmental:** Temp. (Storage & Operating):

-4°F to + 140°F [-20°C to +60°C]

Humidity: 0 to 95% RH, non-condensing

Vibration: Operating: 10 to 55 Hz, 0.01" [0.25mm]

double amplitude

Non-operating: 10 to 55 Hz, 0.03" [0.75mm]

double amplitude

Shock: Operating: 10G's Non-operating: 30G's

Dielectric: 1000 VAC 50/60Hz for 1 minute

Accuracy: 100% (provided signal meets stated parameters)

EMC Compliance: EN61326:1997 with A1: 1998 & A2:2001 for industrial

environments

**Enclosure:** NEMA 4/4X, 12, & IP66 compliance (from the front)

when properly mounted using the optional gasket


Approvals: CE compliant, UL & cUL recognized

Environmental Compliance: Compliant to the European WEEE & RoHS

#### **Notes**

- 1. When interfacing the Model 63 with a Solid State Relay or AC Sensor, the leakage current needs to be considered.
- 2. The Absolute Voltage Range and the Absolute Maximum Voltage are the voltages at which operation beyond the specified limits may result in damage to the unit.

### **Dimensions**

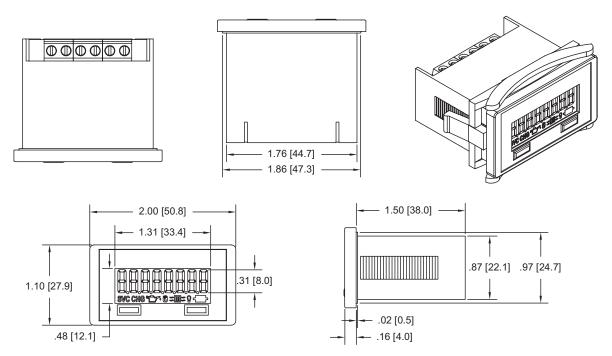

Panel Cutout: 1.79" [45.5mm] x 0.89" [22.6mm] Recommended Panel Thickness: 0.125" [3.1mm]

# **Available Icons**



SERVICE



OIL



AIR FILTER



MUFFLER



CHANGE



OIL FILTER



LAMP

Part Number	Description	Gasket
6300-0000-0000	DUAL RANGE COUNTER 40/500HZ DRY CONTACT INPUT REMOTE	5003-013
	RESET	
6300-0500-0000	DUAL RANGE COUNTER 40/500HZ DRY CONTACT INPUT	5003-013
	PROGRAMMING/FPRESET	
6300-0600-0000	DUAL RANGE COUNTER 40/500HZ DRY CONTACT INPUT FPRESET	5003-013
	**SPECIAL ORDER** MOQ = 50 PCS	
6300-1000-0000	DUAL RANGE COUNTER 40/500HZ 3-30 VDC INPUT REMOTE RESET	5003-013
6300-1500-0000	DUAL RANGE COUNTER 40/500HZ 3-30 VDC INPUT	5003-013
	PROGRAMMING/FPRESET	
6300-1600-0000	DUAL RANGE COUNTER 40/500HZ 3-30 VDC INPUT FPRESET	5003-013
	**SPECIAL ORDER** MOQ = 50 PCS	
6300-2500-0000	DUAL RANGE COUNTER 40/500HZ 10-300/20-300 VDC/VAC INPUT	5003-013
	PROGRAMMING/FPRESET	
6300-2600-0000	DUAL RANGE COUNTER 40/500HZ 10-300/20-300 VDC/VAC INPUT	5003-013
	FPRESET**SPECIAL ORDER ** MOQ = 50 PCS	
6301-2000-0000	COUNTER 40HZ - 10-300/20-300 VDC/VAC INPUT REMOTE RESET	5003-013
6308-0500-0000	UP/DOWN COUNTER 500HZ DRY CONTACT INPUT	5003-013
	PROGRAMMING/FPRESET **SPECIAL ORDER** MOQ = 50 PCS	
6308-0600-0000	UP/DOWN COUNTER 500HZ DRY CONTACT INPUT FPRESET	5003-013
	**SPECIAL ORDER** MOQ = 50 PCS	
6308-1500-0000	UP/DOWN COUNTER 500HZ 3-30 VDC INPUT	5003-013
	PROGRAMMING/FPRESET **SPECIAL ORDER** MOQ = 50 PCS	
6308-1600-0000	UP/DOWN COUNTER 500HZ 3-30 VDC INPUT FPRESET **SPECIAL	5003-013
	ORDER** MOQ = 50 PCS	
6308-2500-0000	UP/DOWN COUNTER 500HZ 10-300/20-300 VDC/VAC INPUT	5003-013
	PROGRAMMING/FPRESET **SPECIAL ORDER** MOQ = 50 PCS	
6308-2600-0000	UP/DOWN COUNTER 500HZ 10-300/20-300 VDC/VAC INPUT	5003-013
	PROGRAMMING/FPRESET **SPECIAL ORDER** MOQ = 50 PCS	
NOTE	PART NUMBERS MUST BE IN 63XX-X5XX-0000 FORMAT TO BE	
	PROGRAMMABLE	