




TERMINATION

- 1** Remove all but one twist per pair, smooth conductors and arrange in proper color sequence.

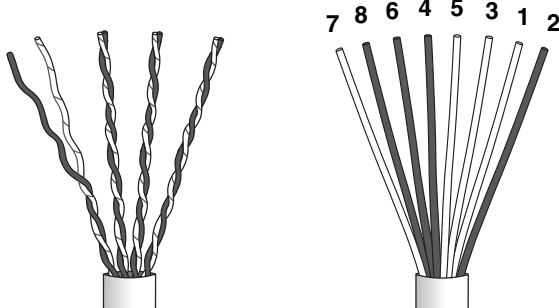


Mini-Com Mini-Jack Color-Coded Wire Positions


Part Numbers - CJ588**Y, CJ5E88**Y, CJD588**Y					
T568A			T568B		
2	GREEN	R3	2	ORANGE	R2
1	WHITE/GREEN	T3	1	WHITE/ORANGE	T2
3	WHITE/ORANGE	T2	3	WHITE/GREEN	T3
5	WHITE/BLUE	T1	5	WHITE/BLUE	T1
4	BLUE	R1	4	BLUE	R1
6	ORANGE	R2	6	GREEN	R3
8	BROWN	R4	8	BROWN	R4
7	WHITE/BROWN	T4	7	WHITE/BROWN	T4

See Page 2 for CJ64/66/88 Series Wiring Sequences


2

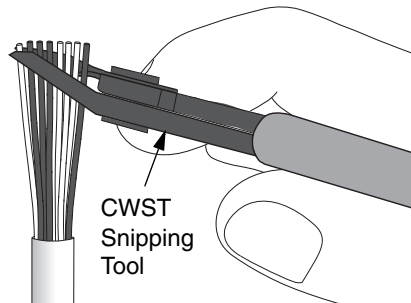


3

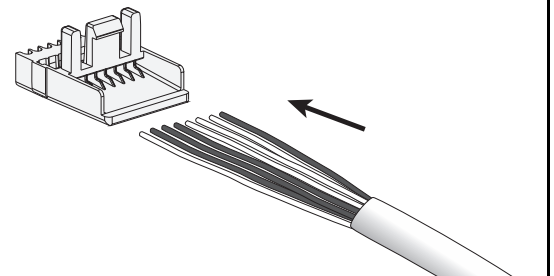


4

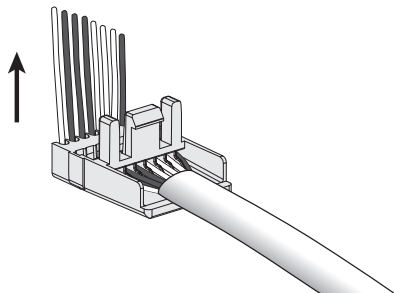


5

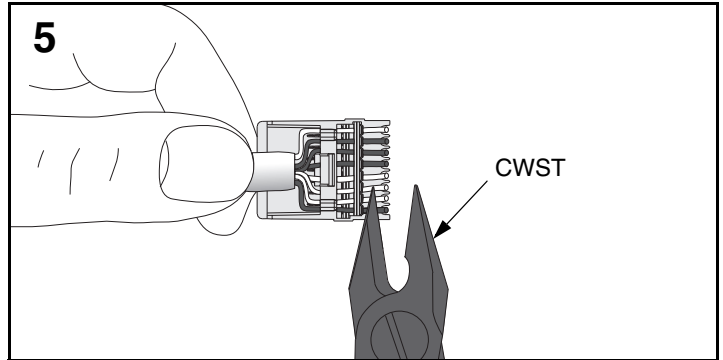


6

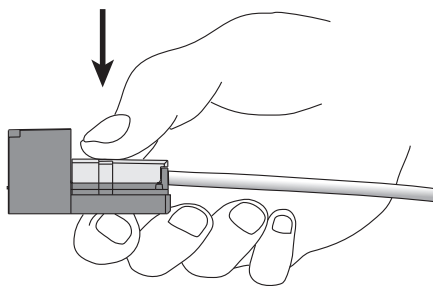




7

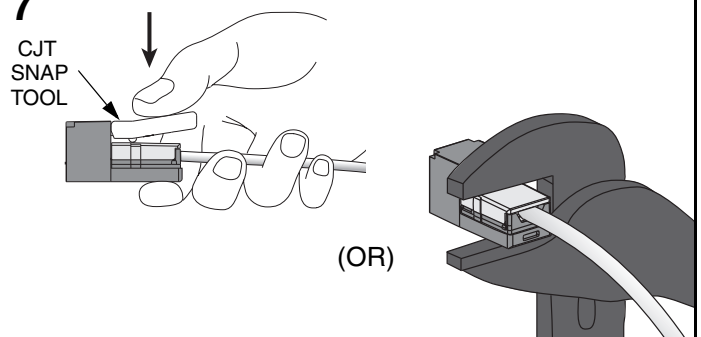

** Denotes color.

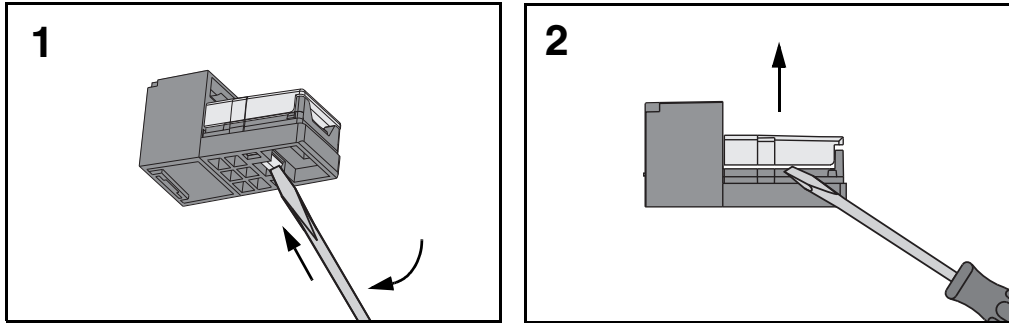TERMINATION CAP REMOVAL**CATEGORY 3 Mini-Jack CJ64/66/88 SERIES WIRING SEQUENCES**

10 Base-T	EIA/TIA 568A, ISDN	USOC 4-Wire (8 Pin Jack)	RJ45, USOC 8-Wire	EIA/TIA 568B, AT&T 258A, WECO	USOC 4-Wire, in 6 pin	USOC 6-Wire (8 Pin Jack)	USOC, RJ11/RJ25
1 WHT/GRN T3 2 GRN R3 3 WHT/BRN T4 4 NC NC 5 NC NC 6 BRN R4 7 NC NC 8 NC NC	1 WHT/GRN T3 2 GRN R3 3 WHT/ORG T2 4 BLU R1 5 WHT/BLU T1 6 ORG R2 7 WHT/BRN T4 8 BRN R4	1 NC NC 2 NC NC 3 WHT/ORG T2 4 BLU R1 5 WHT/BLU T1 6 ORG R2 7 NC NC 8 NC NC	1 BRN R4 2 WHT/GRN T3 3 WHT/ORG T2 4 BLU R1 5 WHT/BLU T1 6 ORG R2 7 GRN R3 8 WHT/BRN T4	1 WHT/ORG T2 2 ORG R2 3 WHT/GRN T3 4 BLU R1 5 WHT/BLU T1 6 GRN R3 7 WHT/BRN T4 8 BRN R4	1 WHT/ORG T2 2 BLU R1 3 WHT/BLU T1 4 ORG R2 5 6	1 NC NC 2 WHT/GRN T3 3 WHT/ORG T2 4 BLU R1 5 WHT/BLU T1 6 ORG R2 7 GRN R3 8 NC NC	1 WHT/GRN T3 2 WHT/ORG T2 3 BLU R1 4 WHT/BLU T1 5 ORG R2 6 GRN R3

 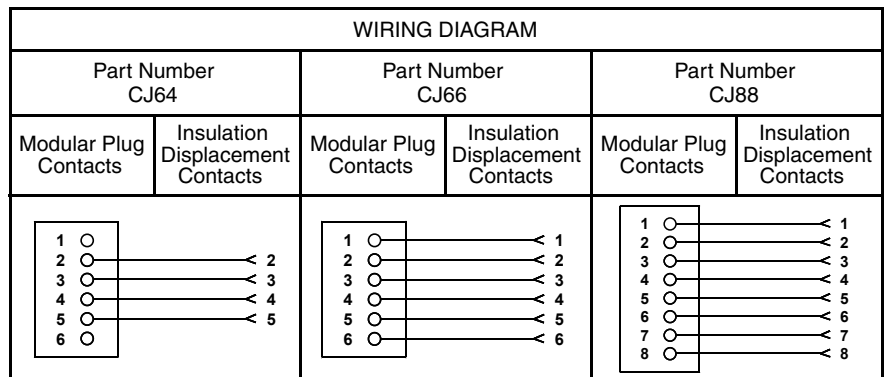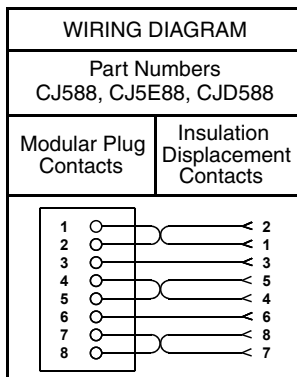WIRING DIAGRAMS FOR CJ588, CJ5E88, CJD588, CJ64/66/88 SERIES**Notes:**

- For specified performance, follow TIA/EIA 568-B installation guidelines.
- Jack Modules can terminate PVC or Plenum rated 22-24 AWG solid or stranded IWC cable with insulated conductor outside diameter ranging between 0.035 inch (0.88mm) and 0.048 inch (1.2mm).
- Jack Modules may be re-terminated a minimum of 10 times.
- For technical and performance information, consult Panduit Technical Support.
- MUAJC588 Jack Modules suit a standard switch mechanism pattern on various Australian faceplates.
- For Mini-Com Mini-Jack Shielded Jack Module instructions, refer to PN348*.

As with all Wiring Accessories, the following statements apply:

- Never install communications wiring during a lightning storm.
- Never install communications wiring in wet locations unless the jack is specifically designed for use in wet locations.
- Never touch uninsulated communications wiring or terminals unless the communication line has been disconnected at the network interface.
- Use caution when installing or modifying communication wiring.

For Instructions in Local Languages
and Technical Support:

www.panduit.com/resources/install_maintain.asp

PANDUIT
www.panduit.com

E-mail:
cs@panduit.com

Fax:
(708) 444-6993