 
 
 


Moeller HPL0211-2004/2005

		Conventional free air thermal current $I_{th} = I_e$ AC-1	Contacts		Circuit- symbol	Can be combined with basic unit	Type Article no.	Price See Price List Discount	Std. pack
		Open $I_{th} = I_e$ A	M = Make B = Break						
Auxiliary contact modules									
Side mounting auxiliary contacts									
	Screw terminals	16	1 M	—		DIL0(A)M DIL1(A)M DIL2(A)M	10SDILM 089080		5 off
		16	—	1 B			01SDILM 001930		
		16	1 M	1 B			11SDILM 024626		
		10	1 M	1 B		DIL0M — DILM820	DILM820-XHI11-SI 208281		1 off
		10	1 M	1 B		DIL0M — DILM820	DILM820-XHI11-SA 208282		
		10	1 M	1 B		DIL0M — DILM820	DILM820-XHI11V-SI 208283		
	Spring- loaded terminals	10	1 M	1 B		DIL0M — DILM820	DILM820-XHIC11-SI 229513		
		10	1 M	1 B		DIL0M — DILM820	DILM820-XHIC11-SA 229512		

Notes

Auxiliary contact module fitting options

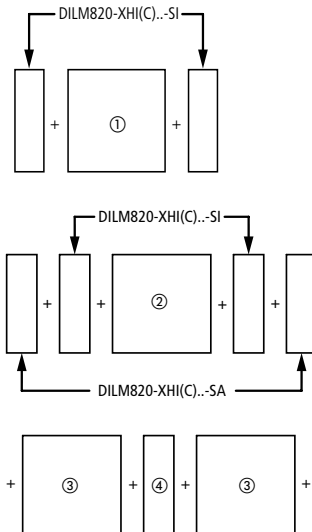

Max. 8 auxiliary contacts possible for:

- DIL3M80 to DILH2000 contactors

Max. 5 auxiliary contacts possible for:

- Contactors DIL0M to DIL2AM

2 DILM820-XHI11-SI auxiliary contacts are already fitted on:

- DIL3M80/22 to DILH2000 contactors

No auxiliary contacts can be fitted between the mechanical interlock and the contactor.

DILM820-XHI... cannot be combined with the ...SDILM auxiliary switch.

DILM820-XHI11-SI cannot be combined with DIL0(A)M-G.

