

# 3-1/2 Digit Analog-to-Digital Converters with Hold

### Features:

- Low Temperature Drift Internal Reference:
  - TC7116/TC7117 80 ppm/°C, Typ.
  - TC7116A/TC7117A 20 ppm/°C, Typ.
- · Display Hold Function
- Directly Drives LCD or LED Display
- · Zero Reading with Zero Input
- · Low Noise for Stable Display:
  - 2V or 200mV Full Scale Range (FSR)
- · Auto-Zero Cycle Eliminates Need for Zero
- · Adjustment Potentiometer
- True Polarity Indication for Precision Null Applications
- Convenient 9V Battery Operation: (TC7116/TC7116A)
- High-Impedance CMOS Differential Inputs:  $10^{12}\Omega$
- · Low-Power Operation: 10mW

### Applications:

- Thermometry
- Bridge Readouts: Strain Gauges, Load Cells, Null Detectors
- Digital Meters: Voltage/Current/Ohms/Power, pH
- · Digital Scales, Process Monitors
- · Portable Instrumentation

### **Device Selection Table**

Package Code	Package	Temperature Range	
CPL	40-Pin PDIP	0°C to +70°C	
IJL	40-Pin CERDIP	-25°C to +85°C	
CKW	44-Pin PQFP	0°C to +70°C	
CLW	44-Pin PLCC	0°C to +70°C	

### **General Description:**


The TC7116A/TC7117A are 3-1/2 digit CMOS Analog-to-Digital Converters (ADCs) containing all the active components necessary to construct a 0.05% resolution measurement system. Seven-segment decoders, polarity and digit drivers, voltage reference, and clock circuit are integrated on-chip. The TC7116A drives Liquid Crystal Displays (LCDs) and includes a back-plane driver. The TC7117A drives common anode Light Emitting Diode (LED) displays directly with an 8mA drive current per segment.

These devices incorporate a display hold (HLDR) function. The displayed reading remains indefinitely, as long as HLDR is held high. Conversions continue, but output data display latches are not updated. The reference low input ( $V_{REF}$ -) is not available, as it is with the TC7106/7107.  $V_{REF}$ - is tied internally to analog common in the TC7116A/7117A devices.


The TC7116A/7117A reduces linearity error to less than 1 count. Rollover error (the difference in readings for equal magnitude but opposite polarity input signals) is below  $\pm 1$  count. High-impedance differential inputs offer 1pA leakage current and a  $10^{12}\Omega$  input impedance. The  $15\mu V_{P-P}$  noise performance enables a "rock solid" reading. The auto-zero cycle ensures a zero display reading with a 0V input.

The TC7116A and TC7117A feature a precision, low drift internal reference, and are functionally identical to the TC7116/TC7117. A low drift external reference is not normally required with the TC7116A/TC7117A.

# Package Type

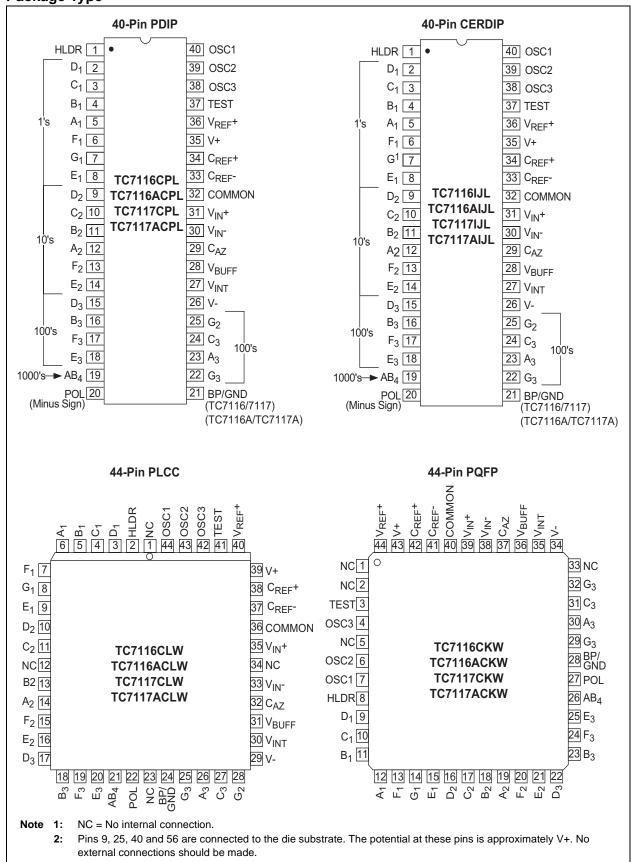

# **Typical Application**

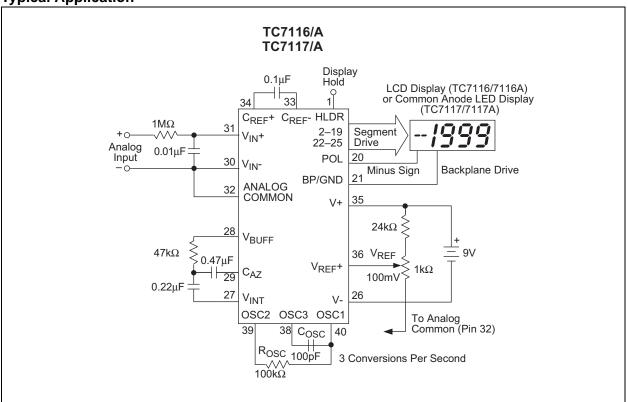

# 1.0 ELECTRICAL CHARACTERISTICS

## **Absolute Maximum Ratings\***

Supply Voltage:

Supply voltage.
TC7116/TC7116A (V+ to V-)15V
TC7117/TC7117A (V+ to GND)+6V
V- to GND9V
Analog Input Voltage (Either Input) (Note 1) V+ to V-
Reference Input Voltage (Either Input) V+ to V-
Clock Input:
TC7116/TC7116A TEST to V+
TC7117/TC7117AGND to V+
Package Power Dissipation; $T_A \le 70^{\circ}C$ (Note 2)
40-Pin CDIP2.29W
40-Pin PDIP1.23W
44-Pin PLCC1.23W
44-Pin PQFP1.00W
Operating Temperature:
C (Commercial) Device 0°C to +70°C
I (Commercial) Device 0°C to +70°C
Storage Temperature65°C to +150°C

\*Stresses above those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. These are stress ratings only and functional operation of the device at these or any other conditions above those indicated in the operation sections of the specifications is not implied. Exposure to Absolute Maximum Rating conditions for extended periods may affect device reliability.

### TABLE 1-1: TC7116/A AND TC7117/A ELECTRICAL SPECIFICATIONS

Electrical Characteristics: Unless otherwise noted, specifications apply to both the TC7116/A and TC7117/A at  $T_A = 25^{\circ}$ C, f<sub>CLOCK</sub> = 48kHz. Parts are tested in the circuit of the Typical Operating Circuit. Symbol **Parameter** Min Тур Max Unit **Test Conditions**  $Z_{IR}$ Zero Input Reading +0 Digital  $V_{IN} = 0V$ Full Scale = 200mV Reading Ratiometric Reading 999 999/1000 1000 Digital  $V_{IN} = V_{REF}$  $V_{REF} = 100 \text{mV}$ Reading R/O  $V_{IN}^{-} = + V_{IN}^{-} + \approx 200 \text{mV}$ Rollover Error (Difference in Reading -1 ±0.2 +1 Counts  $or \approx 2 V$ for Equal Positive and Negative Readings Near Full Scale) Linearity (Maximum Deviation from -1 ±0.2 +1 Counts Full Scale = 200mV or 2V Best Straight Line Fit) **CMRR** Common Mode Rejection Ratio  $V_{CM} = \pm 1V$ ,  $V_{IN} = 0V$ 50  $\mu V/V$ (Note 3) Full Scale = 200mV  $V_{INI} = 0V$ Noise (Peak to Peak 95% of Time) 15  $e_N$ Full Scale = 200mV Leakage Current at Input 1 10  $V_{IN} = 0V$ μV/°C  $V_{IN} = 0V$ Zero Reading Drift 0.2 1 "C" Device =  $0^{\circ}$ C to + $70^{\circ}$ C 1.0 μV/°C "I" Device = -25°C to +85°C

- Note 1: Input voltages may exceed the supply voltages provided the input current is limited to ±100µA.
  - 2: Dissipation rating assumes device is mounted with all leads soldered to printed circuit board.
  - 3: Refer to "Differential Input" discussion.
  - **4:** Backplane drive is in phase with segment drive for "OFF" segment, 180° out of phase for "ON" segment. Frequency is 20 times conversion rate. Average DC component is less than 50mV.
  - 5: The TC7116/TC7116A logic inputs have an internal pull-down resistor connected from HLDR, Pin 1 to TEST, Pin 37. The TC7117/TC7117A logic inputs have an internal pull-down resistor connected from HLDR, Pin 1 to GND, Pin 21.

# TABLE 1-1: TC7116/A AND TC7117/A ELECTRICAL SPECIFICATIONS (CONTINUED)

**Electrical Characteristics:** Unless otherwise noted, specifications apply to both the TC7116/A and TC7117/A at  $T_A = 25$ °C,  $f_{CLOCK} = 48$ kHz. Parts are tested in the circuit of the Typical Operating Circuit.

Symbol	Parameter	Min	Тур	Max	Unit	Test Conditions
TC <sub>SF</sub>	Scale Factor Temperature Coefficient		1	5	ppm/°C	V <sub>IN</sub> = 199mV, "C" Device = 0°C to +70°C (Ext. Ref = 0ppm°C)
		_	_	20	ppm/°C	"I" Device = -25°C to +85°C
	Input Resistance, Pin 1	30	70	_	kΩ	(Note 5)
	V <sub>IL,</sub> Pin 1	_	_	Test + 1.5	V	TC7116/A Only
	V <sub>IL,</sub> Pin 1	_	_	GND + 1.5	V	TC7117/A Only
	V <sub>IH,</sub> Pin 1	V <sup>+</sup> - 1.5	_	_	V	Both
I <sub>DD</sub>	Supply Current (Does not Include LED Current for TC7117/A)	_	0.8	1.8	mA	V <sub>IN</sub> = 0V
V <sub>C</sub>	Analog Common Voltage (with Respect to Positive Supply)	2.4	3.05	3.35	V	25kΩ Between Common and Positive Supply
V <sub>CTC</sub>	Temperature Coefficient of Analog Common (with Respect to Positive Supply)	_	 20 80	 50 	ppm/°C	"C" Device: 0°C to +70°C TC7116A/TC7117A TC7116/TC7117
V <sub>SD</sub>	TC7116/TC7117A ONLY Peak to Peak Segment Drive Voltage	4	5	6	V	V+ to V- = 9V (Note 4)
V <sub>BD</sub>	TC7116A/TC7116A ONLY Peak to Peak Backplane Drive Voltage	4	5	6	V	V+ to V- = 9V (Note 4)
	TC7117/TC7117A ONLY Segment Sinking Current (Except Pin 19)	5	8		mA	V+ = 5.0V Segment Voltage = 3V
	TC7117/TC7117A ONLY Segment Sinking Current (Pin 19 Only)	10	16	_	mA	V+ = 5.0V Segment Voltage = 3V

Note 1: Input voltages may exceed the supply voltages provided the input current is limited to  $\pm 100 \mu A$ .

- 2: Dissipation rating assumes device is mounted with all leads soldered to printed circuit board.
- 3: Refer to "Differential Input" discussion.
- **4:** Backplane drive is in phase with segment drive for "OFF" segment, 180° out of phase for "ON" segment. Frequency is 20 times conversion rate. Average DC component is less than 50mV.
- 5: The TC7116/TC7116A logic inputs have an internal pull-down resistor connected from HLDR, Pin 1 to TEST, Pin 37. The TC7117/TC7117A logic inputs have an internal pull-down resistor connected from HLDR, Pin 1 to GND, Pin 21.

# 2.0 PIN DESCRIPTIONS

The descriptions of the pins are listed in Table 2-1.

TABLE 2-1: PIN FUNCTION TABLE

details.   28   36   V <sub>BUFF</sub>   Integration resistor connection. Use a 47kΩ resistor for a 200mV full scale and a 470kΩ resistor for 2V full scale range.   29   37   C <sub>AZ</sub>   The size of the auto-zero capacitor influences system noise. Use a 0.47μ capacitor for 200mV full scale, and a 0.047μF capacitor for 2V full scale. See Section 4.1 "Auto-Zero Capacitor", Auto-Zero Capacitor for more of 30   38   V <sub>IN</sub> -   The analog LOW input is connected to this pin.   31   39   V <sub>IN</sub> +   The analog HIGH input signal is connected to this pin.   32   40   COMMON   This pin is primarily used to set the Analog Common mode voltage for base operation, or in systems where the input signal is referenced to the power ply. It also acts as a reference voltage source. See Section 3.1.6 "Analog"	Pin Number (40-Pin PDIP) (40-Pin CERDIP)	Pin Number (44-Pin PQFP)	Symbol	Description		
3 10 C <sub>1</sub> Activates the C section of the units display. 4 11 B <sub>1</sub> Activates the B section of the units display. 5 12 A <sub>1</sub> Activates the A section of the units display. 6 13 F <sub>1</sub> Activates the F section of the units display. 7 14 G <sub>1</sub> Activates the F section of the units display. 8 15 E <sub>1</sub> Activates the G section of the units display. 9 16 D <sub>2</sub> Activates the D section of the units display. 10 17 C <sub>2</sub> Activates the D section of the tens display. 11 18 B <sub>2</sub> Activates the D section of the tens display. 12 19 A <sub>2</sub> Activates the B section of the tens display. 13 20 F <sub>2</sub> Activates the B section of the tens display. 14 21 E <sub>2</sub> Activates the F section of the tens display. 15 22 D <sub>3</sub> Activates the F section of the tens display. 16 23 B <sub>3</sub> Activates the B section of the tens display. 17 24 F <sub>3</sub> Activates the B section of the tens display. 18 25 E <sub>3</sub> Activates the B section of the hundreds display. 19 26 AB <sub>4</sub> Activates the B section of the hundreds display. 20 27 POL Activates the B section of the hundreds display. 21 28 BP/ LCD backplane drive output (TC7116/TC7116A). Digital ground (TC7117/TC7117A). 22 29 G <sub>3</sub> Activates the A section of the hundreds display. 23 30 A <sub>3</sub> Activates the S section of the hundreds display. 24 31 C <sub>3</sub> Activates the A section of the hundreds display. 25 32 G <sub>2</sub> Activates the A section of the hundreds display. 26 34 V- Negative power supply voltage. 27 35 V <sub>INT</sub> Integrator output. Connection point for integration capacitor. See Section 4.3 "Integrating Capacitor for a 200mV full scale and a 470kΩ resistor for 2V full scale. See Section 4.1 "Auto-Zero Capacitor", Auto-Zero Capacitor for more details. 28 36 V <sub>INT</sub> The analog LOW input is connected to this pin. 39 V <sub>INT</sub> The analog LOW input is connected to this pin. 30 38 V <sub>INT</sub> The analog LOW input is connected to this pin. 31 39 V <sub>INT</sub> The analog LOW input is connected to this pin.	1	8	HLDR	Hold pin, Logic 1 holds present display reading.		
4 11 B <sub>1</sub> Activates the B section of the units display. 5 12 A <sub>1</sub> Activates the A section of the units display. 6 13 F <sub>1</sub> Activates the F section of the units display. 7 14 G <sub>1</sub> Activates the G section of the units display. 8 15 E <sub>1</sub> Activates the G section of the units display. 9 16 D <sub>2</sub> Activates the D section of the units display. 10 17 C <sub>2</sub> Activates the D section of the tens display. 11 18 B <sub>2</sub> Activates the D section of the tens display. 12 19 A <sub>2</sub> Activates the B section of the tens display. 13 20 F <sub>2</sub> Activates the B section of the tens display. 14 21 E <sub>2</sub> Activates the F section of the tens display. 15 22 D <sub>3</sub> Activates the F section of the tens display. 16 23 B <sub>3</sub> Activates the B section of the tens display. 17 24 F <sub>3</sub> Activates the B section of the hundreds display. 18 25 E <sub>3</sub> Activates the B section of the hundreds display. 19 26 AB <sub>4</sub> Activates the B section of the hundreds display. 20 27 POL Activates the F section of the hundreds display. 21 28 BP/ LCD backplane drive output (TC7116/TC7116A). Digital ground (TC7117TC7117A). 22 29 G <sub>3</sub> Activates the G section of the hundreds display. 23 30 A <sub>3</sub> Activates the G section of the hundreds display. 24 31 C <sub>3</sub> Activates the G section of the hundreds display. 25 32 G <sub>2</sub> Activates the G section of the hundreds display. 26 34 V-Negative backet he G section of the hundreds display. 27 36 VINT Integrator output. (TC7116/TC7116A). Digital ground (TC7117TC7117A). 28 37 Vint Integrator output. Connection point for integration capacitor. See Section 4.3 "Integrating Capacitor", Integrating Capacitor for more details. 28 36 V <sub>BUFF</sub> Integration resistor connection. Use a 47kΩ resistor for a 200mV full scale and a 470kΩ resistor for 20 full scale range. 39 37 C <sub>AZ</sub> The analog HOM input signal is connected to this pin. 30 38 V <sub>INT</sub> The analog HOM input signal is connected to this pin. 31 39 V <sub>INT</sub> The analog HOM input signal is connected to this pin. 31 39 V <sub>INT</sub> The analog HOM input signal is reference ot to the power.	2	9	D <sub>1</sub>	Activates the D section of the units display.		
5 12 A <sub>1</sub> Activates the A section of the units display. 6 13 F <sub>1</sub> Activates the F section of the units display. 7 144 G <sub>1</sub> Activates the G section of the units display. 8 15 E <sub>1</sub> Activates the G section of the units display. 9 16 D <sub>2</sub> Activates the D section of the units display. 10 17 C <sub>2</sub> Activates the D section of the tens display. 11 18 B <sub>2</sub> Activates the D section of the tens display. 12 19 A <sub>2</sub> Activates the B section of the tens display. 13 20 F <sub>2</sub> Activates the A section of the tens display. 14 21 E <sub>2</sub> Activates the F section of the tens display. 15 22 D <sub>3</sub> Activates the F section of the tens display. 16 23 B <sub>3</sub> Activates the D section of the tens display. 17 24 F <sub>3</sub> Activates the B section of the hundreds display. 18 25 E <sub>3</sub> Activates the B section of the hundreds display. 19 26 AB <sub>4</sub> Activates the B section of the hundreds display. 20 27 POL Activates the F section of the hundreds display. 21 28 BP/ LCD backplane drive output (TC7116A). Digital ground (TC7117TC7117A). 22 29 G <sub>3</sub> Activates the G section of the hundreds display. 23 30 A <sub>3</sub> Activates the G section of the hundreds display. 24 31 C <sub>3</sub> Activates the G section of the hundreds display. 25 32 G <sub>2</sub> Activates the G section of the hundreds display. 26 34 V <sub>1</sub> Nogality (TC7117TC7117A). 27 POL Activates the G section of the hundreds display. 28 Activates the G section of the hundreds display. 29 Activates the G section of the hundreds display. 20 POL Activates the G section of the hundreds display. 21 POL Activates the G section of the hundreds display. 22 POL Activates the G section of the hundreds display. 23 30 A <sub>3</sub> Activates the G section of the hundreds display. 24 31 C <sub>3</sub> Activates the G section of the hundreds display. 25 32 G <sub>2</sub> Activates the G section of the hundreds display. 26 34 V <sub>1</sub> Nogality Polytage. 27 35 V <sub>INT</sub> Integrating Capacitor", Integrating Capacitor for more details. 28 36 V <sub>INT</sub> Integration resistor connection Dust a 47kΩ resistor for a 200mV full scale and a 47kΩ resistor for a 200mV full scale and a 47kΩ resistor for 20 f	3	10	C <sub>1</sub>	Activates the C section of the units display.		
6 13 F <sub>1</sub> Activates the F section of the units display.  7 14 G <sub>1</sub> Activates the G section of the units display.  8 15 E <sub>1</sub> Activates the E section of the units display.  9 16 D <sub>2</sub> Activates the D section of the units display.  10 17 C <sub>2</sub> Activates the D section of the tens display.  11 18 B <sub>2</sub> Activates the C section of the tens display.  12 19 A <sub>2</sub> Activates the B section of the tens display.  13 20 F <sub>2</sub> Activates the F section of the tens display.  14 21 E <sub>2</sub> Activates the F section of the tens display.  15 22 D <sub>3</sub> Activates the F section of the tens display.  16 23 B <sub>3</sub> Activates the D section of the hundreds display.  17 24 F <sub>3</sub> Activates the B section of the hundreds display.  18 25 E <sub>3</sub> Activates the F section of the hundreds display.  19 26 AB <sub>4</sub> Activates the F section of the hundreds display.  20 27 POL Activates the F section of the hundreds display.  21 28 BP/ GLO backplane drive output (TC7116/TC7116A). Digital ground (TC7117/TC7117A).  22 29 G <sub>3</sub> Activates the G section of the hundreds display.  23 30 A <sub>3</sub> Activates the G section of the hundreds display.  24 31 C <sub>3</sub> Activates the S section of the hundreds display.  25 32 G <sub>2</sub> Activates the G section of the hundreds display.  26 34 V· Negative she G section of the hundreds display.  27 35 V <sub>INT</sub> Integrating Capacitor*, Integrating Capacitor for more details.  28 36 V <sub>BUFF</sub> Integrating resistor connection. Use a 47KΩ resistor for a 200mV full scale and a 470kΩ resistor for 12V full scale range.  29 37 C <sub>AZ</sub> The size of the auto-zero capacitor influences system noise. Use a 0.47μ capacitor for 200mV full scale, and a 0.047μF capacitor for more details.  29 10 12 12 12 12 13 13 13 13 13 13 13 13 13 13 13 13 13	4	11	B <sub>1</sub>	Activates the B section of the units display.		
7 14 G <sub>1</sub> Activates the G section of the units display.  8 15 E <sub>1</sub> Activates the E section of the units display.  9 16 D <sub>2</sub> Activates the D section of the tens display.  10 17 C <sub>2</sub> Activates the C section of the tens display.  11 18 B <sub>2</sub> Activates the S section of the tens display.  12 19 A <sub>2</sub> Activates the S section of the tens display.  13 20 F <sub>2</sub> Activates the F section of the tens display.  14 21 E <sub>2</sub> Activates the F section of the tens display.  15 22 D <sub>3</sub> Activates the E section of the tens display.  16 23 B <sub>3</sub> Activates the D section of the hundreds display.  17 24 F <sub>3</sub> Activates the D section of the hundreds display.  18 25 E <sub>3</sub> Activates the F section of the hundreds display.  19 26 AB <sub>4</sub> Activates the E section of the hundreds display.  20 27 POL Activates the E section of the hundreds display.  21 28 BP/ GND (TC7117/TC7117A).  22 29 G <sub>3</sub> Activates the negative polarity display.  23 30 A <sub>3</sub> Activates the G section of the hundreds display.  24 31 C <sub>3</sub> Activates the G section of the hundreds display.  25 32 G <sub>2</sub> Activates the G section of the hundreds display.  26 34 V· Negative be G section of the hundreds display.  27 35 VINT See Section 4.3 "Integration capacitor." Integration capacitor.  28 36 V <sub>BUFF</sub> Integrator output. Connection point for integration capacitor.  29 37 C <sub>AZ</sub> The size of the auto-zero capacitor influences system noise. Use a 0.47μ capacitor for 20 fm/ full scale and a 470κΩ resistor for 20 fm/ full scale and a 470κΩ resistor for 20 fm/ full scale and a 470κΩ resistor for 20 fm/ full scale and a 470κΩ resistor for 20 fm/ full scale and a 470κΩ resistor for 20 fm/ full scale and a 470κΩ resistor for 20 fm/ full scale and a 470κΩ resistor for 20 fm/ full scale and a 470κΩ resistor for 20 fm/ full scale and a 470κΩ resistor for 20 fm/ full scale and a 470κΩ resistor for 20 fm/ full scale and a 47κΩ resistor for 20 fm/ full scale and a 47κΩ resistor for 20 fm/ full scale and a 47κΩ resistor for 20 fm/ full scale and a 47κΩ resistor for 20 fm/ full scale and a 47κΩ resistor for 20 fm/ fu	5	12	A <sub>1</sub>	Activates the A section of the units display.		
8 15 E <sub>1</sub> Activates the E section of the units display. 9 16 D <sub>2</sub> Activates the D section of the tens display. 10 17 C <sub>2</sub> Activates the C section of the tens display. 11 18 B <sub>2</sub> Activates the B section of the tens display. 11 19 A <sub>2</sub> Activates the A section of the tens display. 12 19 A <sub>2</sub> Activates the A section of the tens display. 13 20 F <sub>2</sub> Activates the F section of the tens display. 14 21 E <sub>2</sub> Activates the E section of the tens display. 15 22 D <sub>3</sub> Activates the D section of the hundreds display. 16 23 B <sub>3</sub> Activates the D section of the hundreds display. 17 24 F <sub>3</sub> Activates the B section of the hundreds display. 18 25 E <sub>3</sub> Activates the E section of the hundreds display. 19 26 AB <sub>4</sub> Activates the E section of the hundreds display. 20 27 POL Activates the negative polarity display. 21 28 BP/ LCD backplane drive output (TC7116/TC7116A). Digital ground (TC711/TC7117A). 22 29 G <sub>3</sub> Activates the G section of the hundreds display. 23 30 A <sub>3</sub> Activates the S section of the hundreds display. 24 31 C <sub>3</sub> Activates the S section of the hundreds display. 25 32 G <sub>2</sub> Activates the S section of the hundreds display. 26 34 V- Negative power supply voltage. 27 35 V <sub>INT</sub> Integrator output. Connection point for integration capacitor. See Section 4.3 "Integrating Capacitor", Integrating Capacitor for more details. 28 36 V <sub>BUFF</sub> Integrator output. Connection point for integration capacitor. See Section 4.3 "Integrating Capacitor for more details. 28 36 V <sub>BUFF</sub> The size of the auto-zero capacitor influences system noise. Use a 0.47µ capacitor for 20mV full scale and a 47kΩ resistor for 2V full scale and a 47kΩ resistor for 2V full scale. See Section 4.1 "Auto-Zero Capacitor for more details. 30 38 V <sub>IN</sub> The analog LOW input is connected to this pin. 31 39 V <sub>IN</sub> The analog JOW input is connected to this pin. 31 39 V <sub>IN</sub> The analog JOW input is connected to this pin.	6	13	F <sub>1</sub>	Activates the F section of the units display.		
9 16 D <sub>2</sub> Activates the D section of the tens display.  10 17 C <sub>2</sub> Activates the C section of the tens display.  11 18 B <sub>2</sub> Activates the B section of the tens display.  12 19 A <sub>2</sub> Activates the B section of the tens display.  13 20 F <sub>2</sub> Activates the F section of the tens display.  14 21 E <sub>2</sub> Activates the E section of the tens display.  15 22 D <sub>3</sub> Activates the D section of the tens display.  16 23 B <sub>3</sub> Activates the D section of the hundreds display.  17 24 F <sub>3</sub> Activates the B section of the hundreds display.  18 25 E <sub>3</sub> Activates the F section of the hundreds display.  19 26 AB <sub>4</sub> Activates the E section of the hundreds display.  20 27 POL Activates the negative polarity display.  21 28 BP/ LCD backplane drive output (TC7116/TC7116A). Digital ground (TC7117/TC7117A).  22 29 G <sub>3</sub> Activates the G section of the hundreds display.  23 30 A <sub>3</sub> Activates the G section of the hundreds display.  24 31 C <sub>3</sub> Activates the G section of the hundreds display.  25 32 G <sub>2</sub> Activates the G section of the hundreds display.  26 34 V· Negative power supply voltage.  27 35 V <sub>INT</sub> Integrator output. Connection point for integration capacitor. See Section 4.3 "Integrating Capacitor", Integrating Capacitor for more details.  28 36 V <sub>BUFF</sub> Integrator nesistor connection. Use a 47kΩ resistor for a 200mV full scale and a 470kΩ resistor for 2V full scale range.  29 37 C <sub>AZ</sub> The size of the auto-zero capacitor influences system noise. Use a 0.47μ capacitor for 2V full scale, and a 0.047μF capacitor for more details.  29 37 C <sub>AZ</sub> The size of the auto-zero capacitor influences system noise. Use a 0.47μ capacitor for 2V full scale, and a 0.047μF capacitor for 2V full scale. See Section 4.1 "Auto-Zero Capacitor", unto-Zero Capacitor for more details.  29 37 C <sub>AZ</sub> The size of the auto-zero capacitor influences system noise. Use a 0.47μ capacitor for 2V full scale, and a 0.047μF capacitor for more details.  30 38 V <sub>IN</sub> The analog HIGH input signal is connected to this pin.  31 39 V <sub>IN</sub> The analog HIGH input signal is connected to this pin	7	14	G <sub>1</sub>	Activates the G section of the units display.		
10 17 C <sub>2</sub> Activates the C section of the tens display.  11 18 B <sub>2</sub> Activates the B section of the tens display.  12 19 A <sub>2</sub> Activates the A section of the tens display.  13 20 F <sub>2</sub> Activates the F section of the tens display.  14 21 E <sub>2</sub> Activates the F section of the tens display.  15 22 D <sub>3</sub> Activates the B section of the tens display.  16 23 B <sub>3</sub> Activates the B section of the hundreds display.  17 24 F <sub>3</sub> Activates the B section of the hundreds display.  18 25 E <sub>3</sub> Activates the F section of the hundreds display.  19 26 AB <sub>4</sub> Activates both halves of the 1 in the thousands display.  20 27 POL Activates the negative polarity display.  21 28 BP/ LCD backplane drive output (TC7116/TC7116A). Digital ground (TC7117/TC7117A).  22 29 G <sub>3</sub> Activates the G section of the hundreds display.  23 30 A <sub>3</sub> Activates the A section of the hundreds display.  24 31 C <sub>3</sub> Activates the Section of the hundreds display.  25 32 G <sub>2</sub> Activates the Section of the hundreds display.  26 34 V· Negative power supply voltage.  17 Negative power supply voltage.  18 36 V <sub>INT</sub> Integration resistor connection point for integration capacitor. See Section 4.3 "Integrating Capacitor", Integrating Capacitor for more details.  28 36 V <sub>BUFF</sub> Integration resistor connection. Use a 47kΩ resistor for a 200mV full scale and a 470kΩ resistor for 2V full scale, and a 0.047μ capacitor for 2V full scale. See Section 4.1 "fulto-Zero Capacitor", Auto-Zero Capacitor for more of the section of the power supply signal is connected to this pin.  30 38 V <sub>IN</sub> The analog LOW input is connected to this pin.  31 39 V <sub>IN</sub> The analog HIGH input signal is referenced to the power power supply seed to set the Analog Common mode voltage for ba operation, or in systems where the input signal is referenced to the power power power supply seed to set the Analog Common mode voltage for ba operation, or in systems where the input signal is referenced to the power	8	15	E <sub>1</sub>	Activates the E section of the units display.		
11 18 B <sub>2</sub> Activates the B section of the tens display.  12 19 A <sub>2</sub> Activates the A section of the tens display.  13 20 F <sub>2</sub> Activates the F section of the tens display.  14 21 E <sub>2</sub> Activates the B section of the tens display.  15 22 D <sub>3</sub> Activates the B section of the hundreds display.  16 23 B <sub>3</sub> Activates the B section of the hundreds display.  17 24 F <sub>3</sub> Activates the B section of the hundreds display.  18 25 E <sub>3</sub> Activates the E section of the hundreds display.  19 26 AB <sub>4</sub> Activates the B section of the hundreds display.  20 27 POL Activates the hundreds display.  21 28 BP / LCD backplane drive output (TC7116/TC7116A). Digital ground (TC7117/TC7117A).  22 29 G <sub>3</sub> Activates the G section of the hundreds display.  23 30 A <sub>3</sub> Activates the G section of the hundreds display.  24 31 C <sub>3</sub> Activates the G section of the hundreds display.  25 32 G <sub>2</sub> Activates the G section of the hundreds display.  26 34 V- Negative power supply voltage.  27 35 V <sub>INT</sub> Integrator output. Connection point for integration capacitor. See Section 4.3 "Integrating Capacitor", Integrating Capacitor for more details.  28 36 V <sub>BUFF</sub> Integrator output. Connection Display is capacitor for 2V full scale and a 470kΩ resistor for 2V full scale and a 470kΩ resistor for 2V full scale and a 470kΩ resistor for 2V full scale. See Section 4.1 "Auto-Zero Capacitor", Auto-Zero Capacitor for more details.  30 38 V <sub>IN</sub> The analog LOW input is connected to this pin.  31 39 V <sub>IN</sub> The analog LOW input is connected to this pin.  32 40 COMMON This pin is primarily used to set the Analog Common mode voltage for ba operation, or in systems where the input signal is referenced to the power ply. It also acts as a reference voltage source. See Section 3.1.6 "Analog PlGH in the tens display is a series of the power ply. It also acts as a reference voltage source. See Section 3.1.6 "Analog PlGH in the tens display. The power ply. It also acts as a reference voltage source. See Section 3.1.6 "Analog PlGH in the tens display. The power ply. It also acts as a refere	9	16	D <sub>2</sub>	Activates the D section of the tens display.		
12 19 A <sub>2</sub> Activates the A section of the tens display.  13 20 F <sub>2</sub> Activates the F section of the tens display.  14 21 E <sub>2</sub> Activates the E section of the tens display.  15 22 D <sub>3</sub> Activates the D section of the hundreds display.  16 23 B <sub>3</sub> Activates the B section of the hundreds display.  17 24 F <sub>3</sub> Activates the F section of the hundreds display.  18 25 E <sub>3</sub> Activates the E section of the hundreds display.  19 26 AB <sub>4</sub> Activates the E section of the hundreds display.  20 27 POL Activates the negative polarity display.  21 28 BP/ LCD backplane drive output (TC7116/TC7116A). Digital ground (TC7117/TC7117A).  22 29 G <sub>3</sub> Activates the G section of the hundreds display.  23 30 A <sub>3</sub> Activates the G section of the hundreds display.  24 31 C <sub>3</sub> Activates the G section of the hundreds display.  25 32 G <sub>2</sub> Activates the G section of the hundreds display.  26 34 V- Negative power supply voltage.  27 35 V <sub>INT</sub> Integrator output. Connection point for integration capacitor. See Section 4.3 "Integrating Capacitor", Integrating Capacitor for more details.  28 36 V <sub>BUFF</sub> Integration resistor connection. Use a 47kΩ resistor for a 200mV full scale and a 47kΩ resistor for 2V full scale range.  29 37 C <sub>AZ</sub> The size of the auto-zero capacitor influences system noise. Use a 0.47μ capacitor for 2V full scale, and a 0.047μ capacitor for 2V full scale see Section 4.1 "Auto-Zero Capacitor", Auto-Zero Capacitor for more details.  30 38 V <sub>IN</sub> - The analog LOW input is connected to this pin.  31 39 V <sub>IN</sub> + The analog HIGH input signal is connected to this pin.  40 COMMON This pin is primarily used to set the Analog Common mode voltage for ba operation, or in systems where the input signal is referenced to the power ply. It also acts as a reference voltage source. See Section 3.1.6 "Analog Plication acts as a reference voltage source. See Section 3.1.6 "Analog Plication acts as a reference voltage source. See Section 3.1.6 "Analog Plication acts as a reference voltage source. See Section 3.1.6 "Analog Plication acts as a reference voltage	10	17	C <sub>2</sub>	Activates the C section of the tens display.		
13 20 F <sub>2</sub> Activates the F section of the tens display.  14 21 E <sub>2</sub> Activates the E section of the tens display.  15 22 D <sub>3</sub> Activates the D section of the hundreds display.  16 23 B <sub>3</sub> Activates the B section of the hundreds display.  17 24 F <sub>3</sub> Activates the F section of the hundreds display.  18 25 E <sub>3</sub> Activates the F section of the hundreds display.  19 26 AB <sub>4</sub> Activates both halves of the 1 in the thousands display.  20 27 POL Activates the negative polarity display.  21 28 BP/ LCD backplane drive output (TC7116/TC7116A). Digital ground (TC7117/TC7117A).  22 29 G <sub>3</sub> Activates the G section of the hundreds display.  23 30 A <sub>3</sub> Activates the G section of the hundreds display.  24 31 C <sub>3</sub> Activates the C section of the hundreds display.  25 32 G <sub>2</sub> Activates the C section of the hundreds display.  26 34 V- Negative power supply voltage.  27 35 V <sub>INT</sub> Integrator output. Connection point for integration capacitor.  28 36 V <sub>BUFF</sub> Integrator output. Connection point for integration capacitor.  29 37 C <sub>AZ</sub> The size of the auto-zero capacitor", Integrating Capacitor for more details.  29 37 C <sub>AZ</sub> The size of the auto-zero capacitor influences system noise. Use a 0.47μ capacitor for 200mV full scale range.  29 37 C <sub>AZ</sub> The size of the auto-zero capacitor influences system noise. Use a 0.47μ capacitor for 200mV full scale, and a 0.047μF capacitor for 2V full scale.  29 37 C <sub>AZ</sub> The size of the auto-zero capacitor influences system noise. Use a 0.47μ capacitor for 200mV full scale, and a 0.047μF capacitor for 2V full scale.  29 Section 4.1 "Auto-Zero Capacitor", Auto-Zero Capacitor for more of 200mV full scale range.  30 38 V <sub>IN</sub> The analog LOW input is connected to this pin.  31 39 V <sub>IN</sub> + The analog HIGH input signal is connected to the power ply. It also acts as a reference voltage source. See Section 3.1.6 "Analog Pommon mode voltage for basing the systems where the input signal is referenced to the power ply. It also acts as a reference voltage source. See Section 3.1.6 "Analog"	11	18	B <sub>2</sub>	Activates the B section of the tens display.		
14 21 E <sub>2</sub> Activates the E section of the tens display.  15 22 D <sub>3</sub> Activates the D section of the hundreds display.  16 23 B <sub>3</sub> Activates the B section of the hundreds display.  17 24 F <sub>3</sub> Activates the F section of the hundreds display.  18 25 E <sub>3</sub> Activates the E section of the hundreds display.  19 26 AB <sub>4</sub> Activates both halves of the 1 in the thousands display.  20 27 POL Activates the negative polarity display.  21 28 BP/ LCD backplane drive output (TC7116/TC7116A). Digital ground (TC7117/TC7117A).  22 29 G <sub>3</sub> Activates the G section of the hundreds display.  23 30 A <sub>3</sub> Activates the G section of the hundreds display.  24 31 C <sub>3</sub> Activates the A section of the hundreds display.  25 32 G <sub>2</sub> Activates the G section of the hundreds display.  26 34 V- Negative power supply voltage.  27 35 V <sub>INT</sub> Integrator output. Connection point for integration capacitor. See Section 4.3 "Integrating Capacitor", Integrating Capacitor for more details.  28 36 V <sub>BUFF</sub> Integration resistor connection. Use a 47kΩ resistor for a 200mV full scale and a 470kΩ resistor for 2V full scale range.  29 37 C <sub>AZ</sub> The size of the auto-zero capacitor influences system noise. Use a 0.47μ capacitor for 200mV full scale, and a 0.047μF capacitor for 2V full scale. See Section 4.1 "Auto-Zero Capacitor", Auto-Zero Capacitor for more departments of the auto-Zero Capacitor for more of 200mV full scale and a 2004 full scale and a 39 V <sub>IN</sub> - The analog LOW input is connected to this pin.  30 38 V <sub>IN</sub> - The analog HIGH input signal is referenced to the power ply. It also acts as a reference voltage source. See Section 3.1.6 "Analog plot and a reference voltage source. See Section 3.1.6 "Analog plot and a reference voltage source. See Section 3.1.6 "Analog plot and a reference voltage source. See Section 3.1.6 "Analog plot and a reference voltage source. See Section 3.1.6 "Analog plot and a reference voltage source. See Section 3.1.6 "Analog plot and a reference voltage source. See Section 3.1.6 "Analog plot and a reference voltage source. See Section	12	19	A <sub>2</sub>	Activates the A section of the tens display.		
15 22 D <sub>3</sub> Activates the D section of the hundreds display.  16 23 B <sub>3</sub> Activates the B section of the hundreds display.  17 24 F <sub>3</sub> Activates the F section of the hundreds display.  18 25 E <sub>3</sub> Activates the E section of the hundreds display.  19 26 AB <sub>4</sub> Activates both halves of the 1 in the thousands display.  20 27 POL Activates the negative polarity display.  21 28 BP/ LCD backplane drive output (TC7116/TC7116A). Digital ground (TC7117/TC7117A).  22 29 G <sub>3</sub> Activates the G section of the hundreds display.  23 30 A <sub>3</sub> Activates the Section of the hundreds display.  24 31 C <sub>3</sub> Activates the Section of the hundreds display.  25 32 G <sub>2</sub> Activates the C section of the hundreds display.  26 34 V· Negative power supply voltage.  27 35 V <sub>INT</sub> Integrator output. Connection point for integration capacitor. See Section 4.3 "Integrating Capacitor", Integrating Capacitor for more details.  28 36 V <sub>BUFF</sub> Integration resistor connection. Use a 47kΩ resistor for a 200mV full scale and a 470kΩ resistor for 2V full scale range.  29 37 C <sub>AZ</sub> The size of the auto-zero capacitor influences system noise. Use a 0.47μ capacitor for 200mV full scale, see Section 4.1 "Auto-Zero Capacitor", Auto-Zero Capacitor for more of the auto-zero capacitor influences system noise. Use a 0.47μ capacitor for 200mV full scale, see Section 4.1 "Auto-Zero Capacitor", Auto-Zero Capacitor for more of the auto-zero Capacitor", The analog LOW input is connected to this pin.  30 38 V <sub>IN</sub> The analog LOW input is connected to this pin.  This pin is primarily used to set the Analog Common mode voltage for ba operation, or in systems where the input signal is referenced to the power by It also acts as a reference voltage source. See Section 3.1.6 "Analog Pil Integration capacitor is a reference to totage for ba operation, or in systems where the input signal is referenced to the power supply. It also acts as a reference voltage source. See Section 3.1.6 "Analog Pil Integrating Capacitor ovlocation and operation, or in systems where the input signal is refer	13	20	F <sub>2</sub>	Activates the F section of the tens display.		
16 23 B <sub>3</sub> Activates the B section of the hundreds display.  17 24 F <sub>3</sub> Activates the F section of the hundreds display.  18 25 E <sub>3</sub> Activates the E section of the hundreds display.  19 26 AB <sub>4</sub> Activates both halves of the 1 in the thousands display.  20 27 POL Activates the negative polarity display.  21 28 BP/ LCD backplane drive output (TC7116/TC7116A). Digital ground (TC7117/TC7117A).  22 29 G <sub>3</sub> Activates the G section of the hundreds display.  23 30 A <sub>3</sub> Activates the G section of the hundreds display.  24 31 C <sub>3</sub> Activates the C section of the hundreds display.  25 32 G <sub>2</sub> Activates the G section of the hundreds display.  26 34 V- Negative power supply voltage.  27 35 V <sub>INT</sub> Integrator output. Connection point for integration capacitor. See Section 4.3 "Integrating Capacitor", Integrating Capacitor for more details.  28 36 V <sub>BUFF</sub> Integration resistor connection. Use a 47kΩ resistor for a 200mV full scale and a 470kΩ resistor for 2V full scale range.  29 37 C <sub>AZ</sub> The size of the auto-zero capacitor influences system noise. Use a 0.47μ capacitor for 200mV full scale, and a 0.047μF capacitor for more details.  30 38 V <sub>IN</sub> The analog LOW input is connected to this pin.  31 39 V <sub>IN</sub> † The analog HIGH input signal is connected to this pin.  31 This pin is primarily used to set the Analog Common mode voltage for ba operation, or in systems where the input signal is referenced to the power ply. It also acts as a reference voltage source. See Section 3.1.6 "Analog Ply It also acts as a reference voltage source. See Section 3.1.6 "Analog Ply It also acts as a reference voltage source. See Section 3.1.6 "Analog Ply It also acts as a reference voltage source. See Section 3.1.6 "Analog Ply It also acts as a reference voltage source. See Section 3.1.6 "Analog Ply It also acts as a reference voltage source. See Section 3.1.6 "Analog Ply It also acts as a reference voltage source. See Section 3.1.6 "Analog Ply It also acts as a reference voltage source. See Section 3.1.6 "Analog Ply It also acts as a reference voltage	14	21	E <sub>2</sub>	Activates the E section of the tens display.		
17 24 F <sub>3</sub> Activates the F section of the hundreds display.  18 25 E <sub>3</sub> Activates the E section of the hundreds display.  19 26 AB <sub>4</sub> Activates both halves of the 1 in the thousands display.  20 27 POL Activates the negative polarity display.  21 28 BP/ LCD backplane drive output (TC7116/TC7116A). Digital ground (TC7117/TC7117A).  22 29 G <sub>3</sub> Activates the G section of the hundreds display.  23 30 A <sub>3</sub> Activates the G section of the hundreds display.  24 31 C <sub>3</sub> Activates the A section of the hundreds display.  25 32 G <sub>2</sub> Activates the G section of the hundreds display.  26 34 V- Negative power supply voltage.  27 35 V <sub>INT</sub> Integrator output. Connection point for integration capacitor. See Section 4.3 "Integrating Capacitor", Integrating Capacitor for more details.  28 36 V <sub>BUFF</sub> Integration resistor connection. Use a 47kΩ resistor for a 200mV full scale and a 470kΩ resistor for 2V full scale range.  29 37 C <sub>AZ</sub> The size of the auto-zero capacitor influences system noise. Use a 0.47μ capacitor for 200mV full scale, and a 0.047μF capacitor for more details.  30 38 V <sub>IN</sub> The analog LOW input is connected to this pin.  31 39 V <sub>IN</sub> † The analog HIGH input signal is connected to this pin.  31 This pin is primarily used to set the Analog Common mode voltage for ba operation, or in systems where the input signal is referenced to the power ply. It also acts as a reference voltage source. See Section 3.1.6 "Analog Ply It also acts as a reference voltage source. See Section 3.1.6 "Analog Ply It also acts as a reference voltage source. See Section 3.1.6 "Analog Common mode voltage for ba operation, or in systems where the input signal is referenced to the power ply. It also acts as a reference voltage source. See Section 3.1.6 "Analog Common mode voltage for ba operation, or in systems where the input signal is referenced to the power ply. It also acts as a reference voltage source. See Section 3.1.6 "Analog Common mode voltage for ba operation, or in systems where the input signal is referenced to the power ply. It also a	15	22	$D_3$	Activates the D section of the hundreds display.		
18 25 E <sub>3</sub> Activates the E section of the hundreds display.  19 26 AB <sub>4</sub> Activates both halves of the 1 in the thousands display.  20 27 POL Activates the negative polarity display.  21 28 BP/ LCD backplane drive output (TC7116/TC7116A). Digital ground (TC7117/TC7117A).  22 29 G <sub>3</sub> Activates the G section of the hundreds display.  23 30 A <sub>3</sub> Activates the A section of the hundreds display.  24 31 C <sub>3</sub> Activates the C section of the hundreds display.  25 32 G <sub>2</sub> Activates the G section of the tens display.  26 34 V- Negative power supply voltage.  27 35 V <sub>INT</sub> Integrator output. Connection point for integration capacitor. See Section 4.3 "Integrating Capacitor", Integrating Capacitor for more details.  28 36 V <sub>BUFF</sub> Integration resistor connection. Use a 47kΩ resistor for a 200mV full scale and a 470kΩ resistor for 2V full scale range.  29 37 C <sub>AZ</sub> The size of the auto-zero capacitor influences system noise. Use a 0.47μ capacitor for 200mV full scale, and a 0.047μF capacitor for 2V full scale. See Section 4.1 "Auto-Zero Capacitor", Auto-Zero Capacitor for more of 200mV full scale. See Section 4.1 "Auto-Zero Capacitor", Auto-Zero Capacitor for more of 200mV full scale. See Section 4.1 "Auto-Zero Capacitor", The analog LOW input is connected to this pin.  30 38 V <sub>IN</sub> - The analog LOW input is connected to this pin.  This pin is primarily used to set the Analog Common mode voltage for ba operation, or in systems where the input signal is referenced to the power ply. It also acts as a reference voltage source. See Section 3.1.6 "Analog Ply. It also acts as a reference voltage source. See Section 3.1.6 "Analog Ply. It also acts as a reference voltage source. See Section 3.1.6 "Analog Common mode voltage for ba operation, or in systems where the input signal is referenced to the power ply. It also acts as a reference voltage source. See Section 3.1.6 "Analog Common mode voltage for ba operation, or in systems where the input signal is referenced to the power ply. It also acts as a reference voltage source.	16	23	В3	Activates the B section of the hundreds display.		
19 26 AB <sub>4</sub> Activates both halves of the 1 in the thousands display.  20 27 POL Activates the negative polarity display.  21 28 BP/ LCD backplane drive output (TC7116/TC7116A). Digital ground (TC7117/TC7117A).  22 29 G <sub>3</sub> Activates the G section of the hundreds display.  23 30 A <sub>3</sub> Activates the A section of the hundreds display.  24 31 C <sub>3</sub> Activates the C section of the hundreds display.  25 32 G <sub>2</sub> Activates the G section of the tens display.  26 34 V- Negative power supply voltage.  27 35 V <sub>INT</sub> Integrator output. Connection point for integration capacitor. See Section 4.3 "Integrating Capacitor", Integrating Capacitor for more details.  28 36 V <sub>BUFF</sub> Integration resistor connection. Use a 47kΩ resistor for a 200mV full scale and a 470kΩ resistor for 2V full scale range.  29 37 C <sub>AZ</sub> The size of the auto-zero capacitor influences system noise. Use a 0.47μ capacitor for 200mV full scale, and a 0.047μF capacitor for 2V full scale. See Section 4.1 "Auto-Zero Capacitor", Auto-Zero Capacitor for more of the capacitor for 2V full scale and a 0.047μF capacitor for 2V full scale. See Section 4.1 "Auto-Zero Capacitor", Auto-Zero Capacitor for more of the capacitor for 2V full scale and a 0.047μF capacitor for 2V full scale. See Section 4.1 "Auto-Zero Capacitor", Auto-Zero Capacitor for more of the capacitor for 2V full scale and a 0.047μF capacitor for 2V full scale. See Section 4.1 "Auto-Zero Capacitor", Auto-Zero Capacitor for more of the capacitor for 2V full scale and a 0.047μF capacitor for more of the capacitor for 2V full scale and a 0.047μF capacitor for 2V full scale. See Section 4.1 "Auto-Zero Capacitor", Auto-Zero Capacitor for more of the capacitor for a capacitor for more of the capacitor for more of the capacitor for a capacitor for more of the capacitor for 2V full scale and a 0.047μF capacitor	17	24	F <sub>3</sub>	Activates the F section of the hundreds display.		
20   27   POL   Activates the negative polarity display.	18	25	E <sub>3</sub>	Activates the E section of the hundreds display.		
21 28 BP/ GND (TC7117/TC7116A). Digital ground (TC7116/TC7116A). Digital ground (TC7117/TC7117A).  22 29 G <sub>3</sub> Activates the G section of the hundreds display.  23 30 A <sub>3</sub> Activates the A section of the hundreds display.  24 31 C <sub>3</sub> Activates the C section of the hundreds display.  25 32 G <sub>2</sub> Activates the G section of the tens display.  26 34 V- Negative power supply voltage.  27 35 V <sub>INT</sub> Integrator output. Connection point for integration capacitor. See Section 4.3 "Integrating Capacitor", Integrating Capacitor for more details.  28 36 V <sub>BUFF</sub> Integration resistor connection. Use a 47kΩ resistor for a 200mV full scale and a 470kΩ resistor for 2V full scale range.  29 37 C <sub>AZ</sub> The size of the auto-zero capacitor influences system noise. Use a 0.47μ capacitor for 200mV full scale, and a 0.047μF capacitor for 2V full scale. See Section 4.1 "Auto-Zero Capacitor", Auto-Zero Capacitor for more of the auto-zero capacitor influences system noise. Use a 0.47μ capacitor for 200mV full scale, and a 0.047μF capacitor for 2V full scale. See Section 4.1 "Auto-Zero Capacitor", Auto-Zero Capacitor for more of the capacitor for 200mV full scale and a 0.047μF capacitor for more of the capacitor for 200mV full scale and a 0.047μF capacitor for 2V full scale. See Section 4.1 "Auto-Zero Capacitor", Auto-Zero Capacitor for more of the capacitor for 200mV full scale and a 0.047μF capacitor for 200mV full scale an	19	26	AB <sub>4</sub>	Activates both halves of the 1 in the thousands display.		
GND (TC7117/TC7117A).	20	27	POL	Activates the negative polarity display.		
23 30 A <sub>3</sub> Activates the A section of the hundreds display.  24 31 C <sub>3</sub> Activates the C section of the hundreds display.  25 32 G <sub>2</sub> Activates the G section of the tens display.  26 34 V- Negative power supply voltage.  27 35 V <sub>INT</sub> Integrator output. Connection point for integration capacitor. See Section 4.3 "Integrating Capacitor", Integrating Capacitor for more details.  28 36 V <sub>BUFF</sub> Integration resistor connection. Use a 47kΩ resistor for a 200mV full scale and a 470kΩ resistor for 2V full scale range.  29 37 C <sub>AZ</sub> The size of the auto-zero capacitor influences system noise. Use a 0.47μ capacitor for 200mV full scale, and a 0.047μF capacitor for 2V full scale. See Section 4.1 "Auto-Zero Capacitor", Auto-Zero Capacitor for more of 30 38 V <sub>IN</sub> - The analog LOW input is connected to this pin.  31 39 V <sub>IN</sub> + The analog HIGH input signal is connected to this pin.  32 40 COMMON This pin is primarily used to set the Analog Common mode voltage for ba operation, or in systems where the input signal is referenced to the power ply. It also acts as a reference voltage source. See Section 3.1.6 "Analog	21	28		, , , , , , , , , , , , , , , , , , , ,		
24   31   C <sub>3</sub>   Activates the C section of the hundreds display.	22	29	G <sub>3</sub>	Activates the G section of the hundreds display.		
25   32   G <sub>2</sub>   Activates the G section of the tens display.	23	30	A <sub>3</sub>	Activates the A section of the hundreds display.		
26   34   V-   Negative power supply voltage.	24	31	C <sub>3</sub>	Activates the C section of the hundreds display.		
27   35   V <sub>INT</sub>   Integrator output. Connection point for integration capacitor. See Section 4.3 "Integrating Capacitor", Integrating Capacitor for more details.    28   36   V <sub>BUFF</sub>   Integration resistor connection. Use a 47kΩ resistor for a 200mV full scale and a 470kΩ resistor for 2V full scale range.    29   37   C <sub>AZ</sub>   The size of the auto-zero capacitor influences system noise. Use a 0.47μ capacitor for 200mV full scale, and a 0.047μF capacitor for 2V full scale. See Section 4.1 "Auto-Zero Capacitor", Auto-Zero Capacitor for more of the auto-zero Capacitor" (apacitor for 2V full scale). See Section 4.1 "Auto-Zero Capacitor" (apacitor for more of the auto-zero Capacitor"). The analog LOW input is connected to this pin.    30   38   V <sub>IN</sub> -   The analog HIGH input signal is connected to this pin.    31   39   V <sub>IN</sub> +   The analog HIGH input signal is connected to the power operation, or in systems where the input signal is referenced to the power ply. It also acts as a reference voltage source. See Section 3.1.6 "Analog"	25	32	G <sub>2</sub>	Activates the G section of the tens display.		
See Section 4.3 "Integrating Capacitor", Integrating Capacitor for more details.  28 36 V <sub>BUFF</sub> Integration resistor connection. Use a 47kΩ resistor for a 200mV full scale and a 470kΩ resistor for 2V full scale range.  29 37 C <sub>AZ</sub> The size of the auto-zero capacitor influences system noise. Use a 0.47μ capacitor for 200mV full scale, and a 0.047μF capacitor for 2V full scale. See Section 4.1 "Auto-Zero Capacitor", Auto-Zero Capacitor for more of 30 38 V <sub>IN</sub> - The analog LOW input is connected to this pin.  31 39 V <sub>IN</sub> + The analog HIGH input signal is connected to this pin.  32 40 COMMON This pin is primarily used to set the Analog Common mode voltage for base operation, or in systems where the input signal is referenced to the power ply. It also acts as a reference voltage source. See Section 3.1.6 "Analog	26	34	V-	Negative power supply voltage.		
and a 470kΩ resistor for 2V full scale range.  29  37  C <sub>AZ</sub> The size of the auto-zero capacitor influences system noise. Use a 0.47μ capacitor for 200mV full scale, and a 0.047μF capacitor for 2V full scale. See Section 4.1 "Auto-Zero Capacitor", Auto-Zero Capacitor for more of 30  38  V <sub>IN</sub> - The analog LOW input is connected to this pin.  31  39  V <sub>IN</sub> + The analog HIGH input signal is connected to this pin.  COMMON This pin is primarily used to set the Analog Common mode voltage for ba operation, or in systems where the input signal is referenced to the power ply. It also acts as a reference voltage source. See Section 3.1.6 "Analog	27	35	V <sub>INT</sub>	See Section 4.3 "Integrating Capacitor", Integrating Capacitor for more		
capacitor for 200mV full scale, and a 0.047µF capacitor for 2V full scale.  See Section 4.1 "Auto-Zero Capacitor", Auto-Zero Capacitor for more of the section 3.0    38    V <sub>IN</sub> -    The analog LOW input is connected to this pin.  31    39    V <sub>IN</sub> +    The analog HIGH input signal is connected to this pin.  COMMON    This pin is primarily used to set the Analog Common mode voltage for ba operation, or in systems where the input signal is referenced to the power ply. It also acts as a reference voltage source. See Section 3.1.6 "Analog Common 3.1.6"	28	36	V <sub>BUFF</sub>	Integration resistor connection. Use a 47k $\Omega$ resistor for a 200mV full scale range and a 470k $\Omega$ resistor for 2V full scale range.		
31 39 V <sub>IN</sub> + The analog HIGH input signal is connected to this pin.  32 40 COMMON This pin is primarily used to set the Analog Common mode voltage for ba operation, or in systems where the input signal is referenced to the power ply. It also acts as a reference voltage source. See Section 3.1.6 "Analog	29	37	C <sub>AZ</sub>	The size of the auto-zero capacitor influences system noise. Use a $0.47\mu F$ capacitor for 200mV full scale, and a $0.047\mu F$ capacitor for 2V full scale. See <b>Section 4.1 "Auto-Zero Capacitor"</b> , Auto-Zero Capacitor for more details.		
32 COMMON This pin is primarily used to set the Analog Common mode voltage for ba operation, or in systems where the input signal is referenced to the power ply. It also acts as a reference voltage source. See <b>Section 3.1.6</b> "Analog	30	38	V <sub>IN</sub> -	The analog LOW input is connected to this pin.		
operation, or in systems where the input signal is referenced to the power ply. It also acts as a reference voltage source. See <b>Section 3.1.6 "Analog</b> "	31	39	V <sub>IN</sub> +	The analog HIGH input signal is connected to this pin.		
mon , Analog Common for more details.	32	40	COMMON	This pin is primarily used to set the Analog Common mode voltage for battery operation, or in systems where the input signal is referenced to the power supply. It also acts as a reference voltage source. See <b>Section 3.1.6</b> "Analog Common", Analog Common for more details.		
33 41 C <sub>REF</sub> - See Pin 34.	33	41	C <sub>RFF</sub> -	-		

# TABLE 2-1: PIN FUNCTION TABLE (CONTINUED)

Pin Number (40-Pin PDIP) (40-Pin CERDIP)	Pin Number (44-Pin PQFP)	Symbol	Description
34	42	C <sub>REF</sub> +	A $0.1\mu F$ capacitor is used in most applications. If a large Common mode voltage exists (for example, the $V_{IN^-}$ pin is not at analog common), and a 200mV scale is used, a $1\mu F$ capacitor is recommended and will hold the rollover error to 0.5 count.
35	43	V+	Positive Power Supply Voltage.
36	44	V <sub>REF</sub> +	The analog input required to generate a full scale output (1999 counts). Place 100mV between Pins 32 and 36 for 199.9mV full scale. Place 1V between Pins 35 and 36 for 2V full scale. See <b>Section 4.6</b> " <b>Reference Voltage</b> ", Reference Voltage.
37	3	TEST	Lamp test. When pulled HIGH (to V+), all segments will be turned on and the display should read -1888. It may also be used as a negative supply for externally generated decimal points. See <b>Section 3.1.7</b> " <b>Test</b> ", TEST for additional information.
38	4	OSC3	See Pin 40.
39	6	OSC2	See Pin 40.
40	7	OSC1	Pins 40, 39, 38 make up the oscillator section. For a 48kHz clock (3 readings per section), connect Pin 40 to the junction of a $100k\Omega$ resistor and a $100pF$ capacitor. The $100k\Omega$ resistor is tied to Pin 39 and the $100pF$ capacitor is tied to Pin 38.

### 3.0 DETAILED DESCRIPTION

(All Pin Designations Refer to 40-Pin PDIP.)

# 3.1 Analog Section

Figure 3-1 shows the block diagram of the analog section for the TC7116/TC7116A and TC7117/TC7117A. Each measurement cycle is divided into three phases: (1) Auto-Zero (AZ), (2) Signal Integrate (INT), and (3) Reference Integrate (REF), or De-integrate (DE).

### 3.1.1 AUTO-ZERO PHASE

High and low inputs are disconnected from the pins and internally shorted to analog common. The reference capacitor is charged to the reference voltage. A feedback loop is closed around the system to charge the auto-zero capacitor ( $C_{AZ}$ ) to compensate for offset voltages in the buffer amplifier, integrator, and comparator.

Since the comparator is included in the loop, AZ accuracy is limited only by system noise. The offset referred to the input is less than  $10\mu V$ .

### 3.1.2 SIGNAL INTEGRATE PHASE

The auto-zero loop is opened, the internal short is removed, and the internal high and low inputs are connected to the external pins. The converter then integrates the differential voltages between  $V_{\rm IN}+$  and  $V_{\rm IN}-$  for a fixed time. This differential voltage can be within a wide Common mode range: 1V of either supply. However, if the input signal has no return with respect to the converter power supply,  $V_{\rm IN}-$  can be tied to analog common to establish the correct Common mode voltage. At the end of this phase, the polarity of the integrated signal is determined.

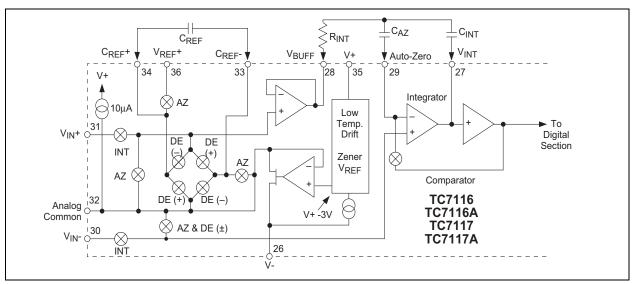


FIGURE 3-1: Analog Section of TC7116/TC7116A and TC7117/TC7117A

### 3.1.3 REFERENCE INTEGRATE PHASE

The final phase is reference integrate, or de-integrate. Input low is internally connected to analog common and input high is connected across the previously charged reference capacitor. Circuitry within the chip ensures that the capacitor will be connected with the correct polarity to cause the integrator output to return to zero. The time required for the output to return to zero is proportional to the input signal. The digital reading displayed is:

### **EQUATION 3-1:**

$$1000 = \frac{V_{IN}}{V_{REF}}$$

# 3.1.4 REFERENCE

The positive reference voltage (V<sub>REF</sub>+) is referred to analog common.

#### 3.1.5 DIFFERENTIAL INPUT

This input can accept differential voltages anywhere within the Common mode range of the input amplifier or, specifically, from 1V below the positive supply to 1V above the negative supply. In this range, the system has a CMRR of 86dB, typical. However, since the integrator also swings with the Common mode voltage, care must be exercised to ensure that the integrator output does not saturate. A worst-case condition would be a large, positive Common mode voltage with a near full scale negative differential input voltage. The negative input signal drives the integrator positive, when most of its swing has been used up by the positive Common mode voltage. For these critical applications, the integrator swing can be reduced to less than the recommended 2V full scale swing with little loss of accuracy. The integrator output can swing within 0.3V of either supply without loss of linearity.

#### 3.1.6 ANALOG COMMON

This pin is included primarily to set the Common mode voltage for battery operation (TC7116/TC7116A), or for any system where the input signals are floating, with respect to the power supply. The analog common pin sets a voltage approximately 2.8V more negative than the positive supply. This is selected to give a minimum end of life battery voltage of about 6V. However, analog common has some attributes of a reference voltage. When the total supply voltage is large enough to cause the Zener to regulate (>7V), the analog common voltage will have a low voltage coefficient (0.001%), low output impedance ( $\cong 15\Omega$ ), and a temperature coefficient of less than 20ppm/°C, typically, and 50 ppm maximum. The TC7116/TC7117 temperature coefficients are typically 80ppm/°C.

An external reference may be used, if necessary, as shown in Figure 3-2.

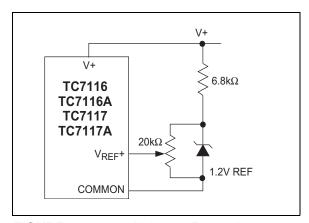


FIGURE 3-2: Using an External Reference

Analog common is also used as  $V_{\text{IN}^-}$  return during auto-zero and de-integrate. If  $V_{\text{IN}^-}$  is different from analog common, a Common mode voltage exists in the system and is taken care of by the excellent CMRR of the converter. However, in some applications,  $V_{\text{IN}^-}$  will be set at a fixed, known voltage (power supply common for instance). In this application, analog common should be tied to the same point, thus removing the Common mode voltage from the converter. The same holds true for the reference voltage; if it can be conveniently referenced to analog common, it should be. This removes the Common mode voltage from the reference system.

Within the IC, analog common is tied to an N-channel FET, that can sink 30mA or more of current to hold the voltage 3V below the positive supply (when a load is trying to pull the analog common line positive). However, there is only  $10\mu A$  of source current, so analog common may easily be tied to a more negative voltage, thus overriding the internal reference.

### 3.1.7 TEST

The TEST pin serves two functions. On the TC7117/ TC7117A, it is coupled to the internally generated digital supply through a  $500\Omega$  resistor. Thus, it can be used as a negative supply for externally generated segment drivers, such as decimal points, or any other presentation the user may want to include on the LCD. (Figure 3-3 and Figure 3-4 show such an application.) No more than a 1mA load should be applied.

The second function is a "lamp test." When TEST is pulled HIGH (to V+), all segments will be turned ON and the display should read -1888. The TEST pin will sink about 10mA under these conditions.


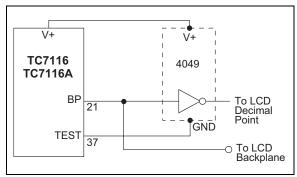


FIGURE 3-3: Simple Inverter for Fixed Decimal Point

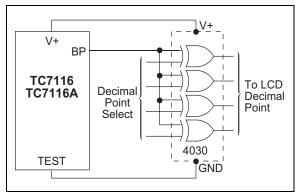

**FIGURE 3-4:** Exclusive "OR" Gate for Decimal Point Drive

## 3.2 Digital Section

Figure 3-5 and Figure show the digital section for TC7116/TC7116A and TC7117/TC7117A, respectively. For the TC7116/TC7116A (Figure 3-5), an internal digital ground is generated from a 6V Zener diode and a

large P-channel source follower. This supply is made stiff to absorb the relative large capacitive currents when the backplane (BP) voltage is switched. The BP frequency is the clock frequency 4800. For 3 readings per second, this is a 60Hz square wave with a nominal amplitude of 5V. The segments are driven at the same frequency and amplitude, and are in phase with BP when OFF, but out of phase when ON. In all cases, negligible DC voltage exists across the segments.

Figure is the digital section of the TC7117/TC7117A. It is identical to the TC7116/TC7116A, except that the regulated supply and BP drive have been eliminated, and the segment drive is typically 8mA. The 1000's output (Pin 19) sinks current from two LED segments, and has a 16mA drive capability. The TC7117/TC7117A are designed to drive common anode LED displays.

In both devices, the polarity indication is ON for analog inputs. If  $V_{IN}$ - and  $V_{IN}$ + are reversed, this indication can be reversed also, if desired.

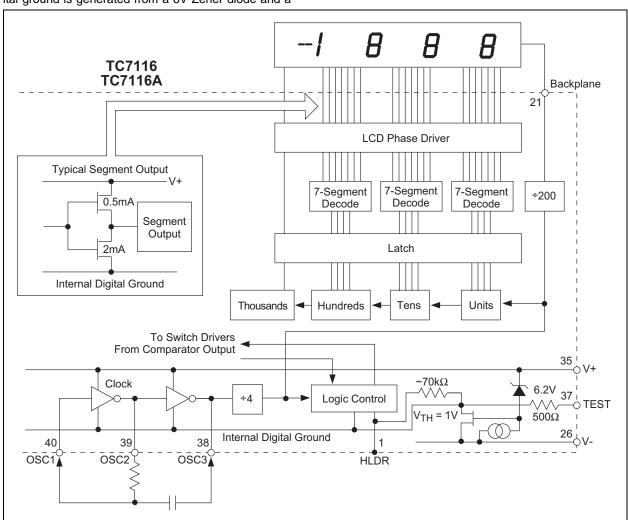


FIGURE 3-5: TC7116/TC7116A Digital Section

#### 3.2.1 SYSTEM TIMING

The clocking method used for the TC7116/TC7116A and TC7117/TC7117A is shown in Figure . Three clocking methods may be used:

- An external oscillator connected to Pin 40.
- 2. A crystal between Pins 39 and 40.
- 3. An RC network using all three pins.

The oscillator frequency is ÷4 before it clocks the decade counters. It is then further divided to form the three convert cycle phases: Signal Integrate (1000 counts), Reference De-integrate (0 to 2000 counts), and Auto-Zero (1000 to 3000 counts). For signals less than full scale, auto-zero gets the unused portion of reference de-integrate. This makes a complete measure cycle of 4000 (16,000 clock pulses), independent of input voltage. For 3 readings per second, an oscillator frequency of 48kHz would be used.

To achieve maximum rejection of 60Hz pickup, the signal integrate cycle should be a multiple of 60Hz. Oscillator frequencies of 240kHz, 120kHz, 80kHz, 60kHz, 48kHz, 40kHz, etc. should be selected. For 50Hz rejection, oscillator frequencies of 200kHz, 100kHz, 66-2/3kHz, 50kHz, 40kHz, etc. would be suitable. Note that 40kHz (2.5 readings per second) will reject both 50Hz and 60Hz.

### 3.2.2 HOLD READING INPUT

When HLDR is at a logic HIGH, the latch will not be updated. Analog-to-Digital conversions will continue, but will not be updated until HLDR is returned to LOW. To continuously update the display, connect to TEST (TC7116/TC7116A) or GROUND (TC7117/TC7117A), or disconnect. This input is CMOS compatible with  $70k\Omega$  typical resistance to TEST (TC7116/TC7116A) or GROUND (TC7117/TC7117A).

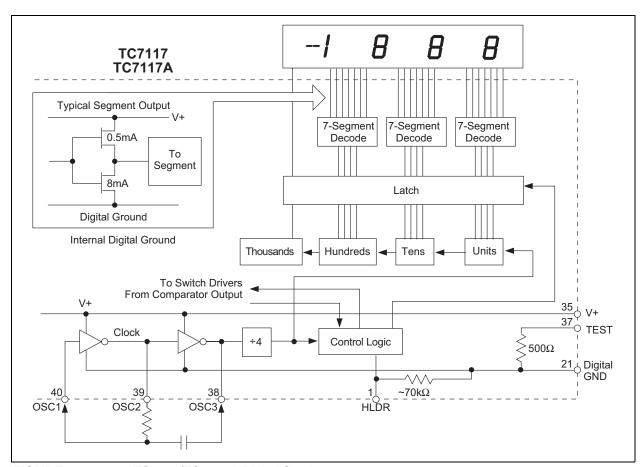


FIGURE 3-6: TC7117/TC7117A Digital Section

# 4.0 COMPONENT VALUE SELECTION

# 4.1 Auto-Zero Capacitor

The size of the auto-zero capacitor has some influence on system noise. For 200mV full scale, where noise is very important, a  $0.47\mu F$  capacitor is recommended. On the 2V scale, a  $0.047\mu F$  capacitor increases the speed of recovery from overload and is adequate for noise on this scale.

# 4.2 Reference Capacitor

A  $0.1\mu F$  capacitor is acceptable in most applications. However, where a large Common mode voltage exists (i.e., the  $V_{IN}$ - pin is not at analog common), and a 200mV scale is used, a larger value is required to prevent rollover error. Generally,  $1\mu F$  will hold the rollover error to 0.5 count in this instance.

### 4.3 Integrating Capacitor

The integrating capacitor should be selected to give the maximum voltage swing that ensures tolerance buildup will not saturate the integrator swing (approximately 0.3V from either supply). In the TC7116/TC7116A or the TC7117/TC7117A, when the analog common is used as a reference, a nominal ±2V full scale integrator swing is acceptable. For the TC7117/TC7117A, with ±5V supplies and analog common tied to supply ground, a ±3.5V to ±4V swing is nominal. For 3 readings per second (48kHz clock), nominal values for C<sub>INT</sub> are 0.22μ1F and 0.10μF, respectively. If different oscillator frequencies are used, these values should be changed in inverse proportion to maintain the output swing. The integrating capacitor must have low dielectric absorption to prevent rollover errors. Polypropylene capacitors are recommended for this application.

# 4.4 Integrating Resistor

Both the buffer amplifier and the integrator have a class A output stage with 100µA of quiescent current. They can supply 20µA of drive current with negligible nonlinearity. The integrating resistor should be large enough to remain in this very linear region over the input voltage range, but small enough that undue leakage requirements are not placed on the PC board. For 2V full scale,  $470k\Omega$  is near optimum and, similarly,  $47k\Omega$  for 200mV full scale.

### 4.5 Oscillator Components

For all frequency ranges, a  $100k\Omega$  resistor is recommended; the capacitor is selected from the equation:

### **EQUATION 4-1:**

$$f = \frac{0.45}{RC}$$

For a 48kHz clock (3 readings per second), C = 100pF.

## 4.6 Reference Voltage


To generate full scale output (2000 counts), the analog input requirement is  $V_{IN} = 2V_{REF}$ . Thus, for the 200mV and 2V scale, V<sub>REF</sub> should equal 100mV and 1V, respectively. In many applications, where the ADC is connected to a transducer, a scale factor exists between the input voltage and the digital reading. For instance, in a measuring system, the designer might like to have a full scale reading when the voltage from the transducer is 700mV. Instead of dividing the input down to 200mV, the designer should use the input voltage directly and select V<sub>REF</sub> = 350mV. Suitable values for integrating resistor and capacitor would be 120kW and 0.22µF. This makes the system slightly quieter and also avoids a divider network on the input. The TC7117/ TC7117A, with ±5V supplies, can accept input signals up to ±4V. Another advantage of this system is when a digital reading of zero is desired for  $V_{IN} \neq 0$ . Temperature and weighing systems with a variable tare are examples. This offset reading can be conveniently generated by connecting the voltage transducer between V<sub>IN</sub>+ and analog common, and the variable (or fixed) offset voltage between analog common and V<sub>IN</sub>-.

# 5.0 TC7117/TC7117A POWER SUPPLIES

The TC7117/TC7117A are designed to operate from ±5V supplies. However, if a negative supply is not available, it can be generated with a TC7660 DC-to-DC converter and two capacitors. Figure 5-1 shows this application.

In selected applications, a negative supply is not required. The conditions for using a single +5V supply are:

- The input signal can be referenced to the center of the Common mode range of the converter.
- 2. The signal is less than ±1.5V.
- 3. An external reference is used.

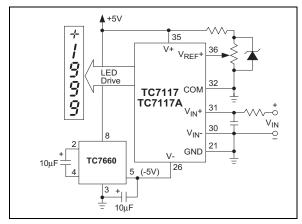

**FIGURE 5-1:** Negative Power Supply Generation with TC7660

### 6.0 TYPICAL APPLICATIONS

The TC7117/TC7117A sink the LED display current, causing heat to build up in the IC package. If the internal voltage reference is used, the changing chip temperature can cause the display to change reading. By reducing the LED common anode voltage, the TC7117/TC7117A package power dissipation is reduced.

Figure 6-1 is a curve tracer display showing the relationship between output current and output voltage for typical TC7117CPL/TC7117ACPL devices. Since a typical LED has 1.8V across it at 8mA and its common anode is connected to +5V, the TC7117/TC7117A output is at 3.2V (Point A, Figure 6-1). Maximum power dissipation is 8.1mA x 3.2V x 24 segments = 622mW.

However, notice that once the TC7117/TC7117A's output voltage is above 2V, the LED current is essentially constant as output voltage increases. Reducing the output voltage by 0.7V (Point B Figure 6-1) results in 7.7mA of LED current, only a 5% reduction. Maximum power dissipation is now only 7.7mA x 2.5V x 24 = 462mW, a reduction of 26%. An output voltage reduction of 1V (Point C) reduces LED current by 10% (7.3mA), but power dissipation by 38% (7.3mA x 2.2V x 24 = 385mW).


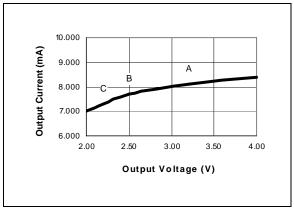


FIGURE 6-1: TC7117/TC7117A Output vs. Output Voltage

Reduced power dissipation is very easy to obtain. Figure 6-2 shows two ways: either a 5.1 $\Omega$ , 1/4W resistor, or a 1A diode placed in series with the display (but not in series with the TC7117/TC7117A). The resistor reduces the TC7117/TC7117A's output voltage (when all 24 segments are ON) to Point C of Figure 6-1. When segments turn off, the output voltage will increase. The diode, however, will result in a relatively steady output voltage, around Point B.

In addition to limiting maximum power dissipation, the resistor reduces change in power dissipation as the display changes. The effect is caused by the fact that, as fewer segments are ON, each ON output drops more voltage and current. For the best-case of six segments (a "111" display) to worst-case (a "1888" display), the resistor circuit will change about 230mW, while a circuit without the resistor will change about 470mW. Therefore, the resistor will reduce the effect of display dissipation on reference voltage drift by about 50%.

The change in LED brightness caused by the resistor is almost unnoticeable as more segments turn off. If display brightness remaining steady is very important to the designer, a diode may be used instead of the resistor.

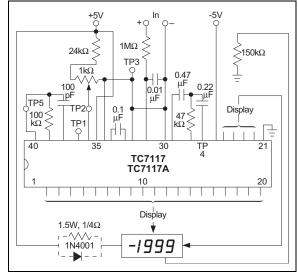

**FIGURE 6-2:** Diode or Resistor Limits Package Power Dissipation


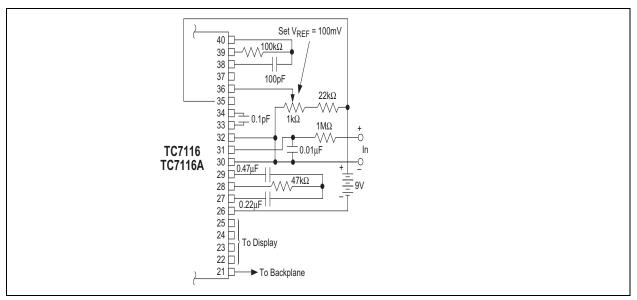


FIGURE 6-3: TC7116/TC7117A Using the Internal Reference (200 mV Full Scale, 3 Readings Per Second – RPS)

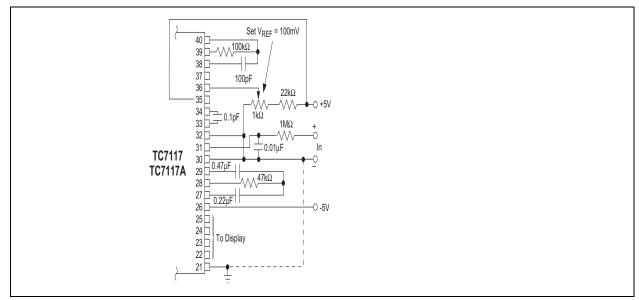

**FIGURE 6-4:** TC7117/TC7117A Internal Reference (200 mV Full Scale, 3 RPS,  $V_{IN}$ - Tied to GND for Single Ended Inputs

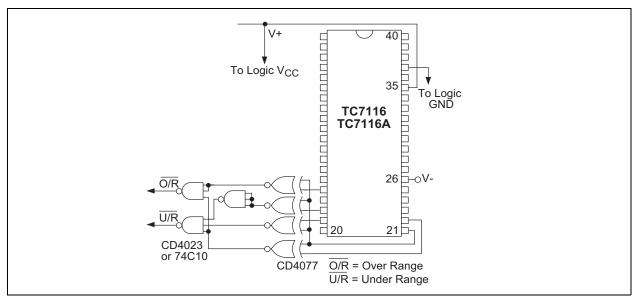


FIGURE 6-5: Circuit for Developing Under Range and Over Range Signals From TC7116/TC7117A Outputs

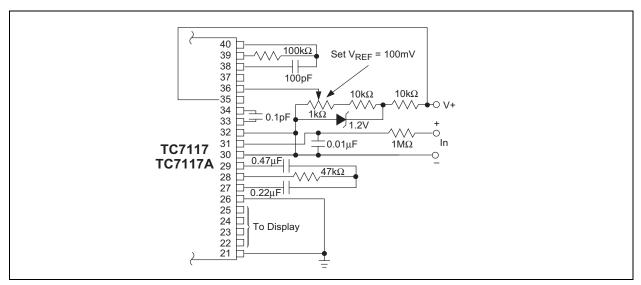


FIGURE 6-6: TC7117/TC7117A With A 1.2 External Bandgap Reference (V<sub>IN</sub>- Tied to Common)


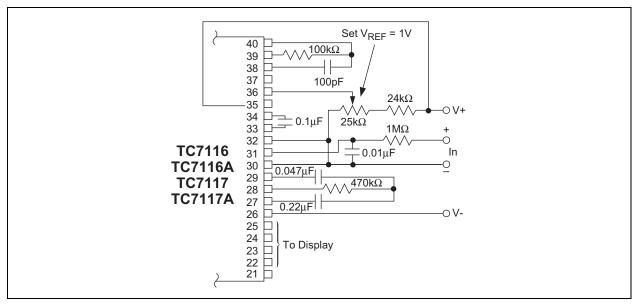


FIGURE 6-7: Recommended Component Values for 2V Full Scale (TC7116/TC7116A and TC7117/TC7117A)

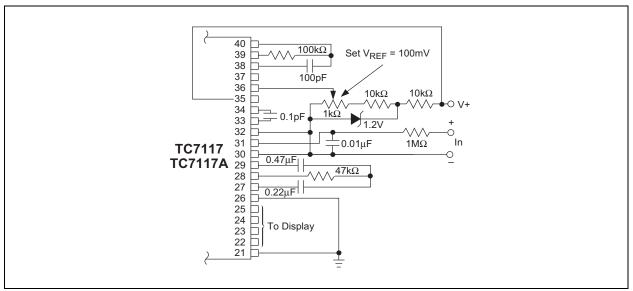


**FIGURE 6-8:** TC7117/TC7117A Operated From Single +5V Supply (An External Reference Must be Used in This Application)


# 7.0 PACKAGING INFORMATION

# 7.1 Package Marking Information


Package marking data not available at this time.


# 7.2 Taping Form

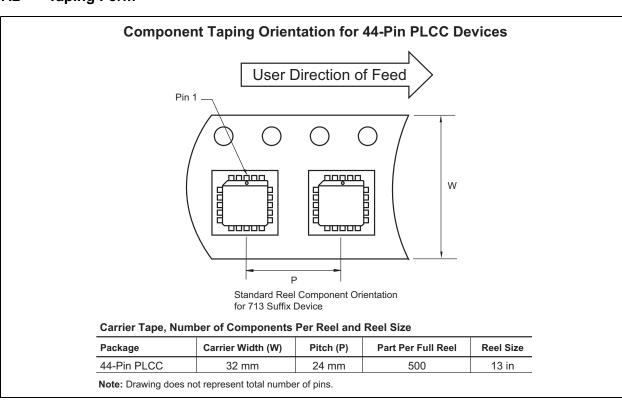

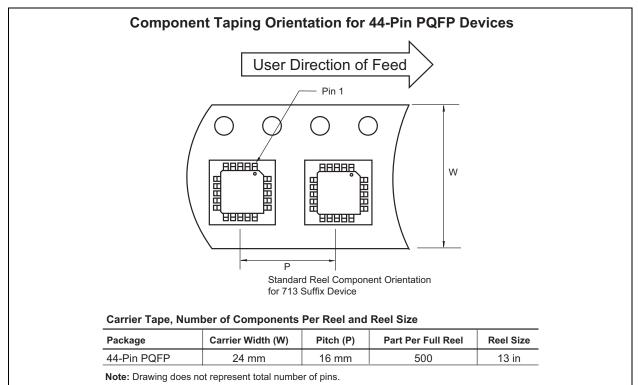


# 7.3 Package Dimensions

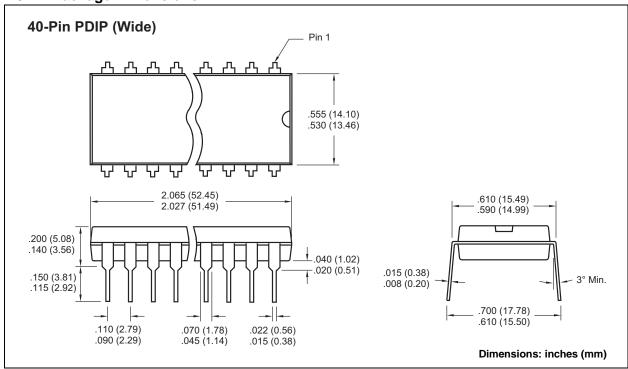

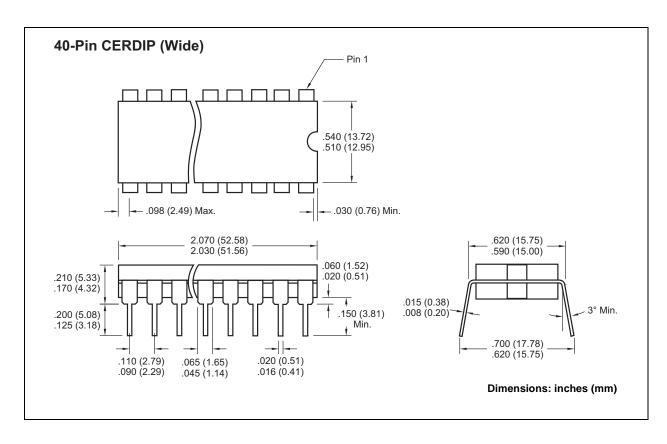

# 7.3 Package Dimensions (Continued)

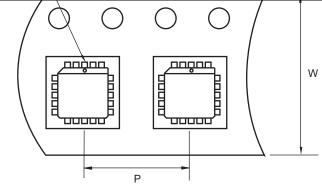


Standard Reel Component Orientation for 713 Suffix Device

### Carrier Tape, Number of Components Per Reel and Reel Size

Package	Carrier Width (W)	Pitch (P)	Part Per Full Reel	Reel Size
44-Pin PLCC	32 mm	24 mm	500	13 in


Note: Drawing does not represent total number of pins.

Dimensions: inches (mm)

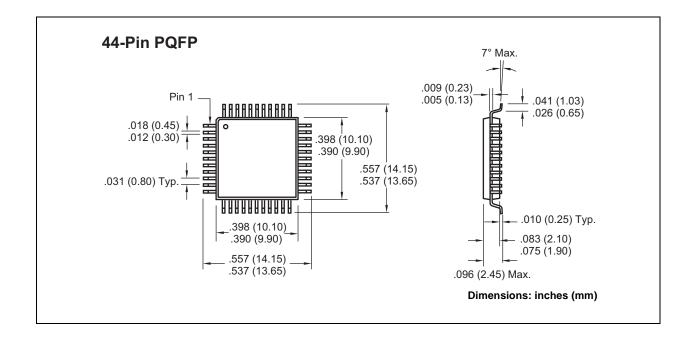

# PRODUCT IDENTIFICATION SYSTEM

To order or obtain information, e.g., on pricing or delivery, refer to the factory or the listed sales office.

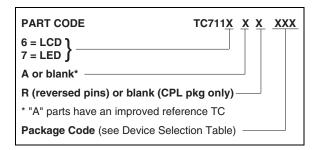

**NOTES:** 

### Note the following details of the code protection feature on Microchip devices:

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the
  intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights.

#### **Trademarks**

The Microchip name and logo, the Microchip logo, Accuron, dsPIC, KEELOQ, microID, MPLAB, PIC, PICmicro, PICSTART, PRO MATE, PowerSmart, rfPIC, and SmartShunt are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

AmpLab, FilterLab, Migratable Memory, MXDEV, MXLAB, SEEVAL, SmartSensor and The Embedded Control Solutions Company are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Analog-for-the-Digital Age, Application Maestro, dsPICDEM, dsPICDEM.net, dsPICworks, ECAN, ECONOMONITOR, FanSense, FlexROM, fuzzyLAB, In-Circuit Serial Programming, ICSP, ICEPIC, Linear Active Thermistor, Mindi, MiWi, MPASM, MPLIB, MPLINK, PICkit, PICDEM, PICDEM.net, PICLAB, PICtail, PowerCal, PowerInfo, PowerMate, PowerTool, REAL ICE, rfLAB, rfPICDEM, Select Mode, Smart Serial, SmartTel, Total Endurance, UNI/O, WiperLock and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

All other trademarks mentioned herein are property of their respective companies.

© 2006, Microchip Technology Incorporated, Printed in the U.S.A., All Rights Reserved.

Printed on recycled paper.

QUALITY MANAGEMENT SYSTEM

CERTIFIED BY DNV

ISO/TS 16949:2002

Microchip received ISO/TS-16949:2002 certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona, Gresham, Oregon and Mountain View, California. The Company's quality system processes and procedures are for its PICmicro® 8-bit MCUs, KEELOQ® code hopping devices, Serial EEPROMs, microperipherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.



# WORLDWIDE SALES AND SERVICE

#### **AMERICAS**

Corporate Office

2355 West Chandler Blvd. Chandler, AZ 85224-6199 Tel: 480-792-7200

Fax: 480-792-7277 Technical Support:

http://support.microchip.com

Web Address: www.microchip.com

Atlanta

Alpharetta, GA Tel: 770-640-0034 Fax: 770-640-0307

**Boston** 

Westborough, MA Tel: 774-760-0087 Fax: 774-760-0088

Chicago Itasca. IL

Tel: 630-285-0071 Fax: 630-285-0075

**Dallas** 

Addison, TX Tel: 972-818-7423 Fax: 972-818-2924

Detroit

Farmington Hills, MI Tel: 248-538-2250 Fax: 248-538-2260

Kokomo

Kokomo, IN Tel: 765-864-8360 Fax: 765-864-8387

Los Angeles

Mission Viejo, CA Tel: 949-462-9523 Fax: 949-462-9608

San Jose

Mountain View, CA Tel: 650-215-1444 Fax: 650-961-0286

**Toronto** 

Mississauga, Ontario,

Canada

Tel: 905-673-0699 Fax: 905-673-6509

### ASIA/PACIFIC

Australia - Sydney

Tel: 61-2-9868-6733 Fax: 61-2-9868-6755

China - Beijing

Tel: 86-10-8528-2100 Fax: 86-10-8528-2104

China - Chengdu

Tel: 86-28-8676-6200 Fax: 86-28-8676-6599

China - Fuzhou

Tel: 86-591-8750-3506 Fax: 86-591-8750-3521

China - Hong Kong SAR

Tel: 852-2401-1200 Fax: 852-2401-3431

China - Qingdao

Tel: 86-532-8502-7355 Fax: 86-532-8502-7205

China - Shanghai

Tel: 86-21-5407-5533 Fax: 86-21-5407-5066

China - Shenyang

Tel: 86-24-2334-2829 Fax: 86-24-2334-2393

China - Shenzhen

Tel: 86-755-8203-2660 Fax: 86-755-8203-1760

China - Shunde

Tel: 86-757-2839-5507 Fax: 86-757-2839-5571

China - Wuhan

Tel: 86-27-5980-5300 Fax: 86-27-5980-5118

China - Xian

Tel: 86-29-8833-7250 Fax: 86-29-8833-7256

#### ASIA/PACIFIC

India - Bangalore

Tel: 91-80-4182-8400 Fax: 91-80-4182-8422

India - New Delhi

Tel: 91-11-5160-8631 Fax: 91-11-5160-8632

India - Pune

Tel: 91-20-2566-1512 Fax: 91-20-2566-1513

Japan - Yokohama

Tel: 81-45-471- 6166 Fax: 81-45-471-6122

Korea - Gumi

Tel: 82-54-473-4301 Fax: 82-54-473-4302

Korea - Seoul

Tel: 82-2-554-7200 Fax: 82-2-558-5932 or

82-2-558-5934

**Malaysia - Penang** Tel: 60-4-646-8870 Fax: 60-4-646-5086

Philippines - Manila

Tel: 63-2-634-9065 Fax: 63-2-634-9069

Singapore

Tel: 65-6334-8870 Fax: 65-6334-8850 Taiwan - Hsin Chu

Tel: 886-3-572-9526

Fax: 886-3-572-6459

Taiwan - Kaohsiung

Tel: 886-7-536-4818 Fax: 886-7-536-4803

Taiwan - Taipei

Tel: 886-2-2500-6610 Fax: 886-2-2508-0102

Thailand - Bangkok

Tel: 66-2-694-1351 Fax: 66-2-694-1350

#### **EUROPE**

Austria - Wels

Tel: 43-7242-2244-399 Fax: 43-7242-2244-393

Denmark - Copenhagen

Tel: 45-4450-2828 Fax: 45-4485-2829

France - Paris

Tel: 33-1-69-53-63-20 Fax: 33-1-69-30-90-79

**Germany - Munich** 

Tel: 49-89-627-144-0 Fax: 49-89-627-144-44

Italy - Milan

Tel: 39-0331-742611 Fax: 39-0331-466781

Netherlands - Drunen

Tel: 31-416-690399 Fax: 31-416-690340

Spain - Madrid

Tel: 34-91-708-08-90 Fax: 34-91-708-08-91

**UK - Wokingham** Tel: 44-118-921-5869

Fax: 44-118-921-5869

02/16/06