




RS232 cable

SSK1/..

X10 <---

--->PC

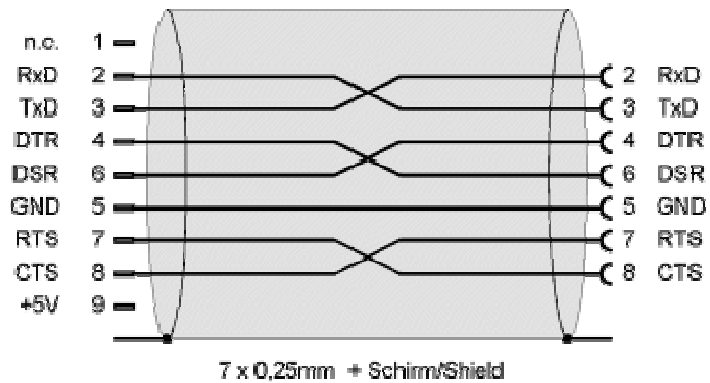

You can find the length code in the [Order Code Accessories](#)