PDF Technical File

Visitors to this web site are authorized to download this information for reprints or electronic transfer to their technical reference files.




empirical test fixtures WITH QUICK-RELEASE STRAP

A handy R&D/test device for determining if a ferrite suppressor is feasible in a given situation. With this massive amount of insertion loss material applied to a circuit, a rough estimate of attenuation effect can be previewed. Afterwards, a properly configured ferrite assembly can be determined.

Install on any cable data signal circuit by reassembling ferrite halves within the plastic strap. Even flat ribbon cables pass through the large opening.

Available in our four standard material formulas: #28 for frequencies from 10 MHz to 1 GHz, #33 for frequencies from 1 to 30 MHz, and #25 for peak suppression of interference occurring at 500 to 700 MHz, and #20 for Bluetooth™ microwave applications.

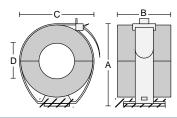

PART No.	Α	В	С	D	MATERIAL	IMPEDANCE IN OHMS
ET28B2000	2.53 64,3	1.50 38,1	2.00 50,8	1.00 25,4	#28 formulation	380 @ 100MHz
ET33B2000	2.53 64,3	1.50 38,1	2.00 <i>50,8</i>	1.00 <i>25,4</i>	#33 formulation	210 @ 30MHz
ET25B2000	2.53 64,3	1.50 38,1	2.00 <i>50,8</i>	1.00 <i>25,4</i>	#25 formulation	890 @ 700MHz
ET20B2000	2.53 64,3	1.50 38,1	2.00 <i>50,8</i>	1.00 25,4	#20 formulation	Reference

For further technical information, please contact us at:

