

OPERATION MANUAL FOR MDF51 SERIES(BACK LIGHT CONNECTOR)

CONNECTOR INSERTION


- 1. INSERT THE CONNECTOR WITH THE GUIDE OF THE CONNECTOR ON PCB. 2. PUSH THE "O" MARK IN THE CENTER OF THE CONNECTOR.
- WHEN THE CRIMP SOCKET IS LOCKED THERE IS A FIRM LOCK FREELING.

NOTE) INSERT THE CONNECTOR COMPLETELY TO THE END.

CONNECTOR WITHDRAWAL

- 1. PUSH THE LOCK OF THE MATED CRIMP SOCKET AT BOTH SIDES IN THE DIRECTIONS
- 2. WIHT PUSHING THE LOCK, PULL STRAIGHT UP.

NOTE) PUSH AND UNLOCK THE SOCKET COMPLETELY.

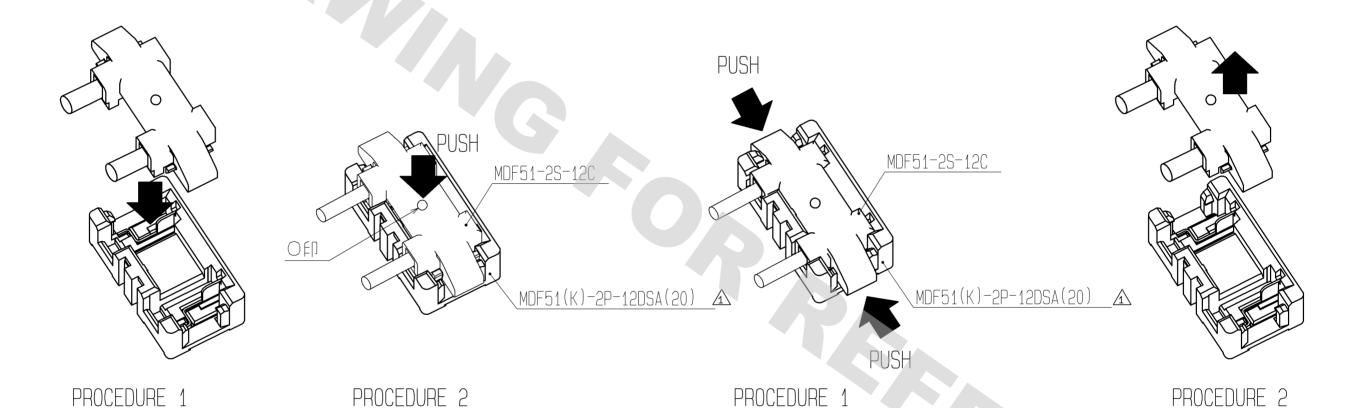

DRAWING NO.
PART NO. EDC3-309701-01 MDF51-2S-12C

CL547-2004-7-00

FORM HC0011-5-8