

Notes:

1. Allow clearance for finger squeeze access from the two sides shown.

2. No tracks or vias in the shaded "KEEP OUT" AREA.

3. No other track or signal within .02" of any contact pad.


4. Do not allow solder paste on the contact pads. It is essential to eliminate any hole in the solder paste-mask (solder stencil) layer. If this is not possible make the contact pads thru-hole with a finished hole size of .008" or less.

5. Leg and alignment holes may be plated and used as vias but ensure minimum finished hole size meets specified tolerances.


6. To prevent purchasing confusion, please specify DNL in your BOM.

FOOTPRINT FOR TC2050-IDC PLUG-OF-NAILS™ CABLE

ZONE	A	TC2050-IDC-FP	12/2/10	MS
------	---	---------------	---------	----

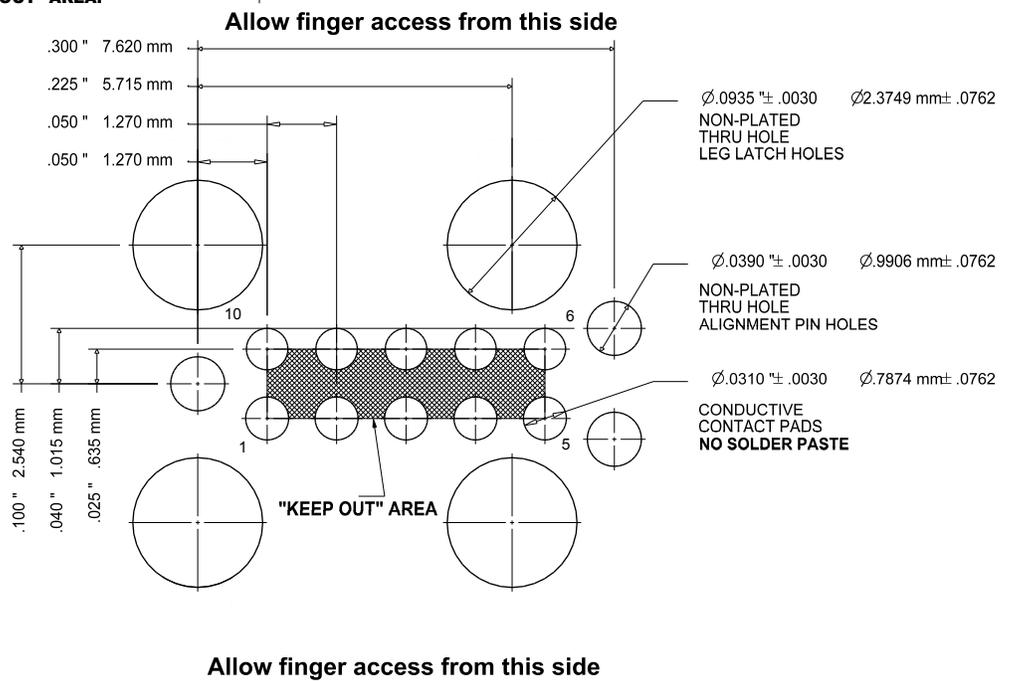

PCB BOTTOM VIEW

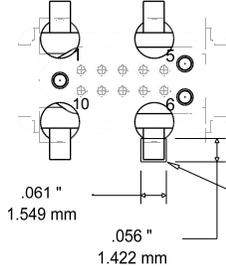




ALLOW A .061 x .056 SQUARE AREA OF CLEARANCE FOR EACH FOOT

SIZE A	FSCM NO.	DWG NO.	FOOTPRINT FOR TC2050-IDC-FP	REV A
SCALE 7:1	www.TAG-CONNECT.com		SHEET 1 Of 3	





NOTE:
Dimensions subject to change

TC2050-IDC PLUG-OF-NAILS™ CABLE

ZONE	A	TC2050-IDC	12/2/10	MS
------	---	-------------------	---------	----


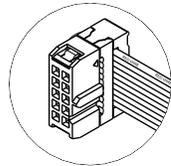
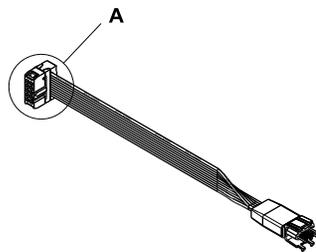
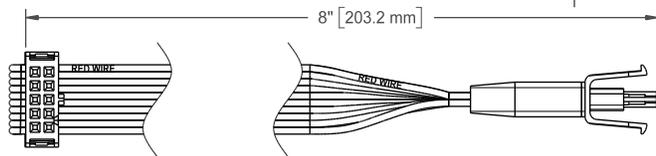


Detail A

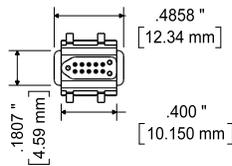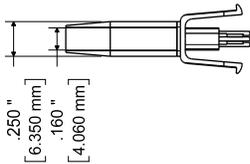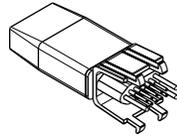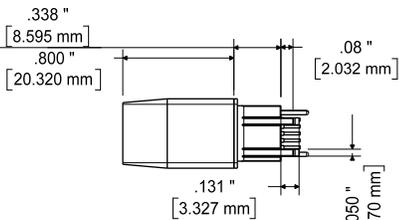


END VIEW
2x5 0.1" PITCH
IDC CONNECTOR

END VIEW
10 PIN
TAG-CONNECT

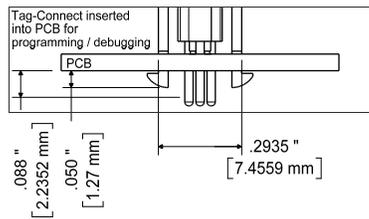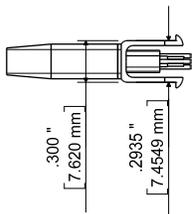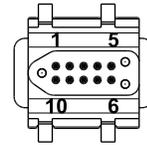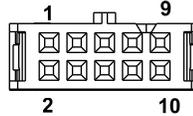


SIZE A	FSCM NO.	DWG NO. TC2050-IDC	REV A
SCALE	www.TAG-CONNECT.com		SHEET 2 of 3

Layout Problems to Avoid

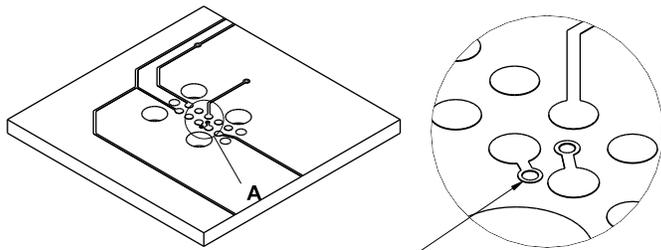


Vias between contact pads

Detail A

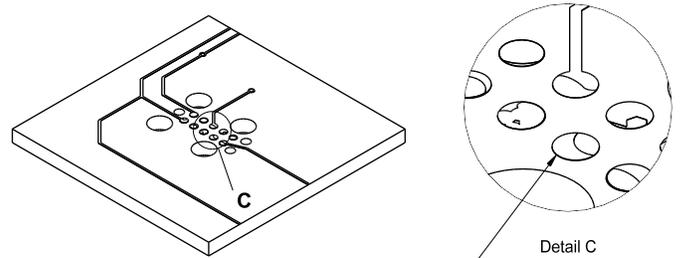


Detail C

Do not deposit solder paste on contact pads. View Solder Paste Mask (Solder Stencil) layer in pad-stack and eliminate any hole.

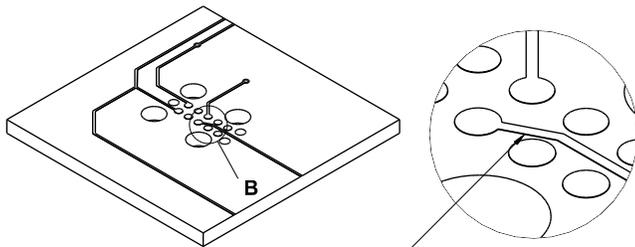

Traces less than .02" away from contact pad or in "KEEP OUT" area

Detail B

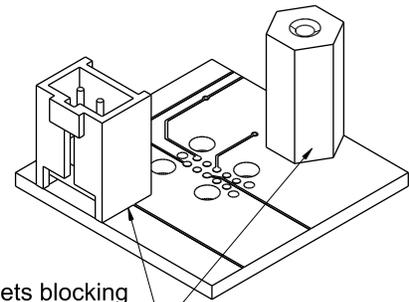

Large componets blocking finger access to the Tag-Connect leg clips