

**WMPV45EP**

- (2) Endpanels
- (4).375-16 Acorn nuts
- (4).375 -16 Bolts

### Assembly:

#### Step 1:

Insert bolt into mounting location one.

#### Step 2:

Place End Panel over the bolt and hand tighten nut.

#### Step 3:


Insert bolt into location two and secure with acorn nut. Tighten acorn nut in location one.

#### Step 4:

Repeat steps 1-3 for upper end panel


## WMPV45EP Installation Instructions

**Note:** Install lower end panel first when using a stacked configuration.

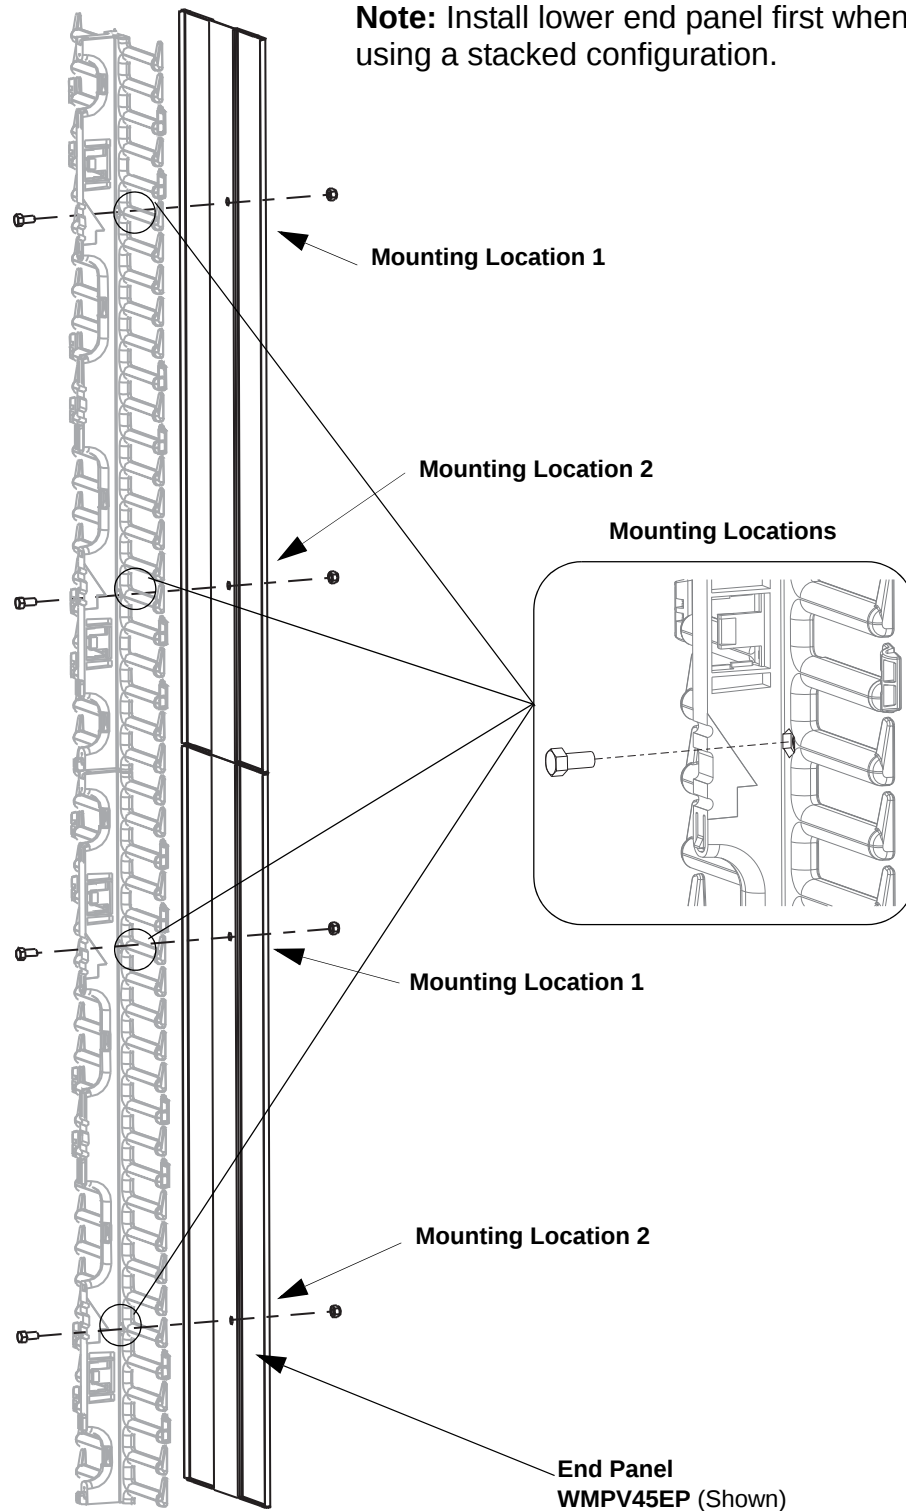

Geometry modified for clarification: Not all molded fingers are shown


# NREP Installation Instructions

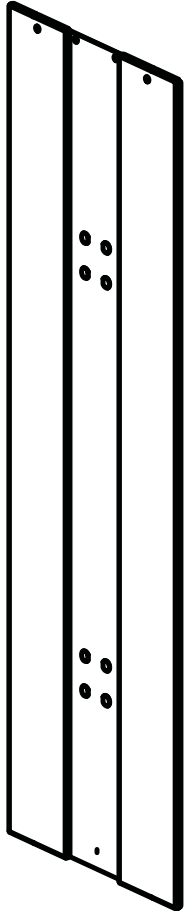

## NREP

- (2) End Panels
- (4) 3/8-16 Acorn Nuts
- (4) 3/8 Bolts
- (2) 1/4" Washers
- (2) 1/4-20 X 3/8" Screws
- (2) 1/4-20 Nuts

**Note:** Install lower end panel first when using a stacked configuration. Determine knockouts to be removed by lining up panel against manager.

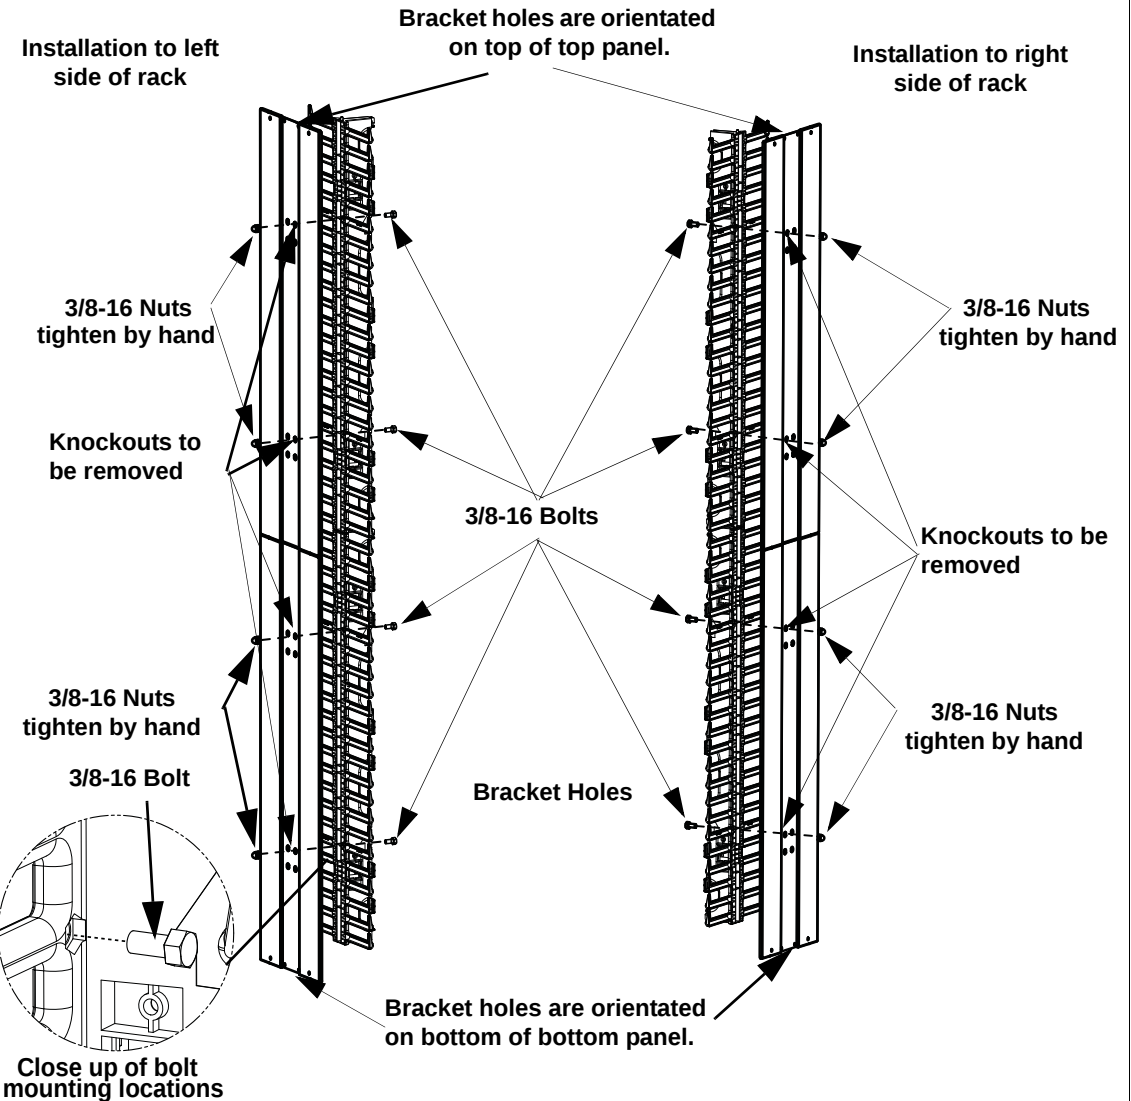

1/4-20 Bolts and Washers

1/4-20 Nuts

Bracket may be anchored to floor using these slots (Hardware not included). Bracket may be orientated on either inside or outside of panel. **Note:** Bracket must be mounted outward when Cool Boot is used.

For instructions in Local Languages  
and Technical Support:

[www.panduit.com/resources/install\\_maintain.asp](http://www.panduit.com/resources/install_maintain.asp)

**PANDUIT**®

[www.panduit.com](http://www.panduit.com)

E-mail:  
[cs@panduit.com](mailto:cs@panduit.com)  
Fax:  
(708)444-6448