

PIN RECEPTACLES


FOR .015" - .025" DIAMETER PINS

1005/1013/8898

XXXX-0-15-XX-3X-XX-04-0

Press-fit in .057 mounting hole

Annealed brass shell for auto-clinching *

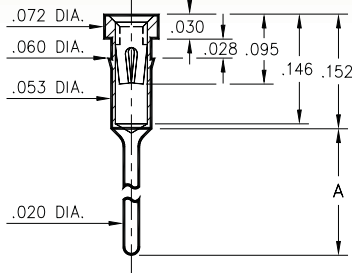


Basic Part Number	Length A
1005-0	.138
1013-0	.165
8898-0	.224

* NOTE: 8898 is not annealed & not suitable for auto-clinching

0145/0146

014X-0-15-XX-30-XX-04-0

Press-fit in .059 mounting hole

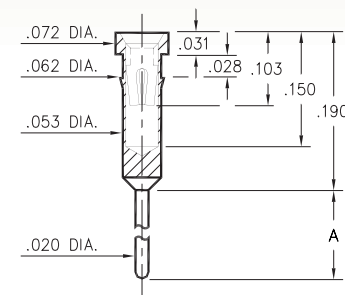


Basic Part Number	Length A
0145-0	.300
0146-0	.410

4378

4378-0-15-XX-30-XX-10-0


Press-fit in .057 mounting hole

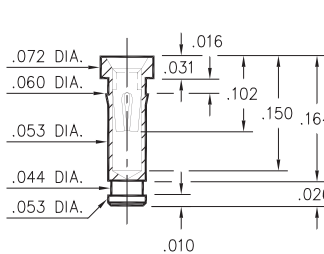

0556

0556-0-15-XX-30-XX-04-0


Press-fit in .059 mounting hole

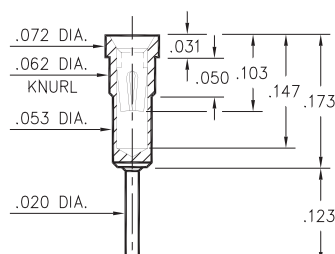

1103

1103-0-15-XX-30-XX-04-0


Press-fit in .057 mounting hole

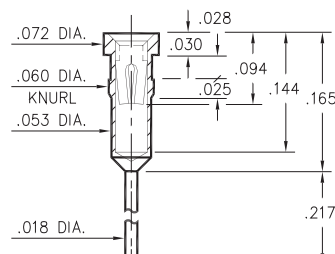

9234

9234-0-15-XX-30-XX-10-0


Solder mount in .052 min. mounting hole

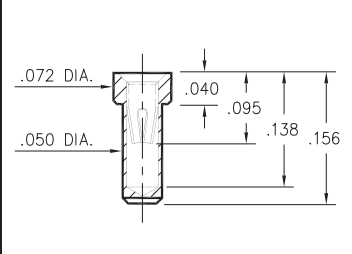

0136/37/38/39/41/48/52

01XX-0-15-XX-30-XX-04-0

Press-fit in .057 mounting hole

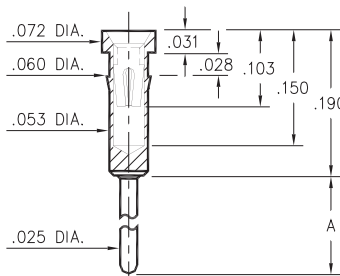


Basic Part Number	Length A
0136-0	1.215
0137-0	.560
0138-0	.210
0139-0	.635
0141-0	.700
0148-0	.455
0152-0	.410

0447

0447-0-15-XX-30-XX-04-0


Press-fit in .056 mounting hole

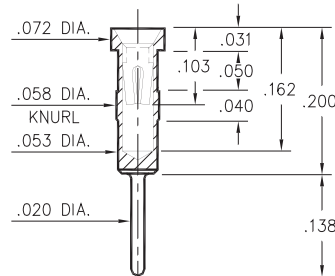

5660

5660-0-15-XX-30-XX-10-0

Solder mount in .051 min. mounting hole

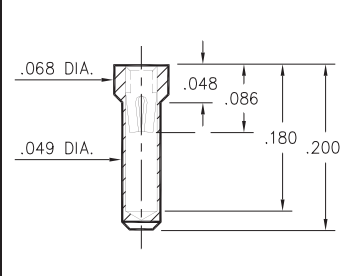

SPECIFICATIONS:

Shell Material: Brass Alloy 360, 1/2 Hard

Contact Material: Beryllium Copper Alloy 172, HT

Dimensions: Inches

Tolerances On: Lengths: $\pm .005$

Diameters: $\pm .002$

Angles: $\pm 2^\circ$



ORDER CODE: XXXX - X - 15 - XX - XX - XX - XX - 0

BASIC PART #

SPECIFY SHELL FINISH:

01 200 μ " TIN/LEAD OVER NICKEL

◆ 80 200 μ " TIN OVER NICKEL (RoHS)

◆ 15 10 μ " GOLD OVER NICKEL (RoHS)

SPECIFY CONTACT FINISH:

02 100 μ " TIN/LEAD OVER NICKEL

◆ 84 100 μ " TIN OVER NICKEL (RoHS)

◆ 27 30 μ " GOLD OVER NICKEL (RoHS)

SELECT CONTACT:

#30 or #32 CONTACT (DATA ON PAGE 253)

(For alternate contact choices, see groups B and C on page 248)



Mill-Max Mfg. Corp. • 190 Pine Hollow Road, P.O. Box 300, Oyster Bay, NY 11771 • 516-922-6000 • Fax: 516-922-9253 • www.mill-max.com

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Mill-Max:

[9234-0-15-01-30-02-10-0](#) [1103-0-15-01-30-02-04-0](#) [1103-0-15-01-30-27-04-0](#) [1013-0-15-01-32-02-04-0](#) [1013-0-15-01-32-27-04-0](#) [1005-0-15-01-32-02-04-0](#) [1005-0-15-01-32-27-04-0](#) [1005-0-15-01-30-02-04-0](#) [1005-0-15-01-30-27-04-0](#) [0556-0-15-01-30-02-04-0](#) [0556-0-15-01-30-27-04-0](#) [0447-0-15-01-30-02-04-0](#) [0447-0-15-01-30-27-04-0](#) [0152-0-15-01-30-02-04-0](#) [0152-0-15-01-30-27-04-0](#) [0148-0-15-01-30-02-04-0](#) [0148-0-15-01-30-27-04-0](#) [0146-0-15-01-30-02-04-0](#) [0146-0-15-01-30-27-04-0](#) [0145-0-15-01-30-02-04-0](#) [0145-0-15-01-30-27-04-0](#) [0141-0-15-01-30-02-04-0](#) [0141-0-15-01-30-27-04-0](#) [0139-0-15-01-30-02-04-0](#) [0139-0-15-01-30-27-04-0](#) [0138-0-15-01-30-02-04-0](#) [0138-0-15-01-30-27-04-0](#) [0137-0-15-01-30-02-04-0](#) [0137-0-15-01-30-27-04-0](#) [0136-0-15-01-30-02-04-0](#) [0136-0-15-01-30-27-04-0](#) [0136-0-15-15-30-27-04-0](#) [0137-0-15-15-30-27-04-0](#) [0138-0-15-15-30-27-04-0](#) [0139-0-15-15-30-27-04-0](#) [0141-0-15-15-30-27-04-0](#) [0146-0-15-15-30-27-04-0](#) [0148-0-15-15-30-27-04-0](#) [0152-0-15-15-30-27-04-0](#) [0447-0-15-15-30-27-04-0](#) [0556-0-15-15-30-27-04-0](#) [1005-0-15-15-30-27-04-0](#) [1005-0-15-15-32-27-04-0](#) [1013-0-15-15-32-27-04-0](#) [1103-0-15-15-30-27-04-0](#) [1005-0-15-00-32-00-04-0](#) [0146-0-15-00-00-00-04-0](#) [0556-0-15-00-00-00-04-0](#) [0148-0-15-00-00-00-04-0](#) [0141-0-15-00-00-00-04-0](#) [0152-0-15-00-00-00-04-0](#) [9234-0-15-00-00-00-10-0](#) [0138-0-15-00-00-00-04-0](#) [8898-0-15-00-32-00-04-0](#) [1005-0-15-00-00-00-04-0](#) [8898-0-15-00-30-00-04-0](#) [0139-0-15-00-00-00-04-0](#) [1013-0-15-00-00-00-04-0](#) [4378-0-15-00-00-00-10-0](#) [1103-0-15-00-00-00-04-0](#) [0137-0-15-00-00-00-04-0](#) [1013-0-15-80-32-14-04-0](#) [1013-0-15-01-32-14-04-0](#) [1005-0-15-01-32-14-04-0](#) [1103-0-15-80-30-14-04-0](#) [0447-0-15-80-30-14-04-0](#) [1005-0-15-01-30-14-04-0](#) [0556-0-15-01-30-14-04-0](#) [0139-0-15-01-30-14-04-0](#) [0138-0-15-80-30-14-04-0](#) [0152-0-15-80-30-14-04-0](#) [0146-0-15-80-30-14-04-0](#) [0137-0-15-80-30-14-04-0](#) [0145-0-15-80-30-14-04-0](#) [0152-0-15-01-30-14-04-0](#) [0145-0-15-01-30-14-04-0](#) [0136-0-15-01-30-14-04-0](#) [0137-0-15-01-30-14-04-0](#) [0148-0-15-01-30-14-04-0](#) [1005-0-15-80-32-14-04-0](#) [0141-0-15-80-30-14-04-0](#) [0146-0-15-01-30-14-04-0](#) [0136-0-15-80-30-14-04-0](#) [0148-0-15-80-30-14-04-0](#) [0138-0-15-01-30-14-04-0](#) [0556-0-15-80-30-14-04-0](#) [0141-0-15-01-30-14-04-0](#) [0139-0-15-80-30-14-04-0](#) [1103-0-15-01-30-14-04-0](#) [0447-0-15-01-30-14-04-0](#) [1005-0-15-80-30-14-04-0](#)