

JUMO GmbH & Co. KG
Delivery address: Mackenrodtstraße 14
36039 Fulda, Germany
Postal address: 36035 Fulda, Germany
Phone: +49 661 6003-0
Fax: +49 661 6003-607
E-mail: mail@jumo.net
Internet: www.jumo.net

JUMO Instrument Co. Ltd.
JUMO House
Temple Bank, Riverway
Harlow, Essex CM20 2DY, UK
Phone: +44 1279 635533
Fax: +44 1279 635262
E-mail: sales@jumo.co.uk
Internet: www.jumo.co.uk

JUMO Process Control, Inc.
6733 Myers Road
East Syracuse, NY 13057, USA
Phone: 315-437-5866
1-800-554-5866
Fax: 315-437-5860
E-mail: info.us@jumo.net
Internet: www.jumousa.com



Surface-Mounted Thermostat ATH series

Special features

- Sturdy case (protection type IP 54))
- Microswitch
- Self-monitoring (STB/STW) in the event of a pressure drop
- Safety cut-out (STB/STW)
- Tested according to DIN EN 14597

Brief description

Thermostats control and monitor thermal processes. Instruments of the ATH series are available as temperature controllers TR, temperature monitors TW, safety temperature monitors STW (STB), and safety temperature limiters STB. When malfunctions occur, the STB places the system being monitored in a safe operating status.

Surface-mounted thermostats operate according to the fluid expansion principle – a micro-switch is used as an electrical switching element.



ATHs-1

Switching function

Temperature controller TR and temperature monitor TW

If the temperature on the temperature probe exceeds the setpoint value, the microswitch is activated by the transmission mechanics and the electrical circuit is opened or closed. If the temperature falls below the selected setpoint value (by the amount of the switching differential), the microswitch is reset to its initial position.

Restart lock on the safety temperature limiter STB

If the temperature on the temperature probe exceeds the set limit value, the electrical circuit is opened and the microswitch is mechanically locked.

The microswitch can be manually unlocked once the dangerous temperature drops by approx. 10 % of the scale range (approx. 15 % with a limit value setting > + 350 °C).

Using the safety temperature monitor STW as a safety temperature limiter STB

The circuit following the thermostat must comply with DIN EN 14597 and VDE 0116.

Self-monitoring on the safety temperature limiter STB and the safety temperature monitor STW (STB)

If the measuring system is destroyed (i.e. if the expansion fluid escapes) the pressure in the membrane of the STB and STW (STB) drops and permanently opens the electrical circuit. Unlocking is then no longer possible.

If the probe has cooled down to a temperature below approx. -20 °C, the electrical circuit is opened; when the temperature rises above approx. -20 °C, the STB must be unlocked manually using the restart knob. The STW (STB) automatically restarts.



ATHf-70

Approvals



JUMO GmbH & Co. KG
 Delivery address: Mackenrodtstraße 14
 36039 Fulda, Germany
 Postal address: 36035 Fulda, Germany
 Phone: +49 661 6003-0
 Fax: +49 661 6003-607
 E-mail: mail@jumo.net
 Internet: www.jumo.net

JUMO Instrument Co. Ltd.
 JUMO House
 Temple Bank, Riverway
 Harlow, Essex CM20 2DY, UK
 Phone: +44 1279 635533
 Fax: +44 1279 635262
 E-mail: sales@jumo.co.uk
 Internet: www.jumo.co.uk

JUMO Process Control, Inc.
 6733 Myers Road
 East Syracuse, NY 13057, USA
 Phone: 315-437-5866
 1-800-554-5866
 Fax: 315-437-5860
 E-mail: info.us@jumo.net
 Internet: www.jumousa.com



Approvals

Types		Switching function	DIN registry no.	Tests	You will find Declarations of Conformity on the Internet at: www.jumo.net ⇒ Products ⇒ Thermostats ⇒ Data sheet 603021 or they can be sent to you upon request.
With rigid thermowell	With capillary			 - DIN EN 14597 - Pressure Equipment Directive 97/23/EC (ATH.-20 and ATH.-70 only)	
ATHs-1	ATHf-1	TR	TR 89107		
ATHs-2	ATHf-2	TW	TW 89207		
ATHs-20	ATHf-20	STW (STB)	STW (STB) 89407 S		
ATHs-70	ATHf-70	STB	STB 89507		

Technical data

Control ranges and temperature probes

Liquid-filled					
Type	Control range / limit value range in °C	Max. allowable probe temperature in °C	Maximum capillary length in mm	Probe length, dimension "L" in mm	
				Probe ø "d" in mm, ø "6" = standard	
				6	8
ATH.-1 ATH.-2	-20 to + 50	60	5000	141	92
	-10 to + 40	50		185	115
	0 to + 50	60		185	115
	0 to +100	125		107	75
	+20 to + 90	115		138	91
	+20 to +120	140		106	75
	+20 to +150	175		88	65
	+30 to +110	135		125	84
	+50 to +200	230		101	72
	+50 to +250	290		73	54
	+50 to +300	345		63	49
	+50 to +350	405		53	- - -
	+60 to +130	150		135	90
ATH.-20 ATH.-70	+20 to +150	175	5000	77	60
	+30 to +110	135		108	75
	+50 to +250	290		64	49
	+50 to +300	345		55	- - -
	+60 to +130	150		116	79
Gas-filled					
ATH.-1 ATH.-2	+20 to +400	460	1000	278	158
	+20 to +500	550	2000	148	92
	+20 to +500	550	4000	202	119
ATH.-20 ATH.-70	+20 to +400	460	1000	176	106
	+20 to +500	550	2000	127	81
	+20 to +500	550	4000	202	119

Capillary and temperature probe

Type	Scale limit value	Capillary	Temperature probe	Comments
ATH.- . .	Up to 200 °C	Copper (Cu) ø 1.5 mm Material-no. Cu-DHP	Copper (Cu) Material-no. Cu-DHP Hard soldered	-
	Up to 350 °C	Copper (Cu) ø 1.5 mm Material-no. Cu-DHP	Stainless steel (CrNi) Material no. 1.4571 Hard soldered	-
	Up to 500 °C	Stainless steel (CrNi) ø 1.5 mm Material no. 1.4571	Stainless steel (CrNi) Material no. 1.4571 Welded	-
	Up to 350 °C	Stainless steel (CrNi) ø 1.5 mm Material no. 1.4571	Stainless steel (CrNi) Material no. 1.4571 Welded	Available at extra cost
Capillary length	1000 mm, max. 5000 mm as standard			
Minimum bending radius of the capillary	5 mm			

JUMO GmbH & Co. KG

Delivery address: Mackenrodtstraße 14
36039 Fulda, Germany
Postal address: 36035 Fulda, Germany
Phone: +49 661 6003-0
Fax: +49 661 6003-607
E-mail: mail@jumo.net
Internet: www.jumo.net

JUMO Instrument Co. Ltd.

JUMO House
Temple Bank, Riverway
Harlow, Essex CM20 2DY, UK
Phone: +44 1279 635533
Fax: +44 1279 635262
E-mail: sales@jumo.co.uk
Internet: www.jumo.co.uk

JUMO Process Control, Inc.

6733 Myers Road
East Syracuse, NY 13057, USA
Phone: 315-437-5866
1-800-554-5866
Fax: 315-437-5860
E-mail: info.us@jumo.net
Internet: www.jumousa.com

**Electrical data**

Switching element	ATH.-1 ATH.-2 ATH.-20	ATH.-70	ATH.-70/574
	Microswitch with changeover contact	Microswitch with N/C contact and restart lock	Microswitch with N/C contact, restart lock, and additional signal contact
Max. switching capacity	AC 230 V +10 %, 10 (2) A, $\cos \varphi = 1$ (0.6) DC 230 V +10 %, 0.25 A		
	With switching differential 1.5 % and 2 % AC 230 V +10 %, 6 (1.2) A, $\cos \varphi = 1$ (0.6)	–	–
	Gold-plated microswitch, extra code /702* (* for 3 %, 5 %, and 7 % switching differentials only) 24 V AC / DC, 0.1 A Contact resistance 2.5 to 10 m	–	–
Contact reliability	To ensure a high switching reliability, we recommend a minimum load of: With silver contacts: AC / DC = 24 V, 100 mA For gold-plated contacts ("702" symbol): AC / DC = 10 V, 5 mA		

Operating data

Switching differential in % of the control range / limit value range	Switching function		With liquid-filled measuring system				
			Nominal value		Possible actual value		
	TR, TW	3		3 max. 4		Standard	
		6		6 max. 8		Upon request	
		1.5		1 max. 2		Extra cost	
		With gas-filled measuring system					
		5		4 max. 8		Standard	
		9		8 max. 12		Upon request	
		2		1.5 max. 2.5		Extra cost	
			With liquid-filled measuring system				
	STW (STB)	5		4 max. 6		Standard	
		9		8 max. 11		Upon request	
		2		1 max. 3		Extra cost	
		With gas-filled measuring system					
		7		5 max. 12		Standard	
		9		8 max. 16		Upon request	
		2		1.5 max. 3		Extra cost	
Switching point accuracy in % of the control range / limit value range	TR, TW: In the upper third of the scale ± 1.5 %, at scale beginning ± 6 % STB, STW (STB): In the upper third of the scale +0/-5 %, at scale beginning +0/-10 %						
Ambient temperature influence based on the control range / limit value range	When the ambient temperature on the case deviates from the calibration ambient temperature of 22 °C, a switching point offset occurs. Higher ambient temperatures = lower switching point Lower ambient temperature = higher switching point						
	Surface-mounted thermostats with scale limit value						
	< 200 °C		+ 200 °C ≤ 350 °C		> 350 °C ≤ 500 °C		
	TR / TW	STB/STW (STB)	TR / TW	STB/STW (STB)	TR / TW	STB/STW (STB)	
	Influence on the switching head						
	0.08 %/K	0.17 %/K	0.06 %/K	0.13 %/K	0.14 %/K	0.12 %/K	
	Influence on the capillary per meter						
	0.047 %/K	0.054 %/K	0.09 %/K	0.11 %/K	0.04 %/K	0.03 %/K	
Admissible storage temperature	-50 to +50 °C						
Admissible ambient temperature during use	Max. +80 °C						
Rated position (NL)	According to DIN 16 257, NL 0 to NL 90 (different rated positions (NL) upon request)						

JUMO GmbH & Co. KG
 Delivery address: Mackenrodtstraße 14
 36039 Fulda, Germany
 Postal address: 36035 Fulda, Germany
 Phone: +49 661 6003-0
 Fax: +49 661 6003-607
 E-mail: mail@jumo.net
 Internet: www.jumo.net

JUMO Instrument Co. Ltd.
 JUMO House
 Temple Bank, Riverway
 Harlow, Essex CM20 2DY, UK
 Phone: +44 1279 635533
 Fax: +44 1279 635262
 E-mail: sales@jumo.co.uk
 Internet: www.jumo.co.uk

JUMO Process Control, Inc.
 6733 Myers Road
 East Syracuse, NY 13057, USA
 Phone: 315-437-5866
 1-800-554-5866
 Fax: 315-437-5860
 E-mail: info.us@jumo.net
 Internet: www.jumousa.com



Case

Standard	Case lid: polycarbonate, shock resistant Case bottom section: aluminum die casting, painted	Color: pebble gray RAL 7032 Color: anthracite gray RAL 7015
Extra code "701"	Case lid made of aluminum die casting, painted	Color: pebble gray RAL 7032
Setpoint value adjustment	ATH-1: Switching point can be adjusted externally with the rotary knob	ATH-2, ATH-20, ATH-70 Switching point can be adjusted with a screwdriver once the case lid has been removed
Protection type	EN 60529-IP54	
Cable inlet	Standard: self-sealing grommet M20 × 1.5, sealing range 8 to 10 mm	
Weight	Approx. 0.5 kg	
Switching head mounting ATHf- . series with capillary	Standard	Screw connection with counter nut M18 × 1 on the case spigot, capillary exit on the case spigot
	Extra code	
	711	With 2 screws through the case bottom section, lateral capillary exit on the case, lid and bottom part made of plastic
	764	Mounting flange made of steel sheet, capillary exit on the case spigot
	248	Wall mount

Process connection*

Series ATHs- with rigid thermowell	Scale limit value <u>up to</u> 150 °C Thermowell "20"	Scale limit value <u>exceeding</u> 150 °C Thermowell "30"
	Screw-in sleeve with screw-in spigot G 1/2 form A according to DIN 3852/2	Screw-in sleeve with screw-in spigot G 1/2 form A according to DIN 3852/2 and intermediate piece, to ensure that the max. admissible ambient temperature of +80 °C is not exceeded on the case
Type ATHf- With capillary	Plain cylindrical probe "10" (standard)	
	Screw-in thermowell "20" (upon request)	
	Screw-in sleeve with screw-in spigot G 1/2 form A acc. to DIN 3852/2 and clamping piece with fixing screw to lock the probe in place	
Material	Thermowell "20"	Thermowell "30"
	Up to +150 °C CuZn as standard over +150 °C CrNi	Above +150 °C CrNi
Insertion length S	Standard lengths: 100, 120, 150, 200, or 300 mm different lengths upon request	
Immersion tube Ø	D = 8 mm, D = 10 mm	

* For different process connections and thermowells refer to data sheet 606710.


Note:

Physical and toxicological properties of the expansion medium that could escape in the event of a measuring system break.

Control range with scale limit value	Hazardous reactions	Fire and explosion hazard		Hazardous to waters	Irritant	Toxicological data	
		Ignition temperature	Explosion limit			Dangerous to health	Toxic
< +200 °C	No	+ 355 °C	0.6 to 8 V%	Yes	Yes	1	No
≥ 200 °C ≤ +350 °C	No	+ 490 °C	- -	Yes	Yes	1	No
> 350 °C ≤ +500 °C	No	No	No	No	No	No	No

¹ At present, no statement concerning health hazards in the event of short-term exposure and low concentration (e.g. measuring system rupture) has been made by the health authority

Wiring diagrams

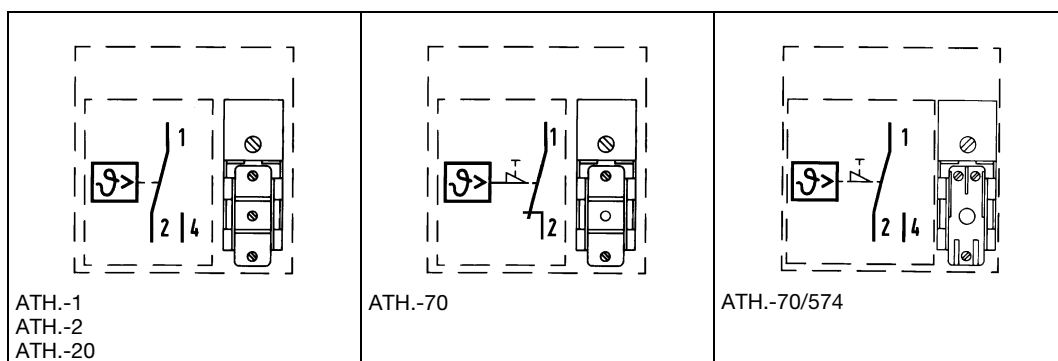


JUMO GmbH & Co. KG
 Delivery address: Mackenrodtstraße 14
 36039 Fulda, Germany
 Postal address: 36035 Fulda, Germany
 Phone: +49 661 6003-0
 Fax: +49 661 6003-607
 E-mail: mail@jumo.net
 Internet: www.jumo.net

JUMO Instrument Co. Ltd.
 JUMO House
 Temple Bank, Riverway
 Harlow, Essex CM20 2DY, UK
 Phone: +44 1279 635533
 Fax: +44 1279 635262
 E-mail: sales@jumo.co.uk
 Internet: www.jumo.co.uk


JUMO Process Control, Inc.
 6733 Myers Road
 East Syracuse, NY 13057, USA
 Phone: 315-437-5866
 1-800-554-5866
 Fax: 315-437-5860
 E-mail: info.us@jumo.net
 Internet: www.jumousa.com




Dimensions, versions with rigid thermowell

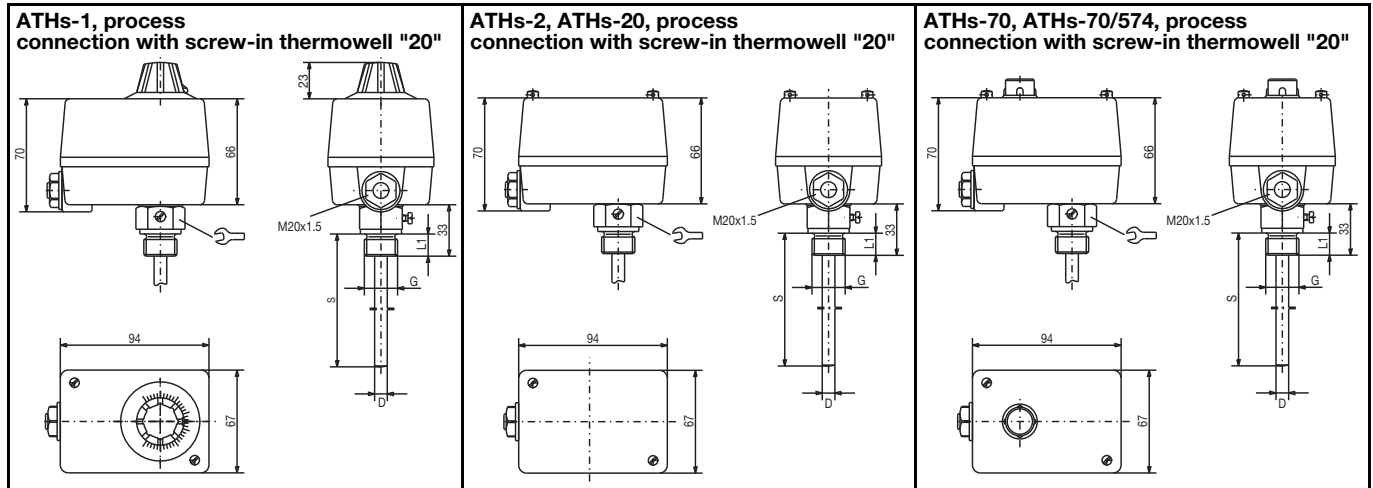

Process connection with screw-in thermowell "30" and intermediate piece for scale limit value above +150 °C:

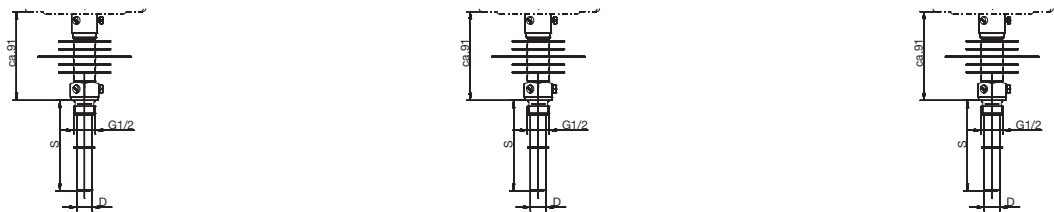

Process connection with thermowell "31" screw-in thermowell with intermediate piece, open:

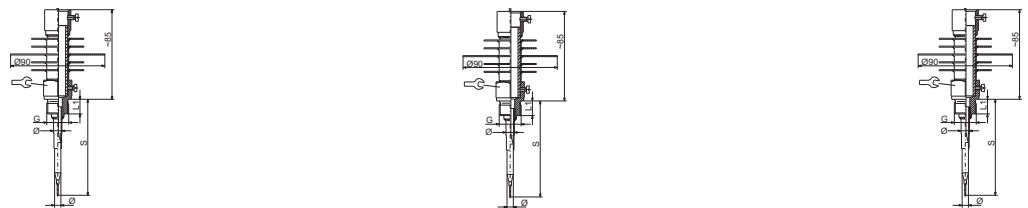

Stock items with rigid thermowell

Temperature controller (TR)

(delivery within 3 working days after receipt of order)

Part no.	Type	Control range / limit value range °C	Switching differential %	Process connection screw-in sleeve	Immersion tube Ø x length mm
60001517	ATHs-1	-10 to + 40	3-4	"20" G ¹ / ₂	8 x 200
60000634	ATHs-1	0 to + 50	1.5		15 x 100 CrNi
60000332	ATHs-1	0 to +100	3-4		8x120
60001548	ATHs-1	0 to +100	3-4		8x120 CrNi
60001125	ATHs-1	0 to +100	3-4		8x150
60000174	ATHs-1	0 to +100	1.5		8 x 200
60001126	ATHs-1	0 to +100	3-4		8 x 200
60000481	ATHs-1	+20 to +150	3-4		8x100
60001035	ATHs-1	+20 to +150	3-4		8 x 200
60001127	ATHs-1	+20 to +150	3-4		8x300
60003316	ATHs-1	+50 to +200	3-4	"30" G ¹ / ₂	8x200 CrNi
60003317	ATHs-1	+50 to +300	3-4		8x150 CrNi
60003318	ATHs-1	+20 to +500	5		8x200 CrNi

JUMO GmbH & Co. KG
 Delivery address: Mackenrodtstraße 14
 36039 Fulda, Germany
 Postal address: 36035 Fulda, Germany
 Phone: +49 661 6003-0
 Fax: +49 661 6003-607
 E-mail: mail@jumo.net
 Internet: www.jumo.net

JUMO Instrument Co. Ltd.
 JUMO House
 Temple Bank, Riverway
 Harlow, Essex CM20 2DY, UK
 Phone: +44 1279 635533
 Fax: +44 1279 635262
 E-mail: sales@jumo.co.uk
 Internet: www.jumo.co.uk

JUMO Process Control, Inc.
 6733 Myers Road
 East Syracuse, NY 13057, USA
 Phone: 315-437-5866
 1-800-554-5866
 Fax: 315-437-5860
 E-mail: info.us@jumo.net
 Internet: www.jumousa.com



Stock items with rigid thermowell

Temperature monitor (TW)

(delivery within 3 working days after receipt of order)

Part no.	Type	Control range / limit value range °C	Switching differential %	Process connection screw-in sleeve	Immersion tube Ø x length mm
60001135	ATHs-2	-10 to + 40	3-4	"20" G ¹ / ₂	8 x 200
60001549	ATHs-2	0 to + 50	1.5		15 x 100 CrNi
60001128	ATHs-2	0 to + 50	3-4		8 x 200
60000177	ATHs-2	+20 to + 90	1.5		15 x 100
60000959	ATHs-2	+20 to + 90	6-8		15 x 100
60001129	ATHs-2	+20 to + 90	3-4		8 x 150
60000331	ATHs-2	0 to +100	3-4		8 x 120
60001552	ATHs-2	0 to +100	3-4		8 x 120 CrNi
60000179	ATHs-2	0 to +100	3-4		8 x 150
60001039	ATHs-2	0 to +100	3-4		8 x 200
60001130	ATHs-2	0 to +100	3-4		8 x 300
60000483	ATHs-2	+20 to +150	3-4		8 x 100
60001551	ATHs-2	+20 to +150	3-4		8 x 100 CrNi
60000485	ATHs-2	+20 to +150	3-4		8 x 200
60001554	ATHs-2	+20 to +150	3-4		8 x 200 CrNi
60000182	ATHs-2	+20 to +150	3-4		8 x 300
60003319	ATHs-2	+50 to +200	3-4	"30" G ¹ / ₂	8 x 120 CrNi
60003320	ATHs-2	+50 to +200	3-4		8 x 200 CrNi
60001556	ATHs-2	+50 to +300	3-4		8 x 150 CrNi
60003322	ATHs-2	+50 to +500	5		8 x 200 CrNi

Safety temperature monitor STW (STB)

(delivery within 3 working days after receipt of order)

Part no.	Type	Control range / limit value range °C	Switching differential %	Process connection screw-in sleeve/ weld-in sleeve	Immersion tube Ø x length mm
60001478	ATHs-20	+20 to +150	4-6	"20" G ¹ / ₂	8 x 150
60003323	ATHs-20	+50 to +300	5	"30" G ¹ / ₂	8 x 200 CrNi
60002217	ATHs-20	+50 to +350	4-6	"46" G ³ / ₄	170 steel, conical
60003324	ATHs-20	+20 to +500	7	"31" G ¹ / ₂	8 x 200 CrNi

JUMO GmbH & Co. KG
 Delivery address: Mackenrodtstraße 14
 36039 Fulda, Germany
 Postal address: 36035 Fulda, Germany
 Phone: +49 661 6003-0
 Fax: +49 661 6003-607
 E-mail: mail@jumo.net
 Internet: www.jumo.net

JUMO Instrument Co. Ltd.
 JUMO House
 Temple Bank, Riverway
 Harlow, Essex CM20 2DY, UK
 Phone: +44 1279 635533
 Fax: +44 1279 635262
 E-mail: sales@jumo.co.uk
 Internet: www.jumo.co.uk

JUMO Process Control, Inc.
 6733 Myers Road
 East Syracuse, NY 13057, USA
 Phone: 315-437-5866
 1-800-554-5866
 Fax: 315-437-5860
 E-mail: info.us@jumo.net
 Internet: www.jumousa.com



Stock items with rigid thermowell


Safety temperature limiter (STB)

(delivery within 3 working days after receipt of order)


Part no.	Type	Control range / limit value range °C	Switching differential %	Process connection screw-in sleeve/ weld-in sleeve	Immersion tube Ø x length mm
60000982	ATHs-70	+ 30 to +110	— —	"20" G ¹ / ₂	8x150
60001043	ATHs-70	+ 30 to +110	— —		8 x 200
60000189	ATHs-70	+ 30 to +110	— —		8x300
60001044	ATHs-70	+ 60 to +130	— —		8x150
60000190	ATHs-70	+ 60 to +130	— —		8 x 200
60001020	ATHs-70	+ 20 to +150	— —	"30" G ¹ / ₂	8 x 200
60003325	ATHs-70	+130 to +200	— —		8x150 CrNi
60003326	ATHs-70	+130 to +200	— —		8x300 CrNi
60003327	ATHs-70	+ 50 to +300	— —	"20" G ¹ / ₂	8x200 CrNi
60001524	ATHs-70/574	+ 30 to +110	— —		8x150
60001522	ATHs-70/574	+ 20 to +150	— —	"30" G ¹ / ₂	8 x 200
60003328	ATHs-70/574	+ 50 to +300	— —		8 x 200 CrNi
60002218	ATHs-70/574	+ 50 to +350	— —	"46" G ³ / ₄	170 steel, conical
60003329	ATHs-70/574	+ 20 to +500	— —	"31" G ¹ / ₂	8 x 200 CrNi
60001476	ATHs-70/574	+ 20 to +500	— —	"30" G ¹ / ₂	8x200 CrNi

Dimensions, versions with capillary


ATHf-1, process connection "10"
plain cylindrical probe

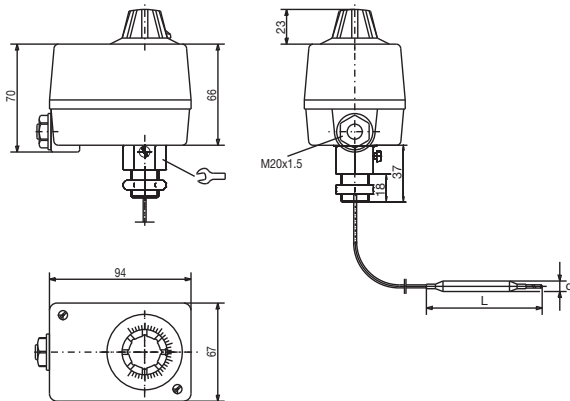


ATHf-2, ATHf-20, process connection "10"
plain cylindrical probe

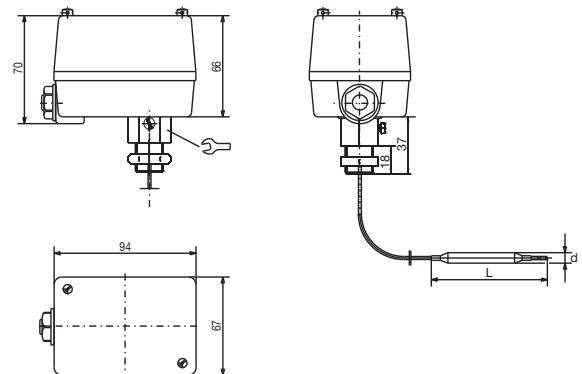

ATHf-70, ATHf-70/574, process connection "10"
plain cylindrical probe

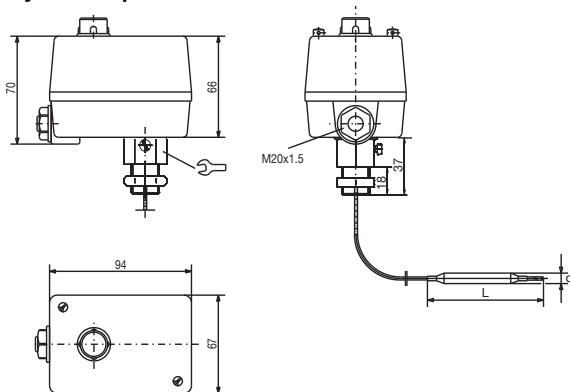

ATHf-20/r, ATHf-70/r, process connection "42"
plain cylindrical probe with weld-in sleeve G 3/4

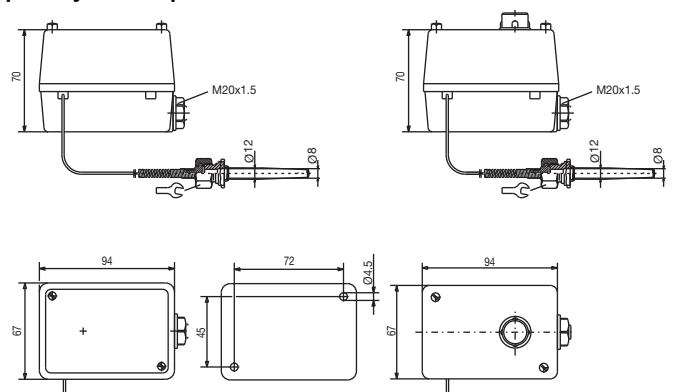

JUMO GmbH & Co. KG
 Delivery address: Mackenrodtstraße 14
 36039 Fulda, Germany
 Postal address: 36035 Fulda, Germany
 Phone: +49 661 6003-0
 Fax: +49 661 6003-607
 E-mail: mail@jumo.net
 Internet: www.jumo.net

JUMO Instrument Co. Ltd.
 JUMO House
 Temple Bank, Riverway
 Harlow, Essex CM20 2DY, UK
 Phone: +44 1279 635533
 Fax: +44 1279 635262
 E-mail: sales@jumo.co.uk
 Internet: www.jumo.co.uk

JUMO Process Control, Inc.
 6733 Myers Road
 East Syracuse, NY 13057, USA
 Phone: 315-437-5866
 1-800-554-5866
 Fax: 315-437-5860
 E-mail: info.us@jumo.net
 Internet: www.jumousa.com



Stock items with capillary

Temperature controller (TR)

(delivery within 3 working days after receipt of order)

Part no.	Type	Control range / limit value range °C	Switching differential %	Capillary mm	Process connection	Probe ø × length mm
60001134	ATHf-1	-10 to + 40	3-4	1000	"10" Plain cylindrical probe	6x185
60001004	ATHf-1	0 to +100	3-4	1000		6x107
60000955	ATHf-1	+20 to +150	3-4	1000		6 x 88
60001133	ATHf-1	+50 to +300	3-4	1000		6x 63
60002113	ATHf-1	+20 to +500	5	1000		6x148

Temperature monitor (TW)

(delivery within 3 working days after receipt of order)

Part no.	Type	Control range / limit value range °C	Switching differential %	Capillary mm	Process connection	Probe ø × length mm
60000482	ATHf-2	0 to + 50	3-4	1000	"10" Plain cylindrical probe	6x185
60000962	ATHf-2	0 to +100	3-4	1000		6x107
60001212	ATHf-2	0 to +100	3-4	2000		6x107
60000963	ATHf-2	+20 to +150	3-4	1000		6 x 88
60001210	ATHf-2	+20 to +150	3-4	2000		6 x 88
60000187	ATHf-2	+50 to +200	3-4	1000		6x101
60001038	ATHf-2	+50 to +300	3-4	1000		6x 63
60001208	ATHf-2	+50 to +300	3-4	2000		6x 63
60002122	ATHf-2	+20 to +500	5	1000		6x148
60002114	ATHf-2	+20 to +500	5	2000		6x148

Safety temperature monitor STW and safety temperature limiter (STB)

(delivery within 3 working days after receipt of order)

Part no.	Type	Control range / limit value range °C	Switching differential %	Capillary mm	Process connection	Probe ø × length mm
60002261	ATHf-20/r	+ 20 to +500	7	4000	"42" G ³ / ₄ "*	200
60001136	ATHf-70	+ 30 to +110	— —	1000	"10" Plain cylindrical probe	6x108
60001206	ATHf-70	+ 30 to +110	— —	2000		6x108
60001041	ATHf-70	+ 20 to +150	— —	1000		6x 77
60001205	ATHf-70	+ 20 to +150	— —	2000		6x 77
60001525	ATHf-70/574	+ 20 to +150	— —	1000		6x 77
60001204	ATHf-70	+ 50 to +200	— —	2000		6x 85
60001290	ATHf-70/574	+ 50 to +200	— —	1000		6x 85
60001040	ATHf-70	+ 50 to +300	— —	1000		6x 55
60001191	ATHf-70	+ 50 to +300	— —	2000		6x 55
60001528	ATHf-70/574	+ 50 to +300	— —	1000		6x 55
60002086	ATHf-70	+ 20 to +500	— —	1000		6x127
60002088	ATHf-70/574	+ 20 to +500	— —	1000		6x127
60002099	ATHf-70/574	+ 20 to +500	— —	2000		6x127
60002262	ATHf-70/574/711	+ 20 to +500	— —	4000	"42" G ³ / ₄ "*	200

* Weld-in sleeve

JUMO GmbH & Co. KG

Delivery address: Mackenrodtstraße 14
36039 Fulda, Germany
Postal address: 36035 Fulda, Germany
Phone: +49 661 6003-0
Fax: +49 661 6003-607
E-mail: mail@jumo.net
Internet: www.jumo.net

JUMO Instrument Co. Ltd.

JUMO House
Temple Bank, Riverway
Harlow, Essex CM20 2DY, UK
Phone: +44 1279 635533
Fax: +44 1279 635262
E-mail: sales@jumo.co.uk
Internet: www.jumo.co.uk

JUMO Process Control, Inc.

6733 Myers Road
East Syracuse, NY 13057, USA
Phone: 315-437-5866
1-800-554-5866
Fax: 315-437-5860
E-mail: info.us@jumo.net
Internet: www.jumousa.com

**Order details**

(Please observe our stock versions and specify the parts no.)

Surface-mounted thermostat, ATH series

Order code	(1) Basic type
603021	Surface-mounted thermostat, ATH series
	(2) Basic type extensions
01	ATH-1 Temperature controller (TR)
02	ATH-2 Temperature monitor (TW)
20	ATH-20 Safety temperature monitor STW (STB)
70	ATH-70 Safety temperature limiter (STB)
	(3) Design type
1	ATHs with rigid thermowell
2	ATHf with capillary
	(4) Control ranges / limit value ranges °C
014	-20 to + 50 (only for TR and TW)
016	-10 to + 40 (only for TR and TW)
021	0 to + 50
025	0 to +100
041	+20 to + 90
042	+20 to +120
043	+20 to +150
045	+20 to +400
046	+20 to +500
052	+30 to +110
062	+50 to +200
063	+50 to +250
064	+50 to +300
066	+60 to +130
	(5) Switching differential
00	Without switching differential (-70 STB)
15	1.5 % of the scale range (only for TR + TW)
20	2 % of the scale range (only for STW (STB))
30	3 % of the scale range (only for TR + TW)
50	5 % of the scale range (only for TR + TW + STW (STB))
60	6 % of the scale range (only for TR + TW)
70	7 % of the scale range (only for STW (STB))
90	9 % of the scale range (only for STW (STB))
	(6) Capillary length
0	ATHs without capillary
1000	1000 mm
2000	2000 mm
3000	3000 mm
4000	4000 mm
5000	5000 mm
....	(Special length, specifications in plain text)
	(7) Capillary material
00	ATHs without capillary
40	Cu (Copper)
20	CrNi (Stainless steel 1.4571)

JUMO GmbH & Co. KG
 Delivery address: Mackenrodtstraße 14
 36039 Fulda, Germany
 Postal address: 36035 Fulda, Germany
 Phone: +49 661 6003-0
 Fax: +49 661 6003-607
 E-mail: mail@jumo.net
 Internet: www.jumo.net



JUMO Instrument Co. Ltd.
 JUMO House
 Temple Bank, Riverway
 Harlow, Essex CM20 2DY, UK
 Phone: +44 1279 635533
 Fax: +44 1279 635262
 E-mail: sales@jumo.co.uk
 Internet: www.jumo.co.uk

JUMO Process Control, Inc.
 6733 Myers Road
 East Syracuse, NY 13057, USA
 Phone: 315-437-5866
 1-800-554-5866
 Fax: 315-437-5860
 E-mail: info.us@jumo.net
 Internet: www.jumousa.com



Order details

Surface-mounted thermostat, ATH series

Order code	(8) Process connection (PA) ¹
10	Plain cylindrical probe (only for ATHf) 
20	Screw-in thermowell 
30	Screw-in thermowell with intermediate piece 
31	Screw-in thermowell with intermediate piece, open 
42	Weld-in sleeve for union nut, conical 
46	Welding sleeve for union nut with intermediate piece, conical 
(9) Thread of process connection ¹	
00	Without thread (process connection 10)
13	External thread G 1/2
(10) Material of process connection	
00	Only with process connection 10
46	CuZn (Brass)
20	CrNi (Stainless steel 1.4571)
(11) Insertion length "S" (immersion tube length)	
000	ATHf without thermowell
100	100 mm
120	120 mm
150	150 mm
200	200 mm
300	300 mm
400	400 mm
...	... Special length, specifications in plain text
(12) Diameter "D" (immersion tube diameter)	
00	ATHf without thermowell
8	8 mm
10	10 mm
(13) Diameter "d" (probe diameter)	
6	6 mm
8	8 mm
(14) Extra codes ²	
000	Without extra code
248	"k" Wall mount
574	"U" Microswitch with N/C contact, restart lock, and additional signal contact (only for STB)
701	"a" Case lid made of aluminum diecasting (not with extra code "711")
702	"au" Snap-action switch contact, gold-plated (only with switching differential 3 %, 5 %, and 7 % and STB with N/C contact)
711	"r" Switching head mounting with 2 screws through the case bottom section, lateral capillary exit on the case, lid, and bottom section made of plastic
764	"b" Mounting flange made of steel sheet, capillary exit on the case spigot

Order code	(1)	(2)	(3)	(4)	(5)	(6)	(7)	(8)	(9)	(10)	(11)	(12)	(13)	(14)													
	603021	/	..	-	.	-	...	-	..	-	..	-	..	-	...	-	..	-	.	/	...	,	...	,	...		
Order example	603021	/	70	-	1	-	043	-	00	-	0	-	00	-	20	-	13	-	20	-	100	-	8	-	6	/	574 ²

¹ For other connection types and thermowells, see data sheet 606710.

² List extra codes in sequence, separated by commas.