



PRODUCT DATASHEET

Tina2 series

last update 21/11/2012

DETAILS


Product Number	CA12350_TINA2-W
Family	Tina2
Type	Assembly
Color	white
Diameter	16,1 mm
Height	9,7 mm
Style	round
Optic Material	PMMA
Holder Material	PC
Fastening	tape
Status	production ready
ROHS Compliant	Yes
Date Updated	21/11/2012




OPTICAL PROPERTIES

	Viewing	Light	Effi-		
LED	Angle	Beam	ciency	cd/lm	Connector
Jade	51 deg	Wide	90 %	1.400	-

Luminaire: Ledil Oy CA12350_TINA2-W (Avego Jade 69lm @ 250mA) Efficiency=90%
Lamps: 1 x Avego Jade 69lm @ 250mA

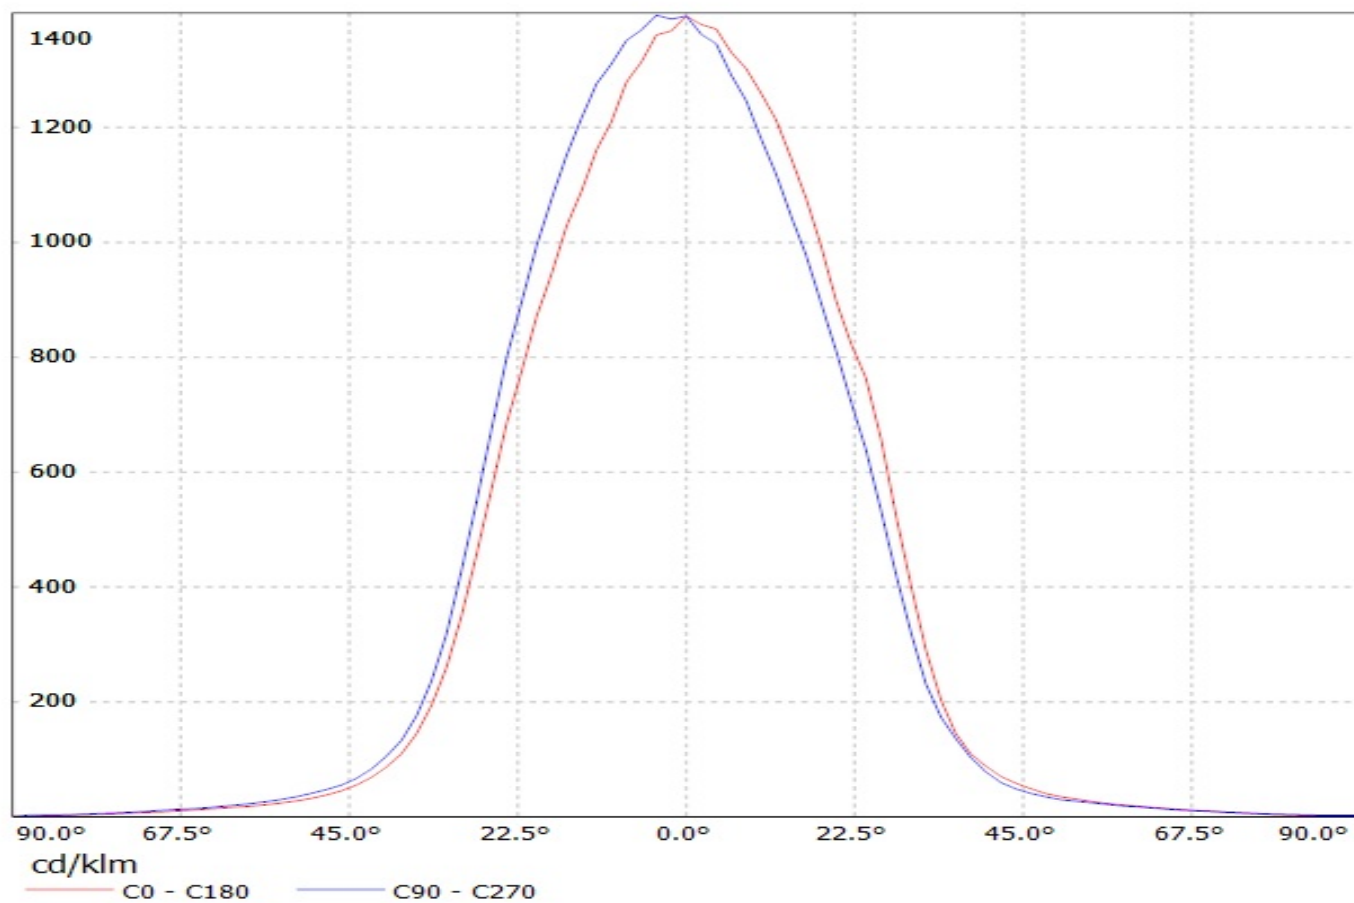

Luminaire: Ledil Oy CA12350_TINA2-W (Avego Jade 69lm @ 250mA) Efficiency=90%
Lamps: 1 x Avego Jade 69lm @ 250mA

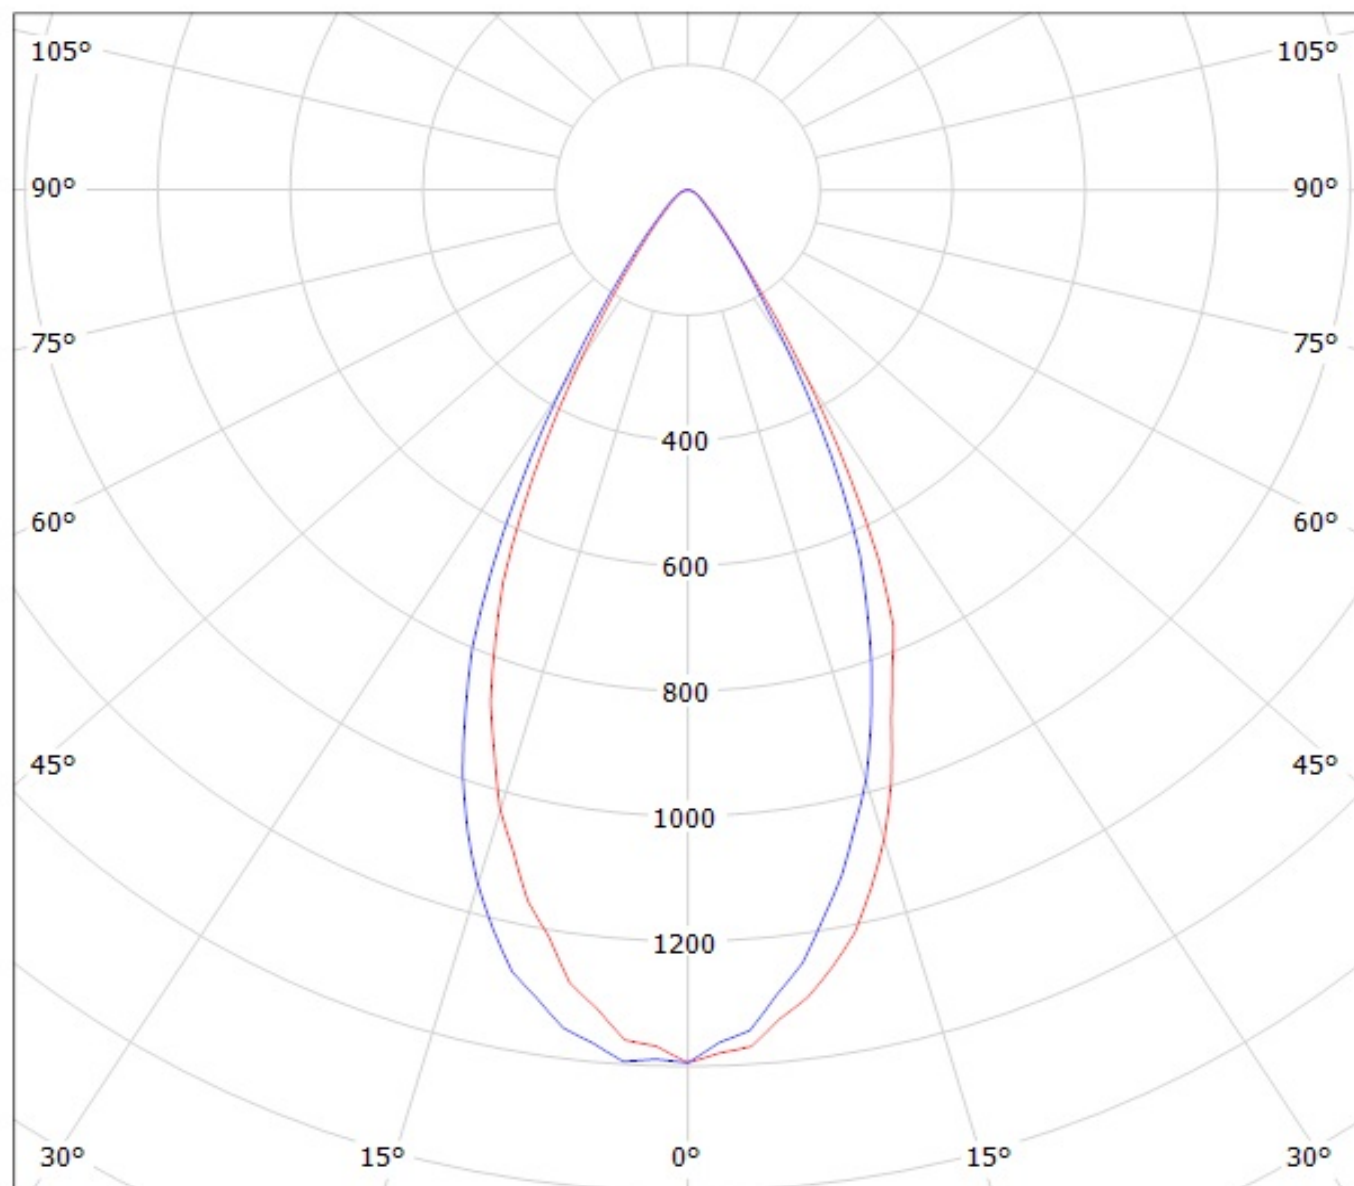

cd/klm

— C0 - C180

— C90 - C270

NOTE: The typical divergence will be changed by different color, chip size and chip position tolerance. The typical total divergence is the full angle measured where the luminous intensity is half of the peak value.

GENERAL INFORMATION

- Product series especially designed & optimized for series of LEDs.
- Special care taken to make light distribution as uniform as possible.
- Fastening to heat sink with a PU foam adhesive tape of automotive grade. Please find fastening details by clicking link: http://www.ledil.com/datasheets/DataSheet_TAPE.pdf

NOTE 1: We advise customer to ensure the suitability and sufficiency of the bond in the end product. For example, mechanical stress, vibration and holes on the surface of the circuit board weaken the strength of the tape.

NOTE 2: Assembly to the surface must be made straight, so the tape bonds constant and balanced with fastening surface. Slanted assembly might cause unbalanced bond to the surface. All surfaces where tape is applied must be clean, dry and free from grease and dirt.

If cleaning of PCB surfaces is needed, please follow strictly the cleaning instructions of your LED manufacturer - this is important as cleaning shall under no circumstances damage LEDs or other electronics components on the PCB.

Further note that optical components shall not be cleaned with any chemicals - only micro fiber cloth may be used to remove fingerprints or other traces from handling.