

Multi- Aperture cores (2843002702)

Part Number: 2843002702

43 MULTI- APERTURE CORE

Explanation of Part Numbers:

- Digits 1 & 2 = Product Class
- Digits 3 & 4 = Material Grade
- – Last digit 2 = Burnished

Multi- aperture cores are used in suppression applications and in balun (balance- unbalance) and other broadband transformers. They are also employed in airbag designs to prevent accidental activation.

- All multi- aperture cores are supplied burnished.
- Our “Multi- Aperture Core Kit” (part number 0199000036) is available for prototype evaluation.

For any multi- aperture requirement not listed here, feel free to contact our customer service group for availability and pricing.

Weight: 0.3 (g)

Dim	mm	mm tol	nominal inch	inch misc.
A	7	±0.25	0.276	—
B	3.1	±0.25	0.122	—
C	4.2	-0.25	0.16	—
E	2.9	±0.10	0.114	—
H	1.7	+0.20	0.071	—

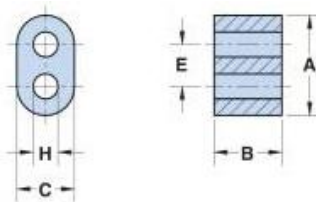


Figure 1

Chart Legend

+ Test frequency


Typical Impedance (Ω)	
25 MHz	37
100 MHz ⁺	50

Multi- aperture cores in 73 and 43 materials are controlled for impedance only. The 61 NiZn material is controlled for both impedance and A_L value. The high frequency 67 material is controlled for A_L value. Minimum impedance values are specified for the + marked frequencies. The minimum impedance is typically the listed impedance less 20%.

□ Multi- aperture cores in 73 and 43 material are measured for impedance on the 4193A Vector Impedance Analyzer. The 61 and 67 multi- aperture cores are tested on the 4291A Impedance Analyzer. All impedance measurements are performed with a single turn to both holes, using the shortest practical wire length.

□ The 61 and 67 material multi- hole beads are tested for A_L value. The test frequency is 10 kHz at < 10 gauss. The test winding is five turns wound through both holes.

2843002702

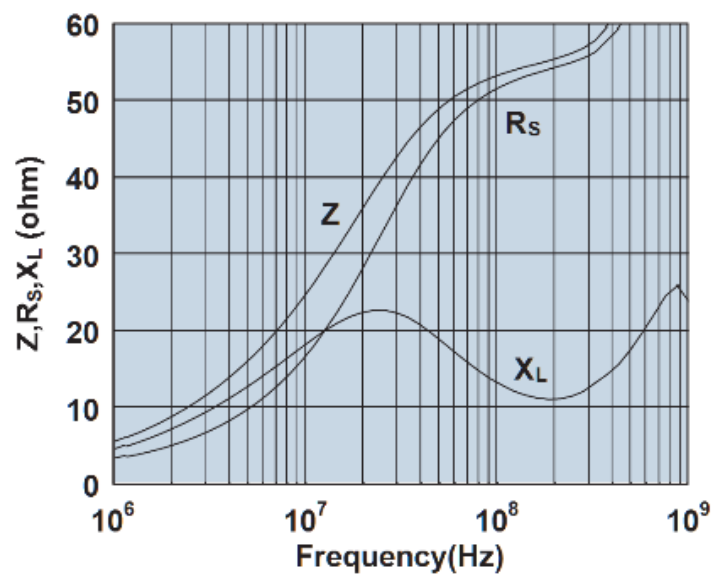

Impedance, reactance, and resistance vs. frequency.