# **Electric Actuator**



Low profile Slider type Step Motor (Servo/24 VDC)



# **Compact**

## **Low Profile**

Table height reduced by using belt drive and offset quide. Mounting interchangeable with the

E-MY series

**Belt drive unit** 

**Guide unit** 

height,

For LEMC/H/HT, size 25

**Guide mechanism** can be selected.

## **Basic type**

## Series LEMB

- · Light load transfer
- · Combining with external guide
- · Long stroke

Size	Work load [kg]			
25	6			
32	11			

## Cam follower guide type

## Series LEMC

- · Workpiece direct mounting
- · Long stroke

Size	Work load [kg]
25	10
32	20

## Linear guide single axis type

## Series LEMH

- · Workpiece direct mounting
- Provide more moment resistance than the cam follower guide type.
- · High speed transfer


Size Work load [		
25	10	
32	20	

## Linear guide double axis type

## Series LEMHT

- · Workpiece direct mounting
- $\cdot$  Provides more moment resistance than the linear guide single axis type.
- · High speed transfer

Size	Work load [kg]
25	10
32	20

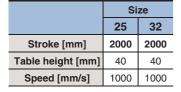

2
0
7
00

	Size		
	25	32	
Stroke [mm]	1000	1500	
Table height [mm]	<b>28</b> 37		
Speed [mm/s]	2000	2000	

	Size		
	25 32		
Stroke [mm]	1000	1500	
Table height [mm]	28	37	
Speed [mm/s]	2000	2000	

## Selectable controllability

(Controller)

- End to end operation similar to an air cylinder (12 intermediate stop positions)
- Easy position setting using numerical inputs

## Step Motor (Servo/24 VDC)

▶Programless type (With stroke study) Series LECP2

- · End to end operation similar to an air cylinder · 2 stroke end points +
- 12 intermediate points positioning
- · Control panel setting
- · Wire-saving design



Programless type Series LECP1

· 14 points positioning · Control panel setting




- Step data input type Series LECP6
- Position setting using
  - numerical inputs 64 points positioning
- · Teaching box
- Input using controller setting







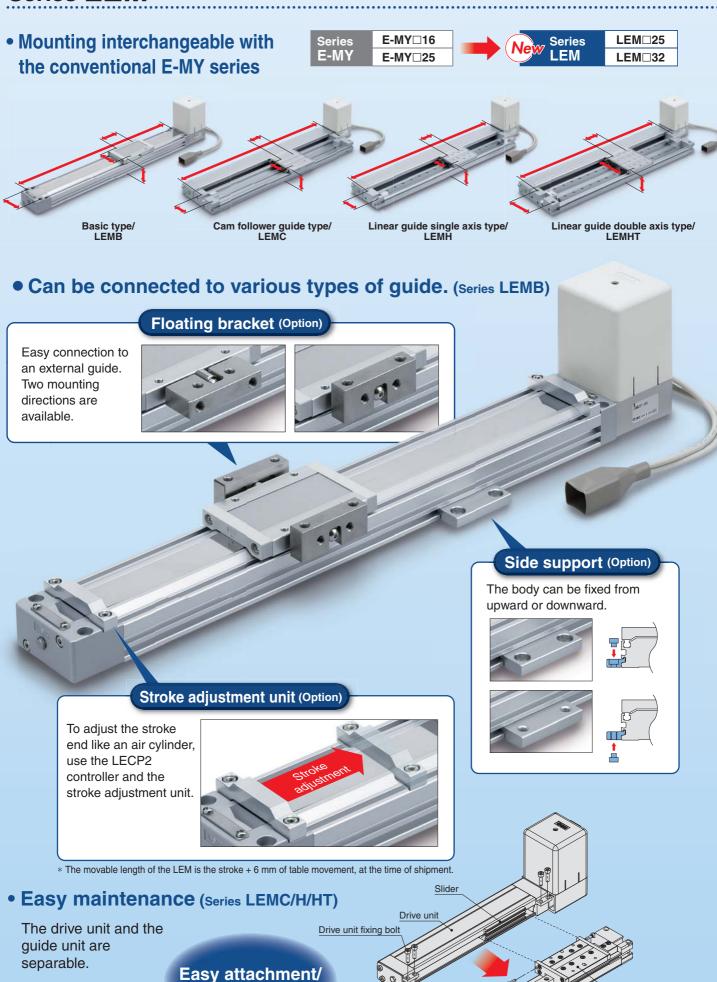

detachment


**SMC** 

Slide table

Guide unit

## **Electric Actuator**

 Motor Placement: Mounting position of the motor is user selectable and can either be on the top, bottom, left, or right of the actuator.

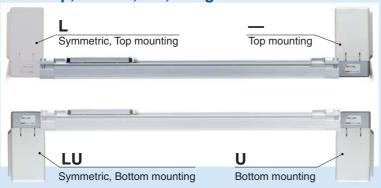


**Motor mounting position** 

_	Top mounting		
U	Bottom mounting		
L*	Symmetric, Top mounting		
LU*	Symmetric, Bottom mounting		


\* Can be selected only for the LEMC, LEMH, LEMHT.


 Solid state auto switch can be mounted for checking the limit and intermediate signal.



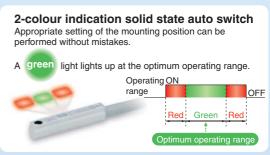

## **Application Examples**

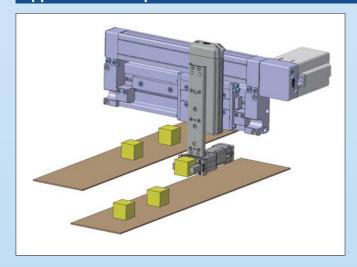

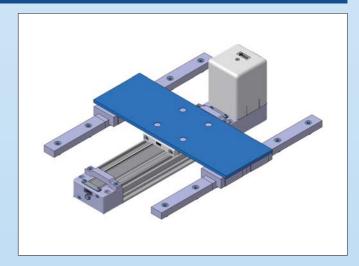

## Variations

#### **Belt Drive**

Note) Cannot be used for vertical transfer.

	Series	Size	Equivalent lead [mm]	Stroke [mm]*	Work load: Horizontal [kg]	Speed [mm/s]	Page
	LEMB		40	100, 200, 300, 400, 500, 600, 700, 800, 900, 1000, (1100), 1200,	6 (10)**	1000	Page 9
E	Basic type	32	48	(1300), (1400), 1500, (1600), (1700), (1800), (1900), 2000	11 (20)**	1000	Page 9
C	LEMC 25 Cam follower 48		48	100, 200, 300, 400, 500, 600, 700, 800, 900, 1000, (1100), 1200,	10	1000	Page 17
	guide type	32	46	(1300), (1400), 1500, (1600), (1700), (1800), (1900), 2000	20	1000	Page 17
	<b>LEMH</b> Linear guide single axis type	25	48	100, 200, 300, 400, 500, 600, (700), (800), (900), (1000)	10	2000	Page 27
				100, 200, 300, 400, 500, 600, (700), (800), (900), (1000), (1100), (1200), (1300), (1400), (1500)	20	2000	Page 27
LEMHT Linear guide		25	48	100, 200, 300, 400, 500, 600, (700), (800), (900), (1000)	10	2000	Page 27
Linear guide double axis type	32	40	100, 200, 300, 400, 500, 600, (700), (800), (900), (1000), (1100), (1200), (1300), (1400), (1500)	20	2000	Page 27	

<sup>\*</sup> Strokes shown in ( ) are produced upon receipt of order. Please consult with SMC for the manufacture of intermediate strokes other than those specified on the above.



<sup>\*\* ( ):</sup> Using an external guide (Provided by customer).

## **Controller Variations**

Controller Variation	Minimum How to How to register intermediate stop positions							
Туре	Number of positioning	number of wiring	command to drive	Me	ans	Registering of position	Stroke study (Actuator end position can be set using one button operation.)	
Programless type (With stroke study)  Series LECP2  Specialized for Series LEM	14 points /2 stroke end points, 12 intermediate points	Reduced wiring depending on the number of positions. Requires 2 inputs for up to 3 positions. (IN0, IN3)		No programming / Controller \	Position registration only. Simple operation		Available Both ends of the stroke are automatically registered.	
Programless type  Series LECP1	14 points	Requires 4 inputs minimum regardless of the number of position. (IN0 to IN3)	Command the position number. (IN0 to IN3)	button operation. PC or teaching box is not required.	Position registration Operating method registration Selection of positioning operation or pushing operation Pushing operation not available for the LEM series	- JOG input - Direct input	Not available	
Step data input type  Series LECP6	64 points	The number of inputs depends on the number of position.  Requires 4 inputs minimum for up to 2 positions.  SYON SETUP IN0 DRIVE		Settings by PC or teaching box		- JOG input - Direct input - Step data input	Not available	

Position data saving	Compatible actuators
	Low profile slider type Series LEM
Inside of the controller	Low profile slider type Series LEF Series LEL Series LEY Series LEYG  Compared to the series LEY Series LEY Series LEYG  Compared to the series LEYG Series LEYG Series LEYG Series LEYG
	Compact type Series LES  High rigidity type Series LESH  Series LEPY/LEPS  Series LER  Series LER  Electric rotary table Series LER  Series LEH
· Inside of the controller	Low profile slider type Series LEF Series LEL Series LEY Series LEY Series LEYG
PC Teaching box Data backup available	Compact type Series LESH High rigidity type Series LEPY/LEPS Series LER Series LEH  Electric rotary table Series LEH  Series LEPY/LEPS Series LER  Series LEH

## Programless Type (With Stroke Study) Series LECP2

## Stroke end operation similar to an air cylinder is possible.

(using the stroke study and reduced wiring below)

## 1 Stroke study (Simple registration of both stroke end positions)

After the stroke adjustment unit has travelled, both stroke ends are automatically registered by the stroke study function!

1 Setting position number
Set the position selecting switch to 15(F).

Press the SET button for 3 seconds or longer.

SET button

SET button


Motor side

End side

SET button



## 2 Wiring (Reduced wiring)

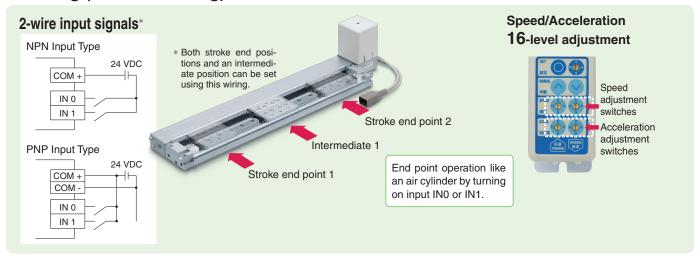

# Series LEMB Series LEMC Series LEMH Series LEMHT



## Programless Type Series LECP1

## **No Programming**


Capable of setting up an electric actuator operation without using a PC or teaching box.



Step motor (Servo/24 VDC) LECP1



display

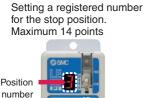


Position

selecting

switch




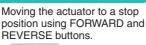







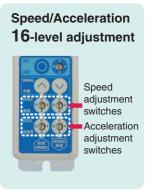

## Step Data Input Type Series LECP6

## Simple Setting to Use Straight Away

## Easy Mode for Simple Setting


If you want to use it right away, select "Easy Mode."

Step motor (Servo/24 VDC) LECP6



## <When a PC is used> **Controller setting software**

Step data setting, test operation, move jog and move for the constant rate can be set and operated on one screen.

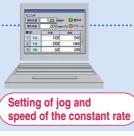







## <When a TB (teaching box) is used>

- Simple screen without scrolling promotes ease of setting and operating.
- Pick up an icon from the first screen to select a function.
- Set up the step data and check the monitor on the second screen.



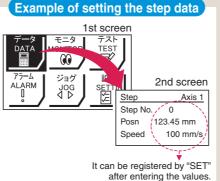

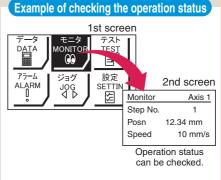

## Normal Mode for Detailed Setting

## Select normal mode when detailed setting is required.

- Step data can be set in detail.
- Parameters can be set.
- Signals and terminal status can be monitored. JOG and constant rate movement, return to origin, test operation and testing of forced output can be performed.



## **Function**

Item	Step data input type LECP6	Programless type LECP1	Programless type (With stroke study) LECP2
Step data and parameter setting	<ul><li>Input from controller setting software (PC).</li><li>Input from teaching box.</li></ul>	Select using controller operation buttons.	Select using controller operation buttons.
Step data "position" setting	<ul> <li>Input the numerical value from controller setting software (PC) or teaching box.</li> <li>Input the numerical value.</li> <li>Direct teaching</li> <li>JOG teaching</li> </ul>	Direct teaching     JOG teaching	Stroke end: Automatic measurement     Intermediate position: Direct teaching     JOG teaching
Number of step data	64 points	14 points	2 stroke end points + 12 intermediate points (14 points in total)
Operation command (I/O signal)	Step No. [IN*] input $\Rightarrow$ [DRIVE] input	Step No. [IN*] input only	Step No. [IN*] input only
Completion signal [INP] output		[OUT*] output	[OUT*] output

## Setting Items

TB: Teaching box PC: Controller setting software


TB: Teaching box PC: Controller setting si					Controller setting software				
Item		Contents		sy ode	Normal mode	Step data input type	Programless type LECP1*	Programless type (With stroke study)	
			TB PC TB/PC		TB/PC	LECP6	22011	LECP2	
	Movement MOD	Selection of "absolute position" and "relative position"	$\triangle$			Set at ABS/INC.	Fixed value (ABS)	Fixed value (ABS)	
	Speed	Transfer speed				Set in units of 1 mm/s.	Select from 16-level.	Select from 16-level.	
	Position	[Position]: Target position ** [Pushing]: Pushing start position	•	•	•	Set in units of 0.01 mm.	Direct teaching JOG teaching	Stroke end: Automatic measurement Intermediate position: Direct teaching JOG teaching	
	Acceleration/Deceleration	Acceleration/deceleration during movement				Set in units of 1 mm/s <sup>2</sup> .	Select from 16-level.	Select from 16-level.	
Step data setting	Pushing force**	Rate of force during pushing operation				Set in units of 1%.	Select from 3-level (weak, medium, strong)		
(Outline)	Trigger LV	Target force during pushing operation	$\triangle$			Set in units of 1%.	No setting required (same value as pushing force)		
	Pushing speed **	Speed during pushing operation	$\triangle$			Set in units of 1 mm/s.			
	Moving force	Force during positioning operation	$\triangle$			Set to 100%.			
	Area output	Conditions for area output signal to turn ON	$\triangle$	•		Set in units of 0.01 mm.			
	In position	[Position]: Width to the target position [Pushing]: How much it moves during pushing	Δ	•	•	Set to 0.5 mm or more. (Units: 0.01 mm)	No setting required	No setting required	
	Stroke (+)	+ side limit of position	×	×		Set in units of 0.01 mm.			
Parameter	Stroke (-)	- side limit of position	×	×		Set in units of 0.01 mm.			
setting (Outline)	ORIG direction	Direction of the return to origin can be set.	×	×		Compatible	Compatible		
	ORIG speed	Speed during return to origin	×	×		Set in units of 1 mm/s.	No setting required		
	ORIG ACC	Acceleration during return to origin	×	×		Set in units of 1 mm/s <sup>2</sup> .	No setting required		
	JOG		•	•	•	Continuous operation at the set speed can be tested while the switch is being pressed.	Hold down MANUAL button ((\( \ightarrow \ightarrow \)) for uniform sending. (Speed is specified value.)	Hold down MANUAL button ((\(\infty\)) for uniform sending. (Speed is specified value.)	
Test	MOVE		×	•	•	Operation at the set distance and speed from the current position can be tested.	Press MANUAL button ( ) once for sizing operation. (Speed, sizing amount are specified values.)	Press MANUAL button ((()) once for sizing operation. (Speed, sizing amount are specified values.)	
1631	Return to ORIG		•	•		Compatible	Compatible	Performed by the stroke endpoint operation when power is turned ON.	
	Test drive	Operation of the specified step data	•	•	(Continuous operation)	Compatible	Compatible	Compatible	
	Forced output	ON/OFF of the output terminal can be tested.	×	×		Compatible			
Monitor	DRV mon	Current position, speed, force and the specified step data can be monitored.	•	•	•	Compatible	Not compatible	Not compatible	
	In/Out mon	Current ON/OFF status of the input and output terminal can be monitored.	×	×	•	Compatible			
ALM	Status	Alarm currently being generated can be confirmed.	•			Compatible	Compatible (Display alarm group)	Compatible (Display alarm group)	
ALIVI	ALM Log record	Alarm generated in the past can be confirmed.	×	×		Compatible			
File	Save/Load	Step data and parameter can be saved, forwarded and deleted.	×	×	•	Compatible	Not compatible	Not compatible	
Other	Language	Can be changed to Japanese or English.				Compatible			
		(The version information is disp					ushing Mada" is not avails		


<sup>\*\* &</sup>quot;Pushing Mode" is not available for LEM series.





<sup>△</sup>Can be set from TB Ver. 2. (The version information is displayed on the initial screen)


\* Programless type LECP1 cannot be used with the teaching box and controller setting kit.

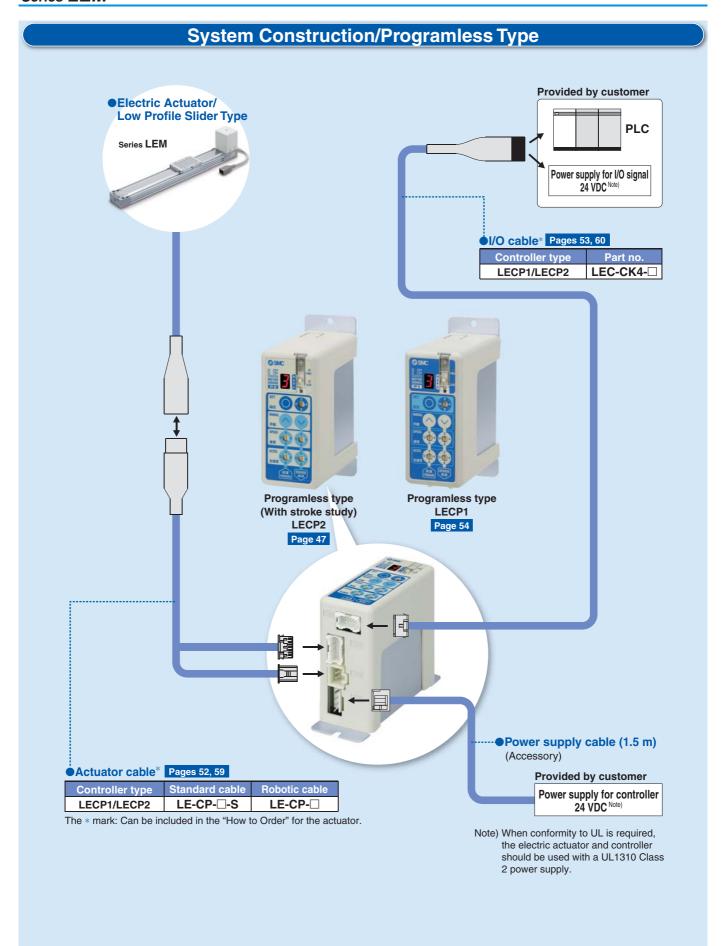


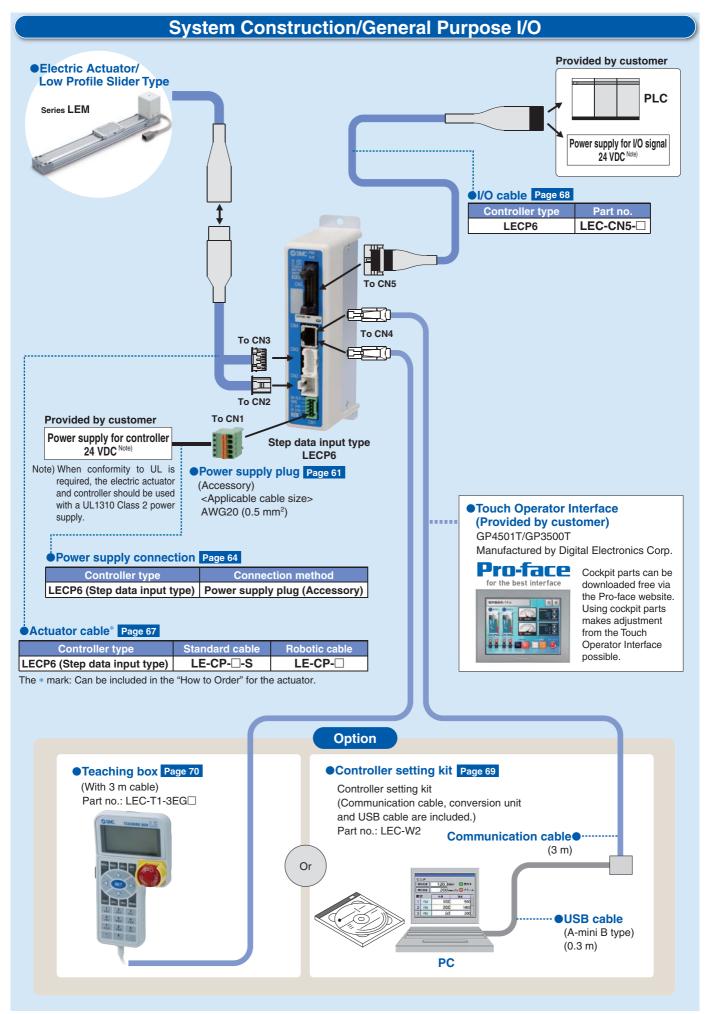

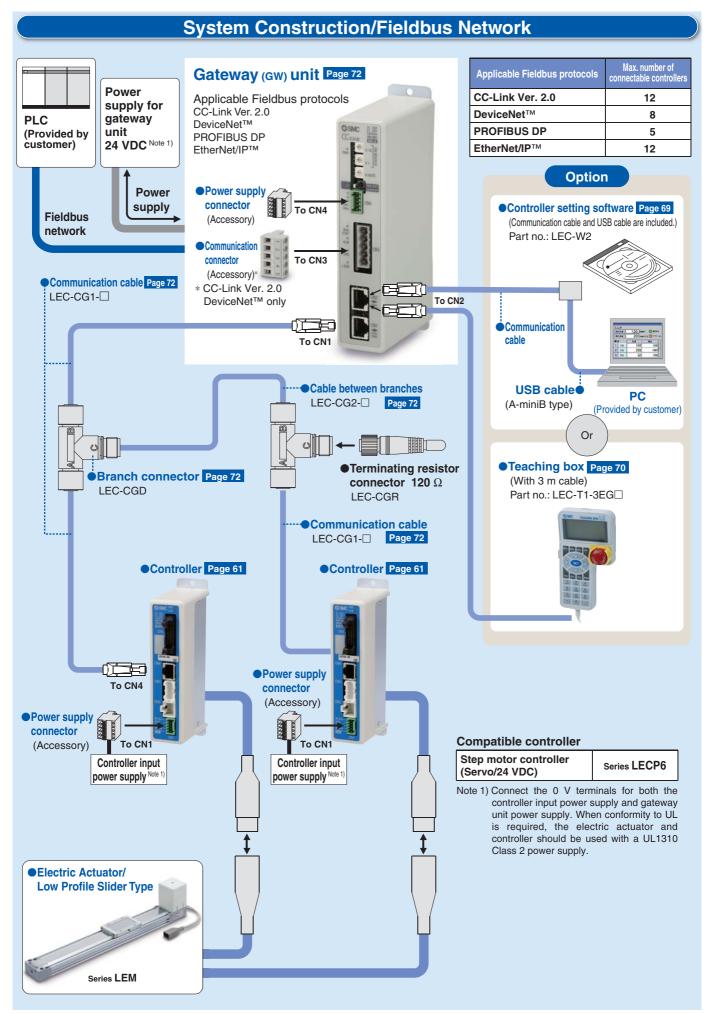

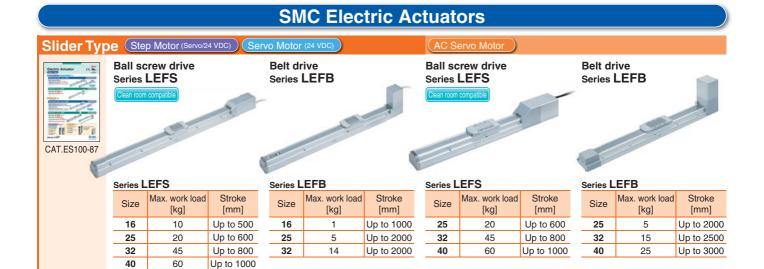

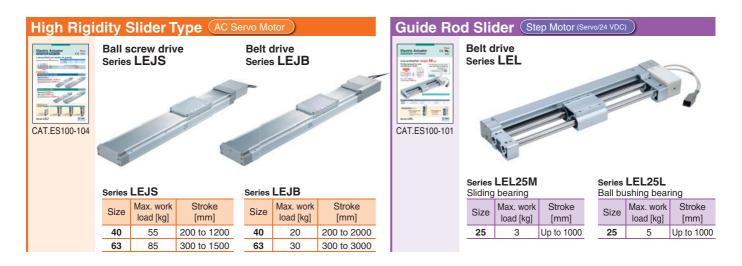

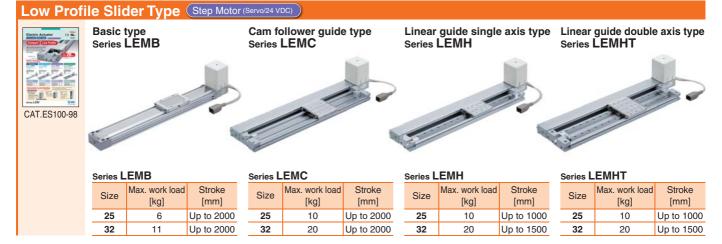

## **SMC Electric Actuators**

## Rod Type Step Motor (Servo/24 VDC)











Guide rod type /In-line motor type Series LEYG□D

Series LEY

Size	Pushing force [N]	Stroke [mm]	
16	141	Up to 300	
25	452	Up to 400	
32	707	Up to 500	
40	1058	Up to 500	

Series LEYG

Size	Stroke [mm]	Stroke [mm]
16	141	Up to 200
25	452	Up to 300
32	707	Up to 300
40	1058	Up to 300

#### (AC Servo Moto







Series LEY

Size	Pushing force [N]	Stroke [mm]
25	485	Up to 400
32	588	Up to 500

Series LEY

Size	Pushing force [N]	Stroke [mm]
25	485	Up to 400
32	736	Up to 500
63	1910	Up to 800

eries LEYG				
Size Pushing force [N]		Stroke [mm]		
25	485	300		
32	588	300		

Series LEYG

Size	Pushing force [N]	Stroke [mm]
25	485	200
32	736	300

#### Slide Table (Step Motor (Servo/24 VDC)) (Servo Motor (24 VDC)



Compact type Series LES Basic type/R type Series LES□R

Symmo	etrical	type/L	type
Sarias I	FC	71	



High rigidity type Series LESH Basic type/R type Series LESH□R

Symmetrical	type/L	type
Series LESH	ΠĹ	



CAT.ES100-78



In-line motor type/D type



Max. work load Stroke Size [mm] [kg] 8 2 50, 75 16 6 50, 100 50, 100 9 25

In-line motor type/D type Series LESH□D



## Miniature Step Motor (Servo/24 VDC) Rod type



CAT.ES100-92

Series LEPY

Series LEPY

Size	Max. work load [kg]	Stroke [mm]	
6	1	25, 50, 75	
10	2	25, 50, 75	

Slide table type Series LEPŚ



Series LLF 3				
Size	Max. work load Strok			
6	1	25		
10	2	50		

## Rotary Table Step Motor (Servo/24 VDC)



Basic type Series LER

150

High precision type Series LERH



Series LER

Size	Rotating	torque [N·m]	Max. speed [°/s]	
Size	Basic	High torque	Basic	High torque
10	0.2	0.3		280
30	0.8	1.2	420	
50	6.6	10		



## **SMC Electric Actuators**

## Gripper Step Motor (Servo/24 VDC)



CAT.ES100-77

2-finger type Series LEHZ



CIICS LLIIL					
Cina	Max. gr	ipping force [N]	Stroke/both		
Size	Basic	Compact	sides [mm]		
10	14	6	4		
16	14	8	6		
20	40	28	10		
25	40	20	14		
32	130		22		
40	210		30		

2-finger type With dust cover Series LEHZJ



Selies LLI IZU					
Cino	Max. g	ripping force [N]	Stroke/both		
Size	Basic	Compact	sides [mm]		
10	14	6	4		
16	14	8	6		
20	40	28	10		
25	40	28	14		

2-finger type Long stroke Series LEHF



- Carlo							
Series LEHF							
Size	Max. gripping force [N]	Stroke/both sides [mm]					
10	7	16 (32)					
20	28	24 (48)	Ī				
32	120	32 (64)	Ī				

180 40 (80) Note) ( ): Long stroke

3-finger type Series LEHS



Series LEHS

Ī	Size	Max. g	ripping force [N]	Stroke/diameter
	Size	Basic	Compact	[mm]
Ī	10	5.5	3.5	4
Ī	20	22	17	6
Ī	32	90		8
	40	130		12

## **Controllers/Driver**

#### Controller

Step data input type For step motor Series LECP6



Control motor Step motor (Servo/24 VDC)

Step data input type For servo motor Series LECA6



Control motor Servo motor (24 VDC)

**Programless type** Series LECP1



Control motor Step motor (Servo/24 VDC)

Programless type (With stroke study) Series LECP2



Control motor Step motor (Servo/24 VDC)

## Driver

Pulse input type Series LECPA



Control motor Step motor (Servo/24 VDC)

## **Gateway Unit**

Fieldbus-compatible gateway (GW) unit Series LEC-G













Applicable Fieldbus protocols Max. number of connectable controllers CC-Link V2

12

**DeviceNet** 

BUST

## **Drivers**

#### **AC Servo Motor Driver**

Pulse input type/ Positioning type Series LECSA (Incremental type)



Control motor AC servo motor (100/200/400 W)

Pulse input type Series LECSB (Absolute type)



Control motor AC servo motor (100/200/400 W)

**CC-Link direct input type** Series LECSC (Absolute type)



Control motor AC servo motor (100/200/400 W)

SSCNETⅢ type Series LECSS (Absolute type)




Control motor AC servo motor (100/200/400 W)



## **Series Variations**

## Electric Actuator Low profile Slider type Series LEM

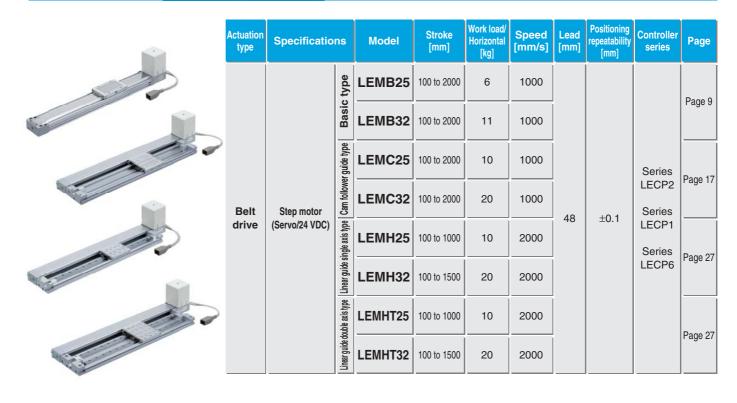

## Controller Series LEC



Type	Series	Compatible	Power	Paral	lel I/O	Number of positioning	Reference
Type Series		motor	motor supply voltage Input		Output	pattern points	page
Programless type (With stroke study)	LECP2	Step motor (Servo/24 VDC)	24 VDC ±10%	6 inputs (Photo-coupler isolation)	6 outputs (Photo-coupler isolation)	1 4 (Stroke end: 2 points Intermediate: 12 points)	
Programless type	LECP1	Step motor (Servo/24 VDC)	24 VDC ±10%	6 inputs (Photo-coupler isolation)	6 outputs (Photo-coupler isolation)	14	Page 46
Step data input type	LECP6	Step motor (Servo/24 VDC)	24 VDC ±10%	11 inputs (Photo-coupler isolation)	13 outputs (Photo-coupler isolation)	64	

# INDEX

Step Motor (Servo/24 VDC) Typ
-------------------------------

	Woder Selection	Page 1
	<b>⊚</b> Basic Type/Series LEMB	
	How to Order	Page 9
	Specifications	Page 11
	Construction	Page 12
	Dimensions	Page 13
	<b>○Cam Follower Guide Type/Series LEMC</b>	
	How to Order	Page 17
	Specifications	Page 19
	Construction	Page 20
<b>C</b>	Dimensions	Page 21
	<b>○Linear Guide Type/Series LEMH/HT</b>	
	How to Order	Page 27
	Specifications	Page 29
	Construction	Page 30
	Dimensions	Page 32
	Auto Switch	Page 41
to it.	Specific Product Precautions	Page 44
	Step Motor (Servo/24 VDC) Controller	
,600g	Programless Controller (With Stroke Study)/Series LECP2	Page 47



Programless Controller/Series LECP1 Page 54

Step Data Input Type/Series LECP6 Page 61

Controller Setting Kit/LEC-W2 Page 69

Teaching Box/**LEC-T1** Page 70

Gateway Unit/Series LEC-G Page 72

## Electric Actuator/Low Profile Slider Type Step Motor (Servo/24 VDC)

## Series LEM

## **Model Selection**



## **Selection Procedure**



Tentative Selection of Guide Mechanism. Check the speed-work load, work load-acceleration/deceleration.


Step 2 Check the dynamic allowable moment.

Step 3 Check the cycle time.

## Selection Example

### **Operating conditions**

- Work load: 10 [kg]
- Workpiece mounting condition
- Speed: 1000 [mm/s]
- Acceleration/Deceleration: 2500 [mm/s<sup>2</sup>]
- Stroke: 600 [mm]
- Mounting orientation: Horizontal upward

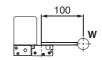

## Step 1

## **Tentative Selection of Guide Mechanism**

		Guideline for tentative model selection							
Series	Туре	Use of external guide	Direct loaded (Horizontal)		Direct mount (Wall mounting)	Moment resistance	Max. stroke [mm]	Max. speed [mm/s]	Note
LEMB	Basic type	©	0	Δ	Δ	Δ	2000	1000	<ul><li>Light load transfer</li><li>Combining with external guide</li><li>Long stroke</li></ul>
LEMC	Cam follower guide type	×	0	0	0	0	2000	1000	Workpiece direct mounting     Long stroke
LEMH	Linear guide single axis type	×	O	O	©	O	Size 25: 1000 Size 32: 1500	2000	Workpiece direct mounting     Provides more moment resistance than the cam follower guide type.     High speed transfer
LEMHT	Linear guide double axis type	×	©	©	©	©	Size 25: 1000 Size 32: 1500	2000	Workpiece direct mounting     Provides more moment resistance than the linear guide single axis type.     High speed transfer


Note) The table accuracy means the amount of table deflection when a moment is applied.



In conditions where a moment is generated, tentatively select the LEMH series.


## <Speed-Work Load Graph>

Select the target model based on the workpiece mass and speed with reference to the <Speed-Work Load Graph>.

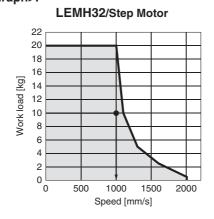

## <Work Load-Acceleration/Deceleration Graph>

Check that the set acceleration/deceleration of the work load is within the allowable range, with reference to the <Work Load-Acceleration/Deceleration Graph>.

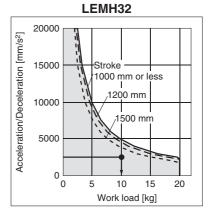


LEC-G

Step 2 Check the dynamic allowable moment.



Based on the above calculation result, the LEMH32T-500 is selected.

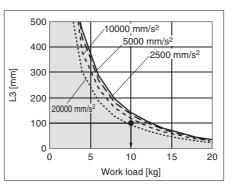

Step 3 Check the cycle time.

Refer to method 1 for a rough estimate, and method 2 for a more precise value.

Method 1: Check the cycle time graph. (Page 3)

Method 2: Calculation

Calculate the **cycle time** using the following calculation method.

Cycle time:

T can be found from the following equation.

$$T = T1 + T2 + T3 + T4 [s]$$

 T1: Acceleration time and T3: Deceleration time can be obtained by the following equation.

 T2: Constant speed time can be found from the following equation.

$$T2 = \frac{L - 0.5 \cdot V \cdot (T1 + T3)}{V} [s]$$

 T4: Settling time varies depending on the conditions such as motor types, load and in positioning of the step data. Therefore, calculate the settling time with reference to the following value.

$$T4 = 0.3 [s]$$

Calculation example)

T1 to T4 can be calculated as follows.

$$T1 = V/a1 = 1000/2500 = 0.4 [s],$$

$$T3 = V/a2 = 1000/2500 = 0.4 [s]$$


$$T2 = \frac{L - 0.5 \cdot V \cdot (T1 + T3)}{V}$$
$$= \frac{600 - 0.5 \cdot 1000 \cdot (0.4 + 0.4)}{1000}$$

$$= 0.2 [s]$$

$$T4 = 0.3 [s]$$

Therefore, the **cycle time** can be obtained as follows.

$$T = T1 + T2 + T3 + T4$$
$$= 0.4 + 0.2 + 0.4 + 0.3$$
$$= 1.3 [s]$$

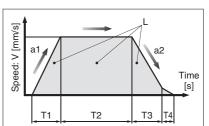

- L: Stroke [mm]···(Operating condition)
- V: Speed [mm/s]···(Operating condition)
- a1: Acceleration [mm/s<sup>2</sup>]···(Operating condition)
- a2: Deceleration [mm/s<sup>2</sup>]···(Operating condition)
- T1: Acceleration time [s]

  Time until reaching the set speed
- T2: Constant speed time [s]

  Time while the actuator is operating at a constant speed
- T3: Deceleration time [s]

  Time from the beginning of the constant speed operation to stop
- T4: Settling time [s]


  Time until in position is completed

## Series LEM


## Speed-Work Load Graph (Guide) Step Motor (Servo/24 VDC)

\* The following graph shows the values when moving force is 100%.


#### LEMB25

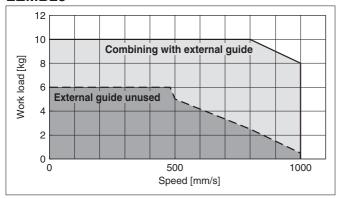


#### LEMB32

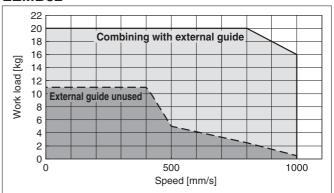


## LEMC25

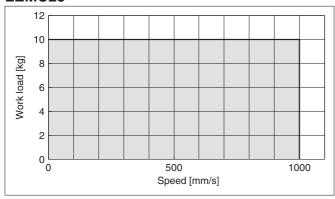


#### LEMC32

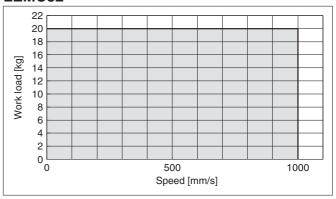

## LEMH/HT25

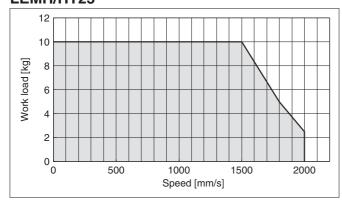


#### LEMH/HT32

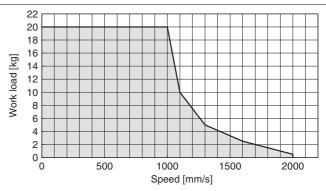


## **Cycle Time Graph (Guide)**

#### LEMB□/LEMC□ (Speed: 1000 mm/s)

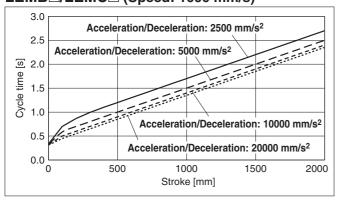


## LEMH□/LEMHT□ (Speed: 2000 mm/s)

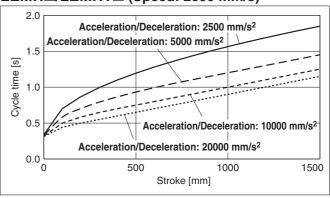


LEC-G

## Work Load-Acceleration/Deceleration Graph (Guide)


#### LEMB25

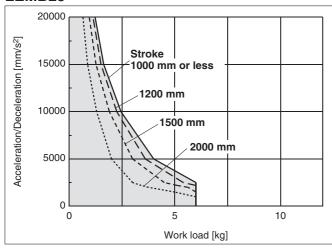


#### LEMB32

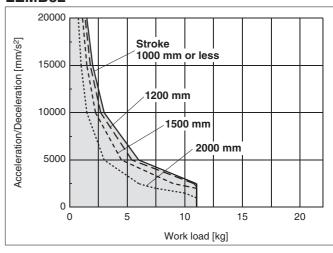


## LEMB25 (Combining with external guide)/LEMC25

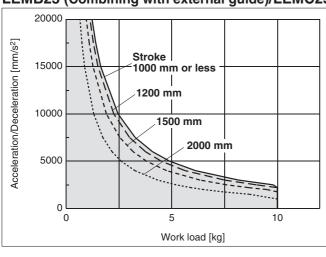


## LEMB32 (Combining with external guide)/LEMC32

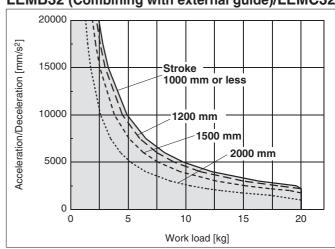

#### LEMH25/LEMHT25

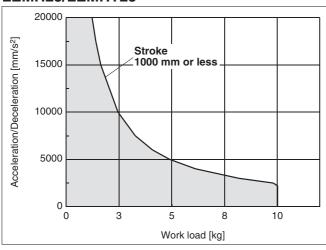


#### LEMH32/LEMHT32

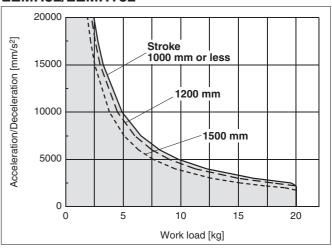

## Series LEM

## **Dynamic Allowable Moment (Series LEMB)**

\* This graph shows the amount of allowable overhang when the centre of gravity of the workpiece overhangs in one direction.

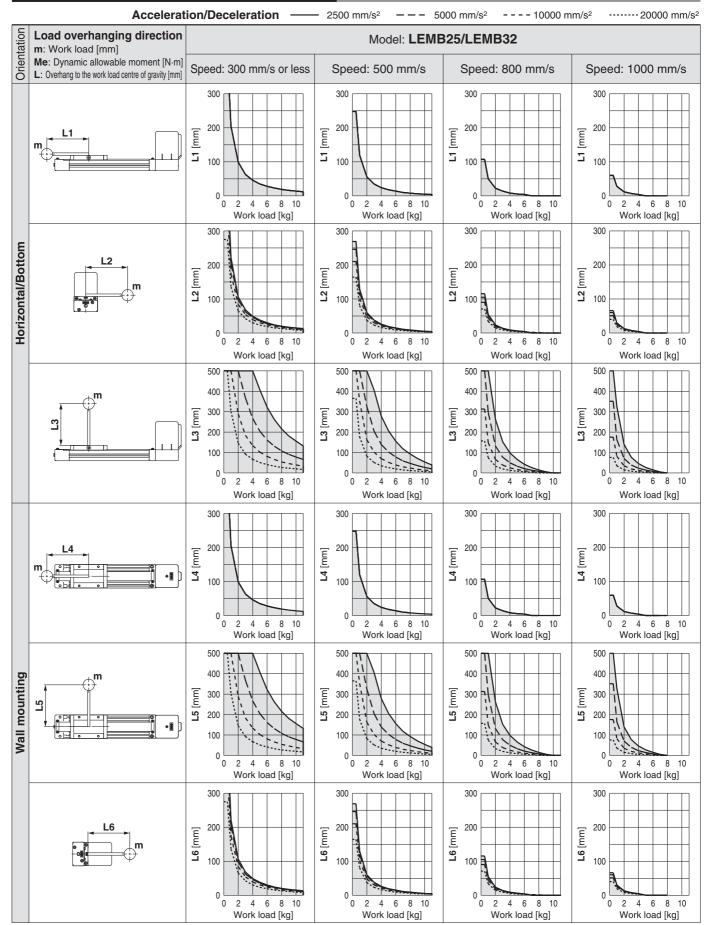

## **Dynamic Allowable Moment (Series LEMC/LEMH)**

\* This graph shows the amount of allowable overhang when the centre of gravity of the workpiece overhangs in one direction.

	Acceleration	on/Deceleration ——	2500 mm/s <sup>2</sup>			
Orientation	Load overhanging direction m: Work load [mm] Me: Dynamic allowable moment [N·m]	LEMC25	LEMC32	LEMH25	LEMH32	
ŏ	L: Overhang to the work load centre of gravity [mm]	LEIVIC25	LEIVIC32	LEIVIT23	LEIVIN32	
	L1 m	1000 800 400 200 0 2 4 6 8 10 Work load [kg]	1000 800 800 400 200 0 5 10 15 20 Work load [kg]	1000 800 800 400 0 2 4 6 8 10 Work load [kg]	1000 800 800 200 0 5 10 15 20 Work load [kg]	
Horizontal/Bottom	L2 m	200 100 0 2 4 6 8 10 Work load [kg]	400 400 300 100 0 5 10 15 20 Work load [kg]	300 100 0 2 4 6 8 10 Work load [kg]	400 400 300 100 0 5 10 15 20 Work load [kg]	
	E T	1000 800 200 0 2 4 6 8 10 Work load [kg]	1000 800 800 400 200 0 5 10 15 20 Work load [kg]	1000 800 800 400 200 0 2 4 6 8 10 Work load [kg]	1000 800 800 400 200 0 5 10 15 20 Work load [kg]	
	L4	Work load [kg]	Mork load [kg]	500 400 0 2 4 6 8 10 Work load [kg]	Work load [kg]	
Wall mounting	m • • • • • • • • • • • • • • • • • • •	1000 800 400 200 0 2 4 6 8 10 Work load [kg]	1000 800 400 200 0 5 10 15 20 Work load [kg]	1000 800 400 200 0 2 4 6 8 10 Work load [kg]	1000 800 400 200 0 5 10 15 20 Work load [kg]	
	m L6	1000 800 400 200 0 2 4 6 8 10 Work load [kg]	1000 800 400 200 0 5 10 15 20 Work load [kg]	1000 800 91 400 200 0 2 4 6 8 10 Work load [kg]	1000 800 400 200 0 5 10 15 20 Work load [kg]	


<sup>\*</sup> Vertical mounting is not available.



## Series LEM

## **Dynamic Allowable Moment (Series LEMHT)**

\* This graph shows the amount of allowable overhang when the centre of gravity of the workpiece overhangs in one direction.

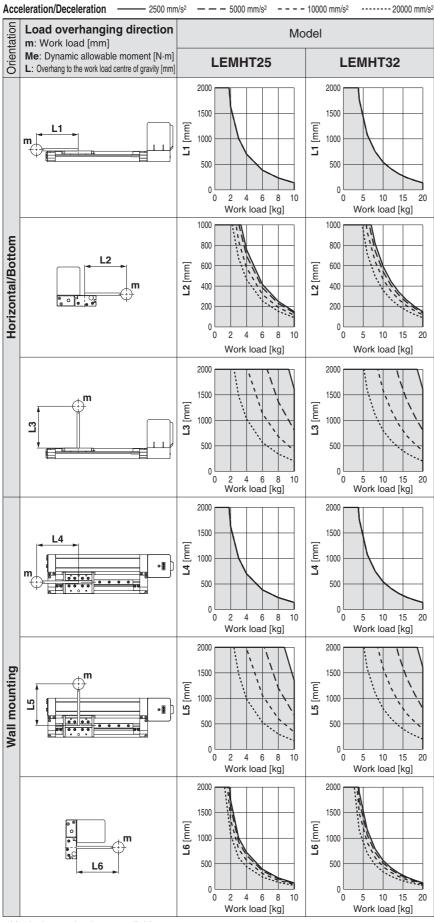

<sup>\*</sup> Vertical mounting is not available.

## **Calculation of Guide Load Factor**

1. Decide operating conditions.

Model: LEM Acceleration [mm/s $^2$ ]: **a** Size: 25/32 Work load [kg]: **m** 

Mounting orientation: Horizontal/Bottom/Wall/Vertical Work load centre position [mm]: Xc/Yc/Zc

- 2. Select the target graph with reference to the model, size and mounting orientation.
- 3. Based on the acceleration and work load, obtain the overhang [mm]: Lx/Ly/Lz from the graph.
- 4. Calculate the load factor for each direction.

$$\alpha x = Xc/Lx$$
,  $\alpha y = Yc/Ly$ ,  $\alpha z = Zc/Lz$ 

5. Confirm the total of  $\alpha x$ ,  $\alpha y$  and  $\alpha z$  is 1 or less.

$$\alpha x + \alpha y + \alpha z \le 1$$

When 1 is exceeded, please consider a reduction of acceleration and work load, or a change of the work load centre position and series.

#### Example


1. Operating conditions


Model: LEMC25


Mounting orientation: Horizontal Acceleration [mm/s<sup>2</sup>]: 2500 Work load [kg]: 2

Work load centre position [mm]: Xc = 0, Yc = 75, Zc = 100

- 2. Select the graph on page 6, top and left side first row.
- 3. Lx = 200 mm, Ly = 145 mm, Lz = 1000 mm

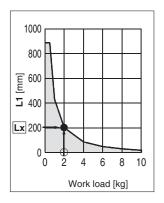

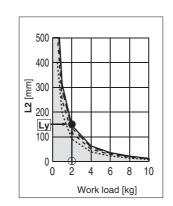

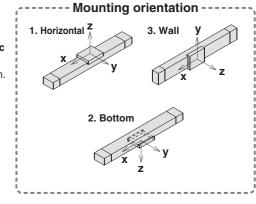


4. The load factor for each direction can be obtained as follows.

$$\alpha x = 0/200 = 0$$

$$\alpha$$
**y** = 75/145 = 0.52

$$\alpha z = 100/1000 = 0.1$$

5. 
$$\alpha x + \alpha y + \alpha z = 0.62 \le 1$$

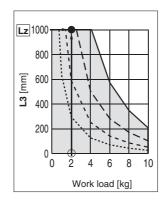

## **Electric Actuator/Low Profile Slider Type** Basic Type Step Motor (Servo/24 VDC)


# Series LEMB ( CAN US LEMB25, 32





**How to Order** 




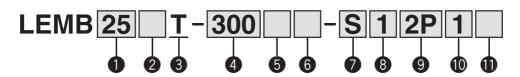





<u> </u>	tor mounting poor
_	Top mounting
U	Bottom mounting

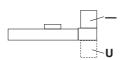

Equ	uivalent l	ead	<b>5</b> Mo	tor option
Т	48 mm		_	Without loc

В

With lock

Stroke adjustment unit (Include					
_	None				
M	Motor side only				
Е	End side only				

Both sides

	$\Box$

4	Stroke
---	--------

W

Model	100	200	300	400	500	600	700	800	900	1000	1100	1200	1300	1400	1500	1600	1700	1800	1900	2000
LEMB25	•	•	•	•	•	•	•	•	•	•	0	•	0	0	•	0	0	0	0	•
LEMB32	•	•	•	•	•	•	•	•	•	•	0	•	0	0	•	0	0	0	0	•

<sup>\*</sup> Please consult with SMC as all non-standard and non-made-to-order strokes are produced as special orders.

## **⚠** Caution

#### [CE-compliant products]

EMC compliance was tested by combining the electric actuator LEM series and the controller LEC series.

The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore, conformity to the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result, it is necessary for the customer to verify conformity to the EMC directive for the machinery and equipment as a whole.

#### [UL-compliant products]

When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply

Refer to pages 42 and 43 for auto switches.

#### The actuator and controller are sold as a package. (They can be ordered separately.) Controller Confirm that the combination of the controller Actuator and the actuator is correct. <Check the following before use.> ① Check the actuator label for model number. This matches the controller. LEMB25T-300 2 Check Parallel I/O configuration matches (NPN or PNP).



Actuator cable type

_	Without cable				
S	Standard cable*				
R Robotic cable (Flexible cable)					

\* The standard cable should be used on fixed parts. For using on moving parts, select the robotic cable.

8 Actuator cable length

_	Without cable	8	8 m*
1	1.5 m	Α	10 m*
3	3 m	В	15 m*
5	5 m	С	20 m*

\* Produced upon receipt of order (Robotic cable only)

9 Controller type

_	Without controller					
6N	LECP6	NPN				
6P	(Step data input type)	PNP				
2N	LECP2*	NPN				
2P	(Programless type (With stroke study)	PNP				
1N	LECP1	NPN				
1P	(Programless type)					

\* Select the LECP2 when setting the stroke range using the stroke adjustment unit or an external stop.

I/O cable length\*

_	Without cable			
1	1.5 m			
3	3 m			
5	5 m			

\* When "Without controller" is selected for controller types, I/O cable cannot be selected. Refer to page 53 (For LECP2), page 60 (For LECP1) or page 68 (For LECP6) if I/O cable is required.

**1** Controller mounting

	introlici illouriting	
	_	Screw mounting
	D	DIN rail mounting*

\* DIN rail is not included. Order it separately.

**Compatible Controllers** 

Туре	Programless type (With stroke study)	Programless type	Step data input type				
Series	LECP2	LECP1	LECP6				
Features	End to end operation similar to an air cylinder using the stroke study function	Capable of setting up operation (step data) without using a PC or teaching box	Value (Step data) input Standard controller				
Compatible motor	Step motor (Servo/24 VDC)						
Maximum number of step data	14 points (2 stroke end points + 12 intermediate points)	14 points	64 points				
Power supply voltage	24 VDC						
Reference page	Page 47	Page 54	Page 61				





## Speed/Acceleration (Set values for LECP1/2)

#### Table 1 Switch and Speed Note)

Officer and Opcou					
Switch no.	Speed [mm/s]				
0	48				
1	75				
2	100				
3	150				
4	200				
5	250				
6	300				
7	350				
8	400				
9	450				
10	500				
11	600				
12	700				
13	800				
14	900				
15	1000				

#### Table 2 Switch and Acceleration Note

Owiter and Acceleration					
Switch no.	Acceleration [mm/s <sup>2</sup> ]				
0	250				
1	500				
2	1000				
3	1500				
4	2000				
5	2500				
6	3000				
7	4000				
8	5000				
9	6000				
10	7500				
11	10000				
12	12500				
13	15000				
14	17500				
15	20000				

Note) The factory default setting for the switch is No.0.

## **Specifications**

Step Motor (Servo/24 VDC)

	Model	LEMB25	LEMB32				
St	roke [mm] <sup>Note 1)</sup>	100, 200, 300, 400, 500 600, 700, 800, 900 1000, (1100), 1200 (1300), (1400), 1500 (1600), (1700), (1800) (1900), 2000	100, 200, 300, 400, 500 600, 700, 800, 900 1000, (1100), 1200 (1300), (1400), 1500 (1600), (1700), (1800) (1900), 2000				
	Work load [kg] Note 2) Horizontal	6 (10)	11 (20)				
us	Speed [mm/s] Note 2)	48 to 1000 (Refer to Table 1 for se	· · · · · · · · · · · · · · · · · · ·				
ţ	Max. acceleration/deceleration [mm/s <sup>2</sup> ] Note 9)	20000 (Depends on the work load.)(Refer to Tab	le 2 for set values when LECP1 or 2 is selected.)				
specifications	Positioning repeatability [mm]	±0	).1				
eci	Lead [mm]	4	8				
r sp	Actuation type	Be	elt				
Actuator	Guide type	Sliding bearing					
tus	Operating temperature range [°C]	5 to 40					
Ă	Operating humidity range [%RH]	90 or less (No condensation)					
	Allowable external force [N] Note 8)	10	20				
Suc	Motor size	□5	6.4				
atic	Motor type	Step motor (S	ervo/24 VDC)				
ific	Encoder	Incremental A/B phas	e (800 pulse/rotation)				
bec	Rated voltage [V]	24 VD0	C±10%				
S S	Power consumption [W] Note 3)	50	52				
Electric specifications	Standby power consumption when operating [W] Note 4)	44	44				
	Max. instantaneous power consumption [W] Note 5)	123	127				
ations	Type Note 6)	Non-magnetizing lock					
Lock unit specifications	Holding force [N]	36					
unit sp	Power consumption [W] Note 7)	5					
Foc	Rated voltage [V]	24 VD0	C±10%				

- Note 1) Please consult with SMC as all non-standard and non-made-to-order strokes are produced as special orders.
- Note 2) Speed changes according to the work load.
  - Check "Speed–Work Load Graph (Guide)" on page 3. The work load is changed by the work load mounting condition. Check "Dynamic Allowable Moment" on page 5.
  - Furthermore, if the cable length exceeds 5 m, then it will decrease by up to 10% for each 5 m. ( ): When combined with another guide and the friction coefficient is 0.1 or less.
- Note 3) The power consumption (including the controller) is for when the actuator is operating.
- Note 4) The standby power consumption when operating (including the controller) is for when the actuator is stopped in the set position during operation.
- Note 5) The maximum instantaneous power consumption (including the controller) is for when the actuator is operating. This value can be used for the selection of the power supply.
- Note 6) With lock only
- Note 7) For an actuator with lock, add the power consumption for the lock.
- Note 8) The resistance value of the attached equipment should be within the allowable external resistance value.
- Note 9) Maximum acceleration is limited by the work load and the stroke.

Refer to "Work Load-Acceleration/Deceleration Graph (Guide)" on page 4.


#### Weight


Strol	ке	100	200	300	400	500	600	700	800	900	1000	(1100)	1200	(1300)	(1400)	1500	(1600)	(1700)	(1800)	(1900)	2000
Product	LEMB25	1.75	1.92	2.10	2.27	2.45	2.62	2.80	2.97	3.15	3.33	3.50	3.68	3.85	4.03	4.20	4.38	4.55	4.73	4.90	5.08
weight [kg]	LEMB32	2.11	2.11	2.11	2.11	2.82	2.82	2.82	2.82	2.82	2.82	2.82	2.82	2.82	2.82	2.82	2.82	2.82	2.82	2.82	2.82
Additional weight	Additional weight with lock [kg] 0.60																				





## Construction


## **LEMB**

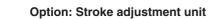


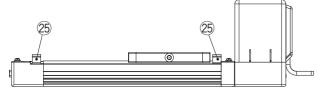


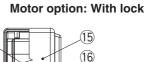


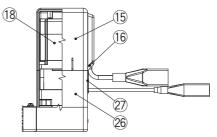


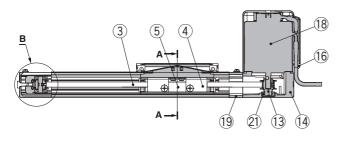

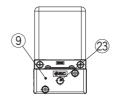

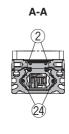

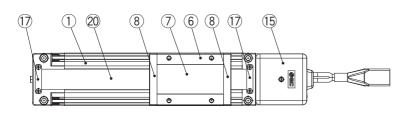

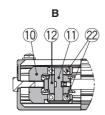

## **Component Parts**

No.	Description	Material	Note
1	Body	Alumnium alloy	Anodised
2	Guide plate	Synthetic resin	
3	Belt	_	
4	Belt holder	Carbon steel	Chromated
5	Belt stopper	Alumnium alloy	
6	Table	Alumnium alloy	Anodised
7	Blanking plate	Alumnium alloy	Anodised
8	Seal band stopper	Synthetic resin	
9	End block	Alumnium die-casted	Painting
10	Pulley holder	Alumnium alloy	
11	Pulley shaft	Stainless steel	Heat treatment + Special treatment
12	Pulley	Alumnium alloy	Anodised
13	Motor pulley	Alumnium alloy	Anodised
14	Motor mount	Alumnium die-casted	Painting
15	Motor cover	Synthetic resin	
		•	•

## **Component Parts**


No.	Description	Material	Note
16	Grommet	Synthetic resin	
17	Band stopper	Stainless steel	
18	Motor	_	
19	Motor end block	Alumnium die-casted	Painting
20	Dust seal band	Stainless steel	
21	Bearing	_	
22	Bearing	_	
23	Hexagon bolt	Carbon steel	Chromated
24	Magnet	_	
25	Stroke adjuster	Alumnium alloy	Anodised (Optional)
26	Motor cover for lock	Alumnium alloy	Anodised Only "with lock"
27	Grommet	CR	Chloroprene rubber Only "with lock"


## Series LEMB

## Dimensions Size 25

Refer to page 46 and after for dimensions of the controllers.

## Top mounting

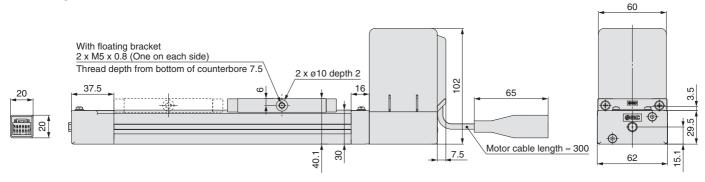


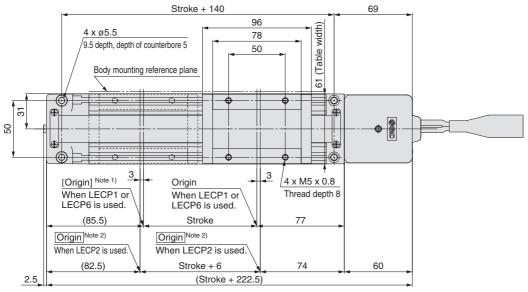

Note 1) [ ] for when the direction of return to origin has changed. (When the LECP6 is used.) Note 2) Origin for when the LECP2 is used. The movable stroke is "Stroke + 6 mm".


## Top mounting

With lock LEMB25T-□B□-□□□□□□

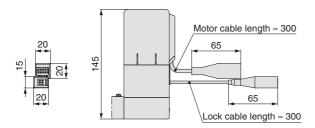

## **Bottom mounting**

LEMB25UT-

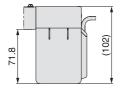


## **Bottom mounting**


With lock

LEMB25UT
B

-

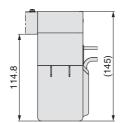

## Stroke adjustment unit mounting position

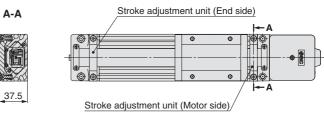







Refer to page 46 and after for dimensions of the controllers.



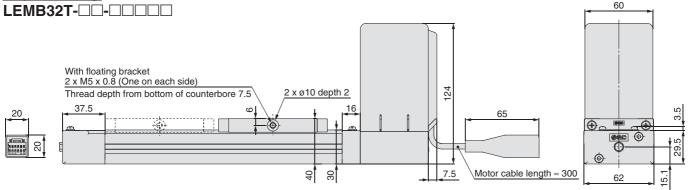

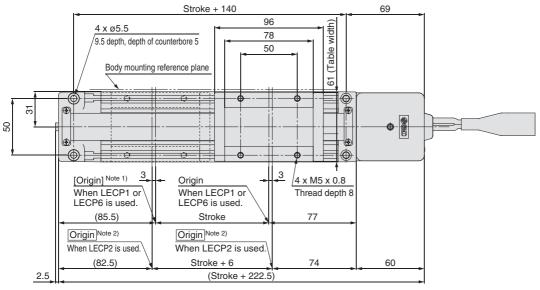


Note 1) [ ] for when the direction of return to origin has changed. (When the LECP6 is used.) Note 2) Origin for when the LECP2 is used. The movable stroke is "Stroke + 6 mm".

## Top mounting


## With lock

## LEMB32TB -

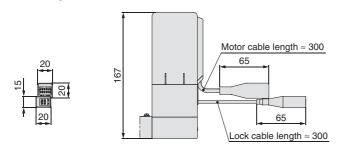

## **Bottom mounting**


## LEMB32UT-

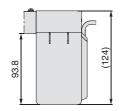

## **Bottom mounting**


#### With lock

## LEMB32UTB -

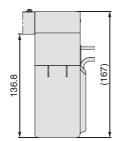

## Stroke adjustment unit mounting position

LEMB32 T-

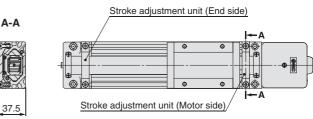





## Series LEMB


## **Side Support**


## Side support A MY-S25A

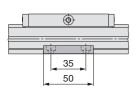

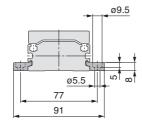

## Side support B MY-S25B

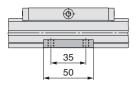


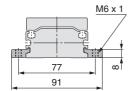



- \* A set of side supports consists of a left support and a right support.
- \*\* The side supports are the same for sizes LEMB25 and LEMB32.

## Recommended spacing for side supports

When using actuator with longer stroke, implement intermediate support to prevent frame deflection or deflection caused by vibration or external impacts. The spacing (L) of the intermediate supports must be no more than the values shown in the following graph.

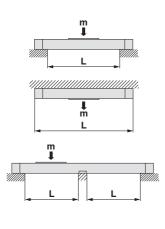

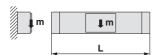

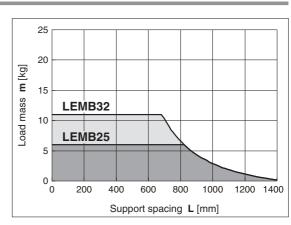

## **⚠** Caution


- 1. If the actuator mounting surfaces are not measured accurately, using the intermediate support may cause poor operation. Make sure to level the mounting surface when mounting the actuator. For long stroke operation involving overhang of workpiece, implement intermediate support as recommended even if the support spacing is within the allowable limits shown in the graph. For the intermediate support, order a side support separately.
- The side supports are not suitable for mounting the actuator. Use the side supports to prevent deflection, vibration deflection and external impacts for long stroke actuators.

## Floating Bracket


MYAJ25 Note) Mounting direction ① and ② are available for this model.

## **Application Example**


#### Mounting direction (to minimise the installation height)

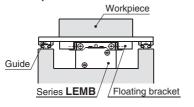

## **Mounting Example**

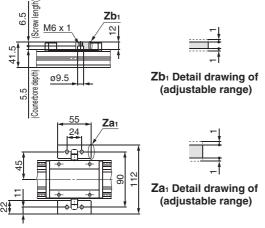


## **Floating Parts Dimensions**

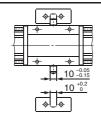


## Application Example


## Mounting direction 2 (to minimise the installation width)

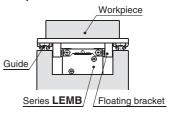

## **Mounting Example**

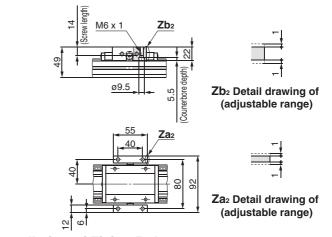


### **Installation of Fixing Bolts**

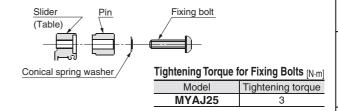


## **Stroke Adjustment Unit**

#### **LEMB-AJ**

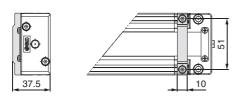

\* Stroke adjustment unit includes the stroke adjuster and mounting bolts.

#### Mounting

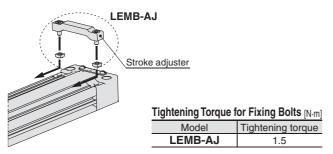




## **Electric Actuator/Low Profile Slider Type** Cam Follower Guide Type Step Motor (Servo/24 VDC)

# Series LEMC ( CAN US LEMC25, 32



**How to Order** 




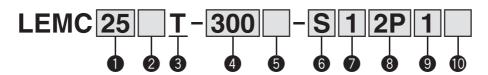

## 1 Size 32



_	Top mounting
U	Bottom mounting
L	Symmetric, Top mounting
LU	Symmetric, Bottom mounting

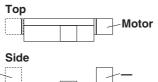

3 Equ	uivalent l	lead
Т	48 mm	

<b>5</b> Mo	tor option
_	Without lock
В	With lock

ng ng	Side	
	L	
L	U	U

4 Stroke

■Standard/	Droduood	unon	roccint o	fordor
Standard	Produced	unon	receint o	t order

Model	100	200	300	400	500	600	700	800	900	1000	1100	1200	1300	1400	1500	1600	1700	1800	1900	2000
LEMC25	•	•	•	•	•	•	•	•	•	•	0	•	0	0	•	0	0	0	0	
LEMC32	•	•	•	•	•	•	•	•	•	•	0	•	0	0	•	0	0	0	0	•

<sup>\*</sup> Please consult with SMC as all non-standard and non-made-to-order strokes are produced as special orders.

## **⚠** Caution

#### [CE-compliant products]

EMC compliance was tested by combining the electric actuator LEM series and the controller LEC series.


The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore, conformity to the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result, it is necessary for the customer to verify conformity to the EMC directive for the machinery and equipment as a whole.

#### [UL-compliant products]

When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

Refer to pages 42 and 43 for auto switches.



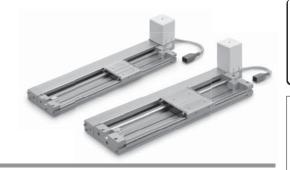

6 Actuator cable type

9 I/O cable length\*

3

5

Without cable  Chandard cable*										
S	Standard cable*									
R	Robotic cable (Flexible cable)									

\* The standard cable should be used on fixed parts. For using on moving parts, select the robotic cable.

Actuator cable length

_	Without cable	8	8 m*
1	1.5 m	Α	10 m*
3	3 m	В	15 m*
5	5 m	С	20 m*

\* Produced upon receipt of order (Robotic cable only)

Without cable

1.5 m

3 m

5 m \* When "Without controller" is selected for controller types, I/O cable cannot be selected. Refer to page 53 (For LECP2), page 60 (For LECP1) or

Controller mounting

<b>E</b>	ind once intouriding
_	Screw mounting
D	DIN rail mounting*

\* DIN rail is not included. Order it separately.

8 Controller type

	7:									
_	Without controller									
6N	LECP6	NPN								
6P	(Step data input type)	PNP								
2N	LECP2*	NPN								
2P	(Programless type (With stroke study))	PNP								
1N	LECP1	NPN								
1P	(Programless type)	PNP								

\* Select the LECP2 when setting the stroke range using the stroke adjustment unit or an external stop.

page 68 (For LECP6) if I/O cable is required.

Compatible Controllers

Compatible Controlle	ers		
Туре	Programless type (With stroke study)	Programless type	Step data input type
Series	LECP2	LECP1	LECP6
Features	End to end operation similar to an air cylinder using the stroke study function	Capable of setting up operation (step data) without using a PC or teaching box	Value (Step data) input Standard controller
Compatible motor		Step motor (Servo/24 VDC)	
Maximum number of step data	14 points (2 stroke end points + 12 intermediate points)	14 points	64 points
Power supply voltage		24 VDC	
Reference page	Page 47	Page 54	Page 61



## Series LEMC



## Speed/Acceleration (Set values for LECP1/2)

## Table 1 Switch and Speed Note)

Switch no.	Speed [mm/s]
0	48
1	75
2	100
3	150
4	200
5	250
6	300
7	350
8	400
9	450
10	500
11	600
12	700
13	800
14	900
15	1000

## Table 2 Switch and Acceleration Note)

Switch no.	Acceleration [mm/s <sup>2</sup> ]
0	250
1	500
2	1000
3	1500
4	2000
5	2500
6	3000
7	4000
8	5000
9	6000
10	7500
11	10000
12	12500
13	15000
14	17500
15	20000

Note) The factory default setting for the switch is No.0.

## **Specifications**

Step Motor (Servo/24 VDC)

Model			LEMC25	LEMC32					
St	roke [mm] <sup>Note 1)</sup>		100, 200, 300, 400, 500 600, 700, 800, 900 1000, (1100), 1200 (1300), (1400), 1500 (1600), (1700), (1800) (1900), 2000	100, 200, 300, 400, 500 600, 700, 800, 900 1000, (1100), 1200 (1300), (1400), 1500 (1600), (1700), (1800) (1900), 2000					
	Work load [kg] Note 2)	Horizontal	10	20					
"	Speed [mm/s] Note 2)		48 to 1000 (Refer to Table 1 for se	et values when LECP1 or 2 is selected.)					
ous	Max. acceleration/deceleration	[mm/s <sup>2</sup> ] Note 9)	20000 (Depends on the work load.)(Refer to Tab	le 2 for set values when LECP1 or 2 is selected.)					
Actuator specifications	Positioning repeatability [mm]	Intermediate stopping position	±C	0.1					
be	Lead [mm]		48						
or s	Actuation type		Belt						
uat	Guide type		Cam follower guide						
Act	Operating temperature	range [°C]	5 to 40						
	Operating humidity ran	ige [%RH]	90 or less (No condensation)						
	Allowable external forc	e [N] Note 8)	10	20					
Electric specifications	Motor size		□56.4						
atic	Motor type		Step motor (Servo/24 VDC)						
ξį	Encoder		Incremental A/B phase (800 pulse/rotation)						
bec	Rated voltage [V]		24 VD0	C±10%					
ics	Power consumption	[W] Note 3)	50	52					
ectr	Standby power consumption when op-	perating [W] Note 4)	44	44					
	Max. instantaneous power consun	nption [W] Note 5)	123	127					
Lock unit specifications	Type Note 6)		Non-magnetizing lock						
pecific	Holding force [N]		36						
units	Power consumption	[W] Note 7)	5						
Lock	Rated voltage [V]		24 VDC±10%						

Note 1) Please consult with SMC as all non-standard and non-made-to-order strokes are produced as special orders.

Note 2) Speed changes according to the work load.

Check "Speed-Work Load Graph (Guide)" on page 3.

The work load is changed by the work load mounting condition.

Check "Dynamic Allowable Moment" on page 6.

Furthermore, if the cable length exceeds 5 m, then it will decrease by up to 10% for each 5 m.

Note 3) The power consumption (including the controller) is for when the actuator is operating.

Note 4) The standby power consumption when operating (including the controller) is for when the actuator is stopped in the set position during operation.

Note 5) The maximum instantaneous power consumption (including the controller) is for when the actuator is operating. This value can be used for the selection of the power supply.

Note 6) With lock only

Note 7) For an actuator with lock, add the power consumption for the lock.

Note 8) The resistance value of the attached equipment should be within the allowable external resistance value.

Note 9) Maximum acceleration is limited by the work load and the stroke.

Refer to "Work Load-Acceleration/Deceleration Graph (Guide)" on page 4.

## Weight


Strol	ke	100	200	300	400	500	600	700	800	900	1000	(1100)	1200	(1300)	(1400)	1500	(1600)	(1700)	(1800)	(1900)	2000
Product	LEMC25	2.18	2.46	2.74	3.01	3.29	3.57	3.85	4.12	4.40	4.68	4.95	5.23	5.51	5.79	6.06	6.34	6.62	6.90	7.17	7.45
weight [kg]	LEMC32	4.06	4.49	4.91	5.33	5.76	6.18	6.61	7.03	7.45	7.88	8.30	8.72	9.15	9.57	10.00	10.42	10.84	11.27	11.69	12.11
Additional weight	dditional weight with lock [kg] 0.60																				




C-C


#### Construction

#### **LEMC**

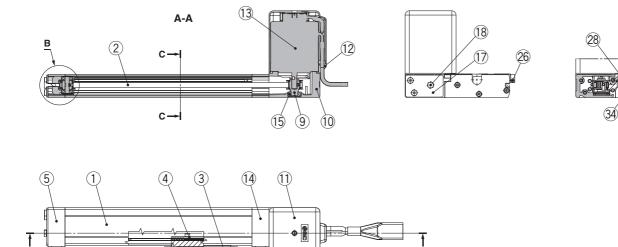

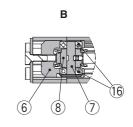

# Motor option: With lock

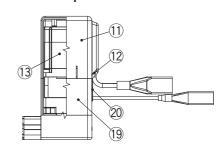

#### **Component Parts**

Description	Material	Note
Body	Alumnium alloy	Anodised
Belt	_	
L-type bracket	Alumnium alloy	Anodised
Belt stopper	Alumnium alloy	
End block	Alumnium alloy	Anodised
Pulley holder	Alumnium alloy	
Pulley shaft	Stainless steel	Heat treatment + Special treatment
Pulley	Alumnium alloy	Anodised
Motor pulley	Alumnium alloy	Anodised
Motor mount	Alumnium die-casted	Painting
Motor cover	Synthetic resin	
Grommet	Synthetic resin	
Motor	_	
Motor end block	Alumnium alloy	Anodised
Bearing	_	
Bearing	_	
Tension plate	Alumnium alloy	Anodised
Hexagon bolt	Carbon steel	Chromated
	Body Belt L-type bracket Belt stopper End block Pulley holder Pulley shaft Pulley Motor pulley Motor mount Motor cover Grommet Motor Motor end block Bearing Tension plate	Body Alumnium alloy Belt —  L-type bracket Alumnium alloy Belt stopper Alumnium alloy End block Alumnium alloy Pulley holder Alumnium alloy Pulley shaft Stainless steel Pulley Alumnium alloy Motor pulley Alumnium alloy Motor mount Alumnium die-casted Motor cover Synthetic resin Grommet Synthetic resin Motor Alumnium alloy Motor end block Alumnium alloy Bearing —  Tension plate Alumnium alloy

**Component Parts** 

D-D


No.	Description	Material	Note
19	Motor cover for lock	Alumnium alloy	Anodised Only "with lock"
20	Grommet	CR	Chloroprene rubber Only "with lock"
21	Guide unit body	Alumnium alloy	Anodised
22	Slide table	Alumnium alloy	Anodised
23	End plate	Alumnium alloy	Anodised
24	Stopper	Carbon steel	Nickel plating
25	Stroke adjuster	Alumnium alloy	Anodised
26	Magnet	_	
27	Side cover	Alumnium alloy	Anodised
28	Cam follower cap	Alumnium alloy	Anodised
29	Cam follower	_	
30	Cam follower	_	
31	Eccentric gear	Stainless steel	
32	Gear bracket	Stainless steel	
33	Adjustment gear	Stainless steel	
34	Rail	Hard steel wire material	



# Series LEMC

# Dimensions Size 25


Refer to page 46 and after for dimensions of the controllers.

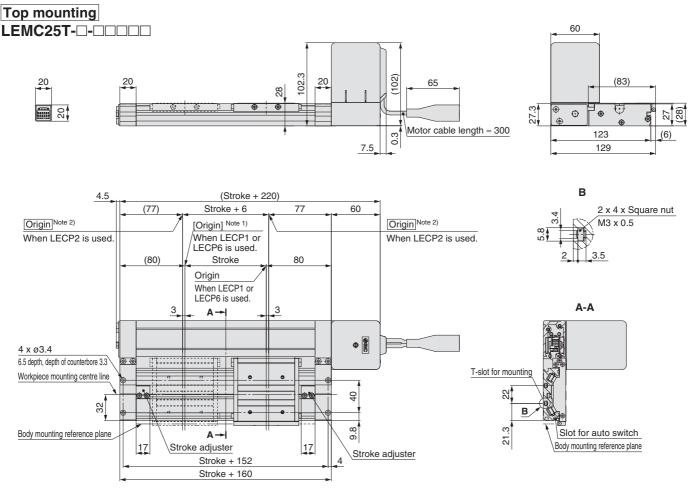

Note 1) [ ] for when the direction of return to origin has changed. (When the LECP1 or 6 is used.) Note 2) Origin for when the LECP2 is used. The movable stroke is "Stroke + 6 mm".

# Top mounting With lock


LEMC25T-B-DDDD

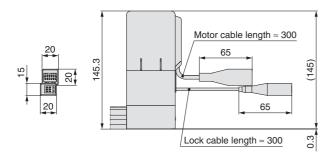

# **Bottom mounting**


With lock


LEMC25UT
B
O

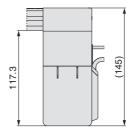

#### **Bottom mounting**

LEMC25UT-

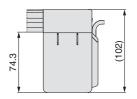


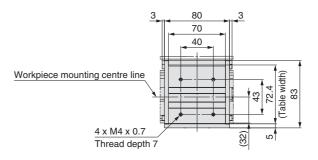




# Dimensions Size 25

Refer to page 46 and after for dimensions of the controllers.

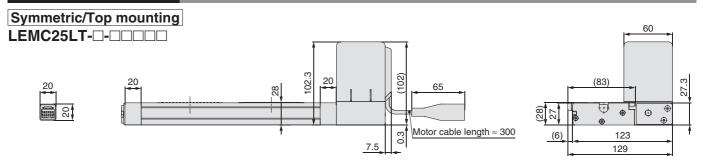


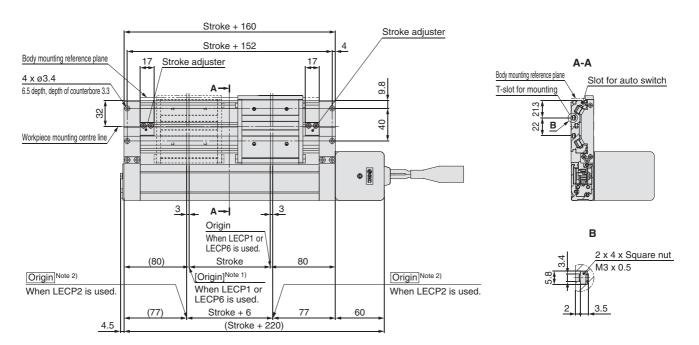

Note 1) [ ] for when the direction of return to origin has changed. (When the LECP1 or 6 is used.) Note 2) Origin for when the LECP2 is used. The movable stroke is "Stroke + 6 mm".

# Top mounting


With lock LEMC25LTB-

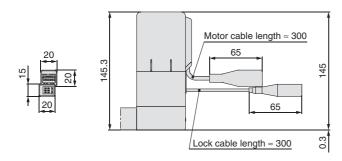

# **Bottom mounting**


With lock


LEMC25LUTB-

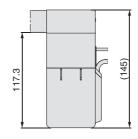

## **Bottom mounting**

LEMC25LUT
-----

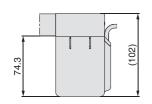

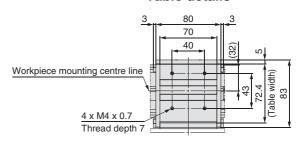





# Series LEMC

# Dimensions Size 32


Refer to page 46 and after for dimensions of the controllers.

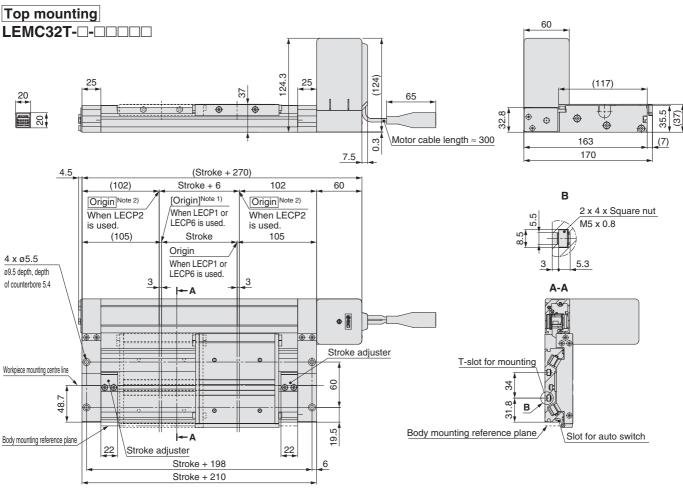

Note 1) [ ] for when the direction of return to origin has changed. (When the LECP1 or 6 is used.) Note 2) Origin for when the LECP2 is used. The movable stroke is "Stroke + 6 mm".

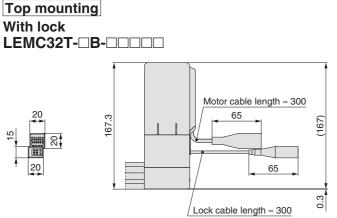


# Bottom mounting

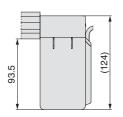

LEMC32UT-

# Bottom mounting With lock LEMC32UT-□B-□□□□□

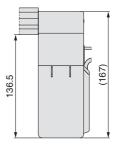


Workpiece mounting centre line

4 x M5 x 0.8

Thread depth 9



Refer to page 46 and after for dimensions of the controllers.

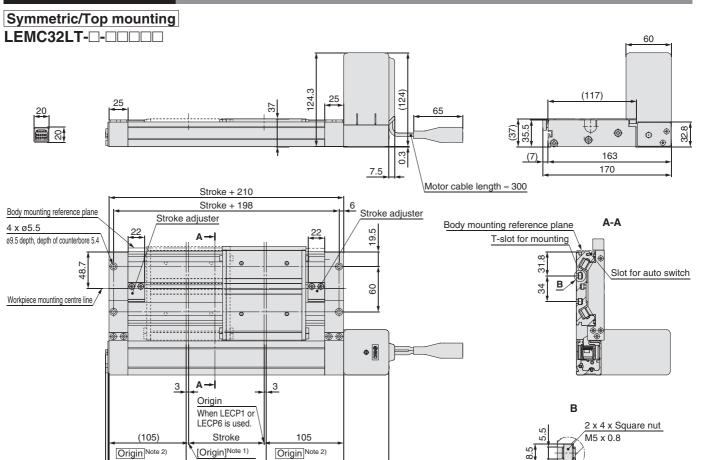

Note 1) [ ] for when the direction of return to origin has changed. (When the LECP1 or 6 is used.) Note 2) Origin for when the LECP2 is used. The movable stroke is "Stroke + 6 mm".

When LECP1 or

LECP6 is used.

Stroke + 6

(Stroke + 270)

When LECP2

102


60

is used.

## Top mounting

With lock

LEMC32LT
B-

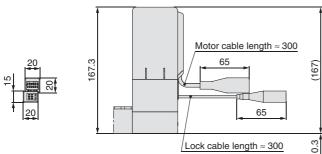


When LECP2

(102

is used


**Bottom mounting** LEMC32LUT
-----

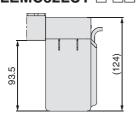


**Bottom mounting** 

With lock

LEMC32LUT
B-

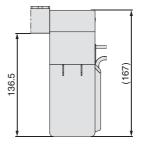



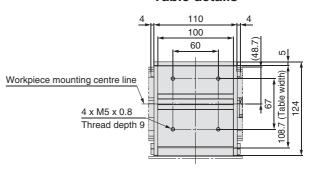




# Series LEMC

#### **Side Support**

# Side support MYC-S□A

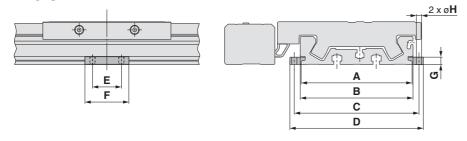



Model	Applicable actuator	Α	В	С	D	Е	F	G	øΗ
MYC-S16A	LEMC25	60.6	64.6	70.6	77.2	15	26	4.9	3.4
MYC-S25A	LEMC32	95.9	97.5	107.9	115.5	25	38	6.4	4.5

<sup>\*</sup> A set of side supports consists of a left support and a right support.

#### Recommended spacing for side supports

When using actuator with longer stroke, implement intermediate support to prevent frame deflection or deflection caused by vibration or external impacts. The spacing (L) of the intermediate supports must be no more than the values shown in the following graph.

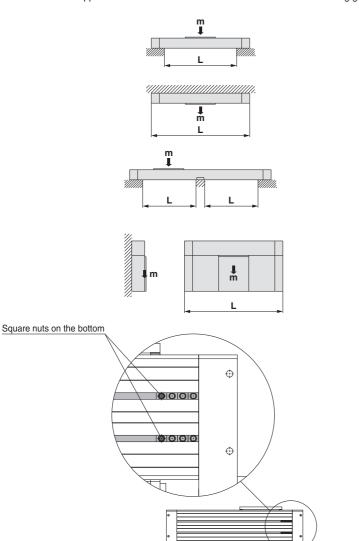

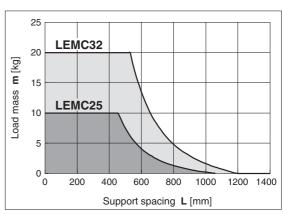

# **△** Caution

**SMC** 

- 1. If the actuator mounting surfaces are not measured accurately, using the intermediate support may cause poor operation. Make sure to level the mounting surface when mounting the actuator. For long stroke operation involving overhang of workpiece, implement intermediate support as recommended even if the support spacing is within the allowable limits shown in the graph. For the intermediate support, use the square nuts at the bottom of the body or order a side support separately.
- The side supports are not suitable for mounting the actuator. Use the side supports to prevent deflection, vibration deflection and external impacts for long stroke actuators.


# **Electric Actuator/Low Profile Slider Type**

Linear Guide Single Axis Type/Double Axis Type Step Motor (Servo/24 VDC)


# Series LENH/HT LEMH/LEMHT25, 32 ( ( CAN US




**How to Order** 

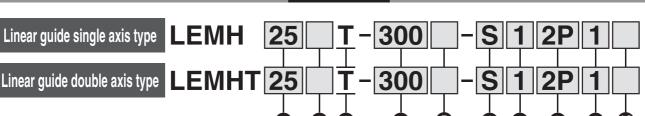




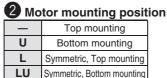

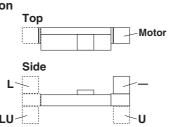



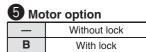

4	Stro	ke

■Standard/○Produced upon receipt of order
---

Model	100	200	300	400	500	600	700	800	900	1000	1100	1200	1300	1400	1500
LEMH25	•	•	•	•	•	•	0	0	0	0					
LEMH32	•	•	•	•	•	•	0	0	0	0	0	0	0	0	0

st Please consult with SMC as all non-standard and non-made-to-order strokes are produced as special orders.

#### **⚠** Caution

#### [CE-compliant products]


EMC compliance was tested by combining the electric actuator LEM series and the controller LEC series.

The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore, conformity to the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result, it is necessary for the customer to verify conformity to the EMC directive for the machinery and equipment as a whole.

#### [UL-compliant products]

When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

Refer to pages 42 and 43 for auto switches.

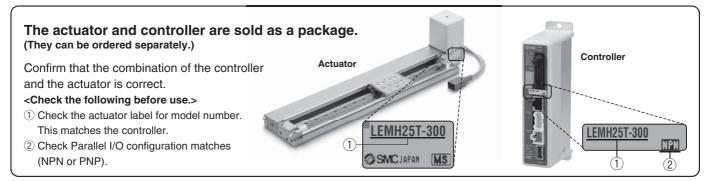

# Electric Actuator/Low Profile Slider Type Linear Guide Single Axis Type/Double Axis Type



6 Actuator cable type

9 I/O cable length\*

_	Without cable
S	Standard cable*
R	Robotic cable (Flexible cable)

\* The standard cable should be used on fixed parts. For using on moving parts, select the robotic cable. Actuator cable length

_	Without cable	8	8 m*
1	1.5 m	Α	10 m*
3	3 m	В	15 m*
5	5 m	С	20 m*
	l		

\* Produced upon receipt of order (Robotic cable only)

#### Controller mounting

-	Screw mounting
D	DIN rail mounting*

\* DIN rail is not included. Order it separately.

8 Controller type

_	Without controller	
6N	LECP6	NPN
6P	(Step data input type)	PNP
2N	LECP2*	NPN
2P	(Programless type (With stroke study))	PNP
1N	LECP1	NPN
1P	(Programless type)	PNP

\* Select the LECP2 when setting the stroke range using the stroke adjustment unit or an external stop.

_	Without cable
1	1.5 m
3	3 m
5	5 m

\* When "Without controller" is selected for controller types, I/O cable cannot be selected. Refer to page 53 (For LECP2), page 60 (For LECP1) or page 68 (For LECP6) if I/O cable is required.

**Compatible Controllers** 

	Programless type (With stroke study)	Programless type	Step data input type
Туре			
Series	LECP2	LECP1	LECP6
Features	End to end operation similar to an air cylinder using the stroke study function	Capable of setting up operation (step data) without using a PC or teaching box	Value (Step data) input Standard controller
Compatible motor		Step motor (Servo/24 VDC)	
Maximum number of step data	14 points (2 stroke end points + 12 for intermediate points)	14 points	64 points
Power supply voltage		24 VDC	
Reference page	Page 47	Page 54	Page 61



# Series LEMH/HT



#### Speed/Acceleration (Set values for LECP1/2)

#### Table 1 Switch and Speed Note)

Speed [mm/s]
48
75
100
150
200
300
400
500
600
800
1000
1200
1400
1600
1800
2000

#### Table 2 Switch and Acceleration Note)

d Acceleration ""		
Acceleration [mm/s <sup>2</sup> ]		
250		
500		
1000		
1500		
2000		
2500		
3000		
4000		
5000		
6000		
7500		
10000		
12500		
15000		
17500		
20000		

Note) The factory default setting for the switch is No.0.

#### **Specifications**

Step Motor (Servo/24 VDC)

	Model		LEMH25/LEMHT25	LEMH32/LEMHT32			
St	Stroke [mm] Note 1)		100, 200, 300, 400, 500 600, (700), (800), (900) (1000)	100, 200, 300, 400, 500 600, (700), (800), (900) (1000), (1100), (1200) (1300), (1400), (1500)			
	Work load [kg] Note 2)	Horizontal	10	20			
"	Speed [mm/s] Note 2)		48 to 2000 (Refer to Table 1 for se	t values when LECP1 or 2 is selected.)			
ous	Max. acceleration/deceleration [mm		20000 (Depends on the work load.)(Refer to Tab	le 2 for set values when LECP1 or 2 is selected.)			
specifications	Positioning repeatability [mm]	Intermediate stopping position	±C	0.1			
ğ	Lead [mm]		4	8			
	Actuation type		Be	elt			
Actuator	Guide type		Linear guide				
Act	Operating temperature ran	ge [°C]	5 to 40				
	Operating humidity range	[%RH]	90 or less (No condensation)				
	Allowable external force [N	Note 8)	10	20			
ns	Motor size		□56.4				
atio	Motor type		Step motor (Servo/24 VDC)				
Electric specifications	Encoder		Incremental A/B phase (800 pulse/rotation)				
bec	Rated voltage [V]		24 VD0	C ±10%			
ics	Power consumption [W	Note 3)	50	52			
Sct	Standby power consumption when operating [W] Note 4)		44	44			
画	Max. instantaneous power consumption [W] <sup>Note 5)</sup>		123	127			
ations	Type Note 6)		Non-magnetizing lock				
ecilica	Holding force [N]		36				
Lock unit specifications	Power consumption [W]	Note 7)	5				
Lock	Rated voltage [V]		24 VD0	C ±10%			

Note 1) Please consult with SMC as all non-standard and non-made-to-order strokes are produced as special orders.

Note 2) Speed changes according to the work load.

Check "Speed-Work Load Graph (Guide)" on page 3.

The work load is changed by the work load mounting condition. Check "Dynamic Allowable Moment" on pages 6 and 7.

Furthermore, if the cable length exceeds 5 m, then it will decrease by up to 10% for each 5 m.

Note 3) The power consumption (including the controller) is for when the actuator is operating.

Note 4) The standby power consumption when operating (including the controller) is for when the actuator is stopped in the set position during operation.

Note 5) The maximum instantaneous power consumption (including the controller) is for when the actuator is operating. This value can be used for the selection of the power supply.

Note 6) With lock only

Note 7) For an actuator with lock, add the power consumption for the lock.

Note 8) The resistance value of the attached equipment should be within the allowable external resistance value.

Note 9) Maximum acceleration is limited by the work load and the stroke. Refer to "Work Load-Acceleration/Deceleration Graph (Guide)" on page 4.

#### Weight

**Linear Guide Single Axis Type** 

Lilleal Gu	Linear duide Single Axis Type															
Strol	ke	100	200	300	400	500	600	(700)	(800)	(900)	(1000)	(1100)	(1200)	(1300)	(1400)	(1500)
Product weight [kg]	LEMH25	2.05	2.32	2.59	2.87	3.14	3.42	3.69	3.96	4.24	4.51	_	_			_
Product weight [kg]	LEMH32	3.70	4.17	4.63	5.10	5.57	6.03	6.50	6.97	7.44	7.90	8.37	8.84	9.30	9.77	10.24
Additional weight with lock [kg] 0.60																


**Linear Guide Double Axis Type** 

	40 204	0.0 / 1/1	, ,													
Strok	е	100	200	300	400	500	600	(700)	(800)	(900)	(1000)	(1100)	(1200)	(1300)	(1400)	(1500)
Product weight [kg]	LEMHT25	2.61	3.03	3.45	3.87	4.29	4.71	5.13	5.55	5.97	6.38	_	_	_	_	_
I Toddot Weight [kg]	LEMHT32	5.20	5.97	6.73	7.50	8.27	9.04	9.80	10.57	11.34	12.10	12.87	13.64	14.41	15.17	15.94
Additional weight	with lock [kg]								0.60							



#### Construction

#### **LEMH**

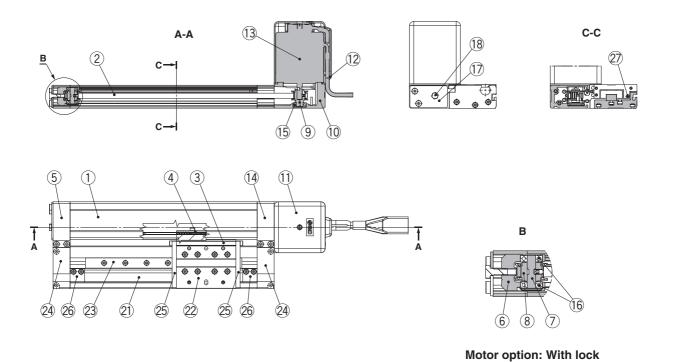

#### **Component Parts**

0011	iponent i arts		
No.	Description	Material	Note
1	Body	Aluminium alloy	Anodised
2	Belt	_	
3	L-type bracket	Aluminium alloy	Anodised
4	Belt stopper	Aluminium alloy	
5	End block	Aluminium alloy	Anodised
6	Pulley holder	Aluminium alloy	
7	Pulley shaft	Stainless steel	Heat treatment + Special treatment
8	Pulley	Aluminium alloy	Anodised
9	Motor pulley	Aluminium alloy	Anodised
10	Motor mount	Aluminium die-casted	Painting
11	Motor cover	Synthetic resin	
12	Grommet	Synthetic resin	
13	Motor	_	
14	Motor end block	Aluminium alloy	Anodised
15	Bearing	_	

#### **Component Parts**


No.	Description	Material	Note
16	Bearing	_	
17	Tension plate	Aluminium alloy	Anodised
18	Hexagon bolt	Carbon steel	Chromated
19	Motor cover for lock	Aluminium alloy	Anodised Only "with lock"
20	Grommet	CR	Chloroprene rubber Only "with lock"
21	Guide unit body	Aluminium alloy	Anodised
22	Slide table	Aluminium alloy	Anodised
23	Guide	_	
24	End plate	Aluminium alloy	Anodised
25	Stopper	Carbon steel	Nickel plating
26	Stroke adjuster	Aluminium alloy	Anodised
27	Magnet	_	


(19)


# Series **LEMHT**

# Construction

#### LEMHT

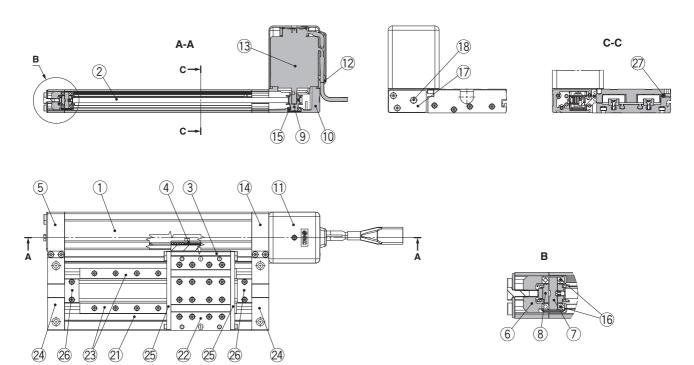

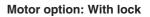

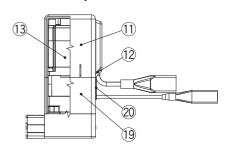

#### **Component Parts**

No.	Description	Material	Note
1	Body	Aluminium alloy	Anodised
		Aluminium alloy	Allouiseu
2	Belt	_	
3	L-type bracket	Aluminium alloy	Anodised
4	Belt stopper	Aluminium alloy	
5	End block	Aluminium alloy	Anodised
6	Pulley holder	Aluminium alloy	
7	Pulley shaft	Stainless steel	Heat treatment + Special treatment
8	Pulley	Aluminium alloy	Anodised
9	Motor pulley	Aluminium alloy	Anodised
10	Motor mount	Aluminium die-casted	Painting
11	Motor cover	Synthetic resin	
12	Grommet	Synthetic resin	
13	Motor	_	
14	Motor end block	Aluminium alloy	Anodised
15	Bearing	_	


#### **Component Parts**

COI	oniponent raits					
No.	Description	Material	Note			
16	Bearing	_				
17	Tension plate	Aluminium alloy	Anodised			
18	Hexagon bolt	Carbon steel	Chromated			
19	Motor cover for lock	Aluminium alloy	Anodised Only "with lock"			
20	Grommet	CR	Chloroprene rubber Only "with lock"			
21	Guide unit body	Aluminium alloy	Anodised			
22	Slide table	Aluminium alloy	Anodised			
23	Guide	_				
24	End plate	Aluminium alloy	Anodised			
25	Stopper	Carbon steel	Nickel plating			
26	Stroke adjuster	Aluminium alloy	Anodised			
27	Magnet	_				

# Dimensions: Linear Guide Single Axis Type

Size 25

Refer to page 46 and after for dimensions of the controllers.

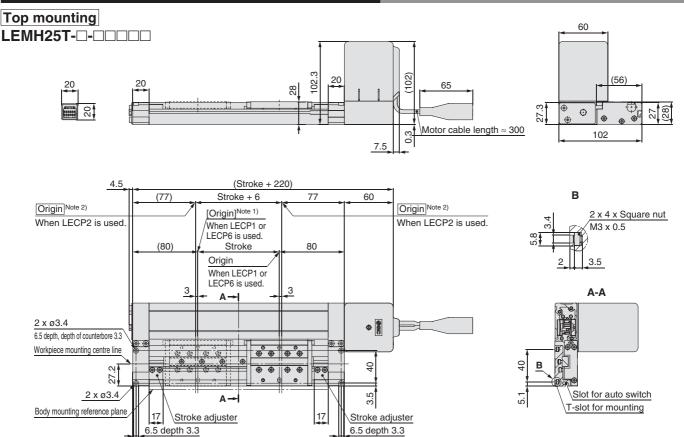

4

Note 1) [ ] for when the direction of return to origin has changed. (When the LECP1 or 6 is used.) Note 2) Origin for when the LECP2 is used. The movable stroke is "Stroke + 6 mm".


Stroke + 152

Stroke + 160

# Top mounting

#### With lock


#### LEMH25T B-

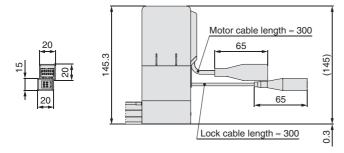

## **Bottom mounting**


#### With lock


#### LEMH25UT-B-

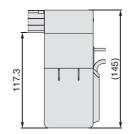

#### **Bottom mounting**

#### LEMH25UT- -- -

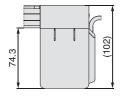

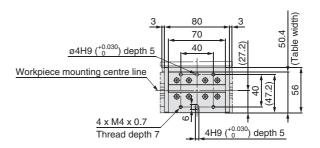




# Series LEMH

Dimensions: Linear Guide Single Axis Type Size 25


Refer to page 46 and after for dimensions of the controllers.

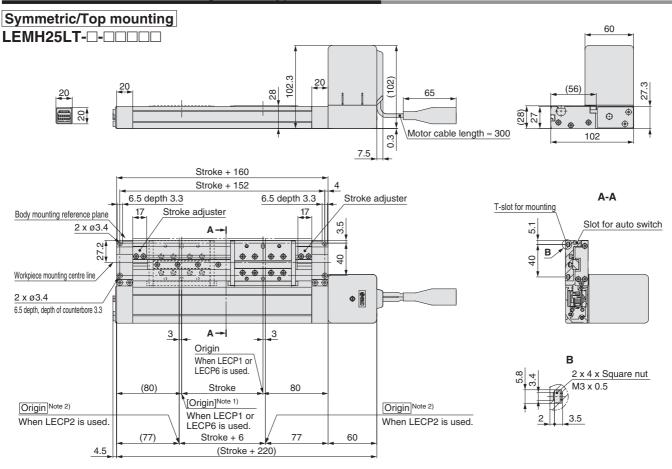

Note 1) [ ] for when the direction of return to origin has changed. (When the LECP1 or 6 is used.) Note 2) Origin for when the LECP2 is used. The movable stroke is "Stroke + 6 mm".

#### Top mounting With lock


LEMH25LT
B-

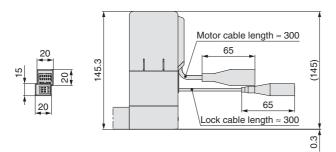

# **Bottom mounting**


With lock


LEMH25LUT
B
B-

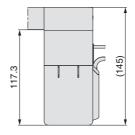

# **Bottom mounting**

LEMH25LUT
-----

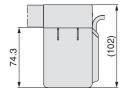

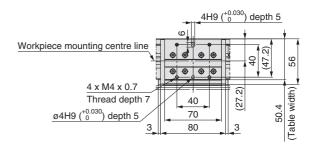




LECP1

# **Dimensions: Linear Guide Single Axis Type**

Size 32


Refer to page 46 and after for dimensions of the controllers.

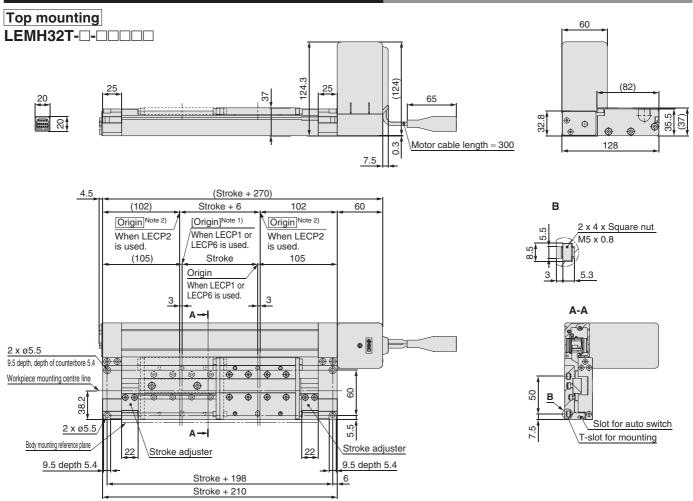

Note 1) [ ] for when the direction of return to origin has changed. (When the LECP1 or 6 is used.) Note 2) Origin for when the LECP2 is used. The movable stroke is "Stroke + 6 mm".


# Top mounting

# With lock LEMH32T B-

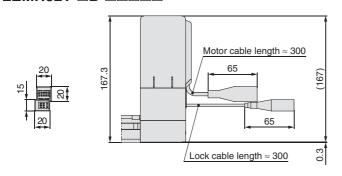


# **Bottom mounting**


# With lock LEMH32UTB-

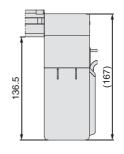

## **Bottom mounting**

#### LEMH32UT-

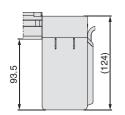

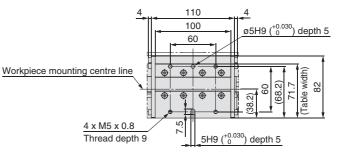



# Series LEMH

Dimensions: Linear Guide Single Axis Type Size 32 Refer to page 46 and after for dimensions of the controllers. Symmetric/Top mounting LEMH32LT-U-UUUU 124.3 (124)(82)25 65 32.8 Motor cable length ≈ 300 37 0.3 128 7.5 Stroke + 210 Stroke + 198 9.5 depth 5.4 9.5 depth 5.4 Stroke adjuster A-A Stroke adjuster Body mounting reference plane T-slot for mounting 2 x ø5.5 Slot for auto switch 0 Workpiece mounting centre line 2 x ø5.5 9.5 depth, depth of counterbore 5.4 Α 3 3 Origin When LECP1 or 2 x 4 x Square nut LECP6 is used. M5 x 0.8 (105)Stroke 105 [Origin]Note 1) Origin Note 2) Origin Note 2) When LECP1 or 5.3 When LECP2 is used. When LECP2 is used. LECP6 is used.

Note 1) [ ] for when the direction of return to origin has changed. (When the LECP1 or 6 is used.) Note 2) Origin for when the LECP2 is used. The movable stroke is "Stroke + 6 mm".


Stroke + 6

(Stroke + 270)


102

60


# Top mounting With lock LEMH32LT-□B-□□□□□

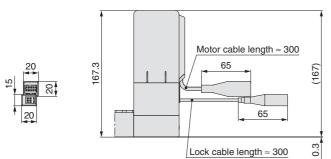


(102)

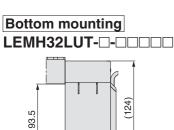


# Bottom mounting With lock LEMH32LUT-□B-□□□□□

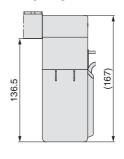

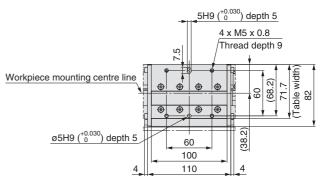



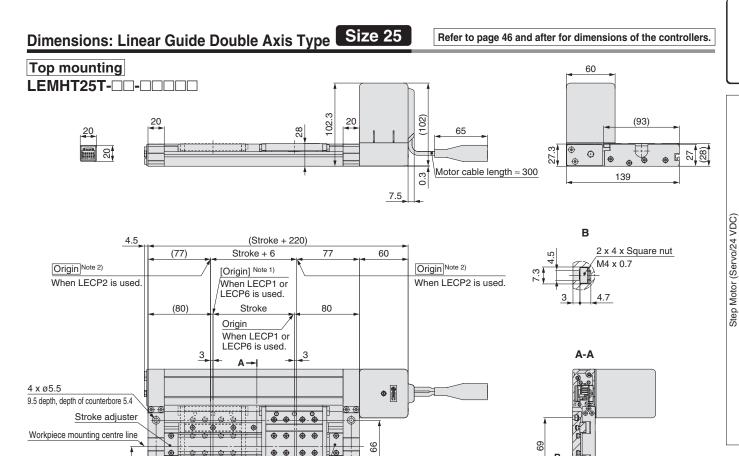

Note 1) [ ] for when the direction of return to origin has changed. (When the LECP1 or 6 is used.) Note 2) Origin for when the LECP2 is used. The movable stroke is "Stroke + 6 mm".


Stroke + 140 Stroke + 160

Stroke adjuster

# Top mounting

Body mounting reference plane

# With lock LEMHT25T-□B-□□□□□

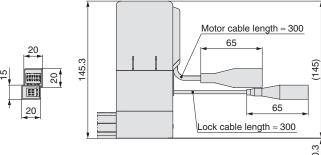

17


# (145)

9

10

17

# Bottom mounting With lock LEMHT25UT-□B-□□□□□

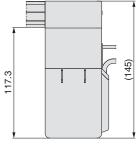


#### Table details

Slot for auto switch


T-slot for mounting

10.2

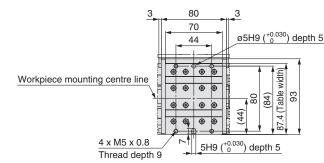

# Bottom mounting


#### LEMHT25UT- -- -- --

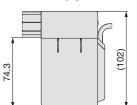

# Series LEMHT


Dimensions: Linear Guide Double Axis Type Size 25

Refer to page 46 and after for dimensions of the controllers.

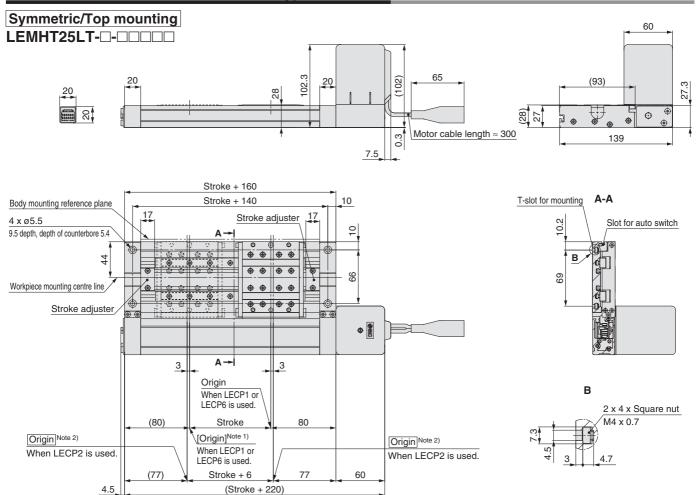


Note 1) [ ] for when the direction of return to origin has changed. (When the LECP1 or 6 is used.) Note 2) Origin for when the LECP2 is used. The movable stroke is "Stroke + 6 mm".


#### **Top mounting** With lock LEMHT25LT B-

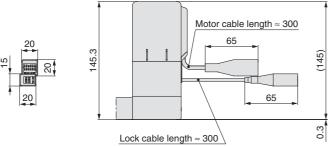


#### **Bottom mounting** LEMHT25LUT- -- --

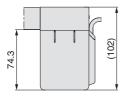


#### **Bottom mounting** With lock LEMHT25LUT B-

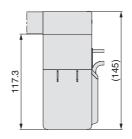

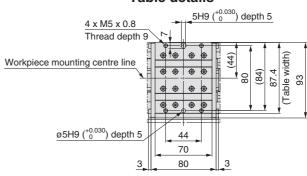




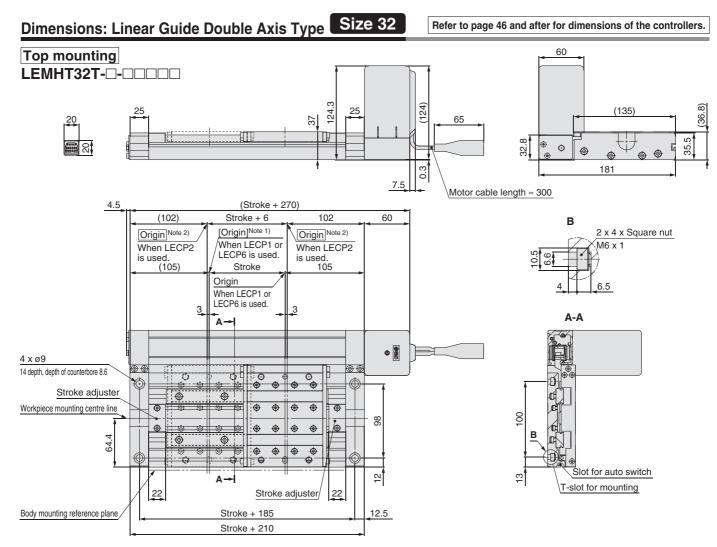


Note 1) [ ] for when the direction of return to origin has changed. (When the LECP1 or 6 is used.) Note 2) Origin for when the LECP2 is used. The movable stroke is "Stroke + 6 mm".


# Top mounting With lock LEMHT32T-□B-□□□□□

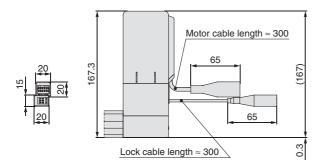


# Bottom mounting LEMHT32UT -

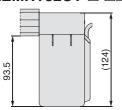

# Bottom mounting With lock LEMHT32UT-□B-□□□□□

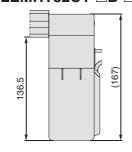

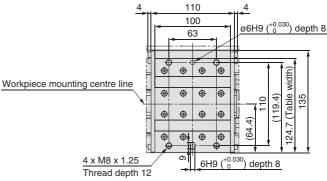




# Series LEMHT


Dimensions: Linear Guide Double Axis Type Size 32

Refer to page 46 and after for dimensions of the controllers.

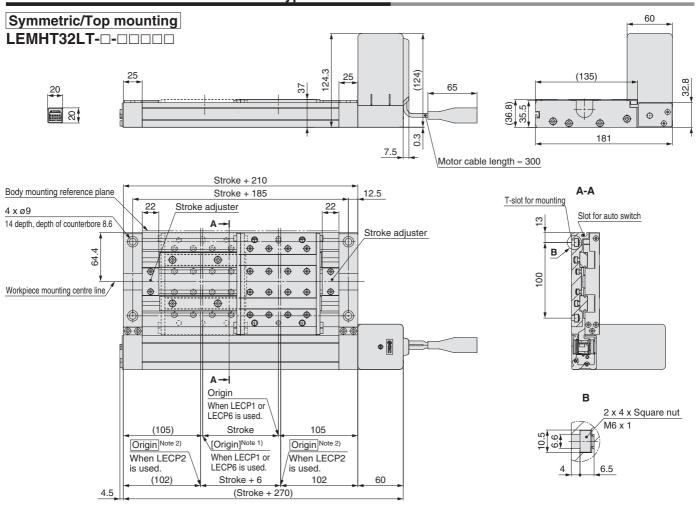


Note 1) [ ] for when the direction of return to origin has changed. (When the LECP1 or 6 is used.) Note 2) Origin for when the LECP2 is used. The movable stroke is "Stroke + 6 mm".


#### **Top mounting** With lock LEMHT32LT B-

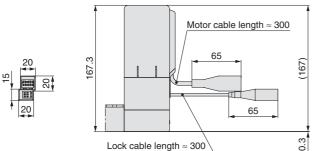

#### **Bottom mounting** With lock LEMHT32LUTB-

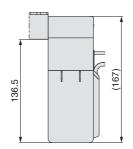


#### **Table details**

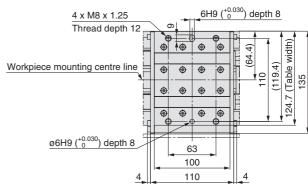


#### **Bottom mounting**


LEMHT32LUT
-----

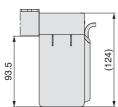


#### Recommended spacing for side supports


When using actuator with longer stroke, implement intermediate support to prevent frame deflection or deflection caused by vibration or external impacts. The spacing (L) of the intermediate supports must be no more than the values shown in the following graph.

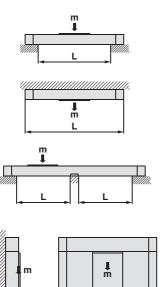

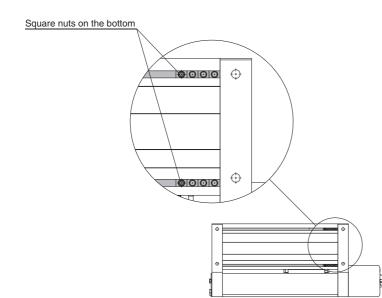

L

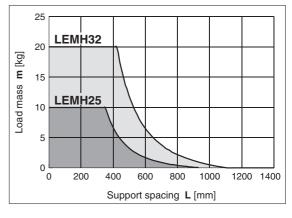

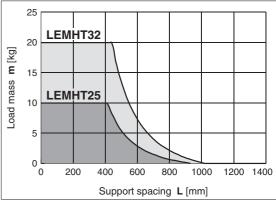


# **⚠** Caution

1. If the actuator mounting surfaces are not measured accurately, using the intermediate support may cause poor operation. Make sure to level the mounting surface when mounting the actuator. For long stroke operation involving overhang of workpiece, implement intermediate support as recommended even if the support spacing is within the allowable limits shown in the graph. Use the square nuts which are on the bottom of the actuator for the intermediate support.

# Series LEM

# **Auto Switch Mounting**

#### **Auto Switch Proper Mounting Position at Stroke End Detection**

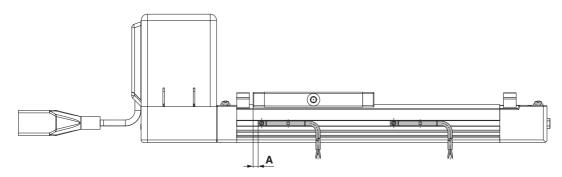

#### D-M9, D-M9□V D-M9□W. D-M9□WV

טיים הואו-ם	, D-IVI9□	VV V	(mm)
Model	Nominal size	Α	Operating range
LEMB		40	5.5
LEMC	25	8	3.5
LEMH		10	6
LEMHT		34	7
LEMB		40	5.5
LEMC	32		4
LEMH		8.4	5.5
LEMHT			5.5

Note) The operating range is a guideline including hysteresis, not meant to be guaranteed.


There may be large variations (as much as  $\pm 30\%$ ) depending on the ambient environment.

#### **Auto Switch Mounting**

#### Series LEMB

When mounting an auto switch, first hold the switch spacer with your fingers and push it into the slot. Confirm that it is aligned evenly within the slot and adjust the position if necessary. Then, insert the auto switch into the slot and slide it into the spacer.

After establishing the mounting position, use a flat head watchmaker's screwdriver to tighten the included auto switch mounting screw.

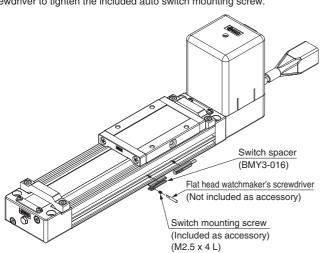


Note) When tightening the auto switch mounting screw, use a watchmaker's screwdriver with a handle of approximately 5 to 6 mm in diameter. Also, tighten with a torque of about 0.05 to 0.1 N·m. As a guide, turn about 90° past the point at which tightening can first be felt.

#### Switch Spacer/Part No.

Applicable bore size (mm)	25	32
Switch spacer part no.	BMY:	3-016

#### Series LEMC/H/HT

When mounting an auto switch, insert the auto switch into the actuator's auto switch mounting slot as shown below. Once in the mounting position, use a flat head watchmaker's screwdriver to tighten the included auto switch mounting screw.

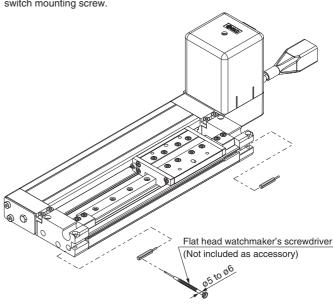

Note) When tightening the auto switch mounting screw (included with auto switch), use a watchmaker's screwdriver with a handle of approximately 5 to 6 mm in diameter.

Tightening Torque of Auto Switch Mounting Screw [N·m]

	[1111]
Auto switch model	Tightening torque
D-M9□(V) D-M9□W(V)	0.10 to 0.15



# **Solid State Auto Switch Direct Mounting Style**

D-M9N(V)/D-M9P(V)/D-M9B(V) **(** € RoHS



Refer to SMC website for details about products conforming to the international standards.

#### Grommet

- 2-wire load current is reduced (2.5 to 40 mA).
- Flexibility is 1.5 times greater than the conventional model (SMC comparison).
- Using flexible cable as standard.



## **Auto Switch Specifications**

PLC: Programmable Logic Controller

D-M9□, D-M9□V (With indicator light)						
Auto switch model	D-M9N	D-M9NV	D-M9P	D-M9PV	D-M9B	D-M9BV
Electrical entry	In-line	Perpendicular	In-line	Perpendicular	In-line	Perpendicular
Wiring type		3-w	vire .		2-v	vire
Output type	NPN PNP —		_			
Applicable load	IC circuit, Relay, PLC 24 VDC relay,			elay, PLC		
Power supply voltage	5, 12, 24 VDC (4.5 to 28 V) —			_		
Current consumption	10 mA or less —			_		
Load voltage	28 VDC or less — 24 VDC (10 to 28 \			to 28 VDC)		
Load current	40 mA or less 2.5 to 40 mA			40 mA		
Internal voltage drop	0.8 V or less at 10 mA (2 V or less at 40 mA) 4 V or less			r less		
Leakage current	100 μA or less at 24 VDC 0.8 mA or less			or less		
Indicator light	Red LED lights up when turned ON.					
Standards			CE Marki	ng, RoHS		

#### **Oilproof Heavy-duty Lead Wire Specifications**

Auto switch model		D-M9N□	D-M9P□	D-M9B□
Sheath	Outside diameter [mm]	2.7 x 3.2 (ellipse)		
Insulator	Number of cores	3 cores (Brown/Blue/Black) 2 cores (Brown/		2 cores (Brown/Blue)
Ilisulatoi	Outside diameter [mm]	ø0.9		
Conductor	Effective area [mm2]	0.15		
Conductor	Strand diameter [mm]	ø0.05		
Minimum bending radiu	s [mm] (Reference value)		20	

Note) Refer to the catalogue for solid state auto switch common specifications in our website: ww.smc.eu.

#### **△**Caution


#### **Precautions**

Fix the auto switch with the existing screw installed on the auto switch body. The auto switch may be damaged if a screw other than the one supplied is used.


#### Weight

Auto switch model		D-M9N(V)	D-M9P(V)	D-M9B(V)
	0.5 m <b>(—)</b>		3	7
Lead wire length	1 m <b>(M)</b>	14		13
	3 m <b>(L)</b>	41		38
	5 m <b>(Z)</b>	68		63

#### **How to Order**

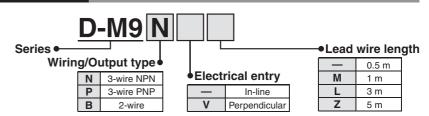

#### **Dimensions** [mm]

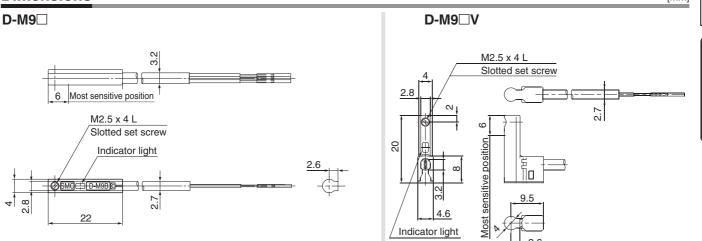

# 2-colour Indication Solid State Auto Switch Direct Mounting Style D-M9NW(V)/D-M9PW(V)/D-M9BW(V) (

# Auto Switch Specifications

Refer to SMC website for details about products conforming to the international standards.

[g]

#### PLC: Programmable Logic Controller

	<u> </u>					
D-M9□W, D-M9□WV (With indicator light)						
Auto switch model	D-M9NW	D-M9NWV	D-M9PW	D-M9PWV	D-M9BW	D-M9BWV
Electrical entry	In-line	Perpendicular	In-line	Perpendicular	In-line	Perpendicular
Wiring type		3-w	/ire		2-\	vire
Output type	NI	PN	PI	VP.	_	_
Applicable load	IC circuit, Relay, PLC 24 VDC relay, PL			elay, PLC		
Power supply voltage	5, 12, 24 VDC (4.5 to 28 V) —			_		
<b>Current consumption</b>	10 mA or less —			_		
Load voltage	28 VD0	DC or less — 24 VDC (10 to		to 28 VDC)		
Load current	40 mA or less 2.5 to 40 mA			40 mA		
Internal voltage drop	0.8 V or less at 10 mA (2 V or less at 40 mA) 4 V or less			r less		
Leakage current	100 μA or less at 24 VDC 0.8 mA or less			or less		
Indicator light	Operating range Red LED lights up.					
Indicator light		Optimum operating range Green LED lights up.				p.
Standards	CE Marking, RoHS					

#### Oilproof Flexible Heavy-duty Lead Wire Specifications

Auto switch model		D-M9NW□	D-M9PW□	D-M9BW□
Sheath	Outside diameter [mm]	2.7 x 3.2 (ellipse)		
Insulator	Number of cores	3 cores (Brown/Blue/Black) 2 cores (Brown/B		
Insulator	Outside diameter [mm]	ø0.9		
Conductor	Effective area [mm <sup>2</sup> ]	0.15		
Conductor	Strand diameter [mm]	ø0.05		
Minimum bending radi	us [mm] (Reference value)		20	

Note) Refer to the catalogue for solid state auto switch common specifications in our website: ww.smc.eu.

#### Grommet

- 2-wire load current is reduced (2.5 to 40 mA).
- Flexibility is 1.5 times greater than the conventional model (SMC comparison).
- Using flexible cable as standard.
- The optimum operating range can be determined by the colour of the light. (Red → Green ← Red)




## Precautions


Fix the auto switch with the existing screw installed on the auto switch body. The auto switch may be damaged if a screw other than the one supplied is used.

#### Weight

Auto switch model		D-M9NW(V) D-M9PW(V)		D-M9BW(V)
	0.5 m (—)	8	3	7
Lead wire length	1 m (M)	14		13
	3 m (L)	41		38
	F ma (7)	60		60

#### **How to Order**

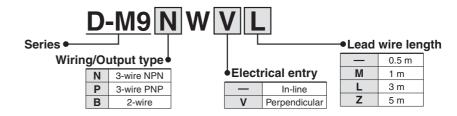

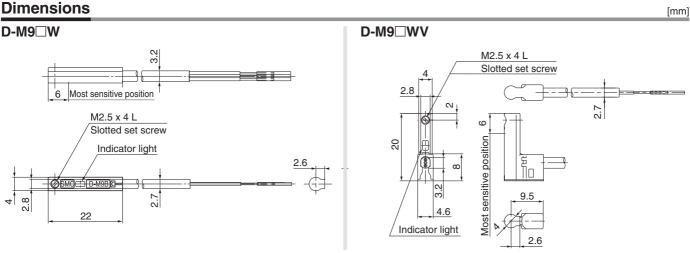



# Series LEM Electric Actuator Specific Product Precautions 1

Be sure to read before handling. Refer to back cover for Safety Instructions and the Operation Manual for Electric Actuator Precautions.

Please download it via our website, http://www.smc.eu

#### Design

### **⚠** Caution

1. Do not apply a load in excess of the actuator specification. A product should be selected based on the maximum work load and allowable moment. If the product is used outside of the operating specification, eccentric load applied to the guide will become excessive and have adverse effects such as creating play

2. Do not exceed the acceleration, deceleration and speed limit of the actuator specification.

in the guide, reduced accuracy and reduced product life.

Select a suitable actuator by the "Speed - Work Load Graph" and the "Work Load - Acceleration/Deceleration Graph" shown in the catalogue.

Noise or reduction of accuracy may occur if the actuator is operated in excess of its specification and could lead to reduced accuracy and reduced product file.

3. Do not use the product in applications where excessive external force or impact force is applied to it.

This can lead to premature failure of the product.

4. When external force is applied to the table, it is necessary to add the external force to the work load as the total carried load for the sizing.

When mounting cable duct and so on in parallel to the actuator, it is necessary to add the friction to the work load as the total carried load for the sizing, too.

5. The resistance value of the attached equipment should be within the allowable external resistance value.

#### Handling


## **⚠** Caution

- 1. INP output signal (LECP6)
  - 1) Positioning operation

When the product comes within the set range by step data [In positon], INP output signal will be turned on. Initial value: Set to [1] or higher.

Never hit at the stroke end except during return to origin. (Except when the LECP2 controller is used.)

Internal stopper can be broken.

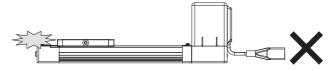

3. The moving force should be the initial value.

If the moving force is set below the initial value, it may cause an alarm.

4. The actual speed of this actuator is affected by the work load.

Check the model selection section of the catalogue.

5. Do not apply a load, impact or resistance in addition to the transferred load during return to origin.

Additional force will cause the displacement of the origin position since it is based on detected motor torque.

6. Do not dent, scratch or cause other damage to the body and table mounting surfaces.

This may cause unevenness in the mounting surface, play in the guide or an increase in the sliding resistance.

#### Handling

#### **⚠** Caution

7. Do not apply strong impact or an excessive moment while mounting a workpiece.


If an external force over the allowable moment is applied, it may cause looseness in the guide unit, an increase in sliding resistance or other problems.


8. Provide a flat surface for installing the actuator. The degree of surface flatness should be determined by the machine precision requirement, or its corresponding precision.

The degree of surface flatness for installing the actuator should be within 0.1 mm/500 mm. The degree of surface flatness for mounting a workpiece should be within 0.05 mm (LEMB), 0.02 mm (LEMC/H/HT).

- When mounting the actuator, leave a gap of 40 mm or more to allow for bending of the actuator cable.
- Do not hit the table with the workpiece in the positioning operation and positioning range.
- 11. When mounting the product, use bolts with adequate length and tighten them with adequate torque.

Tightening the bolts with a higher torque than the maximum may cause a malfunction, whilst tightening with a lower torque can cause the displacement of the mounting position or in extreme conditions detaching of the workpiece.

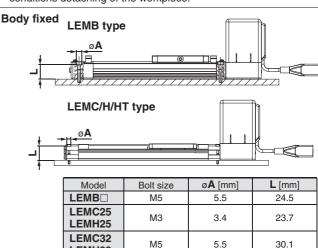

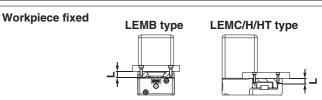

M5

M8

5.5

21.6

26.9

LEMH32 LEMHT25

LEMHT32

Model	Bolt size	Maximum tightening torque [N·m]	L (Maximum screw-in depth)[mm]
LEMB□	M5 x 0.8	3	8
LEMC25 LEMH25	M4 x 0.5	1.5	7
LEMC32 LEMH32	M5 x 0.8	3	9
LEMHT25	M5 x 0.8	3	9
LEMHT32	M8 x 1.25	12.5	12

To prevent the workpiece fixing bolts from touching the body, use bolts that are 0.5 mm or shorter than the maximum screw-in depth. If long bolts are used, they can touch the body and cause a malfunction etc.





# Series LEM Electric Actuator Specific Product Precautions 2

Be sure to read before handling. Refer to back cover for Safety Instructions and the Operation Manual for Electric Actuator Precautions.

Please download it via our website, http://www.smc.eu

#### Handling


# **⚠** Caution

- 12. Do not operate by fixing the table and moving the actuator body.
- The belt drive actuator cannot be used vertically for applications.
- 14. Check the specifications for the minimum speed of each actuator.
  - Otherwise, unexpected malfunctions, such as knocking, may occur.
- 15. In the case of the belt drive actuator, vibration may occur during operation at speeds within the actuator specifications, this could be caused by the operating conditions. Change the speed setting to a speed that does not cause vibration.
- 16. High frequency noise will be generated during deceleration depending on the operating conditions. This is a noise generated during processing the regenerative power. It is not a failure.
- 17. When using actuator with longer stroke, implement an intermediate support.

When using actuator with longer stroke, implement intermediate support to prevent frame deflection or deflection caused by vibration or external impacts.

#### 18. Attaching and detaching the drive unit

To remove the drive unit, remove the 6 drive unit fixing bolts and remove the slider from the guide unit. To install the drive unit, insert its slider into the slide table on the guide unit and tighten 2 bolts of connection part, and then equally tighten the 4 fixing bolts. Tighten the fixing bolts securely because if they become loose, problems may occur such as damage, malfunction, etc.

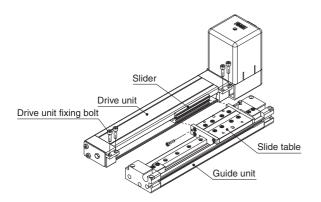


#### Handling

## **∧** Caution

#### 19. Workpiece mounting

When mounting a magnetic workpiece, keep a clearance of 5 mm or greater between the auto switch and the workpiece. Otherwise, the magnetic force within the actuator may be lost, resulting in malfunction of the auto switch.

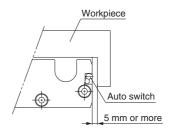

#### Maintenance

# **Marning**

#### **Maintenance frequency**

Perform maintenance according to the table below.

Frequency	Appearance check	Internal check	Belt check
Inspection before daily operation	0	_	
Inspection every six months/1000 km/ 5 million cycles *	0	0	0

<sup>\*</sup> Whichever occurs first.

#### Items for visual appearance check

- 1. Loose screws. Abnormal dirt.
- 2. Check of flaws/faults and cable connections.
- 3. Vibration, noise.

#### • Items for internal check

- 1. Lubricant condition on moving parts.
- 2. Loose or mechanical play in fixed parts or fixing bolts.

#### • Items for belt check

Stop operation immediately and replace the belt when belt appear to be below. Further, ensure your operating environment and conditions satisfy the requirements specified for the product.

#### a. Tooth shape canvas is worn out.

Canvas fiber becomes fuzzy. Rubber is removed and the fiber becomes whitish. Lines of fibers become unclear.

#### b. Peeling off or wearing of the side of the belt

Belt corner becomes round and frayed thread sticks out.

#### c. Belt partially cut

Belt is partially cut. Foreign matter caught in teeth other than cut part causes flaw.

#### d. Vertical line of belt teeth

Flaw, which is made when the belt runs on the flange.

- e. Rubber back of the belt is softened and sticky.
- f. Crack on the back of the belt



# **Controllers**

Programless Type ...... P.47 (With Stroke Study)

Programless Type P.54



Step Motor (Servo/24 VDC)

Series LECP2

Specialized for Series LEM



Step Motor (Servo/24 VDC)

Series LECP1

Step Data Input Type ..... P.61



Step Motor (Servo/24 VDC)

Series LECP6

Gateway Unit ..... P.72



Series LEC-G

Specialized for Series LEM

# Programless Controller (With Stroke Study)

RoHS

Series LECP2



#### **How to Order**

LECP2P1 - LEMB25T-300

Controller

Compatible motor

P Step motor (Servo/24 VDC)

Number of step data (Points)

2 stroke end points/ 12 intermediate points (Programless)

Parallel I/O type

Р

• Option

Screw mounting

D Note) DIN rail mounting

Note) DIN rail is not included. Order it separately.

	<u> </u>
_	Without cable
1	1.5
3	3
5	5

Actuator part number

(Except cable specifications and actuator options)
Example: Enter "LEMB25T-300" for the
LEMB25T-300W-S12P1.

#### **A** Caution

#### [CE-compliant products]

EMC compliance was tested by combining the electric actuator LEM series and the controller LEC series. The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore, conformity to the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result, it is necessary for the customer to verify conformity to the EMC directive for the machinery and equipment as a whole.

#### [UL-compliant products]

When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

# The controller is sold as single unit after the compatible actuator is set.

Confirm that the combination of the controller and the actuator is correct.

 Refer to the operation manual for using the products. Please download it via our website, http://www.smc.eu

#### **Specifications**

**Basic Specifications** 

Item	LECP2
Compatible motor	Step motor (Servo/24 VDC)
Power supply Note 1)	Power supply voltage: 24 VDC $\pm 10\%$ , Max. current consumption: 3 A (Peak 5 A) Note 2) [Including the motor drive power, control power supply, stop, lock release]
Parallel input	6 inputs (Photo-coupler isolation)
Parallel output	6 outputs (Photo-coupler isolation)
Stop points	Stroke ends 2 points (Position number 1 and 2), Intermediate position 12 points (Position number 3 to 14(E))
Compatible encoder	Incremental A/B phase (800 pulse/rotation)
Memory EEPROM	
LED indicator	LED (Green/Red) one of each
7-segment LED display Note 3)	1 digit, 7-segment display (Red) Figures are expressed in hexadecimal. ("10" to "15" in decimal number are expressed as "A" to "F")
Lock control	Forced-lock release terminal Note 4)
Cable length [m]	I/O cable: 5 or less, Actuator cable: 20 or less
Cooling system	Natural air cooling
Operating temperature range [°C]	0 to 40 (No freezing)
Operating humidity range [%RH]	90 or less (No condensation)
Storage temperature range [°C] —10 to 60 (No freezing)	
Storage humidity range [%RH]	90 or less (No condensation)
Insulation resistance [M $\Omega$ ] Between the housing and SG terminal: 50 (500 VDC)	
Weight [g]	130 (Screw mounting), 150 (DIN rail mounting)

Note 1) Do not use the power supply of "inrush current prevention type" for the controller input power supply. When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

Note 2) The power consumption changes depending on the actuator model. Refer to the each actuator's operation manual etc. for details.

Note 3) "10" to "15" in decimal number are displayed as follows in the 7-segment LED.










Decimal display 10 11 12 13 14
Hexadecimal display A b c d E

Note 4) Applicable to non-magnetizing lock

#### **Controller Details**

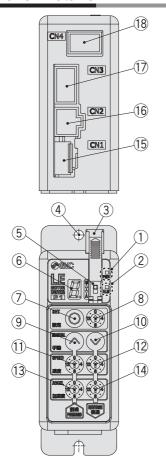


No.	Display	Description	Details		
1	PWR	Power supply LED	Power supply ON/Servo ON: Green turns on. Power supply ON/Servo OFF: Green flashes.		
2	ALM	Alarm LED	With alarm : Red turns on. Parameter setting : Red flashes.		
3	I	Cover	Change and protection of the mode switch (Close the cover after changing switch.)		
4		FG	Frame ground (Tighten the bolt with the nut when mounting the controller. Connect the ground wire.)		
(5)	_	Mode switch	Switch the mode between manual and auto.		
6	1	7-segment LED	Stop position, the value set by ® and alarm information are displayed		
7	SET	Set button	Decide the settings or drive operation in manual mode.		
8	ı	Position selecting switch	Assign the position to drive (1 to 14), and the origin position (15).		
9	Manual forward button		Perform forward jog and inching.		
10	WANUAL	Manual reverse button	Perform reverse jog and inching.		
11	SPEED	Forward speed switch	16 forward speeds are available.		
12	SFLLD	Reverse speed switch	16 reverse speeds are available.		
13	ACCEL	Forward acceleration switch	16 forward acceleration steps are available.		
14)	ACCEL	Reverse acceleration switch	16 reverse acceleration steps are available.		
15	CN1	Power supply connector	or Connect the power supply cable.		
16	CN2	Motor connector	Connect the motor connector.		
17)	CN3	Encoder connector	Connect the encoder connector.		
18	CN4	I/O connector	Connect the I/O cable.		

#### **How to Mount**

Controller mounting shown below


#### 1. Mounting screw (LECP2□□-□)

(Installation with two M4 screws)

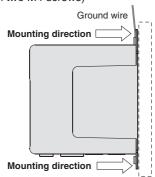

#### 2. Grounding

Tighten the bolt with the nut when mounting the ground wire as shown below.

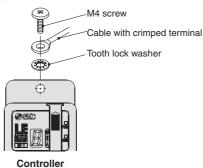


Note) The space between the controllers should be 10 mm or more.


#### **A** Caution

- M4 screws, cable with crimping terminal and tooth lock washer are not included. Be sure to carry out grounding earth in order to ensure the noise tolerance.
- •Use a watchmaker's screwdriver of the size shown below when changing position switch (a) and the set value of the speed/acceleration switch (b) to (c).

#### Size

End width L: 2.0 to 2.4 [mm] End thickness W: 0.5 to 0.6 [mm]

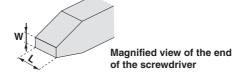

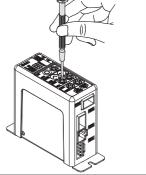






# Series LECP2

#### **Dimensions**


#### Screw mounting (LEC□2□□-□)

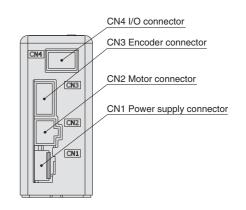


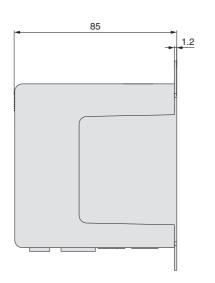

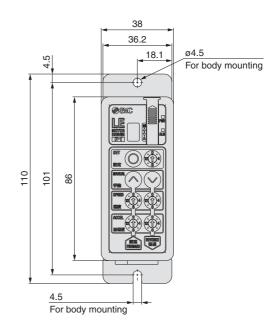

#### DIN rail mounting (LEC□2□□D-□)

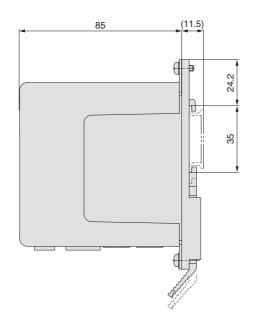

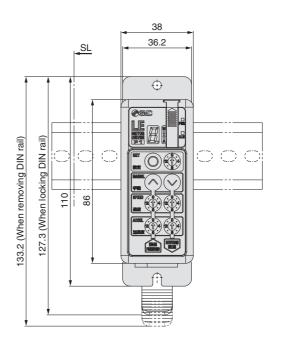


### Wiring Example 1

\* When you connect a CN1 power supply connector, use the power supply cable (LEC-CK1-1). **Power Supply Connector: CN1** \* Power supply cable (LEC-CK1-1) is an accessory.

#### **CN1 Power Supply Connector Terminal for LECP2**

Terminal name Cable colour		Cable colour	Function	Details		
	0V			M24V terminal/C24V terminal/BK RLS terminal are common (-).		
	M24V	White	Motor power supply (+)	Motor power supply (+) supplied to the controller		
	C24V	C24V Brown Control power supply (+)		Control power supply (+) supplied to the controller		
	BK RLS	Black	Lock release (+)	Input (+) for releasing the lock		

#### Power supply cable for LECP2 (LEC-CK1-1)

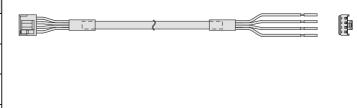


#### Wiring Example 2

\* When you connect a PLC, etc., to the CN4 parallel I/O connector, use the I/O cable (LEC-CK4-□). Parallel I/O Connector: CN4

\* The wiring should be changed depending on the type of the parallel I/O (NPN or PNP).

#### ■ NPN

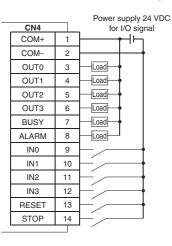

■ PNP

		Power supply 24 VD0
CN4		for I/O signal
COM+	1	<del>                                     </del>
COM-	2	<del>                                     </del>
OUT0	3	Load
OUT1	4	Load
OUT2	5	Load
OUT3	6	Load
BUSY	7	Load
ALARM	8	Load
IN0	9	<b>—</b>
IN1	10	<del>-</del>
IN2	11	H
IN3	12	<b>⊢</b> ´∕ <b>→</b>
RESET	13	H
STOP	14	⊢´/-'

input Signal						
Name		Details				
COM+	Conne	cts the powe	er supply 24	V for input/o	output signal	
COM-	Conne	cts the powe	er supply 0 \	/ for input/ou	ıtput signal	
			\ I	combination or rive for position	of IN0 to IN3) tion no. 5)	
		IN3	IN2	IN1	IN0	
IN0 to IN3		OFF	ON	OFF	ON	
	Instruction to return to origin     After the power is turned ON, first turn on IN0 or IN1.     Return to origin using IN0: Return to origin by moving to the extended end. Return to origin using IN1: Return to origin by moving to the motor end.					
RESET	Alarm reset and operation interruption During operation: deceleration stop from position at which signal is input (servo ON maintained) While alarm is active: alarm reset					
STOP	Instructi	Instruction to stop (after maximum deceleration stop, servo OFF)				

**Output Signal** 

Output Signal					
Name	Details				
	Positioning completion (input as a combination of OUT0 to OUT3)     Example - (positioning completion for position no. 3)				
OUT0 to OUT3		OUT3	OUT2	OUT1	OUT0
		OFF	OFF	ON	ON
	Return to origin completion     (Completion of return to origin using IN0: Only OUT0 is ON.)     (Completion of return to origin using IN1: Only OUT1 is ON.)				
BUSY	Outputs when the actuator is moving				
*ALARM Note)	Not ou	Not output when alarm is active or servo OFF			

Note) Signal of negative-logic circuit (N.C.)

#### Input Signal [IN0 - IN3] Position Number Chart O: OFF ●: ON


mile are Gridinas [m				01011 01011
Position number	IN3	IN2	IN1	IN0
1 (End side)	0	0	0	•
2 (Motor side)	0	0	•	0
3	0	0	•	
4	0	•	0	0
5	0	•	0	•
6	0	•	•	0
7	0	•	•	•
8	•	0	0	0
9	•	0	0	
10 (A)	•	0	•	0
11 (B)	•	0	•	•
12 (C)	•	•	0	0
13 (D)	•	•	0	•
14 (E)	•	•	•	0


Output Signal [OUT0 - OUT3] Position Number Chart ○: OFF ●: ON


Position number	OUT3	OUT2	OUT1	OUT0
1 (End side)	0	0	0	•
2 (Motor side)	0	0	•	0
3	0	0	•	•
4	0	•	0	0
5	0	•	0	•
6	0	•	•	0
7	0	•	•	•
8	•	0	0	0
9	•	0	0	•
10 (A)	•	0	•	0
11 (B)	•	0	•	•
12 (C)	•	•	0	0
13 (D)	•	•	0	
14 (E)	•	•	•	0


# Series LECP2


#### **Signal Timing**

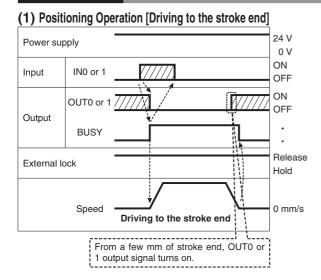

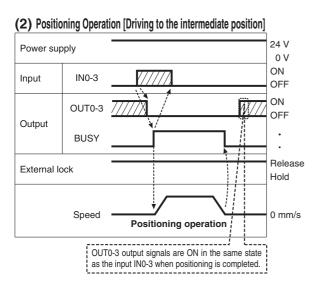

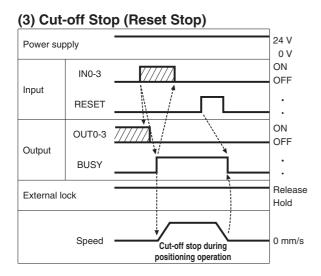

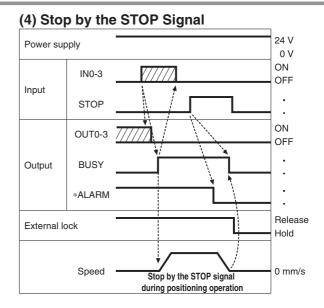

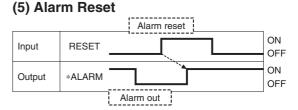


"\*ALARM" is expressed as negative-logic circuit.


(Terminal no.)


(Terminal no.)


(11)



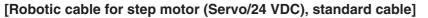

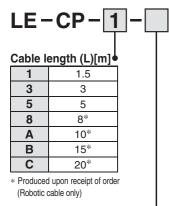


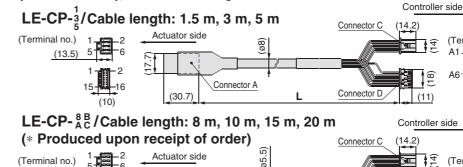

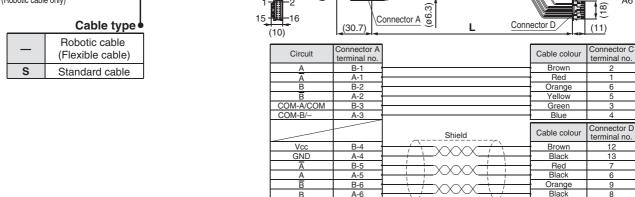


#### [Robotic cable with lock and sensor for step motor (Servo/24 VDC), standard cable]

(13.5)

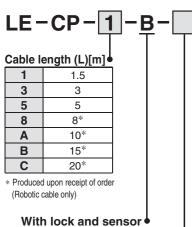



_	Robotic cable (Flexible cable)
S	Standard cable

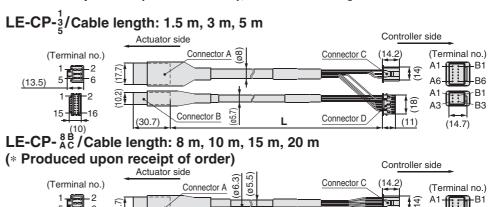

10	(3	0.7) Coni	nector B 🔞 L Conn	ector D		14
	Circuit	Connector A terminal no.		Cable colour	Connector C terminal no.	
	Α	B-1	•	Brown	2	
	Ā	A-1		Red	1	
	В	B-2		Orange	6	
	B	A-2		Yellow	5	
	COM-A/COM	B-3	-	Green	3	
	COM-B/-	A-3	-	Blue	4	
			Shield	Cable colour	Connector D terminal no.	
	Vcc	B-4	<del></del>	Brown	12	
	GND	A-4		Black	13	
	Ā	B-5		Red	7	
	Α	A-5		Black	6	
	B	B-6		Orange	9	

Connector B terminal no. Circuit Lock (+) Red Black Lock (-)


Note) Not used for the LE series.

# Series LECP2

# **Options**

#### [Power supply cable]

# LEC-CK1-1

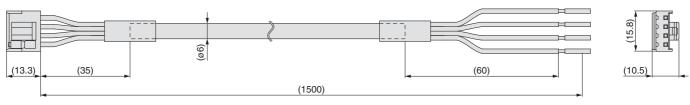



Terminal name	Covered colour	Function
0V	Blue	Common supply (-)
M 24V	White	Motor power supply (+)
C 24V	Brown	Control power supply (+)
BK RLS	Black	Lock release (+)

\* Conductor size: AWG20

#### [I/O cable]

53

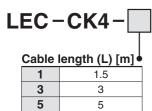

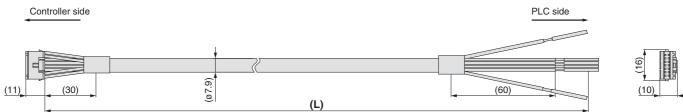

\* Conductor size: AWG26



Terminal no.	Insulation colour	Dot mark	Dot colour	Function
1	Light brown		Black	COM+
2	Light brown		Red	COM-
3	Yellow		Black	OUT0
4	Yellow		Red	OUT1
5	Light green		Black	OUT2
6	Light green		Red	OUT3
7	Grey		Black	BUSY
8	Grey		Red	ALARM
9	White		Black	IN0
10	White		Red	IN1
11	Light brown		Black	IN2
12	Light brown		Red	IN3
13	Yellow		Black	RESET
14	Yellow		Red	STOP

<sup>\*</sup> Parallel I/O signal is valid in auto mode. While the test function operates at manual mode, only the output is valid.




# Programless Controller



# Series LECP1



#### **How to Order**

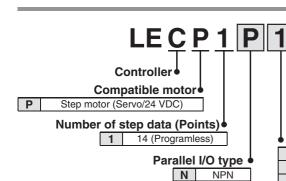

Р

**PNP** 

\_\_LEMB25T-300

Option— Screw mountingD Note) DIN rail mounting

Note) DIN rail is not included.

Order it separately.

I/O cable length [m]

3

5

Without cable

1.5

3

5

Actuator part number

(Except cable specifications and

(Except cable specifications and actuator options)
Example: Enter "LEMB25T-300" for the
LEMB25T-300W-S11P1.

\* When controller equipped type is selected when ordering the LE series, you do not need to order this controller.

#### **⚠** Caution

#### [CE-compliant products]

EMC compliance was tested by combining the electric actuator LEM series and the controller LEC series. The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore, conformity to the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result, it is necessary for the customer to verify conformity to the EMC directive for the machinery and equipment as a whole.

#### [UL-compliant products]

When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

# The controller is sold as single unit after the compatible actuator is set.

Confirm that the combination of the controller and the actuator is correct.

\* Refer to the operation manual for using the products. Please download it via our website, http://www.smc.eu

#### **Specifications**


**Basic Specifications** 

Item	LECP1
Compatible motor	Step motor (Servo/24 VDC)
Power supply Note 1)	Power supply voltage: 24 VDC ±10%, Max. current consumption: 3 A (Peak 5 A) Note 2) [Including the motor drive power, control power supply, stop, lock release]
Parallel input	6 inputs (Photo-coupler isolation)
Parallel output	6 outputs (Photo-coupler isolation)
Stop points	14 points (Position number 1 to 14(E))
Compatible encoder	Incremental A/B phase (800 pulse/rotation)
Serial communication	RS485 (Modbus protocol compliant)
Memory	EEPROM
LED indicator	LED (Green/Red) one of each
7-segment LED display Note 3)	1 digit, 7-segment display (Red) Figures are expressed in hexadecimal. ("10" to "15" in decimal number are expressed as "A" to "F")
Lock control	Forced-lock release terminal Note 4)
Cable length [m]	I/O cable: 5 or less, Actuator cable: 20 or less
Cooling system	Natural air cooling
Operating temperature range [°C]	0 to 40 (No freezing)
Operating humidity range [%RH]	90 or less (No condensation)
Storage temperature range [°C]	-10 to 60 (No freezing)
Storage humidity range [%RH]	90 or less (No condensation)
Insulation resistance [M $\Omega$ ]	Between the housing and SG terminal: 50 (500 VDC)
Weight [g]	130 (Screw mounting), 150 (DIN rail mounting)

Note 1) Do not use the power supply of "inrush current prevention type" for the controller input power supply. When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

Note 2) The power consumption changes depending on the actuator model. Refer to the each actuator's operation manual etc. for details.


Note 3) "10" to "15" in decimal number are displayed as follows in the 7-segment LED.

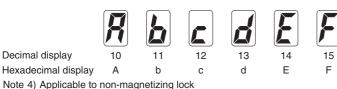



# Series LECP1

#### **Controller Details**

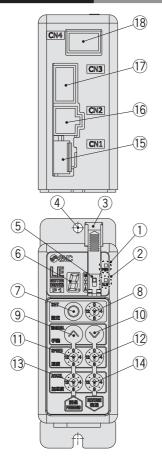


No.	Display	Description	Details
1	PWR	Power supply LED	Power supply ON/Servo ON: Green turns on Power supply ON/Servo OFF: Green flashes
2	ALM	Alarm LED	With alarm : Red turns on Parameter setting : Red flashes
3	1	Cover	Change and protection of the mode switch (Close the cover after changing switch)
4	_	FG	Frame ground (Tighten the bolt with the nut when mounting the controller. Connect the ground wire.)
(5)	_	Mode switch	Switch the mode between manual and auto.
6	_	7-segment LED	Stop position, the value set by $\ensuremath{\$}$ and alarm information are displayed.
7	SET	Set button	Decide the settings or drive operation in Manual mode.
8		Position selecting switch	Assign the position to drive (1 to 14), and the origin position (15).
9	MANUAL	Manual forward button	Perform forward jog and inching.
10	WANUAL	Manual reverse button	Perform reverse jog and inching.
11	SPEED	Forward speed switch	16 forward speeds are available.
12	SPEED	Reverse speed switch	16 reverse speeds are available.
13	ACCEL	Forward acceleration switch	16 forward acceleration steps are available.
14)	ACCEL	Reverse acceleration switch	16 reverse acceleration steps are available.
15	CN1	Power supply connector	Connect the power supply cable.
16	CN2	Motor connector	Connect the motor connector.
17	CN3	Encoder connector	Connect the encoder connector.
18	CN4	I/O connector	Connect I/O cable.

#### **How to Mount**

Controller mounting shown below.


#### 1. Mounting screw (LECP1□□-□)

(Installation with two M4 screws)

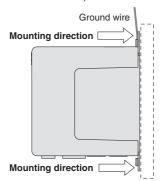

#### 2. Grounding

Tighten the bolt with the nut when mounting the ground wire as shown below.

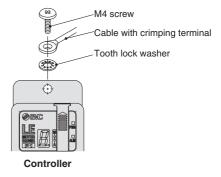



#### **⚠** Caution

- •M4 screws, cable with crimping terminal and tooth lock washer are not included. Be sure to carry out grounding earth in order to ensure the noise tolerance.
- Use a watchmaker's screwdriver of the size shown below when changing position switch  $\circledR$  and the set value of the speed/acceleration switch ข to  $\r$ 4.

#### Size


End width L: 2.0 to 2.4 [mm] End thickness W: 0.5 to 0.6 [mm]

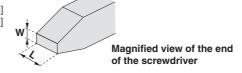


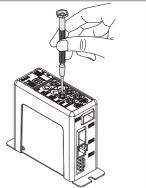


## **Dimensions**


Screw mounting (LEC 1 --)

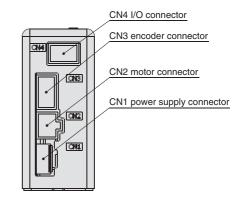


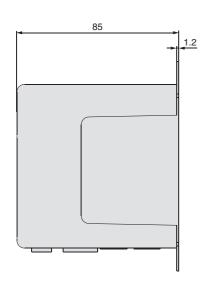

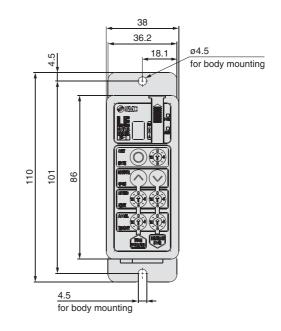

# DIN rail mounting (LEC□1□□D-□)

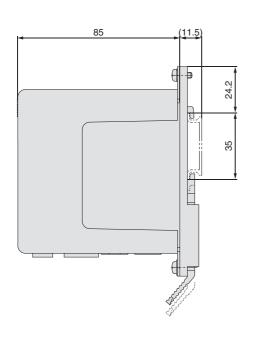

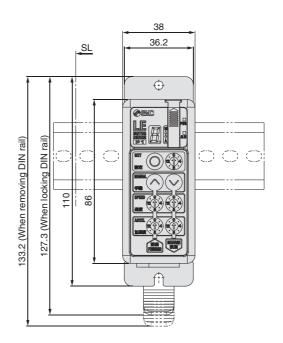

# Wiring Example 1

 $\ast$  When you connect a CN1 power supply connector, use the power supply cable (LEC-CK1-1). Power Supply Connector: CN1

\* Power supply cable (LEC-CK1-1) is an accessory.

#### **CN1 Power Supply Connector Terminal for LECP1**

Terminal name	Cable colour	Function	Details
0V	Blue	Common supply (–)	M24V terminal/C24V terminal/BK RLS terminal are common (–).
M24V	White	Motor power supply (+)	Motor power supply (+) supplied to the controller
C24V	Brown	Control power supply (+)	Control power supply (+) supplied to the controller
BK RLS	Black	Lock release (+)	Input (+) for releasing the lock

#### Power supply cable for LECP1 (LEC-CK1-1)




# Wiring Example 2


\* When you connect a PLC, etc., to the CN4 parallel I/O connector, use the I/O cable (LEC-CK4-□). Parallel I/O Connector: CN4

\* The wiring should be changed depending on the type of the parallel I/O (NPN or PNP).

#### ■ NPN

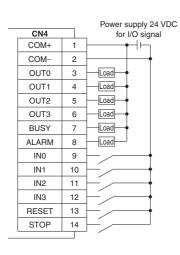

#### ■ PNP

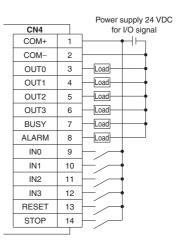

Input Signal

57

Input Signal						
Name	Details					
COM+	Conne	cts the powe	er supply 24	V for input/c	utput signal	
COM-	Conne	cts the powe	er supply 0 V	for input/ou	tput signal	
IN0 to IN3	Instruction to drive (input as a combination of IN0 to IN3)     Instruction to return to origin (IN0 to IN3 all ON simultaneously)     Example - (instruction to drive for position no. 5)					
		IN3	IN2	IN1	IN0	
		OFF	ON	OFF	ON	
	Alarm reset and operation interruption  During operation: deceleration stop from position at which					
RESET	signal is input (servo ON maintained)  While alarm is active: alarm reset					
CTOD					OFF\	
STOP	instructi	on to stop (att	er maximum d	eceieration sto	pp, servo OFF)	

**Output Signal** 

Name	Details							
	Turns on when the positioning or pushing is completed.*							
	(Output is instructed in the combination of OUT0 to 3.)							
OUT0 to OUT3	Example - (operation complete for position no. 3)							
		OUT3	OUT2	OUT1	OUT0			
		OFF OFF			ON			
BUSY	Outputs when the actuator is moving							
ALARM Note)	Not output when alarm is active or servo OFF							

Note) Signal of negative-logic circuit (N.C.)

\* "Pushing Mode" is not available for LEM series.

Input Signal [INO - IN2] Position Number Chart


input Signai [ii	10 - IN3] Po	sition Numb	er Chart	O: OFF ●: ON
Position number	IN3	IN2	IN1	IN0
1	0	0	0	•
2	0	0	•	0
3	0	0	•	•
4	0	•	0	0
5	0	•	0	•
6	0	•	•	0
7	0	•	•	•
8	•	0	0	0
9	•	0	0	•
10 (A)	•	0	•	0
11 (B)	•	0	•	•
12 (C)	•	•	0	0
13 (D)	•	•	0	•
14 (E)	•	•	•	0
Return to origin	•	•	•	•

Output Signal [OUT0 - OUT3] Position Number Chart ○: OFF ●: ON

Position number	OUT3	OUT2	OUT1	OUT0
1	0	0	0	•
2	0	0	•	0
3	0	0	•	•
4	0	•	0	0
5	0	•	0	•
6	0	•	•	0
7	0	•	•	•
8	•	0	0	0
9	•	0	0	•
10 (A)	•	0	•	0
11 (B)	•	0	•	•
12 (C)	•	•	0	0
13 (D)	•	•	0	•
14 (E)	•	•	•	0
Return to origin	•	•	•	•


# **Signal Timing**



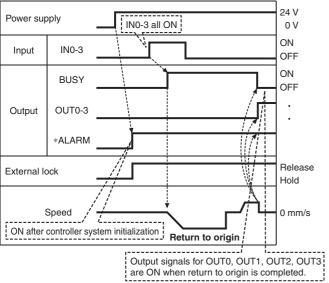


\* "\*ALARM" is expressed as negative-logic circuit.


(2) Positioning Operation

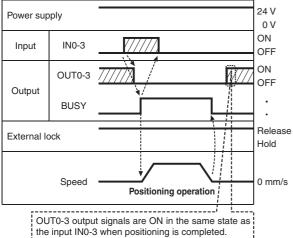


1------

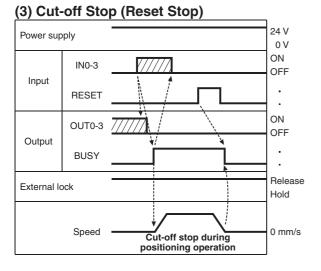

(4) Stop by the STOP Signal

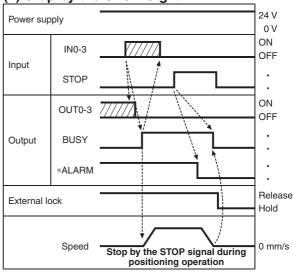


### (5) Alarm Reset

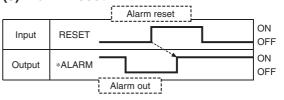


\* "\*ALARM" is expressed as negative-logic circuit.

# **Options: Actuator Cable**

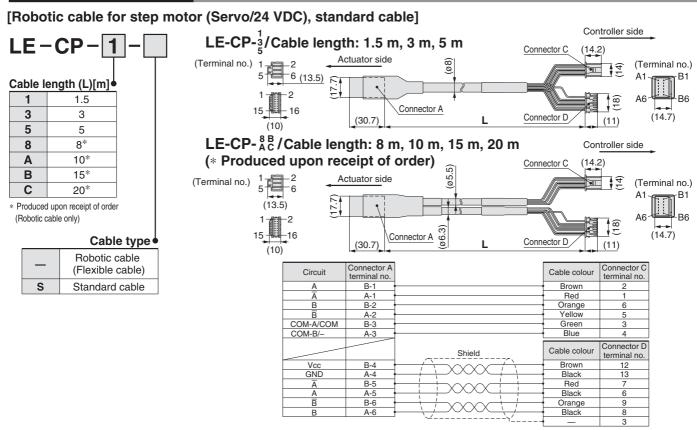

[Robotic cable with lock and sensor for step motor (Servo/24 VDC), standard cable]

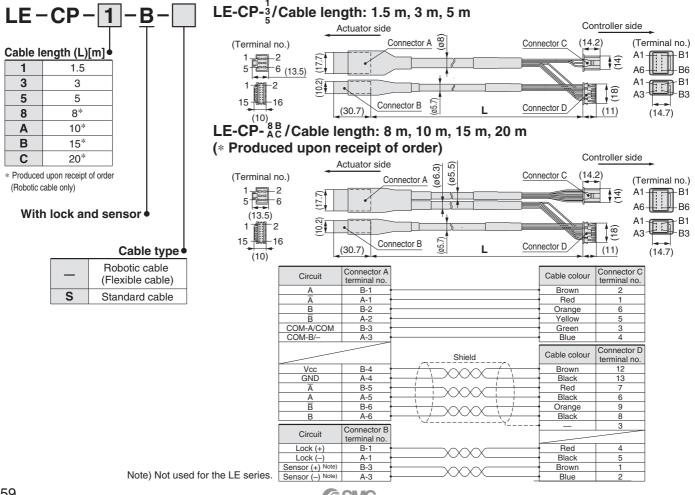

# **Options**

[Power supply cable]


# LEC-CK1-1




Terminal name	Covered colour	Function
0V	Blue	Common supply (-)
M24V	White	Motor power supply (+)
C24V	Brown	Control power supply (+)
BK RLS	Black	Lock release (+)

\* Conductor size: AWG20

## [I/O cable]

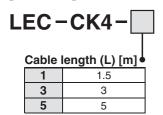

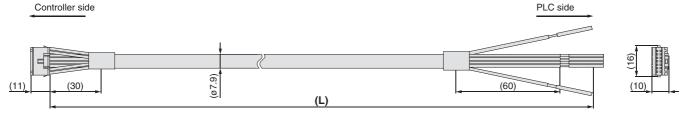

\* Conductor size: AWG26

Terminal no.	Insulation colour	Dot mark	Dot colour	Function
1	Light brown		Black	COM+
2	Light brown		Red	COM-
3	Yellow		Black	OUT0
4	Yellow		Red	OUT1
5	Light green		Black	OUT2
6	Light green		Red	OUT3
7	Grey		Black	BUSY
8	Grey		Red	ALARM
9	White		Black	IN0
10	White		Red	IN1
11	Light brown		Black	IN2
12	Light brown		Red	IN3
13	Yellow		Black	RESET
14	Yellow		Red	STOP

<sup>\*</sup> Parallel I/O signal is valid in auto mode. While the test function operates at manual mode, only the output is valid.

# **Controller (Step Data Input Type) Step Motor (Servo/24 VDC)**

Series LECP6



#### How to Order

PNP

#### **⚠** Caution


#### [CE-compliant products]

EMC compliance was tested by combining the electric actuator LEM series and the controller LEC series.

The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore, conformity to the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result, it is necessary for the customer to verify conformity to the EMC directive for the machinery and equipment as a whole.

#### [UL-compliant products]

When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

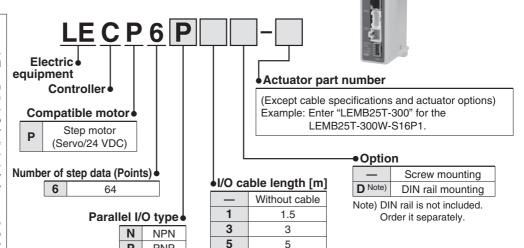

EMB25T-300

(1)

(2)

\* When controller equipped type is selected when ordering the LE series, you do not need to order this controller.

### The controller is sold as single unit after the compatible actuator is set.

Confirm that the combination of the controller and the actuator is correct.

- <Check the following before use.>
- 1 Check that actuator label for model number. This matches the controller.
- 2 Check Parallel I/O configuration matches (NPN or PNP).
- Refer to the operation manual for using the products. Please download it via our website, http://www.smc.eu

## **Specifications**

**Basic Specifications** 


Item	LECP6				
Compatible motor	Step motor (Servo/24 VDC)				
Power supply Note 1)	Power voltage: 24 VDC ±10% Current consumption: 3 A (Peak 5 A) N				
rower supply	[Including motor drive power, control power, stop, lock release]				
Parallel input	11 inputs (Photo-coupler isolation)				
Parallel output	13 outputs (Photo-coupler isolation)				
Compatible encoder	Incremental A/B phase (800 pulse/rotation)				
Serial communication	RS485 (Modbus protocol compliant)				
Memory	EEPROM				
LED indicator	LED (Green/Red) one of each				
Lock control	Forced-lock release terminal Note 3)				
Cable length [m]	I/O cable: 5 or less Actuator cable: 20 or less				
Cooling system	Natural air cooling				
Operating temperature range [°C]	0 to 40 (No freezing)				
Operating humidity range [%RH]	90 or less (No condensation)				
Storage temperature range [°C]	-10 to 60 (No freezing)				
Storage humidity range [%RH]	90 or less (No condensation)				
Insulation resistance [MΩ]	Between the housing and SG terminal				
modiation resistance [M22]	50 (500 VDC)				
Weight [g]	150 (Screw mounting)				
	170 (DIN rail mounting)				

- Note 1) Do not use the power supply of "inrush current prevention type" for the controller power supply. When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.
- Note 2) The power consumption changes depending on the actuator model. Refer to the specifications of actuator for more details.
- Note 3) Applicable to non-magnetizing lock




## **How to Mount**

# a) Screw mounting (LECP6□□-□) (Installation with two M4 screws)

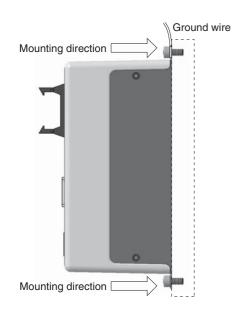

# b) DIN rail mounting (LECP6□□D-□) (Installation with the DIN rail)

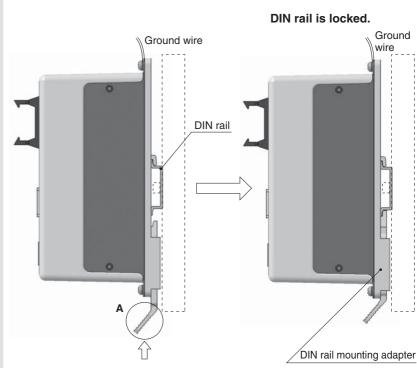


Hook the controller on the DIN rail and press the lever of section **A** in the arrow direction to lock it.

Note) The space between the controllers should be 10 mm or more.

# DIN rail AXT100-DR-□

\* For □, enter a number from the "No." line in the table below. Refer to the dimensions on page 63 for the mounting dimensions.

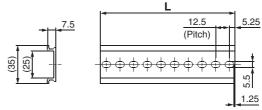

#### L Dimension [mm]

L Dillici	131011	լուույ																		
No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5
No.	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
L	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5

# DIN rail mounting adapter


LEC-D0 (with 2 mounting screws)


This should be used when the DIN rail mounting adapter is mounted onto the screw mounting type controller afterward.




## **Dimensions**


# a) Screw mounting (LECP6□□-□)

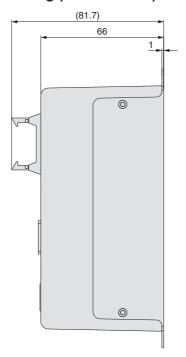

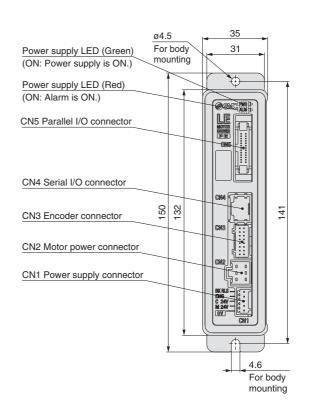

# b) DIN rail mounting (LECP6□□D-□)

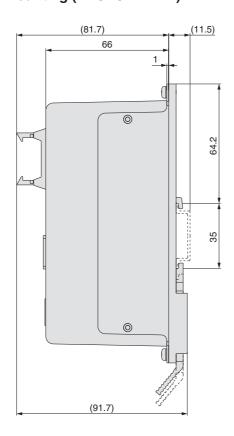

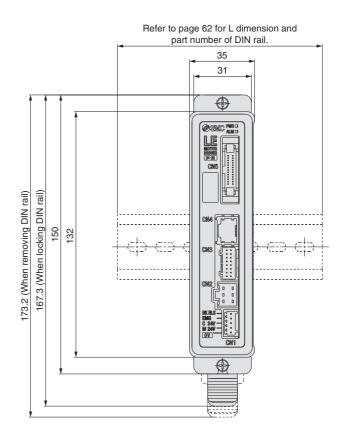


# Wiring Example 1

Power Supply Connector: CN1 | \* Power supply plug is an accessory.

Stop (+)

Lock release (+)

Power supply plug for LECP6

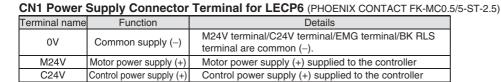

Input (+) for releasing the stop

Input (+) for releasing the lock

aaaaa M24V ( C24V ( EMG ( BK RLS)

# Wiring Example 2

\* When you connect a PLC, etc., to the CN5 parallel I/O connector, use the I/O cable (LEC-CN5- $\square$ ). Parallel I/O Connector: CN5 \* The wiring should be changed depending on the type of the parallel I/O (NPN or PNP).

#### Wiring diagram

EMG

**BK RLS** 

LECP6N□□-□ (NPN)

(1	IPN)		Power supply 24 VDC			
_	CN5		for I/O signal			
	COM+	A1	<del>                                     </del>			
	COM-	A2	<b></b>			
	IN0	A3				
	IN1	A4	<del>-</del>			
	IN2	A5	<del></del>			
	IN3	A6	<del></del>			
	IN4	A7	<del>L'</del>			
	IN5	A8	<del>-</del>			
	SETUP	A9	<del></del>			
	HOLD	A10	<del></del>			
	DRIVE	A11	<del></del>			
	RESET	A12	<del>L</del>			
	SVON	A13	<del></del>			
	OUT0	B1	Load			
	OUT1	B2	Load			
	OUT2	В3	Load			
	OUT3	B4	Load			
	OUT4	B5	Load			
	OUT5	B6	Load			
	BUSY	B7	Load			
	AREA	В8	Load			
	SETON	В9	Load			
	INP	B10	Load			
	SVRE	B11	Load			
	*ESTOP	B12	Load			
	*ALARM	B13	Load			
_						

	'NP)
--	------

PNP)		Power supply 24 VDC
CN5		for I/O signal
COM+	A1	<del></del>
COM-	A2	
IN0	А3	
IN1	A4	
IN2	A5	
IN3	A6	
IN4	A7	
IN5	A8	
SETUP	A9	
HOLD	A10	
DRIVE	A11	
RESET	A12	
SVON	A13	
OUT0	B1	Load
OUT1	B2	Load
OUT2	В3	Load
OUT3	B4	Load
OUT4	B5	Load
OUT5	B6	Load
BUSY	B7	Load
AREA	B8	Load
SETON	B9	Load
INP	B10	Load
SVRE	B11	Load
*ESTOP	B12	Load
*ALARM	B13	Load

**Input Signal** 

<u> </u>	
Name	Details
COM+	Connects the power supply 24 V for input/output signal
COM-	Connects the power supply 0 V for input/output signal
IN0 to IN5	Step data specified Bit No. (Input is instructed in the combination of IN0 to 5.)
SETUP	Instruction to return to origin
HOLD	Operation is temporarily stopped
DRIVE	Instruction to drive
RESET	Alarm reset and operation interruption
SVON	Servo ON instruction

Output Signal

Output Signa	l .
Name	Details
OUT0 to OUT5	Outputs the step data no. during operation
BUSY	Outputs when the actuator is moving
AREA	Outputs within the step data area output setting range
SETON	Outputs when returning to origin
INP	Outputs when target position or target force is reached (Turns on when the positioning or pushing is completed.)*
SVRE	Outputs when servo is on
ESTOP Note)	Not output when EMG stop is instructed
ALARM Note)	Not output when alarm is generated

Note) Signal of negative-logic circuit (N.C.)


<sup>\* &</sup>quot;Pushing Mode" is not available for LEM series.

# **Step Data Setting**

# Step data setting for positioning

In this setting, the actuator moves toward and stops at the target position.

The following diagram shows the setting items and operation. The setting items and set values for this operation are stated below.

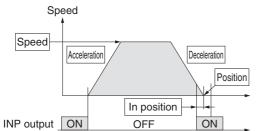


- $\ensuremath{ \bigcirc }$  : Need to be set.
- $\bigcirc\!:$  Need to be adjusted as required.
- Step Data (Positioning) —: Setting is not required.

Otop	Data (Positionini	—: Setting is not required.			
Necessity	Item	Details			
0	Movement MOD	When the absolute position is required, set Absolute. When the relative position is required, set Relative.			
0	Speed	Transfer speed to the target position			
0	Position	Target position			
0	Acceleration	Parameter which defines how rapidly the actuator reaches the speed set. The higher the set value, the faster it reaches the speed set.			
0	Deceleration	Parameter which defines how rapidly the actuator comes to stop. The higher the set value, the quicker it stops.			
0	Pushing force *	Set 0. (If values 1 to 100 are set, the operation will be changed to the pushing operation.)			
_	Trigger LV	Setting is not required.			
_	Pushing speed *	Setting is not required.			
0	Moving force	Max. torque during the positioning operation (No specific change is required.)			
0	Area 1, Area 2	Condition that turns on the AREA output signal			
0	In position	Condition that turns on the INP output signal. When the actuator enters the range of [in position], the INP output signal turns on. (It is unnecessary to change this from the initial value.) When it is necessary to output the arrival signal before the operation is completed, make the value larger.			


<sup>\* &</sup>quot;Pushing Mode" is not available for LEM series.




# **Signal Timing**

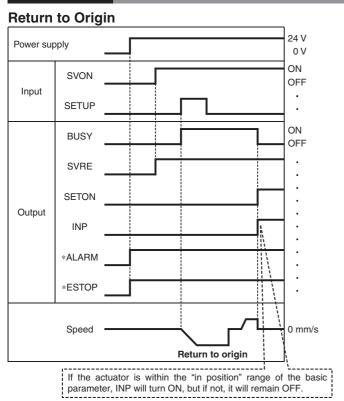


\* "\*ALARM" and "\*ESTOP" are expressed as negative-logic circuit.

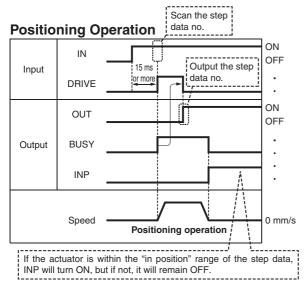

\* "OUT" is output when "DRIVE" is changed from ON to OFF.
(When power supply is applied, "DRIVE" or "RESET" is turned ON or
"\*ESTOP" is turned OFF, all of the "OUT" outputs are OFF.)

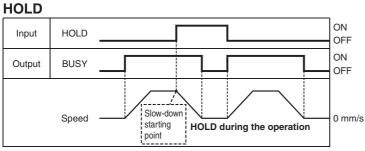

\* When the actuator is in the positioning range in the pushing operation, it does not stop even if HOLD signal is input.

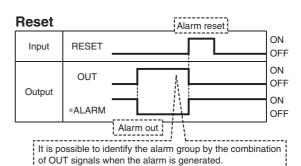


------ signals when the diamns generated.

\* "\*ALARM" is expressed as negative-logic circuit.




<sup>\*\* &</sup>quot;Pushing Mode" is not available for LEM series.

# **Options: Actuator Cable**

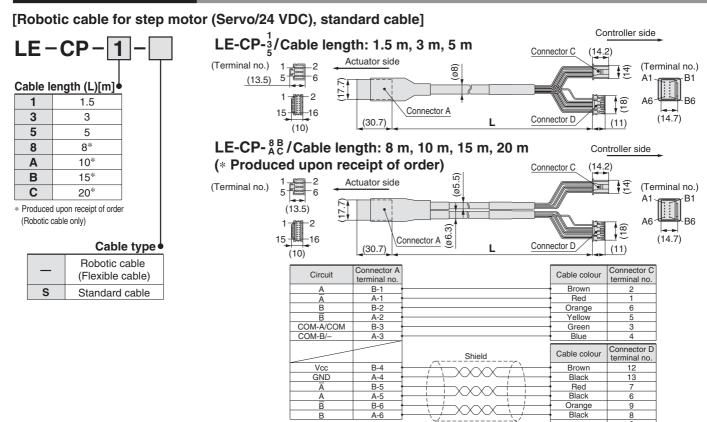


[Robotic cable with lock and sensor for step motor (Servo/24 VDC), standard cable]

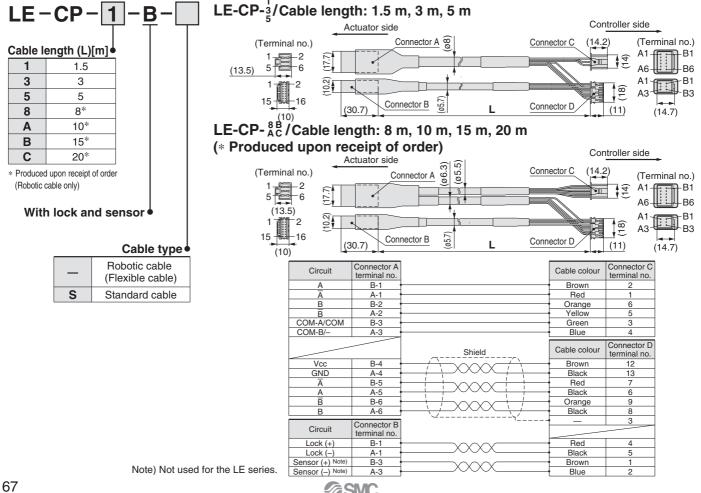





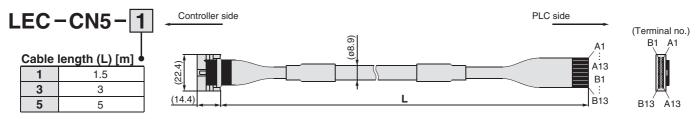


\* Conductor size: AWG28

Connector	Insulation	Dot	Dot
pin no.	colour	mark	colour
A1	Light brown		Black
A2	Light brown		Red
А3	Yellow		Black
A4	Yellow		Red
A5	Light green		Black
A6	Light green		Red
A7	Grey		Black
A8	Grey		Red
A9	White		Black
A10	White		Red
A11	Light brown		Black
A12	Light brown		Red
A13	Yellow		Black

Connector	Insulation	Dot	Dot	
pin no.	colour	mark	colour	
B1	Yellow		Red	
B2	Light green		Black	
B3	Light green		Red	
B4	Grey		Black	
B5	Grey		Red	
B6	White		Black	
B7	White		Red	
B8	Light brown		Black	
B9	Light brown		Red	
B10	Yellow		Black	
B11	Yellow		Red	
B12	Light green		Black	
B13	Light green		Red	
	Shield			

# Windows®XP, Windows®7 compatible

# **Controller Setting Kit/LEC-W2**

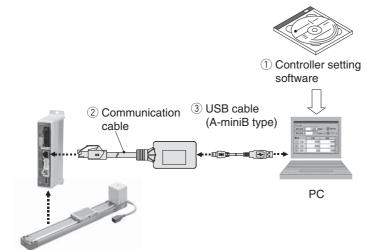

#### **How to Order**

# LEC-W2

Controller setting kit (Japanese and English are available.)

### Contents

- 1 Controller setting software (CD-ROM)
- (2) Communication cable
- ③ USB cable (Cable between the PC and the conversion unit)

# Compatible Controller

Step motor controller (Servo/24 VDC) Series LECP6


# **Hardware Requirements**

os	IBM PC/AT compatible machine running Windows®XP (32-bit), Windows®7 (32-bit and 64-bit).
Communication interface	USB 1.1 or USB 2.0 ports
Display	XGA (1024 x 768) or more

- \* Windows® and Windows®7 are registered trademarks of Microsoft Corporation in the United States.
- \* Refer to SMC website for version update information, http://www.smc.eu

## Screen Example


#### Easy mode screen example

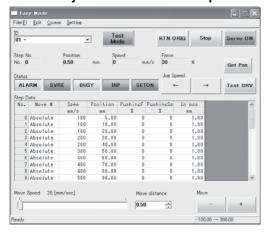

#### Easy operation and simple setting

- Allowing to set and display actuator step data such as position, speed, force, etc.
- Setting of step data and testing of the drive can be performed on the same page.
- Can be used to jog and move at a constant rate.

#### Normal mode screen example

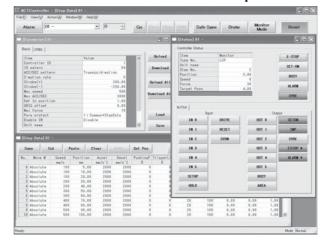

#### **Detailed setting**

- Step data can be set in detail.
- Signals and terminal status can be monitored.
- Parameters can be set.
- JOG and constant rate movement, return to origin, test operation and testing of forced output can be performed.




# Series LEC **Teaching Box/LEC-T1**





# **How to Order**



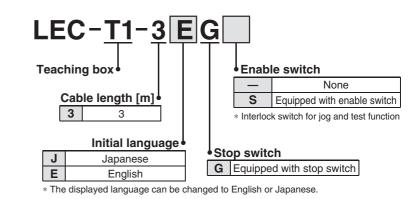

# **Specifications**

## Standard functions

- Chinese character display
- Stop switch is provided.

## **Option**

• Enable switch is provided.

Item	Description		
Switch	Stop switch, Enable switch (Option)		
Cable length [m]	3		
Enclosure	IP64 (Except connector)		
Operating temperature range [°C]	5 to 50		
Operating humidity range [%RH]	90 or less (No condensation)		
Weight [g]	350 (Except cable)		

#### [CE-compliant products]

The EMC compliance of the teaching box was tested with the LECP6 series step motor controller (servo/24 VDC) and an applicable actuator.

### [UL-compliant products]

When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.

# **Easy Mode**


Function	Details		
Step data	Setting of step data		
Jog	<ul><li>Jog operation</li><li>Return to origin</li></ul>		
Test	<ul><li>1 step operation</li><li>Return to origin</li></ul>		
Monitor	<ul> <li>Display of axis and step data no.</li> <li>Display of two items selected from Position, Speed, Force</li> </ul>		
ALM	Active alarm display     Alarm reset		
TB setting	Reconnection of axis (Ver. 1.**)     Displayed language setting (Ver. 2.**)     Setting of easy/normal mode     Setting step data and selection of items from easy mode monitor		

#### **Menu Operations Flow Chart**

mona operane		
Menu		Data
Data Monitor Jog Test ALM TB setting		Step data no. Setting of two items selected below Ver. 1.**: Position, Speed, Force, Acceleration, Deceleration Ver. 2.**: Position, Speed, Pushing force*, Acceleration, Deceleration, Movement MOD, Trigger LV, Pushing speed*, Moving force, Area 1, Area 2, In position
		Monitor
	ŀ	Display of step no. Display of two items selected below (Position, Speed, Force)
		Jog
		Return to origin Jog operation
		Test
	Г	1 step operation
		ALM
	T	Active alarm display Alarm reset
		TB setting
	L	Reconnect (Ver. 1.**) Japanese/English (Ver. 2.**) Easy/Normal Set item  * "Pushing Mode" is not available for LEM series.


## **Normal Mode**

Function	Details
Step data	Step data setting
Parameter	Parameters setting
Test	Jog operation/Constant rate movement     Return to origin     Test drive     (Specify a maximum of 5 step data and operate.)     Forced output     (Forced signal output, Forced terminal output)
Monitor	Drive monitor     Output signal monitor     Input signal monitor     Output terminal monitor     Input terminal monitor
ALM	Active alarm display     (Alarm reset)     Alarm log record display
File	Data saving     Save the step data and parameters of the controller which is being used for communication (it is possible to save four files, with one set of step data and parameters defined as one file).      Load to controller     Loads the data which is saved in the teaching box to the controller which is being used for communication.      Delete the saved data.      File protection (Ver. 2.**)
TB setting	Display setting     (Easy/Normal mode)     Language setting     (Japanese/English)     Backlight setting     LCD contrast setting     Beep sound setting     Max. connection axis     Distance unit (mm/inch)
Reconnect	Reconnection of axis

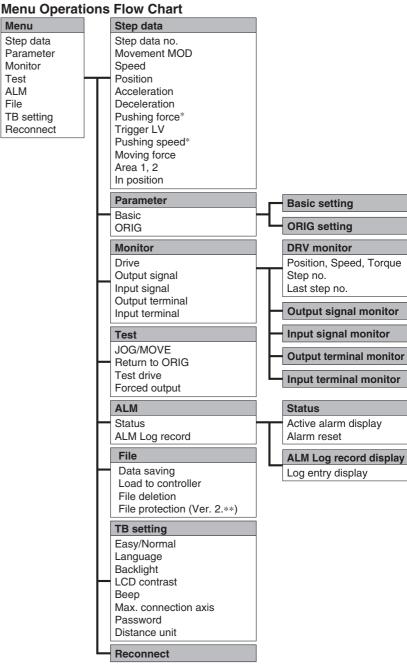

#### **Dimensions**

\* "Pushing Mode" is not available for LEM series.

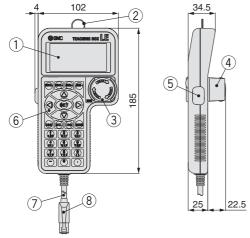

No.	Description	Function				
1	LCD	A screen of liquid crystal display (with backlight)				
2	Ring	A ring for hanging the teaching box				
3	Stop switch	When switch is pushed in, the switch locks and stops. The lock is released when it is turned to the right.				
4	Stop switch guard	A guard for the stop switch				
5	Enable switch (Option)	Prevents unintentional operation (unexpected operation) of the jog test function.  Other functions such as data change are not covered.				
6	Key switch	Switch for each input				
7	Cable	Length: 3 meters				
8	Connector	A connector connected to CN4 of the controller				



# Series LEC-G ( GRUUS ROHS) **Gateway Unit**



# **How to Order**

# **.**⚠Caution

#### [CE-compliant products]

EMC compliance was tested by combining the electric actuator LEM series and the controller LEC series. The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore, conformity to the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result, it is necessary for the customer to verify conformity to the EMC directive for the machinery and equipment as a whole.

#### [UL-compliant products]

When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.



CC-Link Ver. 2.0 DN1 DeviceNet™ PR1 PROFIBUS DP EN1 EtherNet/IP™

Cable

**Mounting** Screw mounting D Note) DIN rail mounting

Note) DIN rail is not included. Order it separately.

LEC-CG

Cable type ● Communication cable 2 Cable between branches

Cable length K 0.3 m 0.5 m 1 m

Communication cable

Cable between branches

LEC-CGD **Branch connector** 

Branch connector

LEC-CGR **Terminating resistor** 

# Specifications

Item			LEC-GMJ2□		LEC-GDN1□	LEC-GPR1□	LEC-GEN1□
	Applicable system Fieldbus		CC-Link		DeviceNet™	PROFIBUS DP	EtherNet/IP™
	Applicable system	Version Note 1)	Ve	r. 2.0	Release 2.0	V1	Release 1.0
	Communication speed [bps]		156 k/625 k/2.5 M /5 M/10 M		125 k/250 k/500 k	9.6 k/19.2 k/45.45 k/ 93.75 k/187.5 k/500 k/ 1.5 M/3 M/6 M/12 M	10 M/100 M
	Configuratio	n file Note 2)	_		EDS file	GSD file	EDS file
Communication specifications	I/O occupation area		4 stations occupied (8 times setting)	Input 896 points 108 words Output 896 points 108 words	Input 200 bytes (186 used) Output 200 bytes (182 used)	Input 57 words Output 57 words	Input 256 bytes Output 256 bytes
1	Power supply for	Power supply voltage [V] Note 6)			11 to 25 VDC	_	_
	communication	Internal current consumption [mA]			100	_	_
	Communication connector specifications		Connector (Accessory)		Connector (Accessory)	D-sub	RJ45
	Terminating	resistor	Not included		Not included	Not included	Not included
Power supply voltage	ge [V] Note 6)		24 VDC ±10%				
Current	Not connecte	ed to teaching box	200				
consumption [mA]	Connected to	teaching box	300				
<b>EMG output termina</b>	ıl		30 VDC 1 A				
Controller	Applicable c	ontrollers	Series LECP6, Series LECA6				
specifications	Communication speed [bps] Note 3)		115.2 k/230.4 k				
specifications	Max. number of connectable controllers Note 4)			12	8 Note 5)	5	12
Accessories		Power supply connector, communication connector Power supply connector					
Operating temperature range [°C]		0 to 40 (No freezing)					
Operating humidity range [%RH]		90 or less (No condensation)					
Storage temperature range [°C]		-10 to 60 (No freezing)					
Storage humidity range [%RH]		90 or less (No condensation)					
Weight [g]			200 (Screw mounting), 220 (DIN rail mounting)				


- Note 1) Please note that the version is subject to change.
- Note 2) Each file can be downloaded from the SMC website, http://www.smcworld.com
- Note 3) When using a teaching box (LEC-T1-\(\sigma\)), set the communication speed to 115.2 kbps.
- Note 4) A communication response time for 1 controller is approximately 30 ms.
  - Refer to "Communication Response Time Guideline" for response times when several controllers are connected.
- Note 5) For step data input, up to 12 controllers connectable.
- Note 6) When conformity to UL is required, the electric actuator and controller should be used with a UL1310 Class 2 power supply.



# Series LEC-G

# **Guide for Communication Response Time**

Response time between gateway unit and controllers depends on the number of controllers connected to the gateway unit. For response time, refer to the graph below.

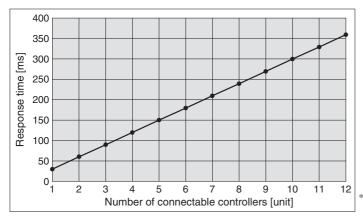


\* This graph shows delay times between gateway unit and controllers. Fieldbus network delay time is not included.


## **Dimensions**

# Screw mounting (LEC-G□□□)


#### Applicable Fieldbus protocol: CC-Link Ver. 2.0

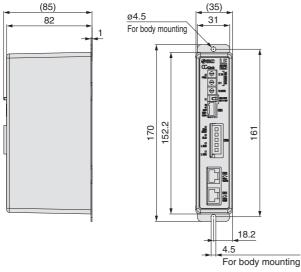


#### Applicable Fieldbus protocol: DeviceNet™

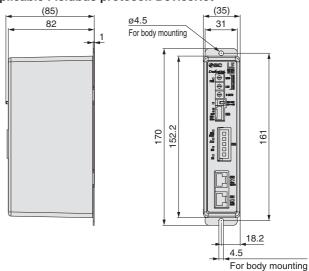

# Applicable Fieldbus protocol: PROFIBUS DP

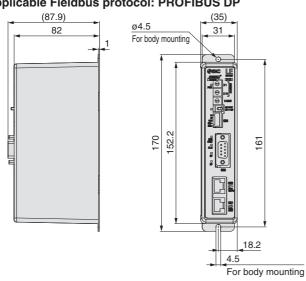

## Applicable Fieldbus protocol: EtherNet/IP™

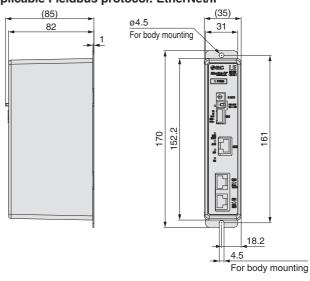


<sup>■</sup> Trademark DeviceNet<sup>™</sup> is a trademark of ODVA. EtherNet/IP™ is a trademark of ODVA.


## **Dimensions**

## DIN rail mounting (LEC-G□□□D)


#### Applicable Fieldbus protocol: CC-Link Ver. 2.0

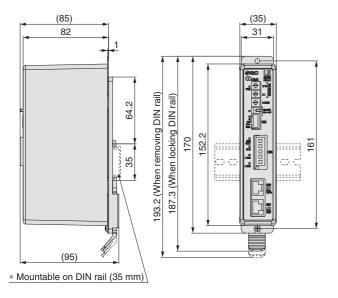


#### Applicable Fieldbus protocol: DeviceNet™

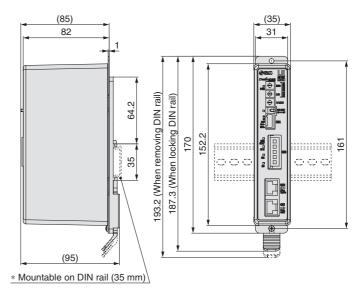

#### Applicable Fieldbus protocol: PROFIBUS DP

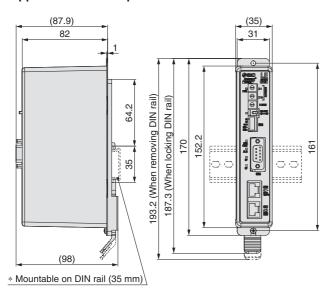


#### Applicable Fieldbus protocol: EtherNet/IP™

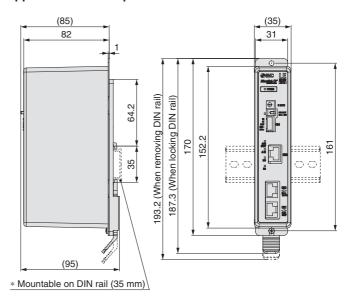

### DIN rail AXT100-DR-□

\* For  $\square$ , enter a number from the "No." line in the table below. Refer to the dimensions above for the mounting dimensions.

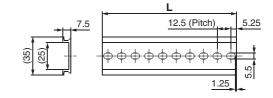

#### L Dimension [mm]

No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5
No.	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
L	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5



# **⚠** Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)\*1), and other safety regulations.

Caution indicates a hazard with a low level of risk Caution: which, if not avoided, could result in minor or moderate injury.

Warning indicates a hazard with a medium level of Warning: risk which, if not avoided, could result in death or serious injury.

⚠ Danger :

Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious

\*1) ISO 4414: Pneumatic fluid power - General rules relating to systems. ISO 4413: Hydraulic fluid power – General rules relating to systems. IEC 60204-1: Safety of machinery - Electrical equipment of machines. (Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots - Safety.

# **⚠** Warning

- 1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications. Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the
- 2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- 3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.
  - 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
  - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
  - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction
- 4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following
  - 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
  - 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalogue.
  - 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
  - 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

## **⚠** Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.

If anything is unclear, contact your nearest sales branch.

# Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

#### Limited warranty and Disclaimer

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered.\*2)
  - Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.
  - \*2) Vacuum pads are excluded from this 1 year warranty. A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

#### **Compliance Requirements**

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

Be sure to read "Handling Precautions for SMC Products" (M-E03-3) before using

#### **SMC Corporation (Europe)**

Austria **2** +43 (0)2262622800 office@smc.at www.smc.at Belgium **\***+32 (0)33551464 www.smcpneumatics.be info@smcpneumatics.be Bulgaria **2** +359 (0)2807670 www.smc.bg office@smc.ba Croatia **\***+385 (0)13707288 www.smc.hr office@smc.hr Czech Republic **2**+420 541424611 office@smc.cz www.smc.cz Denmark **\***+45 70252900 smc@smcdk.com www.smcdk.com smc@smcpneumatics.ee Estonia ★+372 6510370 www.smcpneumatics.ee Finland **\***+358 207513513 www.smc.fi smcfi@smc.fi France **2** +33 (0)164761000 www.smc-france.fr promotion@smc-france.fr Germany **2** +49 (0)61034020 www.smc-pneumatik.de info@smc-pneumatik.de Spain Greece **\***+30 210 2717265 www.smchellas.gr sales@smchellas.gr Hungary **☎**+36 23511390 office@smc.hu www.smc.hu Ireland **\***+353 (0)14039000 www.smcpneumatics.ie sales@smcpneumatics.ie Turkey mailbox@smcitalia.it Italy **\***+39 0292711 www.smcitalia.it UK Latvia **\***+371 67817700 www.smclv.lv info@smclv.lv

Lithuania **\***+370 5 2308118 Netherlands **\*** +31 (0)205318888 **2** +47 67129020 Norway Poland **\*** +48 (0)222119616 **Portugal 2** +351 226166570 Romania **\*** +40 213205111 Russia **\***+7 8127185445 Slovakia **2** +421 (0)413213212 Slovenia **\*** +386 (0)73885412 **2** +34 902184100 **2** +46 (0)86031200 Sweden Switzerland **2** +41 (0)523963131 **2** +90 212 489 0 440

www.smclt.lt www.smcpneumatics.nl www.smc-norge.no www.smc.pl www.smc.eu www.smcromania.ro www.smc-pneumatik.ru www.smc.sk www.smc.si www.smc.eu www.smc.nu

info@smclt.lt info@smcpneumatics.nl post@smc-norge.no office@smc.pl postpt@smc.smces.es smcromania@smcromania.ro info@smc-pneumatik.ru office@smc.sk office@smc.si post@smc.smces.es post@smc.nu info@smc.ch

info@smcpnomatik.com.tr

SMC CORPORATION Akihabara UDX 15F, 4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN Phone: 03-5207-8249 FAX: 03-5298-5362

www.smc.ch

www.smcpnomatik.com.tr

### +44 (0)845 121 5122 www.smcpneumatics.co.uk sales@smcpneumatics.co.uk