


Body Ported Metal Seal/Rubber Seal Series VQ

A variety of product groups meet all FA needs.

- Flip type demonstrates space-saving effect.
- Cassette type enables flexible, speedy station increasing/decreasing.

Flip type

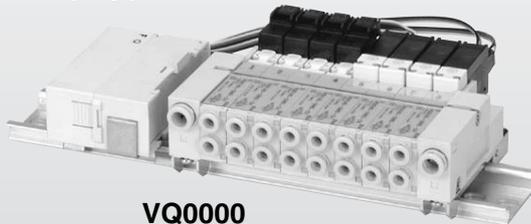

Thin compact design with large flow capacity

(Flip type)

Model	Manifold pitch (mm)	Flow characteristics		Cylinder size
		Metal seal C [dm ³ /(s·bar)]	Rubber seal C [dm ³ /(s·bar)]	
VQ0000	10.5	0.50	0.59	Up to ø40
VQ1000	11	0.84	1.0	Up to ø50
VQ2000	16	2.3	2.7	Up to ø80

* Flow characteristics: 4/2 → 5/3 (A/B → R1/R2)

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

Name plate



Individual SUP spacer


Individual EXH spacer

Blanking plate assembly

Built-in silencer, direct exhaust

A variety of options

Cassette type

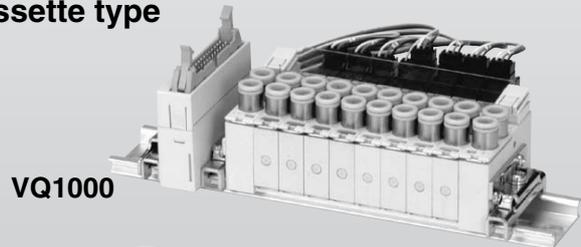

Unprecedented high speed response and long service life

(Metal seal, Single, With indicator light/surge voltage suppressor)


VQ0000	10 ms	} 200 million cycles
VQ1000	10 ms	
VQ2000	20 ms	
Dispersion accuracy ±2 ms		

Innovative mounting methods

A valve can be changed without entirely disassembling the manifold.

Built-in One-touch fittings for easier piping.

A variety of common wiring methods are standardized.

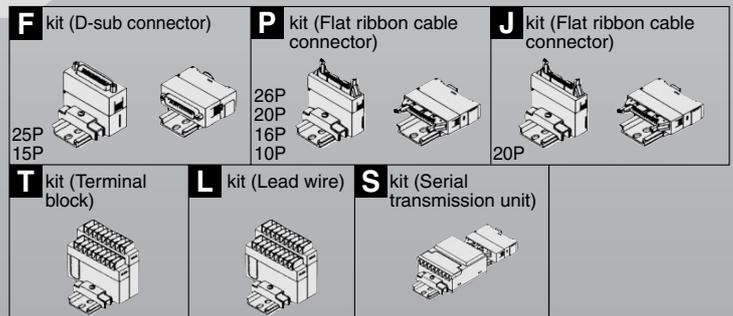

Valve Specifications















Body Ported				Sonic conductance: C [dm ³ /(s·bar)]		Type of actuation					Voltage			Electrical entry			Manual override			
				Double	Single	Single	Double	Closed center	Exhaust center	Pressure center	12 V 24 V DC	100 V 110 V AC (50/60 Hz)	200 V 220 V AC (50/60 Hz)	Plug-in	Grommet	L plug connector	M plug connector	Push type, Tool required	Locking type	Locking type (Manual)
Cassette	Cassette	Series VQ1000	Rubber seal	VQ1□70	0.60	0.58	●	●	●	●	●	●	●	●	●	●	●	●	●	
			Metal seal	VQ1□71	0.80	0.70	●	●	●	●	●	●	●	●	●	●	●	●	●	●
	P. 2-4-72																			
	Plug lead	Series VQ2000	Rubber seal	VQ2□40	2.3	—	●	●	●	●	●	●	●	●	●	●	●	●	●	
			Metal seal	VQ2□41	2.7	—	●	●	●	●	●	●	●	●	●	●	●	●	●	
		P. 2-4-30																		
		Series VQ1000	Rubber seal	VQ1□40	0.84	0.73	●	●	●	●	●	●	●	●	●	●	●	●	●	●
			Metal seal	VQ1□41	1.0	0.84	●	●	●	●	●	●	●	●	●	●	●	●	●	●
		P. 2-4-36																		
	Plug-in	Series VQ0000	Rubber seal	VQ0□40	0.50	0.36	●	●	●	●	●	●	●	●	●	●	●	●	●	
			Metal seal	VQ0□41	0.59	0.42	●	●	●	●	●	●	●	●	●	●	●	●	●	
		P. 2-4-30																		
Series VQ1000		Rubber seal	VQ1□30	0.84	0.73	●	●	●	●	●	●	●	●	●	●	●	●	●	●	
	Metal seal	VQ1□31	1.0	0.84	●	●	●	●	●	●	●	●	●	●	●	●	●	●		
P. 2-4-8																				

VQC
 SQ
VQ0
 VQ4
 VQ5
 VQZ
 VQD











		Option		Manifold Option				
P. 2-4-92	●	P. 2-4-68	●	P. 2-4-68	●	D-sub connector 15P		
	●		Except S kit		●	P. 2-4-28	●	Flat ribbon cable 10P, 16P, 20P
	●				●		●	Negative common specifications
	●				●		●	One-touch fitting Inch size
	●		Except L kit		●	●	●	For special wiring spec.
P. 2-4-87	●	P. 2-4-63	●	P. 2-4-59	P. 2-4-23	●	Blanking plate	
	●		●			●	Individual SUP/EXH	
	●		●			●	SUP/EXH passage spacer	
	●		●			●	Name plate	
	Standard ●		●			●	DIN rail mounting style	
	●		●			●	Built-in silencer	
	●		●			●	Silencer for EXH port	
	●		●			●	Elbow fitting for cylinder port	
	●		●			●	Plug for cylinder port	
	●		●			●	Double check block	

Series VQ/Body Ported: Variations

Manifold Variations

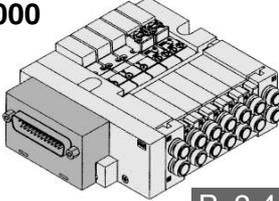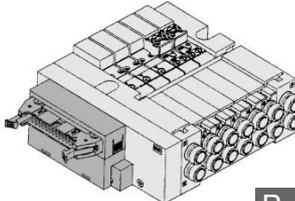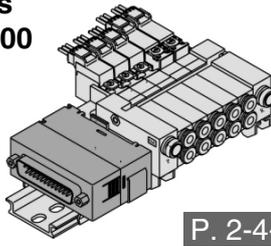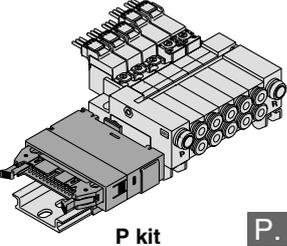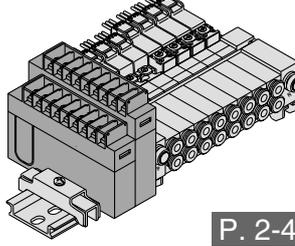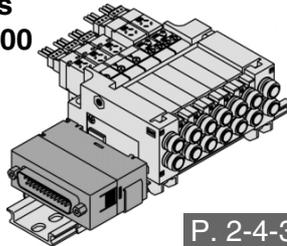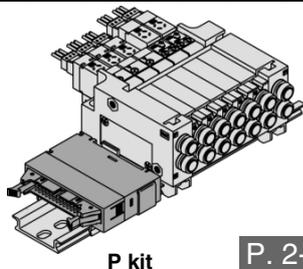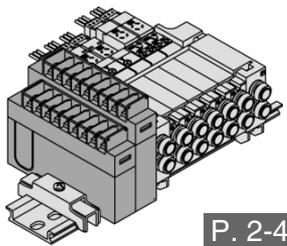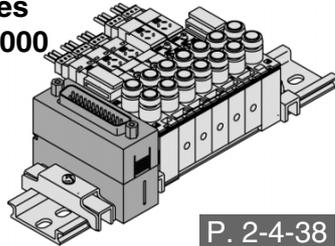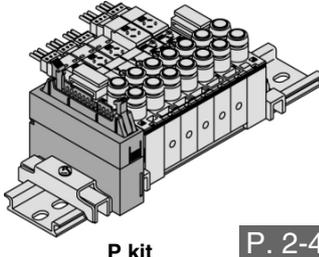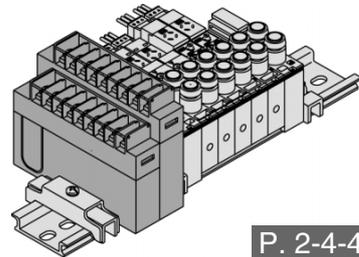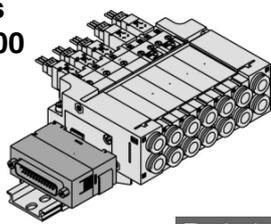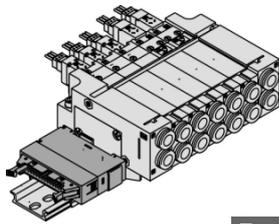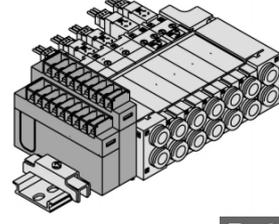
	F kit	P kit	J kit	T kit
	D-sub connector Conforming to MIL D-sub connector	Flat ribbon cable connector (26, 20, 16, 10 pins) Conforming to MIL flat ribbon cable connector	Flat ribbon cable connector (20 pins) Conforming to MIL flat ribbon cable connector PC Wiring System compatible	Terminal block Two kinds of terminal are available in accordance with the number of stations.
Plug-in	 Series VQ1000 P. 2-4-12	 P/J kit P. 2-4-14	 P. 2-4-14	
	 Series VQ0000 P. 2-4-38	 P kit P. 2-4-42	 P. 2-4-46	
Plug Lead	 Series VQ1000 P. 2-4-38	 P kit P. 2-4-42	 P. 2-4-46	
	 Series VQ2000 P. 2-4-38	 P kit P. 2-4-42	 P. 2-4-46	
Cassette	 Series VQ1000 P. 2-4-76	 P kit P. 2-4-78	 P. 2-4-80	

Manifold Variations

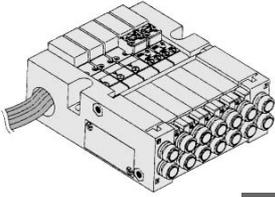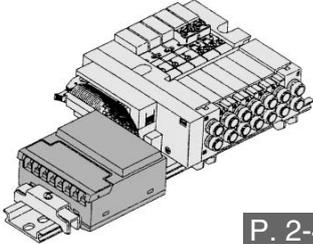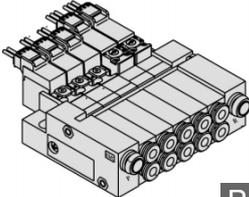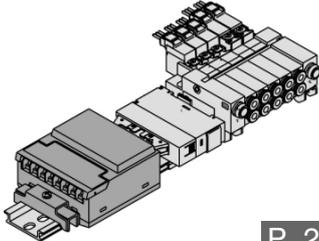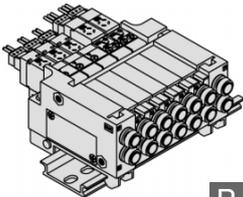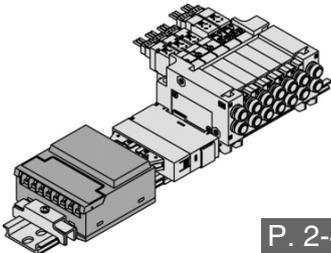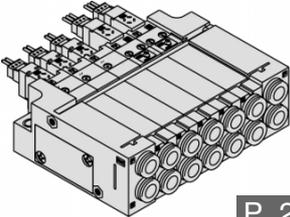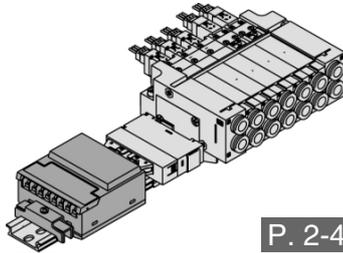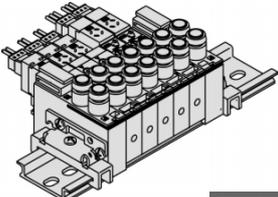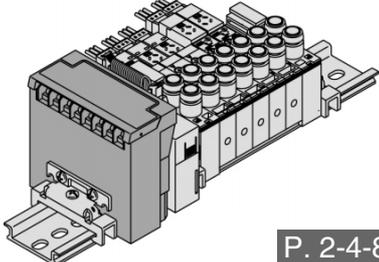L C kit		S kit		Port size	
Lead wire		Serial transmission unit		SUP EXH port	Cylinder port
Direct electrical entry type		Enables single-wire solenoid valve-PLC operation		P, R	A, B
L kit	 P. 2-4-18	 P. 2-4-20	C6 (ø6) N7 (ø1/4") <Option> Built-in silencer	C3 (ø3.2) C4 (ø4) C6 (ø6) M5 (M5 thread) N1 (ø1/8") N3 (ø5/32") N7 (ø1/4")	VQC SQ VQ0 VQ4 VQ5 VQZ VQD
C kit	 P. 2-4-50	 P. 2-4-54	C6 (ø6) N7 (ø1/4") <Option> Built-in silencer	C3 (ø3.2) C4 (ø4) M5 (M5 thread) N1 (ø1/8") N3 (ø5/32")	
C kit	 P. 2-4-50	 P. 2-4-54	C6 (ø6) N7 (ø1/4") <Option> Built-in silencer	C3 (ø3.2) C4 (ø4) C6 (ø6) M5 (M5 thread) N1 (ø1/8") N3 (ø5/32") N7 (ø1/4")	
C kit	 P. 2-4-50	 P. 2-4-54	C8 (ø8) N9 (ø5/16") <Option> Built-in silencer	C6 (ø6) C8 (ø8) N7 (ø1/4") N9 (ø5/16")	
C kit	 P. 2-4-82	 P. 2-4-84	C6 (ø6) N7 (ø1/4") <Option> Built-in silencer	C3 (ø3.2) C4 (ø4) C6 (ø6) M5 (M5 thread) N1 (ø1/8") N3 (ø5/32") N7 (ø1/4")	

Cylinder Speed Chart

Use as a guide for selection.
Please confirm the actual conditions with SMC Sizing Program.

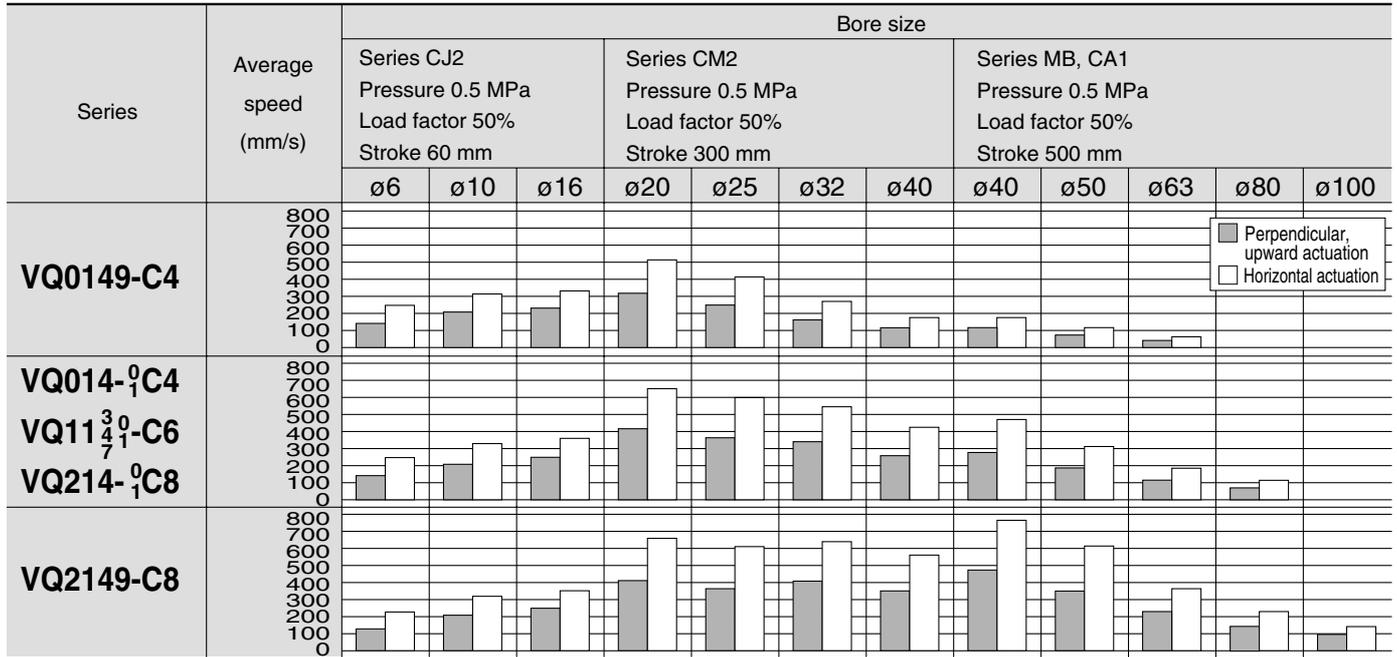

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

- * It is when the cylinder is extending that is meter-out controlled by speed controller which is directly connected with cylinder, and its needle valve with being fully open.
- * The average velocity of the cylinder is what the stroke is divided by the total stroke time.
- * Load factor: ((Load weight x 9.8)/Theoretical force) x 100%

Conditions


Body ported		Series CJ2	Series CM2	Series MB, CA1
VQ0149-C4	Tube bore x Length		T0425 x 1 m	
	Speed controller		AS2001F-04	
	Silencer		AN103-X233	
VQ11 ³⁰ / ₄₁ -C6	Tube bore x Length		T0604 x 1 m	
	Speed controller		AS3001F-06	
	Silencer		AN103-X233	
VQ2149-C8	Tube bore x Length		T0806 x 1 m	
	Speed controller		AS3001F-08	
	Silencer		AN200-KM8	

Series VQ1000

Body Ported

Plug-in Unit: Flip Type

How to Order Manifold

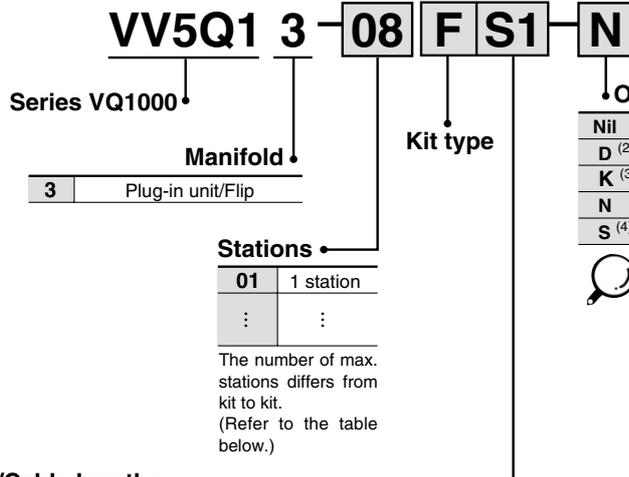

Note 1) When two or more symbols are specified, indicate them alphabetically.
Example) -DNS


Note 2) All S kits are DIN rail mounting styles, so include suffix "D".

Note 3) Specify the wiring specifications in the manifold specification sheet. (Except L kit)

Note 4) F, P and S kits are provided with an exhaust on one side, while L kits are with an exhaust on both sides.


Kit/Electrical entry/Cable length

F kit (D-sub connector)

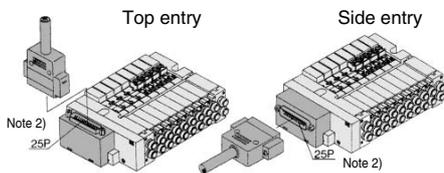


Connector entry direction		P. 2-4-12			
Top entry	Side entry	Kit F	Kit S	Without cable	Max. 16 ⁽²⁾ stations
U0	S0	U0	S0	Without cable	
U1	S1	U1	S1	With cable (1.5 m)	
U2	S2	U2	S2	With cable (3 m)	
U3	S3	U3	S3	With cable (5 m)	

P kit (Flat ribbon cable connector)

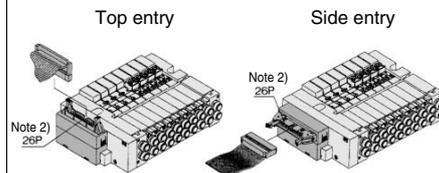


Connector entry direction		P. 2-4-14			
Top entry	Side entry	Kit P	Kit S	Without cable	Max. 16 ⁽²⁾ stations
U0	S0	U0	S0	Without cable	
U1	S1	U1	S1	With cable (1.5 m)	
U2	S2	U2	S2	With cable (3 m)	
U3	S3	U3	S3	With cable (5 m)	

J kit (Flat ribbon cable connector)

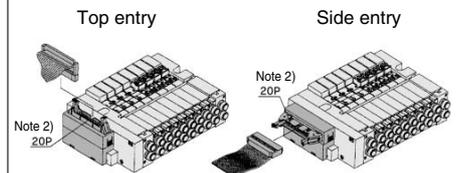


Connector entry direction		P. 2-4-16			
Top entry	Side entry	Kit J	Kit S	Without cable	Max. 16 ⁽²⁾ stations
U0	S0	U0	S0	Without cable	
U1	S1	U1	S1	With cable (1.5 m)	
U2	S2	U2	S2	With cable (3 m)	
U3	S3	U3	S3	With cable (5 m)	

L kit (Lead wire cable)

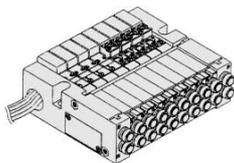

Lead wire entry direction		Cable length		Maximum number of stations
Symbol	Direction	Symbol	Cable length	
D	Entry on D side	0	With cable (0.6 m)	Max. 16 stations
U	Entry on U side	1	With cable (1.5 m)	
		2	With cable (3.0 m)	

S kit (Serial transmission unit)

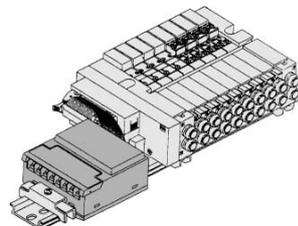

The valve is equipped with an indicator light/surge voltage suppressor, and the voltage is 24 VDC.

The dust-protected type S1 unit is applicable, too. For details, please contact SMC.

Kit S ⁽³⁾		P. 2-4-20		Max. 16 ⁽²⁾ stations
Symbol	Serial transmission unit	Without SI unit	With SI unit	
0		Without SI unit		
A		With general type SI unit (Series EX300)		
B		Mitsubishi Electric Corp.: MELSECNET/MINI-S3 Data Link System		
C		OMRON Corp.: SYSBUS Wire System		
D		SHARP Corp.: Satellite I/O Link System		
F1		NKE Corp.: Uni-wire System (16 output points)		
H		NKE Corp.: Uni-wire H System		



Note 1) Besides the above, F and P kits with different number of pins are available. For details, refer to page 2-4-28.

Note 2) For details, refer to page 2-4-29.

Note 3) Please consult with SMC for the following serial transmission kits: Matsushita Electric Works, Ltd.; Rockwell Automation, Inc.; SUNX Corporation; Fuji Electric Co., Ltd.; OMRON Corporation.

Series VQ1000

Body Ported

Plug-in Unit: Flip Type

Model

Series	Number of solenoids	Model		Flow characteristics						Response time ⁽²⁾ (ms)			Weight (g)	
				1 → 4/2 (P → A/B)			4/2 → 5/3 (A/B → R1/R2)			Standard: 1 W H: 1.5 W	Low wattage: 0.5 W	AC		
				C [dm ³ /(s·bar)]	b	Cv	C [dm ³ /(s·bar)]	b	Cv					
VQ1000	2 position	Single	Metal seal	VQ1130	0.77	0.14	0.18	0.84	0.14	0.19	12 or less	15 or less	29 or less	57
			Rubber seal	VQ1131	0.91	0.19	0.21	1.0	0.21	0.25	15 or less	20 or less	34 or less	
		Double (Latching)	Metal seal	VQ1230	0.77	0.14	0.18	0.84	0.14	0.19	12 or less	15 or less	29 or less	
			Rubber seal	VQ1231	0.91	0.19	0.21	1.0	0.21	0.25	15 or less	20 or less	34 or less	
	3 position	Closed center	Metal seal	VQ1330	0.67	0.13	0.16	0.73	0.13	0.17	20 or less	26 or less	40 or less	105
			Rubber seal	VQ1331	0.78	0.22	0.18	0.84	0.21	0.20	25 or less	33 or less	47 or less	
		Exhaust center	Metal seal	VQ1430	0.74	0.14	0.17	0.84	0.16	0.20	20 or less	26 or less	40 or less	
			Rubber seal	VQ1431	0.78	0.28	0.19	1.0	0.21	0.24	25 or less	33 or less	47 or less	
		Pressure center	Metal seal	VQ1530	0.74	0.14	0.17	0.82	0.16	0.20	20 or less	26 or less	40 or less	
			Rubber seal	VQ1531	0.78	0.28	0.19	0.84	0.21	0.22	25 or less	33 or less	47 or less	




Note 1) Cylinder port size C6

Note 2) As per JIS B 8375-1981 (Supply pressure: 0.5 MPa; with indicator light/surge voltage suppressor; clean air). Subject to the pressure and air quality.




JIS Symbol


2 position single

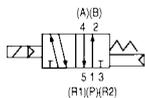

2 position double (Latching)

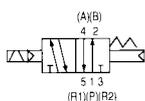


Metal seal

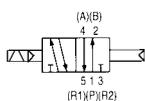


Rubber seal


3 position closed center

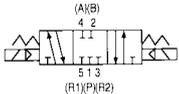

3 position exhaust center

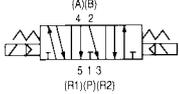

3 position pressure center

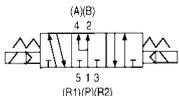

Standard Specifications

Valve specifications	Valve construction	Metal seal	Rubber seal	
	Fluid	Air/Inert gas		
	Maximum operating pressure ⁽³⁾	0.7 MPa (High pressure type: 0.8 MPa) ⁽³⁾		
	Minimum operating pressure	Single	0.1 MPa	0.15 MPa
		Double (Latching)	0.1 MPa	0.15 MPa
		3 position	0.1 MPa	0.2 MPa
	Ambient and fluid temperature	-10 to 50°C ⁽¹⁾		
	Lubrication	Not required		
	Manual override	Push type/Locking type (Tool required, Manual) Option		
	Impact/Vibration resistance ⁽²⁾	150/30 m/s ²		
Enclosure	Dust-protected			
Solenoid	Coil rated voltage	12, 24 VDC, 100, 110, 200, 220 VAC (50/60 Hz)		
	Allowable voltage fluctuation	±10% of rated voltage		
	Coil insulation type	Class B or equivalent		
	Power consumption (Current)	24 VDC	1 W DC (42 mA), 1.5 W DC (63 mA) ⁽³⁾ , 0.5 W DC (21 mA) ⁽⁴⁾	
		12 VDC	1 W DC (83 mA), 1.5 W DC (125 mA) ⁽³⁾ , 0.5 W DC (42 mA) ⁽⁴⁾	
		100 VAC	Inrush 0.75 VA (7.5 mA), Holding 0.75 VA (7.5 mA)	
		110 VAC	Inrush 0.83 VA (7.5 mA), Holding 0.83 VA (7.5 mA)	
200 VAC		Inrush 1.0 VA (5 mA), Holding 1.0 VA (5 mA)		
220 VAC	Inrush 1.1 VA (5 mA), Holding 1.1 VA (5 mA)			



Note 1) Use dry air to prevent condensation when operating at low temperatures.

Note 2) Impact resistance..... No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)

Vibration resistance No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

Note 3) Values in the case of high pressure type (1.5 W).


Note 4) Values in the case of low wattage (0.5 W) specifications.

Plug-in Unit: Flip Type Series VQ1000

Manifold Specifications


Series	Base model	Type of connection	Porting specifications		Applicable ⁽²⁾ stations	Applicable solenoid valve	5 station weight (g)	
			Port location	One-touch fitting/Port size ⁽¹⁾				
				1 (P), 3 (R)	4 (A), 2 (B)			
VQ1000	VV5Q13-□□□	<ul style="list-style-type: none"> ■ F kit—D-sub connector ■ P kit—Flat ribbon cable connector ■ J kit—Flat ribbon cable connector (20P) ■ L kit—Lead wire cable ■ S kit—Serial transmission unit 	Side	C6 (ø6) (Option Built-in silencer, Direct exhaust)	C3 (ø3.2) C4 (ø4) C6 (ø6) M5 (M5 thread)	1 to 16 stations	VQ1□30 VQ1□31	424

Note 1) Inch-size One-touch fittings are also available. For details, refer to page 2-4-29.
 Note 2) For details, refer to page 2-4-29.

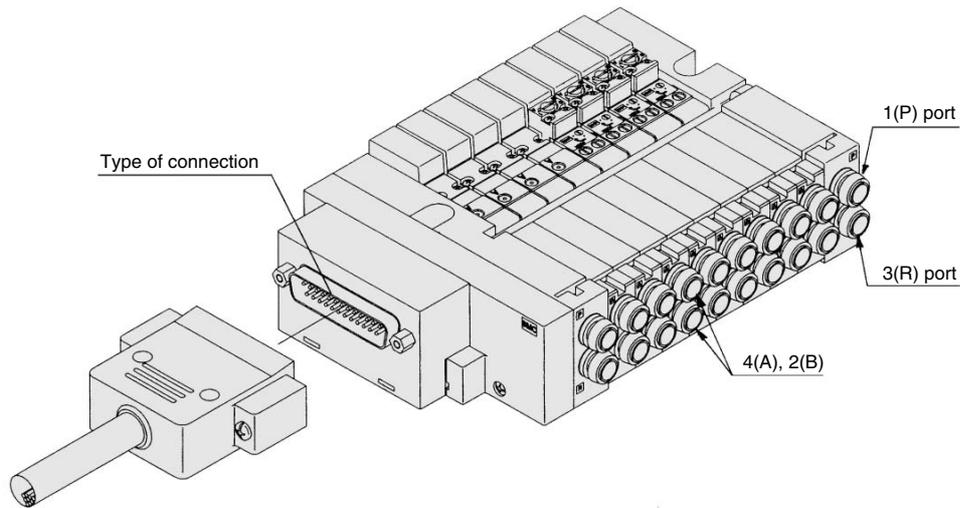

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

F VQ1000 Kit (D-sub connector)

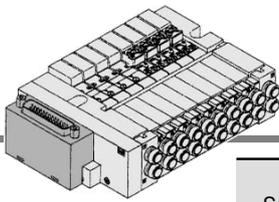


- The D-sub connector reduces installation labor for electrical connections.
- Using the D-sub connector (25P), (15P as an option) conforming to MIL standard permits the use of connectors put on the market and gives a wide interchangeability.
- Top or side receptacle position can be selected in accordance with the available mounting space.
- Maximum stations are 16.

Series	Port location	Porting specifications		Applicable stations
		1(P), 3(R)	4(A), 2(B)	
VQ1000	Side	C6	C3, C4, C6, M5	Max. 16 stations

D-sub Connector (25 pins)

AXT100-DS25- 015
030
050

(The D-sub connector cable assembly can be ordered individually or included in a specific manifold model no. Refer to How to Order Manifold.)

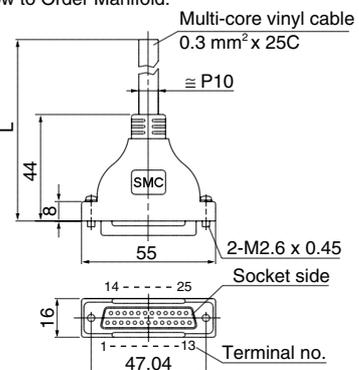

Wire Color by Terminal No. of D-sub Connector Cable Assembly

Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Gray	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Gray	Red
24	Black	White
25	White	None

Electric Characteristics

Item	Characteristics
Conductor resistance Ω/km, 20°C	65 or less
Voltage limit V, 1 min, AC	1000
Insulation resistance MΩ/km, 20°C	5 or more

Note) The min. bending radius of D-sub cable assembly is 20 mm.

Note) Types with 15 pin are also available. For details, refer to page 2-4-29.

D-sub Connector Cable Assembly (Option)


Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-DS25-015	Cable 25 core x 24AWG
3 m	AXT100-DS25-030	
5 m	AXT100-DS25-050	

* For other commercial connectors, use a 25 pins type with female connector conforming to MIL-C-24308.

Connector manufacturers' example

- Fujitsu Limited
- Japan Aviation Electronics Industry, Ltd.
- J.S.T. Mfg. Co., Ltd.
- Hirose Electric Co., Ltd.

Cable assembly

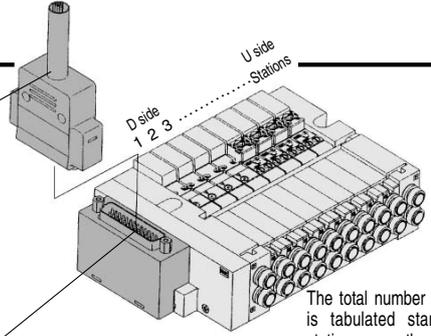

The total number of stations is tabulated starting from station one on the D Side.

Electrical wiring specifications

D-sub connector assembly 015
AXT100-DS25-030
Wire Color 050


D-sub connector	Terminal no.	Polarity	Lead wire color	Dot marking		
1 station {	SOLA 1	(-)	(+)	Black	None	
	SOLA 14	(-)	(+)	Yellow	Black	
	2 stations {	SOLA 2	(+)	(+)	Brown	None
		SOLA 15	(+)	(+)	Pink	Black
	3 stations {	SOLA 3	(-)	(+)	Red	None
		SOLA 16	(+)	(+)	Blue	White
	4 stations {	SOLA 4	(-)	(+)	Orange	None
		SOLA 17	(+)	(+)	Purple	None
	5 stations {	SOLA 5	(-)	(+)	Yellow	None
		SOLA 18	(+)	(+)	Gray	None
	6 stations {	SOLA 6	(-)	(+)	Pink	None
		SOLA 19	(+)	(+)	Orange	Black
	7 stations {	SOLA 7	(-)	(+)	Blue	None
SOLA 20		(+)	(+)	Red	White	
8 stations {	SOLA 8	(-)	(+)	Purple	White	
	SOLA 21	(+)	(+)	Brown	White	
9 stations {	SOLA 9	(-)	(+)	Gray	Black	
	SOLA 22	(+)	(+)	Pink	Red	
10 stations {	SOLA 10	(-)	(+)	White	Black	
	SOLA 23	(+)	(+)	Gray	Red	
11 stations {	SOLA 11	(-)	(+)	White	Red	
	SOLA 24	(+)	(+)	Black	White	
12 stations {	SOLA 12	(-)	(+)	Yellow	Red	
	SOLA 25	(+)	(+)	White	None	
Connector terminal no.	COM. 13	(-)	(-)	Orange	Red	

As the standard electrical wiring specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 12 stations or less, regardless of valve and option types. Mixed single and double wiring is available as an option. For details, refer to page 2-4-29.

3 position uses two stations. The A side solenoid of a 3 position valve is connected to SOL.A at the station with the smaller number in the above figure and the B side solenoid to SOL.A at the next station.

Note) When using the negative common specifications, use valves for negative common. (Refer to page 2-4-29.)

How to Order Manifold

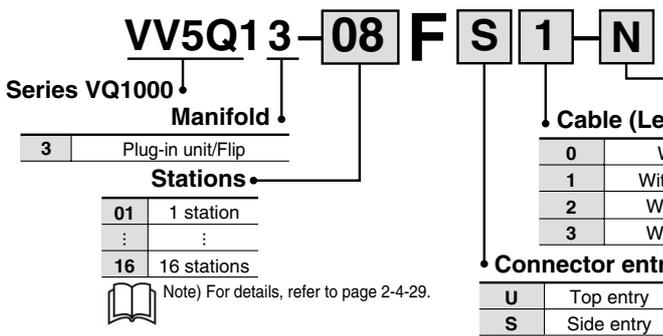

Option	None
Nil	None
D	DIN rail mounting style
K ⁽²⁾	Special wiring specifications (Except double wiring)
N	With name plate
S	Built-in silencer, direct exhaust


- Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -DNS
- Note 2) Specify the wiring specifications on the manifold specification sheet.




Plug-in Unit: Flip Type Series VQ1000

(Conforming to MIL-C-24308)

Applicable connector:
D-sub connector (25P)

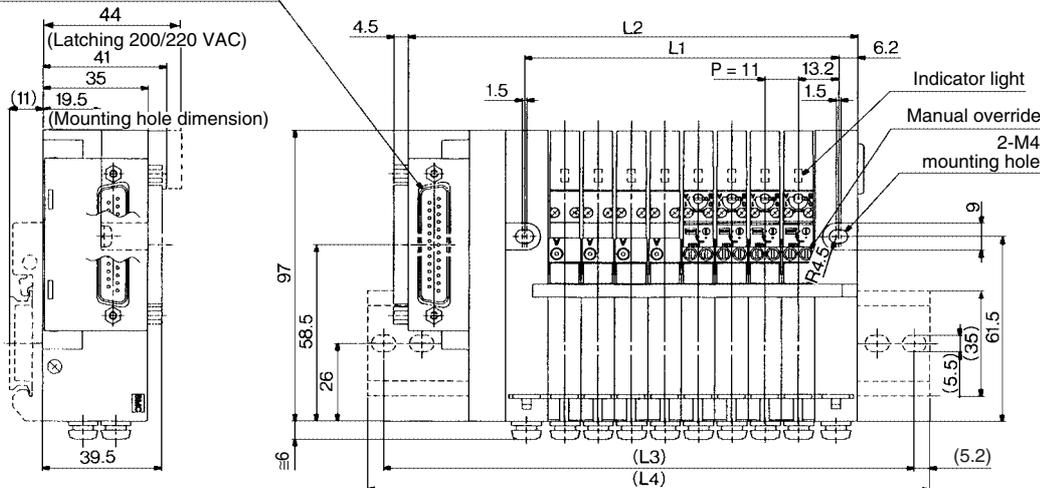

D side Stations --- 1 --- 2 --- 3 --- 4 --- 5 --- 6 --- 7 --- 8 --- n U side

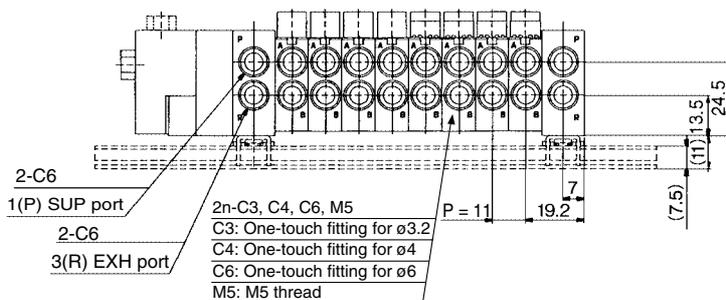

The broken lines indicate the DIN rail mounting style [-D] and the top entry connection [-FU].

Note) 3 position types need two stations.
Cylinder port is located at U side of body.

Dimensions

Formula $L1 = 11n + 15.5$, $L2 = 11n + 60$ n: Station (Maximum 16 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	26.5	37.5	48.5	59.5	70.5	81.5	92.5	103.5	114.5	125.5	136.5	147.5	158.5	169.5	180.5	191.5
L2	71	82	93	104	115	126	137	148	159	170	181	192	203	214	225	236
(L3)	100	100	112.5	125	137.5	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5
(L4)	110.5	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273

How to Order Valves

VQ1 1 3 0 Y 5 C6

Series VQ1000
Type of actuation

1	2 position single
2	2 position double (Latching)
3 ^{Note}	3 position closed center
4 ^{Note}	3 position exhaust center
5 ^{Note}	3 position pressure center

Note) 3 position types need two stations.

Seal

0	Metal seal
1	Rubber seal

Note) For negative common specifications, refer to "Option" on page 2-4-29.

Function

Symbol	Specifications	DC	AC
Nil	Standard type	(1.0 W)	○ ⁽¹⁾
H ⁽²⁾	High pressure type	(1.5 W)	—
Y ⁽²⁾	Low wattage type	(0.5 W)	—

Note 1) For power consumption of AC type, refer to page 2-4-10.

Note 2) Except double (latching).

Cylinder port

C3	With One-touch fitting for ø3.2
C4	With One-touch fitting for ø4
C6	With One-touch fitting for ø6
M5	M5 thread

Note) For inch-size One-touch fittings, refer to "Option" on page 2-4-29.

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)

Note) A manual override for pilot valve is provided to the standard model for double type.

Coil voltage

1	100 VAC (50/60 Hz)
2	200 VAC (50/60 Hz)
3	110 VAC (50/60 Hz)
4	220 VAC (50/60 Hz)
5	24 VDC
6	12 VDC

Light/Surge voltage suppressor

Nil	Yes
E	None

How to Order Manifold Assembly


Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>

D-sub connector kit with 3 m cable
VV5Q13-08FU2... 1 set — Manifold base no.
*VQ1130-5-C6... 4 sets — Valve part no. (Stations 1 to 4)
*VQ1230-5B-C6... 4 sets — Valve part no. (Stations 5 to 8)

Prefix the asterisk to the part nos. of the solenoid valve, etc.

Write sequentially from the 1st station on the D side. When part nos. written collectively are complicated, specify by using the manifold specification sheet.

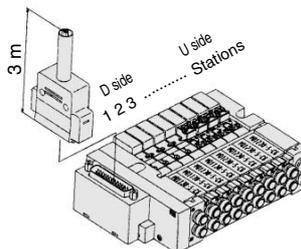

VQC

SQ

VQ0


VQ4

VQ5

VQZ

VQD

P VQ1000 Kit (Flat ribbon cable connector)

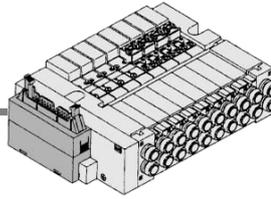


- MIL flat ribbon cable connector reduces installation labor for electrical connection.
- Using the connector for flat ribbon cable (26P), (10P, 16P, 20P as an option) conforming to MIL standard permits the use of connectors put on the market and gives a wide interchangeability.
- Top or side receptacle position can be selected in accordance with the available mounting space.
- Maximum stations are 16.

Series	Port location	Porting specifications		Applicable stations
		1(P), 3(R)	4(A), 2(B)	
VQ1000	Side	C6	C3, C4, C6, M5	Max. 16 stations

Flat Ribbon Cable (26 pins)


Cable assembly

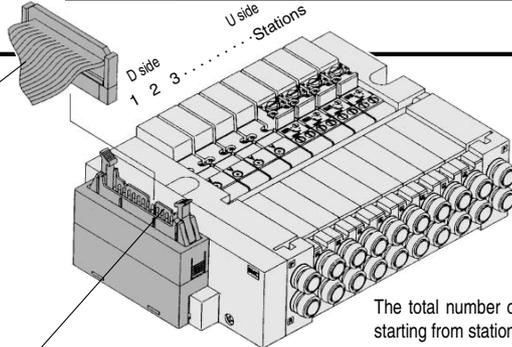

The total number of stations is tabulated starting from station one on the D side.

AXT100-FC26-¹/₂/₃

(Flat ribbon cable connector assembly can be ordered individually or included in a specific manifold model no. Refer to How to Order Manifold.

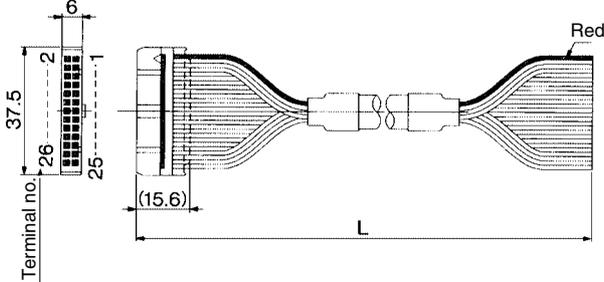

Flat Ribbon Cable Connector Assembly (Option)

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-FC26-1	Cable 26 core x 28AWG
3 m	AXT100-FC26-2	
5 m	AXT100-FC26-3	

* For other commercial connectors, use a 26 pins type with strain relief conforming to MIL-C-83503.

Connector manufacturers' example

- Sumitomo 3M Limited
- Fujitsu Limited
- Japan Aviation Electronics Industry, Ltd.
- J.S.T. Mfg. Co., Ltd.
- Oki Electric Cable Co., Ltd.



Note) Types with 10, 16, or 20 pin are also available. For details, refer to page 2-4-28.

Electrical wiring specifications

Flat ribbon cable connector	Terminal no.	Polarity
1 station {	SOLA 1	(+)
	SOLB 2	(-)
	SOLA 3	(+)
	SOLB 4	(-)
2 stations {	SOLA 5	(+)
	SOLB 6	(-)
3 stations {	SOLA 7	(+)
	SOLB 8	(-)
4 stations {	SOLA 9	(+)
	SOLB 10	(-)
5 stations {	SOLA 11	(+)
	SOLB 12	(-)
6 stations {	SOLA 13	(+)
	SOLB 14	(-)
7 stations {	SOLA 15	(+)
	SOLB 16	(-)
8 stations {	SOLA 17	(+)
	SOLB 18	(-)
9 stations {	SOLA 19	(+)
	SOLB 20	(-)
10 stations {	SOLA 21	(+)
	SOLB 22	(-)
11 stations {	SOLA 23	(+)
	SOLB 24	(-)
12 stations {	COM. 25	(-)
	COM. 26	(+)

Triangle mark indicator position

As the standard electrical wiring specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 12 stations or less, regardless of valve and option types. Mixed single and double wiring is available as an option.


Terminal no.	1	2	3	4	5	6	7	8	9	10
SOL	A	B	A	B	A	B	A	B	A	B
Stations	1	2	3	4	5					

The places of asterisk are not used. Double wiring (Standard)



Note) When using the negative common specifications, use valves for negative common. (Refer to page 2-4-29.)

How to Order Manifold

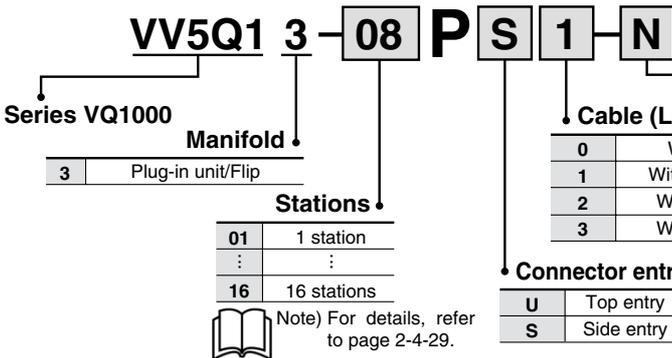

Option


Nil	None
D	DIN rail mounting style
K ⁽²⁾	Special wiring specifications (Except double wiring)
N	With name plate
S	Built-in silencer, direct exhaust (U side only)



Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -DNS

Note 2) Specify the wiring specifications on the manifold specification sheet.

J VQ1000 Kit (Flat ribbon cable connector)

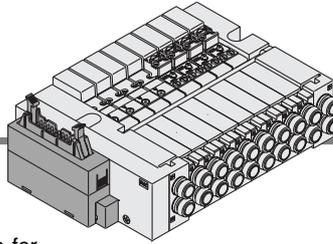


- MIL flat ribbon cable connector reduces installation labor savings for electrical connection.
- Using the connector for flat ribbon cable (20P) conforming to MIL standard permits the use of connectors put on the market and gives a wide interchangeability.
- Top or side receptacle position can be selected in accordance with the available mounting space.
- Maximum stations are 16.

Series	Port location	Porting specifications		Applicable stations
		1(P), 3(R)	4(A), 2(B)	
VQ1000	Side	C6	C3, C4, C6, M5	Max. 16 stations

Flat Ribbon Cable (20 pins)


Cable assembly ●

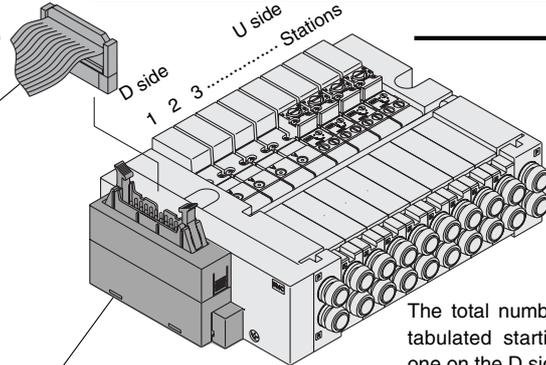

The total number of stations is tabulated starting from station one on the D side.

AXT100-FC20-1 to 3

(Flat ribbon cable connector assembly can be ordered individually or included in a specific manifold model no. Refer to How to Order Manifold.)

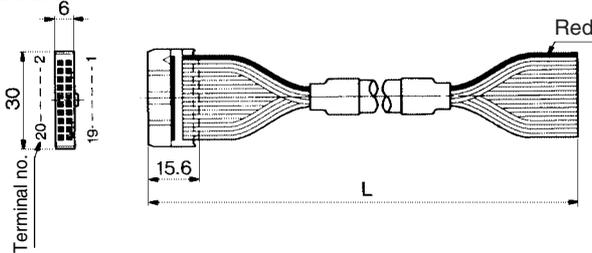

Flat Ribbon Cable Connector Assembly (Option)

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-FC20-1	Cable 20 core x 28AWG
3 m	AXT100-FC20-2	
5 m	AXT100-FC20-3	

* For other commercial connectors, use a 20 pins with strain relief conforming to MIL-C-83503.

Connector manufacturers' example

- Hirose Electric Co., Ltd.
- Japan Aviation Electronics Industry, Ltd.
- Oki Electric Cable Co. Ltd.
- Sumitomo 3M Limited
- J.S.T. Mfg. Co., Ltd.
- Fujitsu Limited

Electrical wiring specifications

Flat ribbon cable connector	Terminal no.	Polarity		
	1 station SOL.A 20	(-)	(+)	
	SOL.B 18	(-)	(+)	
	2 stations SOL.A 16	(-)	(+)	
	SOL.B 14	(-)	(+)	
	3 stations SOL.A 12	(-)	(+)	
	SOL.B 10	(-)	(+)	
	4 stations SOL.A 8	(-)	(+)	
	SOL.B 6	(-)	(+)	
	5 stations SOL.A 19	(-)	(+)	
	SOL.B 17	(-)	(+)	
	6 stations SOL.A 15	(-)	(+)	
	SOL.B 13	(-)	(+)	
	7 stations SOL.A 11	(-)	(+)	
	SOL.B 9	(-)	(+)	
	8 stations SOL.A 7	(-)	(+)	
	SOL.B 5	(-)	(+)	
		4		
		3		
		COM 2	(+)	(-)
		COM 1	(+)	(-)



Note) When using the negative common specifications, use valves for negative common. (Refer to page 2-4-29.)

As the standard electrical wiring specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 8 stations or less, regardless of valve and option types. Mixed single and double wiring is available as an option. For details, refer to page 2-4-29.



Note) When using the negative common specifications, use valves for negative common. (Refer to page 2-4-29.)

How to Order Manifold

VV5Q1 3-08 JS1-N

Series VQ1000 Manifold

3 Plug-in unit/Flip

Stations

01	1 station
⋮	⋮
16	16 stations

Note) For details, refer to page 2-4-29.



Cable (Length)

0	Without cable
1	With cable (1.5 m)
2	With cable (3 m)
3	With cable (5 m)

Connector entry direction

U	Top entry
S	Side entry

Option


Nil	None
D	DIN rail mounting style
K ⁽²⁾	Special wiring specifications (Except double wiring)
N	With name plate
S	Built-in silencer, direct exhaust (U side only)




Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -DNS

Note 2) Specify the wiring specifications on the manifold specification sheet.

Plug-in Unit: Flip Type Series VQ1000

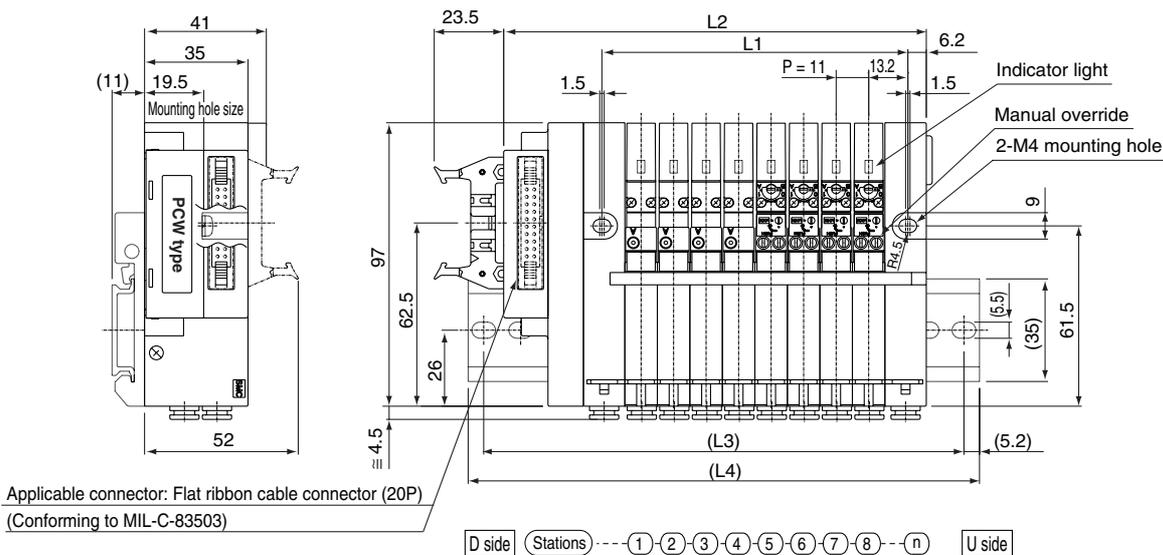

Applicable connector: Flat ribbon cable connector (20P)
(Conforming to MIL-C-83503)

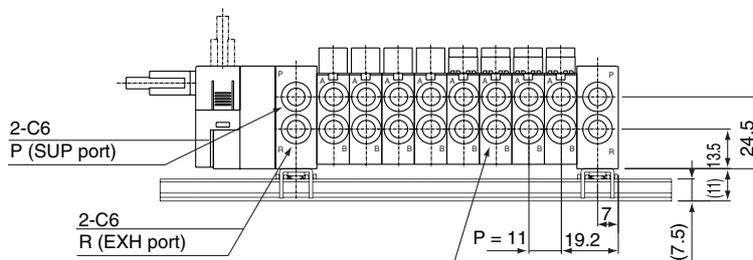

- 2n-C3, C4, C6, M5
- C3: One-touch fitting for $\phi 3.2$
- C4: One-touch fitting for $\phi 4$
- C6: One-touch fitting for $\phi 6$
- M5: M5 thread

The broken lines indicate the DIN rail mounting style [-D] and the top entry connection [-PU].

Note) 3 position types need two station.
Cylinder port is located at U side of body.

Dimensions

Formula $L1 = 11n + 15.5$, $L2 = 11n + 55$ n: Station (Maximum 16 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	26.5	37.5	48.5	59.5	70.5	81.5	92.5	103.5	114.5	125.5	136.5	147.5	158.5	169.5	180.5	191.5
L2	66	77	88	99	110	121	132	143	154	165	176	187	198	209	220	231
(L3)	87.5	100	112.5	125	137.5	150	162.5	162.5	175	187.5	200	212.5	225	237.5	250	262.5
(L4)	98	110.5	123	135.5	148	160.5	173	173	185.5	198	210.5	223	235.5	248	260.5	273

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

How to Order Valves

VQ1 1 3 0 Y 5 C6

Series VQ1000
Type of actuation

1	2 position single
2	2 position double (Latching)
3 ^{Note)}	3 position closed center
4 ^{Note)}	3 position exhaust center
5 ^{Note)}	3 position pressure center

Note) 3 position types need two station. **Seal**

0	Metal seal
1	Rubber seal

Note) For negative common specifications, refer to "Option" on page 2-4-29.

Function

Symbol	Specifications	DC	AC
Nil	Standard type	(1.0 W)	○ ⁽¹⁾
H ⁽²⁾	High pressure type	(1.5 W)	—
Y ⁽²⁾	Low wattage type	(0.5 W)	—

Note 1) For power consumption of AC type, refer to page 2-4-10.
Note 2) Except double (latching).

Cylinder port

C3	With One-touch fitting for $\phi 3.2$
C4	With One-touch fitting for $\phi 4$
C6	With One-touch fitting for $\phi 6$
M5	M5 thread

For inch-size One-touch fittings, refer to "Option" on page 2-4-29.

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)

Note) A manual override for pilot valve is provided to the standard model for double type.

Coil voltage

1	100 VAC (50/60 Hz)
3	110 VAC (50/60 Hz)
5	24 VDC
6	12 VDC

Light/Surge voltage suppressor


Nil	Yes
E	None

How to Order Manifold Assembly


Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>
Flat ribbon cable kit with 3 m cable
VV5Q13-08JU2...1 set — Manifold base no.
*VQ1130-5-C6...4 sets — Valve part no. (Stations 1 to 4)
*VQ1230-5B-C6...4 sets — Valve part no. (Stations 5 to 8)

Prefix the asterisk to the part nos. of the solenoid valve, etc. Write sequentially from the 1st station on the D side. When part nos. written collectively are complicated, specify by using the manifold specification sheet.

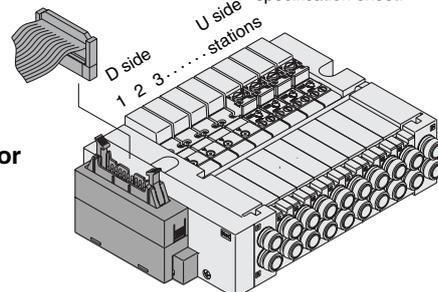


VQ1000 Kit (Lead wire cable)

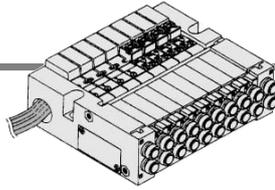


- It is the standard type which lead wire is extracted directly.
- Maximum stations are 16.

Series	Porting specifications			Applicable stations
	Port location	Port size		
VQ1000	Side	1(P), 3(R)	4(A), 2(B)	Max. 16 stations

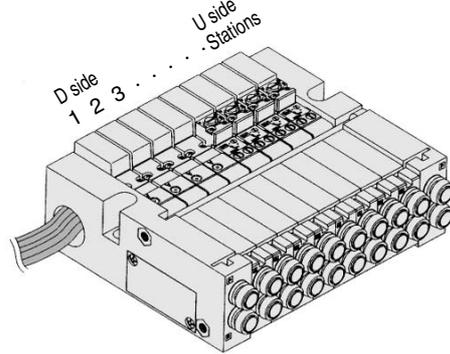

● Wiring specifications: Positive COM


- Irrespective of the valve mounted, three lead wires are attached to each station. The red wire is for COM connection.

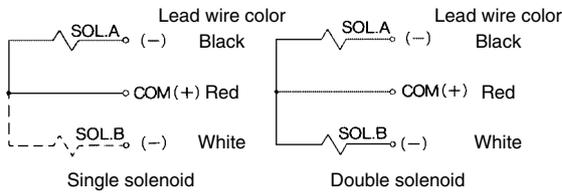

3 position uses two stations. The A side solenoid of a 3 position valve is connected to SOL. A at the station with the smaller number in the above figure and the B side solenoid to SOL. A at the next station.


Lead wire color	Black	White	Black	White	Black	White	Black	White
SOL. ...	A B	A B	A B _(*)					
Stations	1	2	3	4	5			

The places of asterisk are not used.

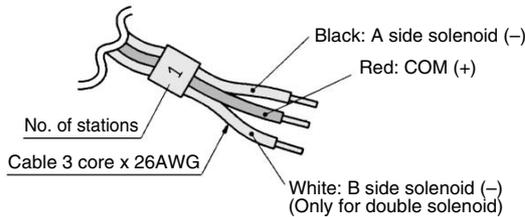

● Wiring specifications: Negative COM (Option)


- Irrespective of the valve mounted, three lead wires are attached to each station. The black wire is for COM connection.

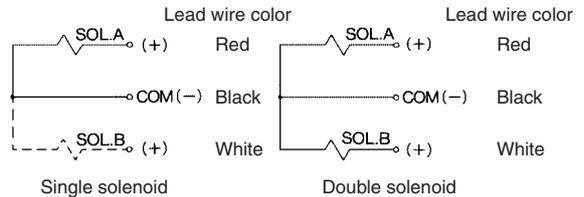

3 position uses two stations. The A side solenoid of a 3 position valve is connected to SOL. A at the station with the smaller number in the above figure and the B side solenoid to SOL. A at the next station.

Lead wire color	Red	White	Red	White	Red	White	Red	White
SOL. ...	A B	A B	A B _(*)					
Stations	1	2	3	4	5			

The places of asterisk are not used.

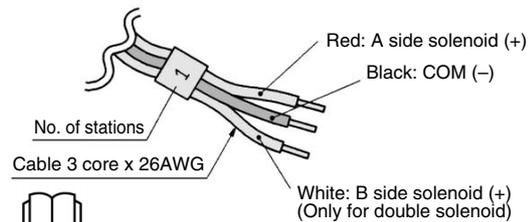

Note) When using the negative common specifications, use valves for negative common. (Refer to page 2-4-29.)

How to Order Manifold

VV5Q1 3-06 L D 1-N

Series VQ1000

Manifold
3 Plug-in unit/Flip

Stations

01	1 station
⋮	⋮
16	16 stations

Cable (Length)

0	With cable (0.6 m)
1	With cable (1.5 m)
2	With cable (3 m)

Lead wire entry direction


D	Entry on D side	Max. 16
U	Entry on U side	stations

Option


Nil	None
D	DIN rail mounting style
N	With name plate
S	Built-in silencer, direct exhaust

Note) When two or more symbols are specified, indicate them alphabetically. Example) -DNS

Plug-in Unit: Flip Type Series VQ1000

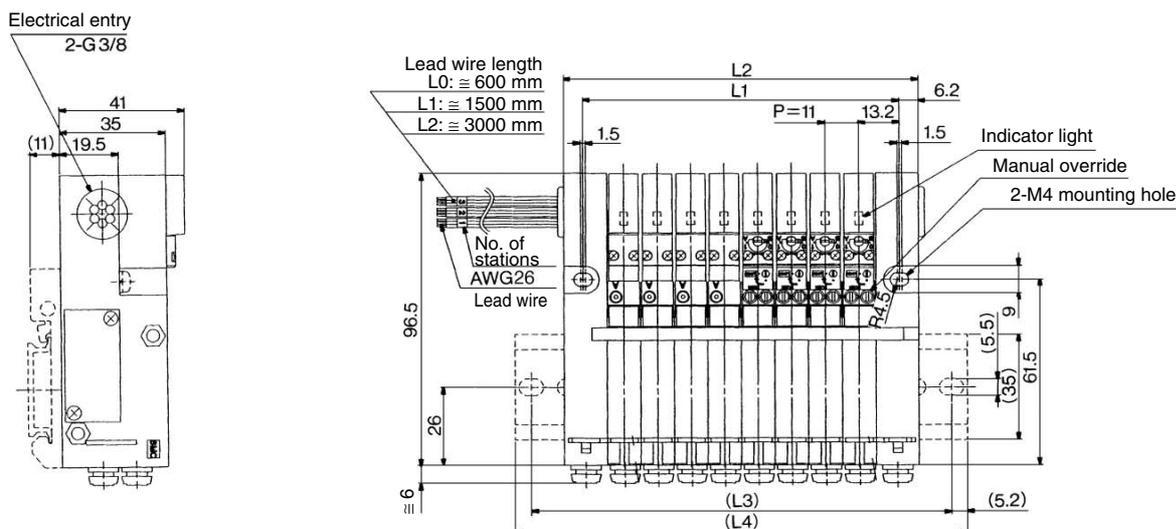

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

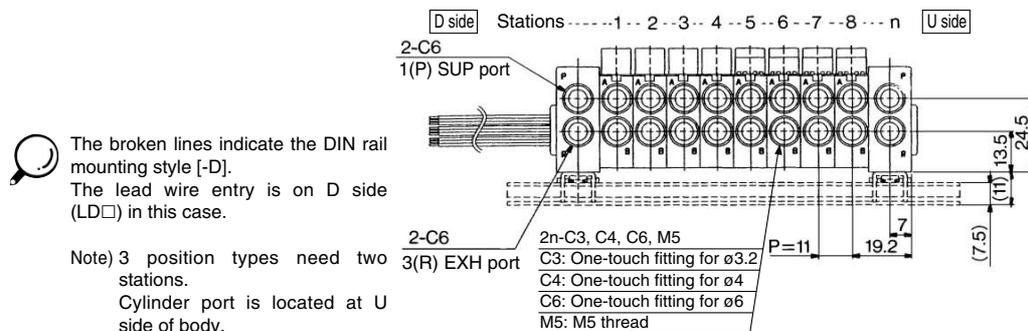

The broken lines indicate the DIN rail mounting style [-D].
The lead wire entry is on D side (LD□) in this case.

Note) 3 position types need two stations.
Cylinder port is located at U side of body.

Dimensions

Formula $L1 = 11n + 15.5$, $L2 = 11n + 28$ n: Station (Maximum 16 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	26.5	37.5	48.5	59.5	70.5	81.5	92.5	103.5	114.5	125.5	136.5	147.5	158.5	169.5	180.5	191.5
L2	39	50	61	72	83	94	105	116	127	138	149	160	171	182	193	204
(L3)	62.5	75	87.5	100	112.5	125	125	137.5	150	162.5	175	187.5	200	212.5	212.5	225
(L4)	73	85.5	98	110.5	123	135.5	135.5	148	160.5	173	185.5	198	210.5	223	223	235.5

How to Order Valves

VQ1 1 3 0 Y 5 [] [] C6

Series VQ1000 Type of actuation

1	2 position single
2	2 position double (Latching)
3 ^{Note)}	3 position closed center
4 ^{Note)}	3 position exhaust center
5 ^{Note)}	3 position pressure center

Note) 3 position types need two stations. **Seal**

0	Metal seal
1	Rubber seal

Note) For negative common specifications, refer to "Option" on page 2-4-29. **Function**

Symbol	Specifications	DC	AC
Nil	Standard type	(1.0 W) ○ ⁽¹⁾	○ ⁽¹⁾
H ⁽²⁾	High pressure type	(1.5 W) ○	—
Y ⁽²⁾	Low wattage type	(0.5 W) ○	—

Note 1) For power consumption of AC type, refer to page 2-4-10.
Note 2) Except double (latching).

Cylinder port

C3	With One-touch fitting for ø3.2
C4	With One-touch fitting for ø4
C6	With One-touch fitting for ø6
M5	M5 thread

Note) For inch-size One-touch fittings, refer to "Option" on page 2-4-29.

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)

Note) A manual override for pilot valve is provided to the standard model for double type.

Coil voltage

1	100 VAC (50/60 Hz)
2	200 VAC (50/60 Hz)
3	110 VAC (50/60 Hz)
4	220 VAC (50/60 Hz)
5	24 VDC
6	12 VDC

Light/Surge voltage suppressor

Nil	Yes
E	None


How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.


<Example>

Lead wire kit
VV5Q13-08LD2...1 set — Manifold base part no.
*VQ1230-5-C6...4 sets — Valve part no. (Stations 1 to 4)
*VQ1230-5B-C6...4 sets — Valve part no. (Stations 5 to 8)

Prefix the asterisk to the part nos. of the solenoid valve, etc. Write sequentially from the 1st station on the D side. When part nos. written collectively are complicated, specify by using the manifold specification sheet. specify by using a manifold specification form.

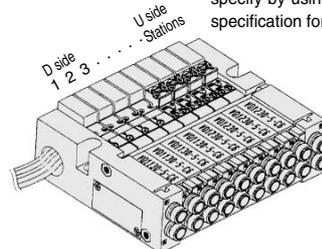


S VQ1000 Kit (Serial transmission unit)

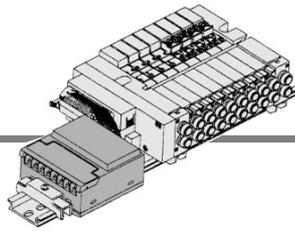

- The serial transmission system reduces wiring work, while minimizing wiring and saving space.
- The system comes in an type SA (generic for small scale systems) for equipment with a small number of I/O points, or 32 points max., type SB (applicable to Mitsubishi Electric models) for controlling 512 I/O points max., type SC (applicable to OMRON models), and type SD (applicable to SHARP models; 504 points max.).
- 16 stations max. (Specify a model with 9 to 16 stations by using the manifold specification sheet.)

Series	Porting specifications		Applicable stations
	Port location	Port size	
VQ1000	Side	1(P), 3(R)	4(A), 2(B)
		C6	C3, C4, C6, M5

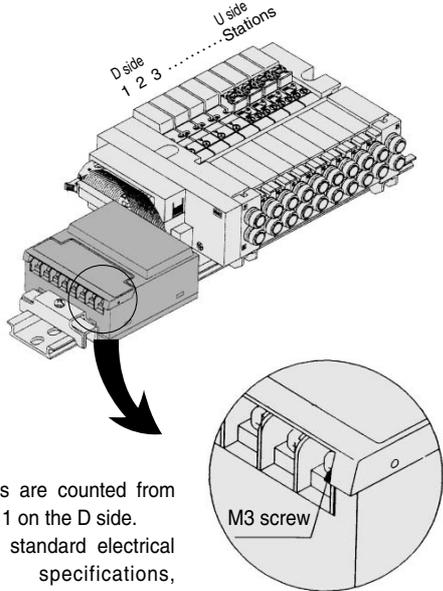


- Stations are counted from station 1 on the D side.
- As the standard electrical wiring specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 8 stations or less, regardless of valve and option types. Mixed single and double wiring is available as an option. For details, refer to page 2-4-29.

	Type SA With general type SI unit (Series EX300)	Type SB Mitsubishi Electric Corporation MELSECNET/MINI-S3 Data Link System																		
Name of terminal block (LED)	<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>TRD</td> <td>Lighting during data reception</td> </tr> <tr> <td>RUN/ERR</td> <td>Blinking when received data is normal; Lighting when data reception</td> </tr> </tbody> </table>	LED	Description	TRD	Lighting during data reception	RUN/ERR	Blinking when received data is normal; Lighting when data reception	<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>POWER</td> <td>Lighting when power is turned ON</td> </tr> <tr> <td>RUN</td> <td>Lighting when data transmission with the master station is normal</td> </tr> <tr> <td>RD</td> <td>Lighting during data reception</td> </tr> <tr> <td>SD</td> <td>Lighting during data transmission</td> </tr> <tr> <td>ERR.</td> <td>Lighting when reception data error occurs. Light turns off when the error is corrected.</td> </tr> </tbody> </table>	LED	Description	POWER	Lighting when power is turned ON	RUN	Lighting when data transmission with the master station is normal	RD	Lighting during data reception	SD	Lighting during data transmission	ERR.	Lighting when reception data error occurs. Light turns off when the error is corrected.
LED	Description																			
TRD	Lighting during data reception																			
RUN/ERR	Blinking when received data is normal; Lighting when data reception																			
LED	Description																			
POWER	Lighting when power is turned ON																			
RUN	Lighting when data transmission with the master station is normal																			
RD	Lighting during data reception																			
SD	Lighting during data transmission																			
ERR.	Lighting when reception data error occurs. Light turns off when the error is corrected.																			
Note	<ul style="list-style-type: none"> • T unit Can be connected with PLC I/O card for serial transmission. EX300-TMB1.... For models of Mitsubishi Electric Corporation EX300-TTA1.... For models of OMRON Corporation EX300-TFU1.... For models of Fuji Electric Co., Ltd. EX300-T001... For general models * Up to 32 points per unit. • No. of output points, 16 points 	<ul style="list-style-type: none"> • Master station: PLC made by Mitsubishi Electric Corporation Series MELSEC-A AJ71PT32-S3, AJ71T32-S3 A1SJ71PT32-S3 * Max. 64 stations, connected to remote I/O stations (Max. 512 points). • No. of output points, 16 points. No. of sta. occupied, 2 stations 																		

* For details on specifications and handling, refer to the separate technical instruction manual.

Item	Specifications
External power supply	24 VDC±10%
Current consumption (Internal unit)	SA, SB, SD, SFI, SH: 0.1 A/SC: 0.3 A

How to Order Manifold

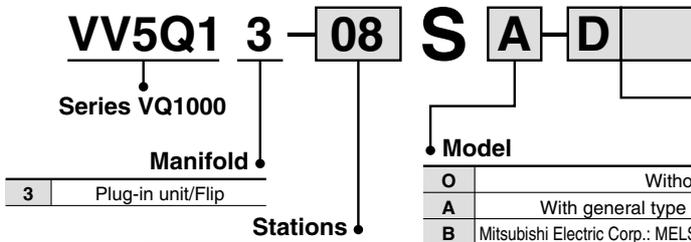

01	1 station
⋮	⋮
08	8 stations (Double)
16	16 stations (Single)

Note) For details, refer to page 2-4-29.

Note) Please consult with SMC for the following serial transmission kits: Matsushita Electric Works, Ltd.; Rockwell Automation, Inc.; SUNX Corporation, Fuji Electric Co., Ltd.; OMRON Corporation.

* The dust-protected type SI unit is applicable, too. For details, please contact SMC.

Option

D ⁽²⁾	DIN rail mounting style
K ⁽³⁾	Special wiring specifications (Except double wiring)
N	With name plate
S	Built-in silencer, direct exhaust (U side only)

Note 1) When two or more symbols are specified, indicate them alphabetically.
Example) -DNS

Note 2) S kits are DIN rail mounting styles, so include suffix D.

Note 3) Specify the wiring specifications on the manifold specification sheet.

Plug-in Unit: Flip Type Series VQ1000

● SI unit output and coil numbering

<Wiring example 1> Double wiring (Standard)

SI unit output no. (Locked by double solenoid valve.)	0	1	2	3	4	5	6	7	8	9
SOL. location	A	B	A	B	A	B (*)	A	B (*)	A	B (*)
SI unit	Double		Double		Single	A side B side 3 position				
Stations	1		2		3	4		5		

The places of asterisk are not used.

3 position uses two stations for wiring. The A side solenoid of 3 position valve is connected to A at the station with the smaller number in the above figure.

<Wiring example 2>

Single/Double Mixed Wiring (Option)
Mixed wiring is available as an option.
Use the manifold specification sheet to specify.

SI unit output no. (Locked by double solenoid valve.)	0	1	2	3	4	5	6	
SOL. location	A	B	A	B	A	B	A	B
SI unit	Double		Double		Single	A side B side 3 position		
Stations	1		2		3	4		5

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

	Type SC OMRON Corporation SYSBUS Wire System	Type SD SHARP Corporation Satellite I/O Link System																
Name of terminal block (LED)	<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>RUN</td> <td>Lights when transmission is normal and PLC is in operation mode</td> </tr> <tr> <td>T/R ERR</td> <td>Blinks during data transmission/reception ON when transmission is abnormal</td> </tr> </tbody> </table>	LED	Description	RUN	Lights when transmission is normal and PLC is in operation mode	T/R ERR	Blinks during data transmission/reception ON when transmission is abnormal	<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>POWER</td> <td>ON when power supply is ON</td> </tr> <tr> <td>RUN</td> <td>Lights when power is ON and slave stations are operating normally</td> </tr> <tr> <td>ERROR</td> <td>Lights when slave station switch setting is abnormal, communication is abnormal, PLC stopped and defective slave unit</td> </tr> <tr> <td>R.SET HOLD</td> <td>ON for master unit control input</td> </tr> </tbody> </table>	LED	Description	POWER	ON when power supply is ON	RUN	Lights when power is ON and slave stations are operating normally	ERROR	Lights when slave station switch setting is abnormal, communication is abnormal, PLC stopped and defective slave unit	R.SET HOLD	ON for master unit control input
LED	Description																	
RUN	Lights when transmission is normal and PLC is in operation mode																	
T/R ERR	Blinks during data transmission/reception ON when transmission is abnormal																	
LED	Description																	
POWER	ON when power supply is ON																	
RUN	Lights when power is ON and slave stations are operating normally																	
ERROR	Lights when slave station switch setting is abnormal, communication is abnormal, PLC stopped and defective slave unit																	
R.SET HOLD	ON for master unit control input																	
Note	<ul style="list-style-type: none"> Master station unit: OMRON PLC, SYSMAC C(CV) series, Types C500-RM201 and C200H-RM201 * 32 units max., transmission terminal connection (512 points max.) No. of output points, 16 points 	<ul style="list-style-type: none"> Master station unit: SHARP's PLC, New Satellite Series W, ZW-31LM, New Satellite Series JW, JW-23LM, JW-31LM * Max. 31 units, I/O slave stations connected (504 points max.) No. of output points, 16 points 																

How to Order Valves

VQ1 1 3 0 Y - 5 - C6

Series VQ1000
Type of actuation

1	2 position single
2	2 position double (Latching)
3 (Note)	3 position closed center
4 (Note)	3 position exhaust center
5 (Note)	3 position pressure center

Note) 3 position types need two stations.

Seal

0	Metal seal
1	Rubber seal

Function

Symbol	Specifications	DC
Nil	Standard type	(1.0 W)
H (Note)	High pressure type	(1.5 W)
Y (Note)	Low wattage type	(0.5 W)

Note) Except double (latching)

Cylinder port

C3	With One-touch fitting for ø3.2
C4	With One-touch fitting for ø4
C6	With One-touch fitting for ø6
M5	M5 thread

Note) For inch-size One-touch fittings, refer to "Option" on page 2-4-29.

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)

Note) A manual override for pilot valve is provided to the standard model for double type.

Coil voltage

5	24 VDC/With indicator light/surge voltage suppressor
---	--

How to Order Manifold Assembly


Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>

Serial transmission kit
VV5Q13-08SA-D...1 set — Manifold base part no.
*VQ1230-5-C6.....4 sets — Valve part no. (Stations 1 to 4)
*VQ1230-5B-C6... 4 sets — Valve part no. (Stations 5 to 8)



Prefix the asterisk to the part nos. of the solenoid valve, etc.

Write sequentially from the 1st station on the D side. When part nos. written collectively are complicated, specify by using the manifold specification sheet.

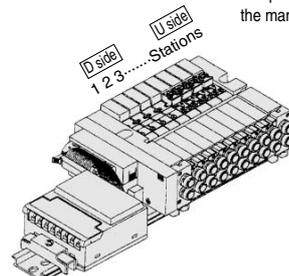



VQ1000 Kit (Serial transmission unit)

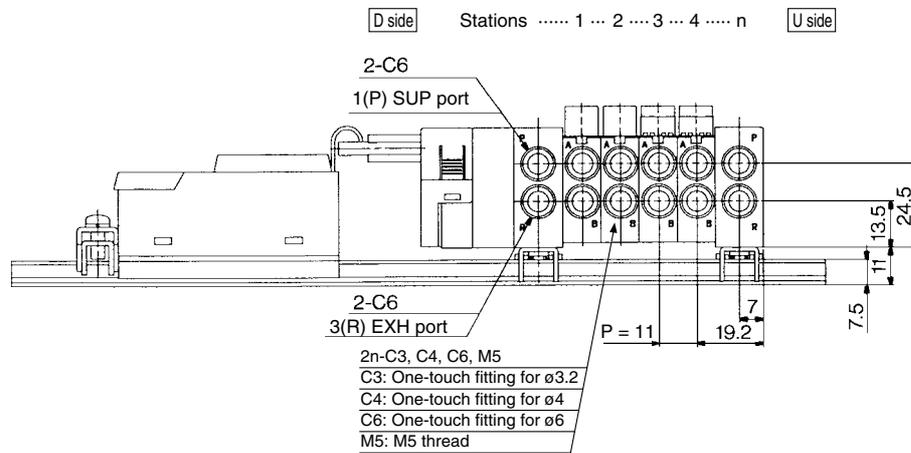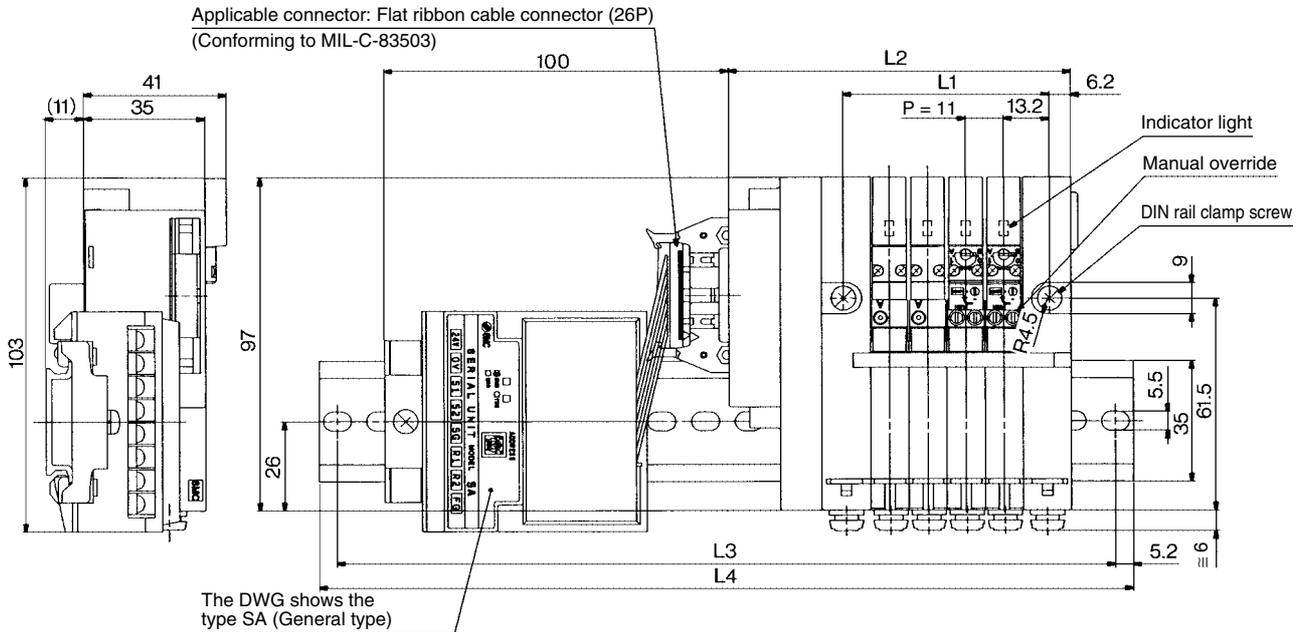

Note) 3 position types need two stations.
Cylinder port is located at U side body.

Dimensions


Formula $L1 = 11n + 15.5$, $L2 = 11n + 55$ n: Station (Maximum 16 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	26.5	37.5	48.5	59.5	70.5	81.5	92.5	103.5	114.5	125.5	136.5	147.5	158.5	169.5	180.5	191.5
L2	66	77	88	99	110	121	132	143	154	165	176	187	198	209	220	231
L3	187.5	200	212.5	225	237.5	250	262.5	275	275	287.5	300	312.5	325	337.5	350	362.5
L4	198	210.5	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	360.5	373

Manifold Option Parts

Blanking plate assembly VVQ1000-10A-3

It is used when a blanking plate is mounted to a manifold in advance for possible valve mounting, etc.

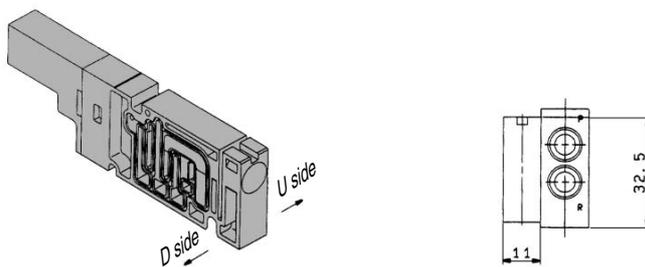


Individual SUP spacer VVQ1000-P-3-C6

When the same manifold is to be used for different pressures, individual SUP spacers are used as SUP ports for different pressures. (One station space is occupied.)

Since the SUP passage on the spacer's D side is blocked in advance, it is mounted on the D side of the valve U side. (Refer to the application example.)

* Specify the spacer mounting position and SUP block plate mounting position on the manifold specification sheet.

* Electric wiring is connected to the position of the manifold station where the individual SUP spacer is mounted.

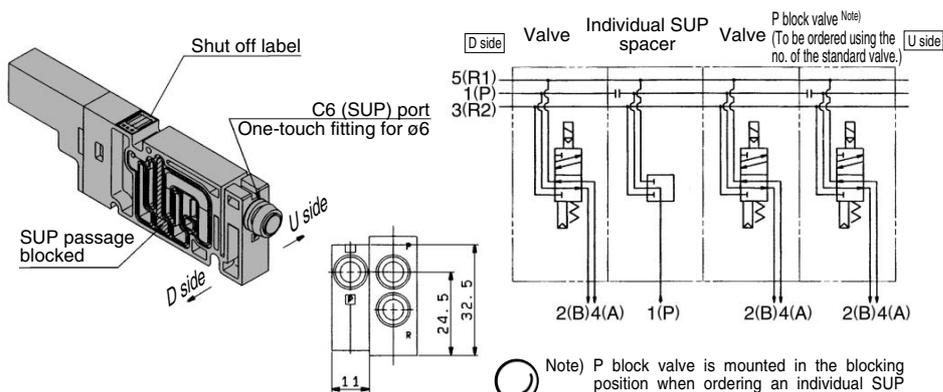

Note) P block valve is mounted in the blocking position when ordering an individual SUP spacer incorporated with a manifold. When separately ordering an individual SUP spacer, separately order a R block valve.


Individual EXH spacer VVQ1000-R-3-C6

When valve exhaust affects other stations due to the circuit configuration, this spacer is used for individual valve exhaust. (1 station space is occupied.)

Since the EXH passage on the spacer's D side is blocked in advance, it is mounted on the D side of the valve for individual supply while blocking the valves U side. (Refer to the application example.)

* Specify the spacer mounting position and EXH block plate mounting position on the manifold specification sheet.

* Electric wiring is connected to the position of the manifold station where the individual EXH spacer is mounted.

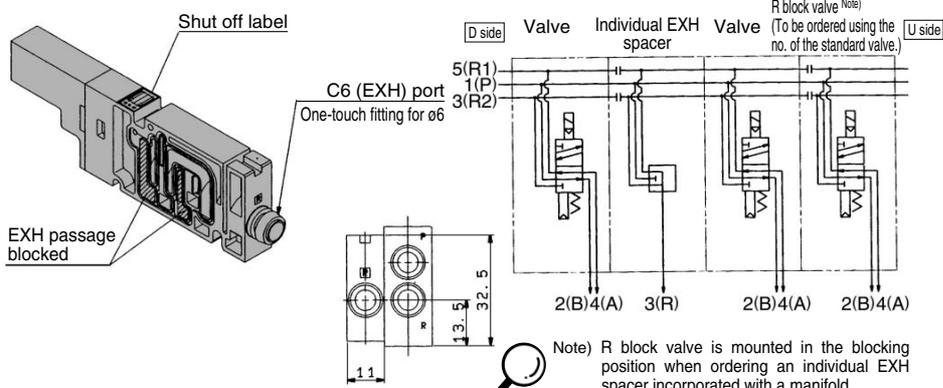


Note) R block valve is mounted in the blocking position when ordering an individual EXH spacer incorporated with a manifold. When separately ordering an individual EXH spacer, separately order a R block valve.

P R Block valve VQ1₂3₁⁰-□-□-□-□-_{PR}

For a flip plug-in unit, block plate is built in the valve for blocking SUP and EXH passages. Since the no. is classified by the passage to be blocked, specify it by attaching the option no. to the valve no. The block valve is constructed so that D sides of SUP and EXH passages are blocked.


* Specify the number of stations on the manifold specification sheet.

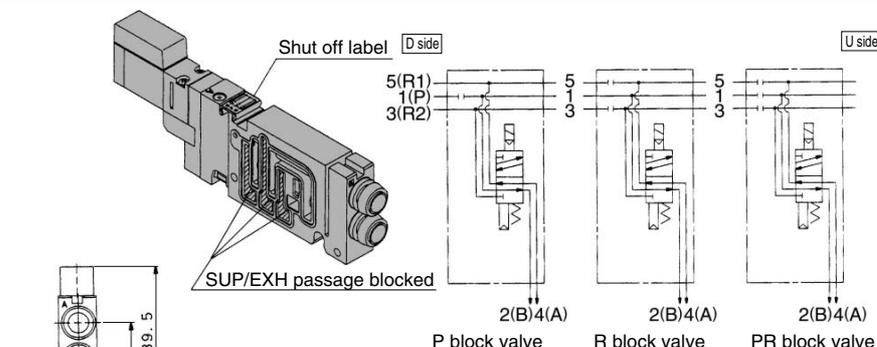

<Shut off label>

When using block plates for SUP, EXH passage, indication label for confirmation of the blocking position from outside is attached. (One label for each)

* When ordering a block plate incorporated with the manifold no., a block indication label is attached to the manifold.

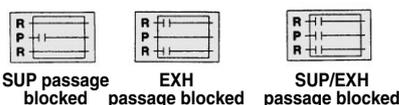

For SUP passage block	VQ1 ₂ 3 ₁ ⁰ -□-□-□-□- _P
For EXH passage block	VQ1 ₂ 3 ₁ ⁰ -□-□-□-□- _R
For SUP/EXH passage block	VQ1 ₂ 3 ₁ ⁰ -□-□-□-□- _{PR}

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD



Series VQ1000

Manifold Option Parts

Name plate [-N3]

VVQ1000-N3-Station (1 to Max. stations)

It is a transparent resin plate for placing a label that indicates solenoid valve function, etc. Insert it into the groove on the side of the end plate and bend it as shown in the figure.

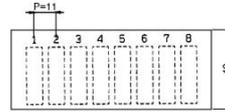
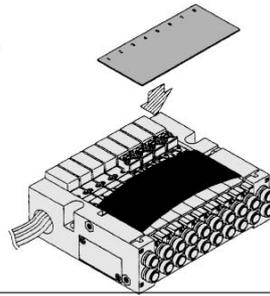


* When ordering assemblies incorporated with a manifold, add suffix N to the manifold no.

Blanking plug

KQ2P-²³/₀₄/₀₆

It is inserted into an unused cylinder port and SUP/EXH ports. Purchasing order is available in units of 10 pieces.

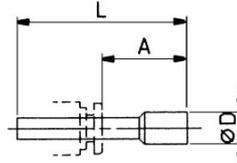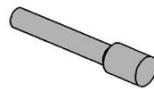

Dimensions



Applicable fittings size ød	Model	A	L	D
3.2	KQ2P-23	16	31.5	5
4	KQ2P-04	16	32	6
6	KQ2P-06	18	35	8

DIN rail mounting bracket

VVQ1000-57A-3

It is used for mounting a manifold on a DIN rail. The DIN rail mounted bracket is fixed to the manifold end. (The specification is the same as that for the option "-D".)

1 set of DIN rail mounting bracket is used for 1 manifold (2 DIN rail mounting brackets).

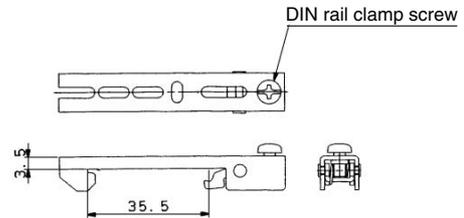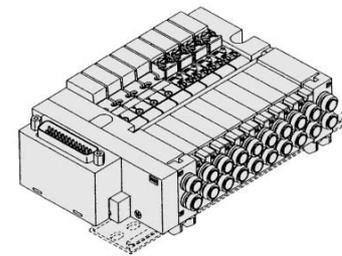

* When ordering assemblies incorporated with a manifold, add suffix -D to the manifold no.

Built-in silencer, Direct exhaust [-S]


This is an exhaust port on top of the manifold end plate. The built-in silencer exhibits an excellent noise suppression effect.

F, P and S kits are provided with single exhaust on U side.

Note) A large quantity of drainage generated in the air.



• For maintenance, refer to page 2-4-27.


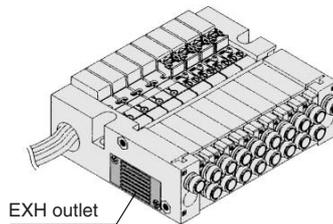


* When ordering assemblies incorporated with a manifold, add suffix -S to the manifold no.

Silencer

AN103-X233

This is inserted into the centralized type EXH port (One-touch fitting).

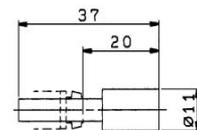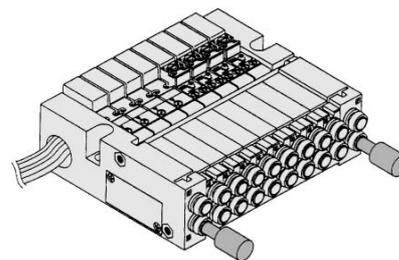

Dimensions

Series	Applicable fittings size ød	Model	A	L	D	Effective area (mm ²)	Noise reduction (dB)
VQ1000	6	AN103-X233	20	37	11	7	25



Port plug

VVQ0000-58A

The plug is used to block the cylinder port when using a 4 port valve as a 3 port valve.

When ordering it incorporated with a manifold, suffix A or B, the symbol of the plug port, to the valve no.

Example) VQ1130-5L-C6-A
 A port, Plug

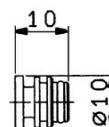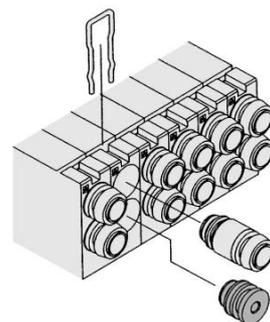

Plug-in Unit: Flip Type Series VQ1000


Double check block (Separated type) VQ1000-FPG-□□

It is used on the outlet side piping to keep the cylinder in the intermediate position for a long time. Combining the double check block with a built-in pilot type double check valve and a 3 position exhaust center solenoid valve will enable the cylinder to stop in the middle or maintain its position for a long time. The combination with a two position single/double solenoid valve will permit this block to be used for preventing the dropping at the cylinder stroke end when the SUP residual pressure is released.

Specifications


Max. operating pressure	0.8 MPa
Min. operating pressure	0.15 MPa
Ambient and fluid temperature	-5 to 50° C
Flow characteristics: C	0.60 dm ³ /(s·bar)
Max. operating frequency	180 CPM

Note) Based on JIS B 8375-1981 (Supply pressure: 0.5 MPa)

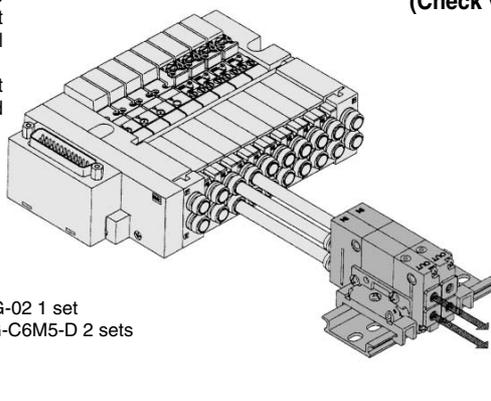

VVQ1000-FPG-02.1 set
*VQ1000-FPG-C6M5-D 2 sets

(Check valve operation principle)

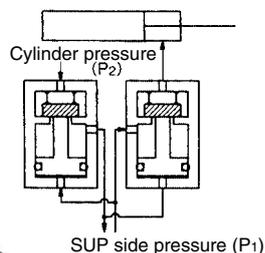

VQC

SQ

VQ0

VQ4


VQ5

VQZ


VQD

Dimensions

Single unit

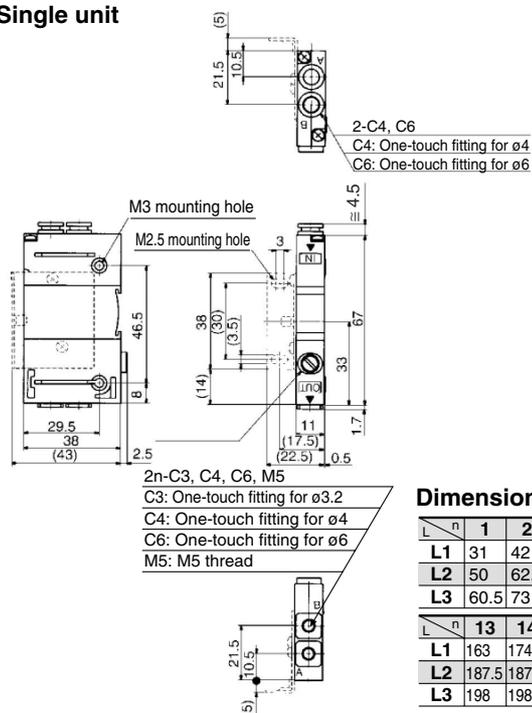

Manifold

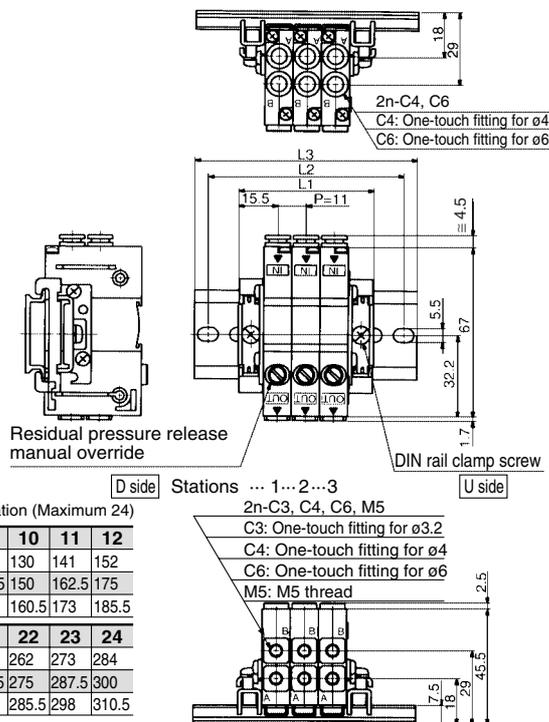

Dimensions

Formula L1 = 11n + 20 n: Station (Maximum 24)

L	n	1	2	3	4	5	6	7	8	9	10	11	12
L1		31	42	53	64	75	86	97	108	119	130	141	152
L2		50	62.5	75	87.5	100	112.5	125	137.5	150	162.5	175	
L3		60.5	73	85.5	98	110.5	123	135.5	148	160.5	173	185.5	

L	n	13	14	15	16	17	18	19	20	21	22	23	24
L1		163	174	185	196	207	218	229	240	251	262	273	284
L2		187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5	300
L3		198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5

How to Order

Double check block

VQ1000-FPG-**C4** **M5** **F**

IN side port size

C4	One-touch fitting for ø4
C6	One-touch fitting for ø6

OUT side port size

M5	M5 thread
C3	One-touch fitting for ø3.2
C4	One-touch fitting for ø4
C6	One-touch fitting for ø6

Option

Nil	None
F	With bracket
D	DIN rail mounting style (For manifold)
N	Name plate

Note) When two or more symbols are specified, indicate them alphabetically. Example) -DN

Manifold

VVQ1000-FPG-**06**


Stations

01	1 station
⋮	⋮
16	16 stations

<Example>

VVQ1000-FPG-06-6 types of manifold
*VQ1000-FPG-C4M5-D, 3 sets
*VQ1000-FPG-C6M5-D, 3 sets

Double Check block

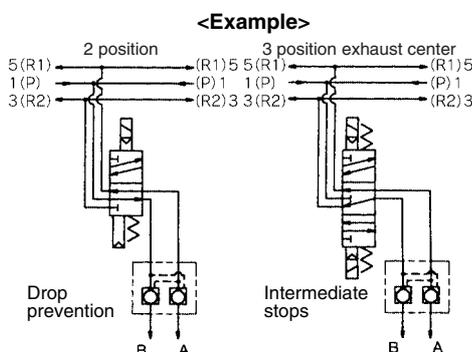

Caution

- Air leakage from the pipe between the valve and cylinder or from the fittings will prevent the cylinder from stopping for a long time. Check the leakage using neutral household detergent, such as dish washing soap. Also check the cylinder's tube gasket, piston packing and rod packing for air leakage.
- Since One-touch fittings allow slight air leakage, screw piping (with M5 thread) is recommended when stopping the cylinder in the middle for a long time.
- Combining double check block with 3 position closed center or pressure center solenoid valve will not work.
- M5 fitting assembly is attached, not incorporated into the double check block. After screwing in the M5 fittings, mount the assembly on the double check block. (Tightening torque: 0.8 to 1.2 N·m)
- If the exhaust of the double check block is throttled too much, the cylinder may not operate properly and may not stop intermediately.
- Set the cylinder load so that the cylinder pressure will be within two times that of the supply pressure.


⚠ Precautions

Be sure to read before handling. For Safety Instructions and Solenoid Valve Precautions, refer to page 2-9-2.


Light/Surge Voltage Suppressor

⚠ Caution

The lighting positions are concentrated on one side for both single solenoid and double (latching) type. In the double (latching) type, A side and B side energization are indicated by two colors which match the colors of the manual overrides.

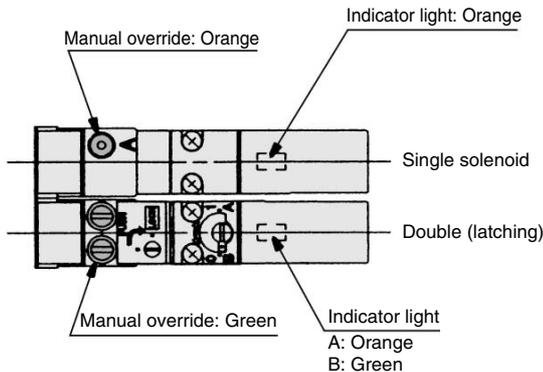

DC type circuit diagram

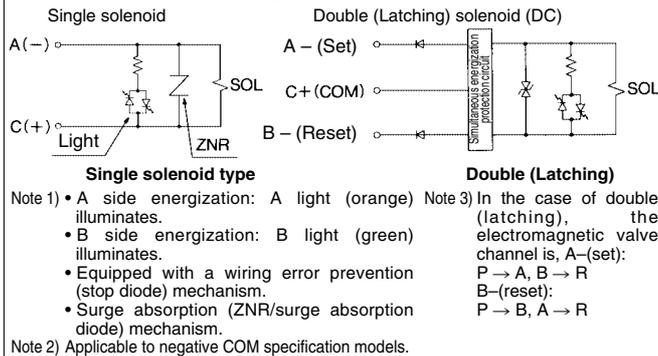

Double (Latching solenoid) Type

⚠ Caution

Different from the conventional double solenoid, the double uses a latching (self-holding system) solenoid. Although the appearance is the same as the single solenoid, it is constructed so that the movable iron core in the solenoid is held in the ON position on A and B sides by instantaneous energization (20 ms or more). The usage and function is the same as the double solenoid.


<Special Cautions for Latching Solenoid>

1. Select the circuit in which ON and OFF signals are not energized simultaneously.
2. 20 ms energization time is necessary for self-holding.
3. Avoid using the latching solenoid valves in environments where impact or collisions with the valve might occur. Also, do not use in places where strong magnetic fields are present.
4. Even though the armature in the solenoid of this valve is held on to B side, ON position (Reset), verify either A side, ON position or B side, ON position by energizing prior to use. After manual operation, the main valve will return to its original position.
5. Manual override on the pilot valve side can retain its switching position after manipulation.
6. Please contact SMC for long-term energization applications.
7. If the metal seal type goes down below the minimum operating pressure of supply air (0.1 MPa or less), the main valve will get back the home position (B side ON position). Therefore, in the event of shutting the supply air or applying the air with being A side ON position remained, cylinder may be pulsated. In the event of manipulating the supply air, the valve's switching position has to be set in the home position side (B side ON position side).

How to Mount/Remove Solenoid Valve

⚠ Caution

<Procedure>

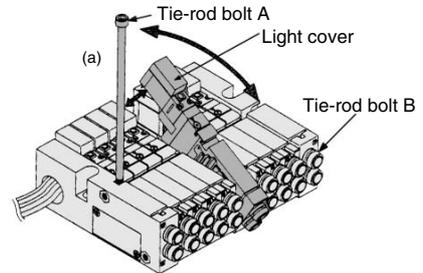

How to remove

1. Loosen tie-rod bolt B. (Two to four turns)
2. After fully loosening the tie-rod bolt, take off bolt A upward as shown above.
3. Slide the valves aside to make a 1 mm clearance between the valve to be taken off and the others. As shown above, remove the whole valve while holding up the (a) side.

Mounting

Reverse the sequence of steps above to remount. Torque applied to tie-rod bolt should be 1.0 to 1.4 N·m. Tighten evenly.


Note) Be careful not to push on the light cover while mounting/removing the valve.

Manual Override

⚠ Warning


Without an electric signal for the solenoid valve the manual override is used for switching the main valve.

■ Push type (Tool required)

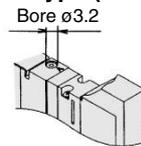


Push down on the manual override button with a small screwdriver until it stops. Release the screwdriver and the manual override will return.

■ Locking slotted type

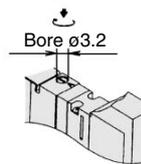

Push down completely on the manual override button with a small screwdriver. While down, turn clockwise 90° to lock it.


■ Locking lever type (Option)

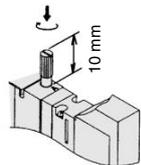

Push down completely on the manual override button with a small screwdriver. While down, turn clockwise 90° to lock it. Turn it counterclockwise to release it.

■ Manual override for double (latching) type

In the case of a double (latching) type, a manual override is provided not only on the body side but to the pilot as a standard. After manual operation, the main valve of the manual on the body side returns to the position before the manual operation, however, the pilot valve manual override maintains the change-over position.

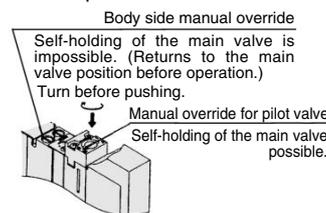

- If the manual override is turned by 180° clockwise and the ► mark is adjusted to A, then pushed in the direction of an arrow (➡), it will be back to the reset condition. (passage P → A)
- If the manual override is turned by 180° counterclockwise and the ► mark is adjusted to B, then pushed in the direction of an arrow (➡), it will be back to the reset condition. (passage P → B) (It is in the reset state at the time of shipment.)

⚠ Caution

Do not apply excessive torque when turning the locking type manual override. (0.1 N·m or less)


Plug-in Unit: Flip Type Series VQ1000

Replacement of Cylinder Port Fittings

⚠ Caution

The cylinder port fittings are a cassette for easy replacement. The fittings are blocked by a clip inserted from the top of the valve.

Remove the clip with a screwdriver to remove fittings. For replacement, insert the fitting assembly until it strikes against the inside wall and then re-insert the clip to the specified position.

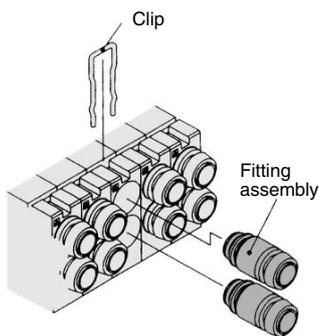

Applicable tubing O.D.	Fitting assembly part no.
	VQ1000
Applicable tubing $\phi 3.2$	VVQ1000-50A-C3
Applicable tubing $\phi 4$	VVQ1000-50A-C4
Applicable tubing $\phi 6$	VVQ1000-50A-C6

Purchasing order is available in units of 10 pieces.

Caution


1. Use caution that O-rings must be free from scratches and dust. Otherwise, air leakage may result.
2. The tightening torque for inserting fittings to the M5 thread assembly should be 0.8 to 1.4 N·m.

Mounting/Removing from the DIN Rail

⚠ Caution


Removing

1. Loosen the clamp screw of the end plate on both sides.
2. Lift side (a) of the manifold base and side the end plate in the direction of (2) shown in the figure to remove.

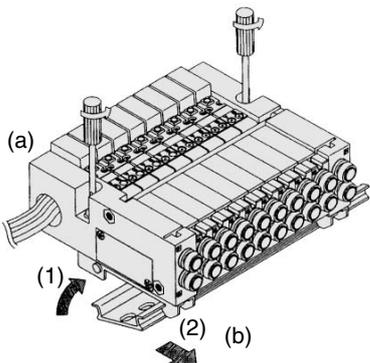

Mounting

1. Hook side (b) of the manifold base on the DIN rail.
2. Press down side (a) and mount the end plate on the DIN rail. Tighten the clamp screw on side (a) of the end plate. The proper tightening torque for screws is 0.4 to 0.6 N·m.

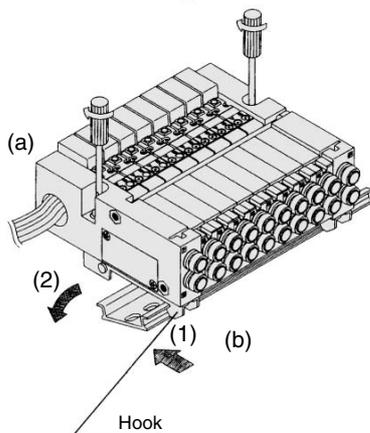

Built-in Silencer Replacement Element

⚠ Caution


A silencer element is incorporated in the end plate on both sides of the base. A dirty and choked element may reduce cylinder speed or cause malfunction. Clean or replace the dirty element.

Element Part No.

Type	Element part no.
	VQ1000
Built-in silencer, direct exhaust (-S)	VVQ1000-82A-3

* The minimum order quantity is 10 pcs.

Remove the cover from the side of the end plate and remove the old element with a screwdriver, etc.

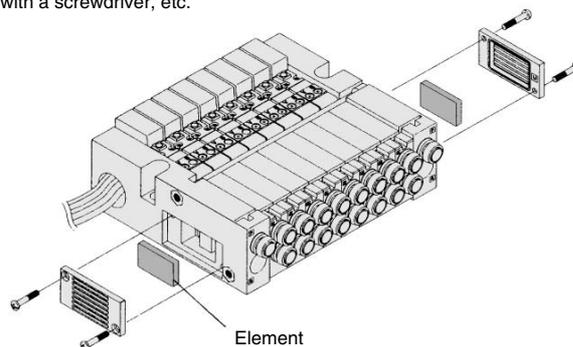

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

How to Calculate the Flow Rate

For obtaining the flow rate, refer to pages 2-1-8 to 2-1-11.


Series VQ1000

Option


Different Number of Connector Pins

F and P kits with the following number of pins are available. Besides the standard number (F = 25; P = 26) select the desired number of pins and cable length from the cable assembly list. Place an order for the cable assembly separately.

F kit (D-sub connector) 15 pins

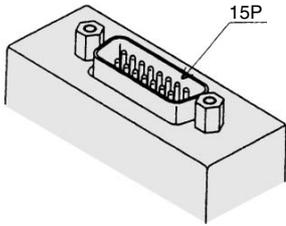

How to order manifold

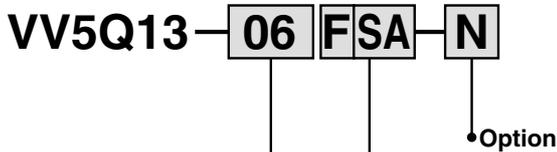

How to Order

D-sub connector, 15 pins
Connector location—Side (horizontal)
Without cable

Kit/Electrical entry


Pins	Location	Top entry		Side entry	
		Kit F	UA	Kit F	SA
15P (Max. 7 stations)					

Wiring Specifications

* As in the case of 25-pin models (standard), terminal no. 1 is the first station SOL.A and the terminal no. 8 is COM.

Wire Color by Terminal No. of D-sub Connector Cable Assembly

Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black

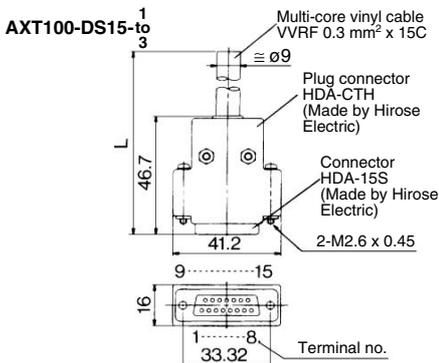


D-sub Connector Cable Assembly


Cable length (L)	Pins	15P	
		Kit F	UA
1.5 m		AXT100-DS15-1	
3 m		AXT100-DS15-2	
5 m		AXT100-DS15-3	

* For other commercial connectors, use a type conforming to MIL-C-24308.

P kit (Flat ribbon cable connector) 10 pins, 16 pins, 20 pins

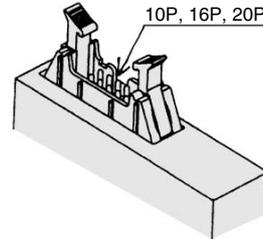

How to order manifold

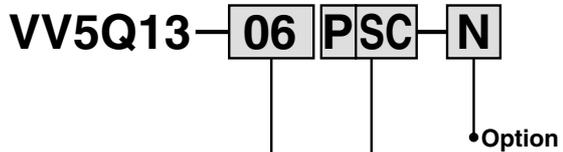

How to Order


Flat ribbon cable, 20 pins
Connector location—Side (horizontal)
Without cable

Kit/Electrical entry

Pins	Location	Top entry		Side entry	
		Kit P	UA	Kit P	SA
10P (Max. 4 stations)					
16P (Max. 7 stations)			UB		SB
20P (Max. 9 stations)			UC		SC

Wiring Specifications

* As in the case of 26-pin models (standard), terminal no. 1 is the first station SOL.A and the last two terminal numbers are used for COM.

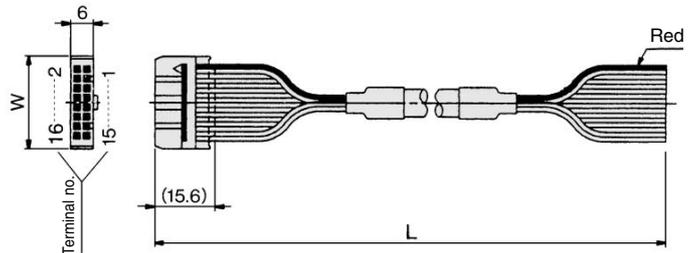

Flat Ribbon Cable Assembly

Cable length (L)	Pins	10P	16P	20P
		1.5 m	AXT100-FC10-1	AXT100-FC16-1
3 m		AXT100-FC10-2	AXT100-FC16-2	AXT100-FC20-2
5 m		AXT100-FC10-3	AXT100-FC16-3	AXT100-FC20-3
Connector width (W)		17.2	24.8	30

* For other commercial connectors, use a type with strain relief that conform to MIL-C-83503.

Option

Special Wiring Specifications

In the internal wiring of F kit, P kit, and JS kit, double wiring (connected to SOL. A and SOL. B) is adopted for each station regardless of the valve and option types.

Mixed single and double wiring is available as an option.

1. How to order valves

Indicate an option symbol, -K, for the manifold no. and be sure to specify the mounting position and number of stations of the single and double wiring by means of the manifold specification sheet.


Example)

VV5Q13-09FS0-D K S

Others, option symbols: to be indicated alphabetically.

2. Wiring specifications

Connector terminal numbers are connected from solenoid station 1 on the A side in the order indicated by the arrows without shipping any terminal numbers.

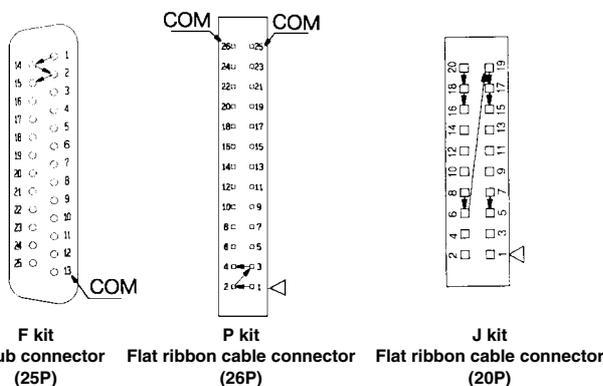

3. Max. number of stations

The maximum number of stations depends upon the number of solenoids. Assuming one for a single and two for a double, determine the number of stations so that the total number is not more than the maximum number given in the following table.

kit	F kit (D-sub connector)		P kit (Flat ribbon cable connector)				J kit (Flat ribbon cable connector)	S kit (Serial)
Type	F _S □ 25P	F _S A 15P	P _S □ 26P	P _S C 20P	P _S B 16P	P _S A 10P	J _S □ 20P	S □
Max. points	24 (16 stations)	14	24 (16 stations)	18 (16 stations)	14	8	16	16

Negative Common Specifications

Specify the valve model no. as shown below for negative COM specification. The manifold no. shown below is for the L kits. For other kits the standard manifold can be used. Please contact for negative COM S kit.


How to order negative COM valves

VQ1130 N-5-C6

Negative common specifications

How to order negative COM manifold

L kit:

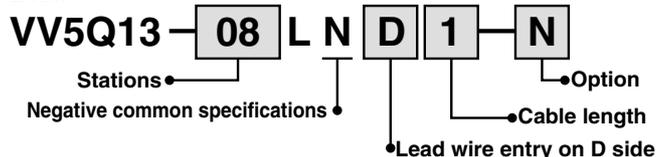

Inch-size One-touch Fittings

Refer to following model no. for inch-size One-touch fittings.

How to order manifold

VV5Q13-08FSO-DN-00T

1(P), 3(R) port size: ø1/4"

How to order valves

VQ1130-5-N7

Cylinder ports

Symbol	N1	N3	N7
Applicable tube O.D. (Inch)	ø1/8"	ø5/32"	ø1/4"

DIN Rail Mounting

Each manifold can be mounted on a DIN rail.

Order it by indicating an option symbol for DIN rail mounting style, -D. In this case, a DIN rail which is approx. 30 mm longer than the manifold with the specified number of stations is attached. Besides, it is also available in the following cases.

● When DIN rail is unnecessary (Except S kit)

(DIN rail mounting brackets only are attached.)

Indicate the option symbol, -DO, for the manifold no.

Example)

VV5Q13-08LD1-DOS

Others, option symbols: to be indicated alphabetically.

● When using DIN rail longer than the manifold with specified number of stations

Clearly indicate the necessary number of stations next to the option symbol, -D, for the manifold no.

Example)

VV5Q13-08FS1-D09S

DIN rail for 9 stations

Others, option symbols: to be indicated alphabetically.

● When changing the manifold style into a DIN rail mount


Order brackets for mounting a DIN rail. (Refer to "Option" on page 2-4-24.)

No. VVQ1000-57A-3 2 pcs. per one

● When ordering DIN rail only

DIN rail no.: AXT100-DR-n

* Refer to the DIN rail dimension table for determining the length.

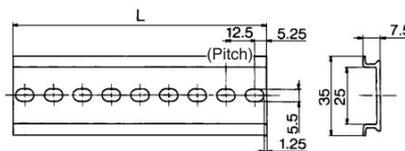

L Dimension

L = 12.5 x n + 10.5

No.	1	2	3	4	5	6	7	8	9	10
L dimension	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5
No.	11	12	13	14	15	16	17	18	19	20
L dimension	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5
No.	21	22	23	24	25	26	27	28	29	30
L dimension	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5
No.	31	32	33	34	35	36	37	38	39	40
L dimension	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5

Series VQ0000

Body Ported

Plug Lead Unit: Flip Type

How to Order Manifold

VV5Q 0 4 - 08 F S1 - D

Series
0 VQ0000

Manifold
4 Plug lead unit/Flip

Stations
01 1 station
 ⋮ ⋮
 The number of max. stations differs from kit to kit. (Refer to the table below.)

Option

Nil	None (C kit only)
D ⁽²⁾	DIN rail mounting style
K ⁽³⁾	Special wiring specifications (Except double wiring)
N	With name plate
S ⁽⁴⁾	Built-in silencer, direct exhaust

Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -DNS
 Note 2) F, P, T, and S kits are DIN rail in mounting styles, so include suffix -D.
 Note 3) Specify the wiring specifications on the manifold specification sheet. (Except C kit)
 Note 4) F, P, T and S kits are provided with an exhaust on one side, while C kits are with an exhaust on both sides.

Simple specials are available with SMC Simple Specials System. For details about applicable models, please contact SMC.

Kit/Electrical entry/Cable length

F kit (D-sub connector)

Side entry
Top entry

25P Note)
25P Note)

Connector entry direction				Without cable	With cable (1.5 m)	With cable (3 m)	With cable (5 m)	Max. 16 ⁽²⁾ stations
Top entry	Side entry	Kit F	Kit F					
U0	S0							
U1	S1							
U2	S2							
U3	S3							

P. 2-4-38

P kit (Flat ribbon cable connector)

Side entry
Top entry

26P Note 2)
26P Note 2)

Connector entry direction				Without cable	With cable (1.5 m)	With cable (3 m)	With cable (5 m)	Max. 16 ⁽²⁾ stations
Top entry	Side entry	Kit P	Kit P					
U0	S0							
U1	S1							
U2	S2							
U3	S3							

P. 2-4-42

T kit (Terminal block)

P. 2-4-46

Kit T	No. of terminals	Applicable stations
1	8, 1 row	Applicable stations 1 to 8
2	16, 2 rows	Applicable stations 5 to 16

C kit (Connector)

P. 2-4-50

Kit C	Connector kit	Max. stations
1	Connector kit	Max. 16

S kit (Serial transmission unit)

The valve is equipped with an indicator light and surge voltage suppressor.

The dust-protected type SI unit is applicable, too. For details, please contact SMC.

P. 2-4-54

Kit S ⁽³⁾	Serial transmission unit	Max. stations ⁽²⁾
0	Without SI unit	
A	With general type SI unit (Series EX300)	
B	Mitsubishi Electric Corp.: MELSECNET/MINI-S3 Data Link System	
C	OMRON Corp.: SYSBUS Wire System	Max. 16 stations
D	SHARP Corp.: Satellite I/O Link System	
F1	NKE Corp.: Uni-wire System (16 output points)	
H	NKE Corp.: Uni-wire H System	

Note 1) Besides the above, F and P kits with different number of pins are available. For details, refer to page 2-4-68.
 Note 2) See page 2-4-69 for details.
 Note 3) Please consult with SMC for the following serial transmission kits: Matsushita Electric Works, Ltd.; Rockwell Automation, Inc.; SUNX Corporation; Fuji Electric Co., Ltd.; OMRON Corporation.

How to Order Valves

VQ 0 1 4 0 Y 5 L C4

Series
 0 VQ0000

Type of actuation

1	2 position single (AMB)
2	2 position double (Latching) Metal seal Rubber seal
3 (Note)	3 position closed center (AMB)
4 (Note)	3 position exhaust center (AMB)

Note 3) 3 position occupies two stations.

Coil voltage

1	100 VAC (50/60 Hz)
2 (Note)	200 VAC (50/60 Hz)
3	110 VAC (50/60 Hz)
4 (Note)	220 VAC (50/60 Hz)
5	24 VDC
6	12 VDC

Note) The C kit is applicable to 200/220 VAC.

Function

Symbol	Specifications	DC	AC
Nil	Standard type	(1.0 W)	○ (1)
H (2)	High pressure type	(1.5 W)	—
Y (2)	Low wattage type	(0.5 W)	—

Note 1) For power consumption of AC type, refer to page 2-4-36.
 Note 2) Except double (latching).

Seal

0	Metal seal
1	Rubber seal

Note 1) For negative common specifications, refer to "Option" on page 2-4-69.
 Note 2) Connector assembly will be required when the F, P, T, S kits add a valve. For model no., refer to "Option" on page 2-4-69.

Electrical entry

Symbol	Specifications
G	Grommet C kit single only. Single only (Except AC.)
L	L plug connector With lead wire
LO	L plug connector Without connector
M	M plug connector With lead wire
MO	M plug connector Without connector

Note) LO and MO valves are used for F, P, T, kits. The plug connector and lead wire are attached to the manifold.

Cylinder port

Symbol	Port size
C3	With One-touch fitting for ø3.2
C4	With One-touch fitting for ø4
M5	M5 thread

Note) For inch-size One-touch fittings, refer to "Option" on page 2-4-69.

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required) Available to single/3 position


Note) Except double (latching) type is push type only though, it can keep the switching position. (Refer to page 2-4-66.)

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD


Manifold Option

P. 2-4-59


Blanking plate assembly VVQ0000-10A-4

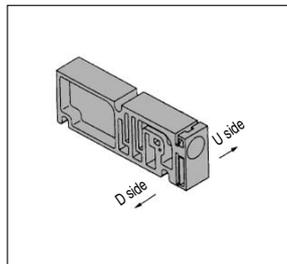


Name plate [-N4] VVQ0000-N4-Station (1 to Max. stations)

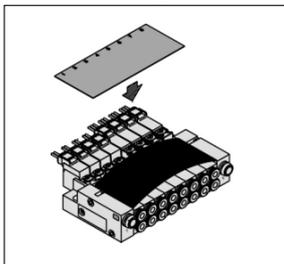


Built-in silencer, Direct exhaust [-S]

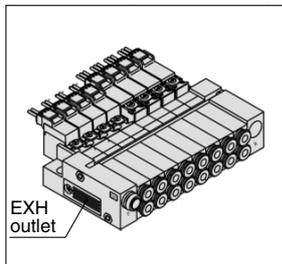


Individual SUP spacer VVQ0000-P-4-C4

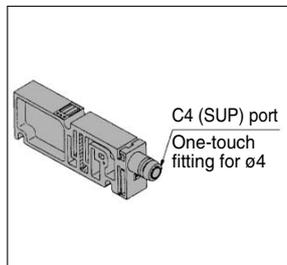


Double Check block VQ1000-FPG-□□

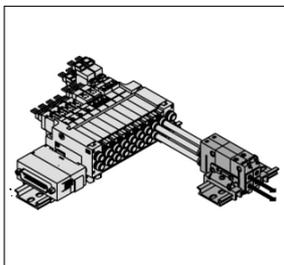


Block valve VQ0₂4₁-□-□□-□□

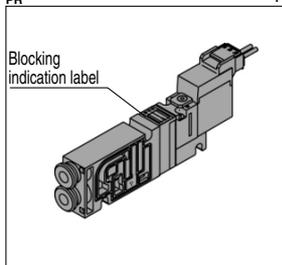


Individual EXH spacer VVQ0000-R-4-C4

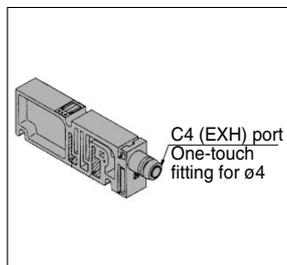

DIN rail mounting bracket VVQ0000-57A-4

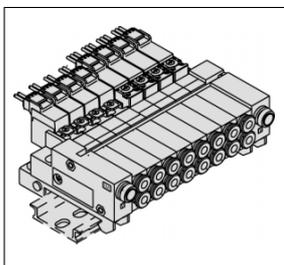

Blanking plug KQ2P-²³/₀₄/₀₆

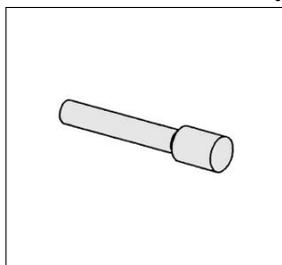

How to Order Manifold Assembly

Example

Single solenoid (24 VDC)
 VQ0140-5MO-C4 (4 sets)

Double (latching) Solenoid 24 VDC
 VQ0240-5MO-C4 (4 sets)

Manifold base (8 stations)
 VV5Q04-08FU2-D

VV5Q04-08FU2-D 1 set (F kit 8 station manifold base no.)
 *VQ0140-5MO-C4 4 sets (Single solenoid part no.)
 *VQ0240-5MO-C4 4 sets (Double solenoid part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Please indicate manifold base type, corresponding valve, and option parts. When entry of part numbers becomes complicated, indicate on the manifold specification sheet.

For replacement parts, refer to page 2-4-105.

Series VQ1000

Body Ported

Plug Lead Unit: Flip Type

How to Order Manifold

Series 1 VQ1000
Manifold 4 Plug lead unit/Flip
Stations 01 1 station
Option D

VV5Q 1 4 - 08 F S1 - D

Simple specials are available with SMC Simple Specials System. For details about applicable models, please contact SMC.


The number of max. stations differs from kit to kit. (Refer to the table below.)

Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -DNS
 Note 2) F, P, T, and S kits are DIN rail mounting styles, so include suffix -D.
 Note 3) Specify the wiring specifications in the manifold specification sheet. (Except C kit)
 Note 4) F, P, T and S kits are provided with an exhaust on one side, while C kits are with an exhaust on both sides.

Option	Description
Nil	None (C kit only)
D ⁽²⁾	DIN rail mounting style
K ⁽³⁾	Special wiring specifications (Except double wiring)
N	With name plate
S ⁽⁴⁾	Built-in silencer, direct exhaust

Kit/Electrical entry/Cable length

F kit (D-sub connector)

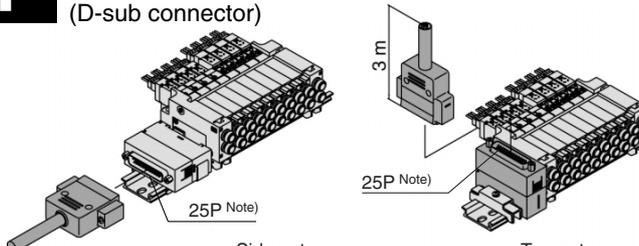


Side entry (25P Note), Top entry (25P Note)

Connector entry direction		Kit F		Option	Max. 16 ⁽²⁾ stations
Top entry	Side entry	U	S	Description	
U0	S0			Without cable	
U1	S1			With cable (1.5 m)	
U2	S2			With cable (3 m)	
U3	S3			With cable (5 m)	

P. 2-4-38

P kit (Flat ribbon cable connector)

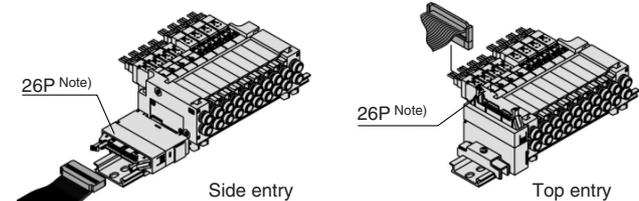


Side entry (26P Note), Top entry (26P Note)

Connector entry direction		Kit P		Option	Max. 16 ⁽²⁾ stations
Top entry	Side entry	U	S	Description	
U0	S0			Without cable	
U1	S1			With cable (1.5 m)	
U2	S2			With cable (3 m)	
U3	S3			With cable (5 m)	


P. 2-4-42

T kit (Terminal block)

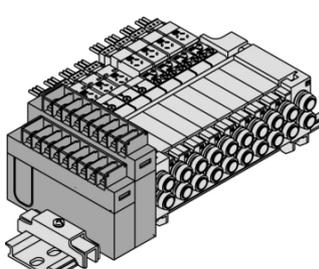


P. 2-4-46

C kit (Connector)

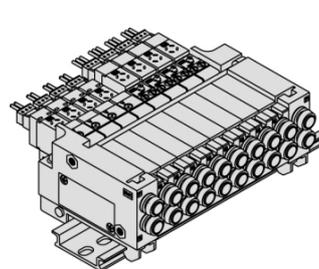

P. 2-4-50

S kit (Serial transmission unit)

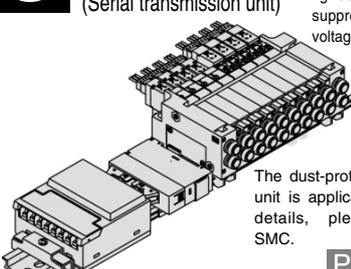

The valve is equipped with an indicator light/surge voltage suppressor and the voltage is 24 VDC.
The dust-protected type SI unit is applicable, too. For details, please contact SMC.

P. 2-4-54

Kit S ⁽³⁾	Description	Max. 16 ⁽²⁾ stations
0	Without SI unit	
A	With general type SI unit (Series EX300)	
B	Mitsubishi Electric Corp.: MELSECNET/mini-S3 Data Link System	
C	OMRON Corp.: SYSBUS Wire System	
D	SHARP Corp.: Satellite I/O Link System	
F1	NKE Corp.: Uni-wire System (16 output points)	
H	NKE Corp.: Uni-wire H System	

Kit	No. of terminals	Applicable stations	Kit	Description	Max. stations
T 1	No. of terminals: 8, 1 row	Applicable stations 1 to 8	C	Connector kit	Max. 16
T 2	No. of terminals: 16, 2 rows	Applicable stations 5 to 16			

Note 1) Besides the above, F and P kits with different number of pins are available. For details, refer to page 2-4-68.
 Note 2) See page 2-4-69 for details.
 Note 3) Please consult with SMC for the following serial transmission kits: Matsushita Electric Works, Ltd.; Rockwell Automation, Inc.; SUNX Corporation; Fuji Electric Co., Ltd.; OMRON Corporation.

How to Order Valves

VQ 1 1 4 0 Y 5 L C6

Series
1 VQ1000

Type of actuation

1	2 position single (A/B)
2	2 position double (Latching) Metal seal Rubber seal
3	3 position closed center (A/B)
4	3 position exhaust center (A/B)
5	3 position pressure center (A/B)

Note) L type plug connector is used for 3 position AS.

Coil voltage

1	100 VAC (50/60 Hz)
2	200 VAC (50/60 Hz)
3	110 VAC (50/60 Hz)
4	220 VAC (50/60 Hz)
5	24 VDC
6	12 VDC

Note) The C kit is applicable to 200/220 VAC.

Function

Symbol	Specifications	DC	AC
Nil	Standard type	(1.0 W)	○ (1)
H (2)	High pressure type	(1.5 W)	—
Y (2)	Low wattage type	(0.5 W)	—

Note 1) For power consumption of AC type, refer to page 2-4-36.
Note 2) Except double (latching).

Seal

0	Metal seal
1	Rubber seal

For negative common specifications, refer to "Option" on page 2-4-69. Connector assembly will be required when the F, P, T, S kits add a valve. For part nos., refer to "Option" on page 2-4-69.

Electrical entry

	VQ1000
G: Grommet C kit single only. (Except AC.)	
L: L plug connector With lead wire	 With light/surge voltage suppressor
LO: L plug connector Without connector	 With light/surge voltage suppressor
M: M plug connector With lead wire	 With light/surge voltage suppressor
MO: M plug connector Without connector	 With light/surge voltage suppressor

Note) LO and MO valves are used for F, P, T and S kits. The plug connector and lead wire are attached to the manifold.

Cylinder port

Symbol	Port size
C3	With One-touch fitting for ø3.2
C4	With One-touch fitting for ø4
C6	With One-touch fitting for ø6
M5	M5 thread

Note) For inch-size One-touch fittings, refer to "Option" on page 2-4-69.

Manual override

Nil: Non-locking push type (Tool required)	B: Locking type (Tool required)	C: Locking type (Manual)
---	------------------------------------	-----------------------------

Note) A manual override for pilot valve is provided to the standard model for double type.

Manual override body side
Pilot valve
Manual override
Bore ø2.6

VQC

SQ

VQ0

VQ4

VQ5


VQZ

VQD


Manifold Option

P. 2-4-59


Blanking plate assembly VVQ1000-10A-4

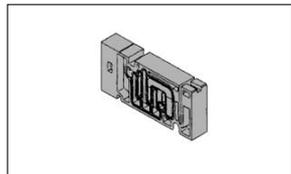


Double check block VQ1000-FPG-□□

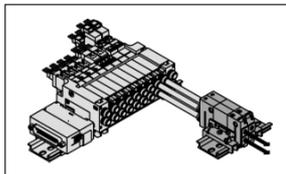


Block valve VQ140-□-□-□-□

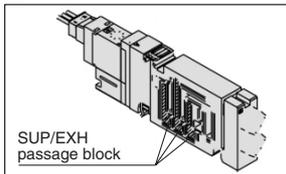


Individual SUP spacer VVQ1000-P-4-C6

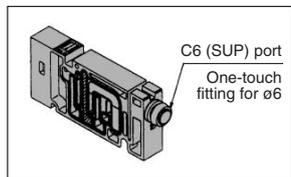


DIN rail mounting bracket VVQ1000-57A-4

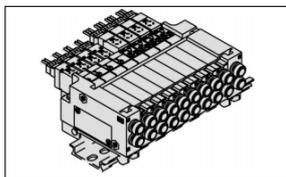


Port plug VVQ000-58A

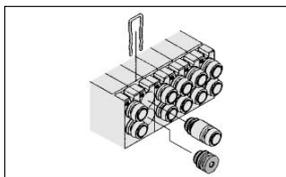


Individual EXH spacer VVQ1000-R-4-C6

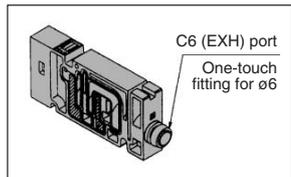


Built-in silencer, direct exhaust [-S]

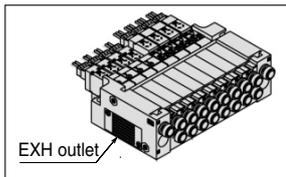


Blanking plug KQ2P-²³/₀₆

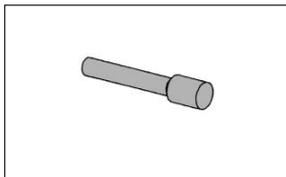

Name plate [-N4] VVQ1000-N4-Station (1 to Max. stations)

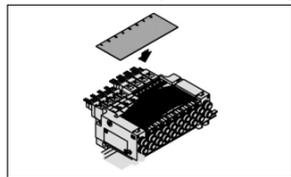

Silencer (For EXH port) AN103-X233

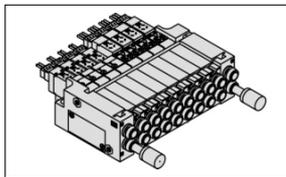

How to Order Manifold Assembly

Example

Single solenoid (24 VDC)
VQ1140-5LO-C6 (4 sets)

Double solenoid (24 VDC)
VQ1240-5LOB-C6 (4 sets)

U side Spacers

3 m

D-sub connector cable

F kit (D-sub connector)

Manifold base (8 stations)

Cylinder port C6: With One-touch fitting for ø6

VV5Q14-08FU2-D ... 1 set (F kit 8 station manifold base no.)
*VQ1140-5LO-C6 ... 4 sets (Single solenoid part no.)
*VQ1240-5LOB-C6 ... 4 sets (Double solenoid part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Please indicate manifold base type, corresponding valve, and option parts. When entry of part numbers becomes complicated, indicate on the manifold specification sheet.



For replacement parts, refer to page 2-4-107.

Series VQ2000

Body Ported

Plug Lead Unit: Flip Type

How to Order Manifold

Series 2 VQ2000

Manifold 4 Plug lead unit/Flip

Stations 01 1 station

Option

Nil	None (C kit only)
D ⁽²⁾	DIN rail mounting style
K ⁽³⁾	Special wiring specifications (Except double wiring)
N	With name plate
S ⁽⁴⁾	Built-in silencer, direct exhaust

Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -DNS
 Note 2) F, P, T, and S kits are of DIN rail include suffix -D
 Note 3) Specify the wiring specifications in the manifold specification sheet. (Except C kit)
 Note 4) F, P, T and S kits are provided with an exhaust on one side, while C kits are with an exhaust on both sides.

The number of max. stations differs from kit to kit. (Refer to the table below.)

Kit/Electrical entry/Cable length

F kit (D-sub connector)

Connector entry direction				Without cable	With cable (1.5 m)	With cable (3 m)	With cable (5 m)	Max. 16 ⁽²⁾ stations
Top entry	Side entry	Kit F	Kit F					
		U0	S0					
Kit F		U1	S1					
		U2	S2					
		U3	S3					

P. 2-4-38

P kit (Flat ribbon cable connector)

Connector entry direction				Without cable	With cable (1.5 m)	With cable (3 m)	With cable (5 m)	Max. 16 ⁽²⁾ stations
Top entry	Side entry	Kit P	Kit P					
		U0	S0					
Kit P		U1	S1					
		U2	S2					
		U3	S3					

P. 2-4-42

T kit (Terminal block)

P. 2-4-46

Kit T	1	No. of terminals: 8, 1 row	Applicable stations 1 to 8
	2	No. of terminals: 16, 2 rows	Applicable stations 5 to 16

C kit (Connector)

P. 2-4-50

Kit C	Connector kit	Max. 16
-------	---------------	---------

S kit (Serial transmission unit)

The valve is equipped with an indicator light/surge voltage suppressor and the voltage is 24 VDC.

The dust-protected type SI unit is applicable, too. For details, please contact SMC.

P. 2-4-54

Without SI unit		Max. 16 stations
Kit S ⁽³⁾		
	0	
	A	With general type SI unit (Series EX300)
	B	Mitsubishi Electric Corp.: MELSECNET/mini-S3 Data Link System
	C	OMRON Corp.: SYSBUS Wire System
	D	SHARP Corp.: Satellite I/O Link System
	F1	NKE Corp.: Uni-wire System (16 output points)
	H	NKE Corp.: Uni-wire H System

Note 1) Besides the above, F and P kits with different number of pins are available. For details, refer to page 2-4-68.
 Note 2) See page 2-4-69 for details.
 Note 3) Please consult with SMC for the following serial transmission kits: Matsushita Electric Works, Ltd.; Rockwell Automation, Inc.; SUNX Corporation; Fuji Electric Co., Ltd.; OMRON Corporation.

How to Order Valves

VQ 2 1 4 0 Y 5 L C6

Series
2 VQ2000

Type of actuation
1 2 position single
2 2 position double (latching)

Coil voltage
1 100 VAC (50/60 Hz)
2 Note) 200 VAC (50/60 Hz)
3 110 VAC (50/60 Hz)
4 Note) 220 VAC (50/60 Hz)
5 24 VDC
6 12 VDC

Electrical entry
G: Grommet C kit single only. (Except AC)
L: L plug connector With lead wire
LO: L plug connector Without connector
M: M plug connector With lead wire
MO: M plug connector Without connector

Function

Symbol	Specifications	DC	AC
Nil	Standard type	(1.0 W) ○	○ (1)
H (2)	High pressure type	(1.5 W) ○	—
Y (2)	Low wattage type	(0.5 W) ○	—

Note) The C kits is applicable to 200/220 VAC.
Note 1) For power consumption of AC type, refer to page 2-4-36.
Note 2) Except double (latching).

Seal
0 Metal seal
1 Rubber seal

Cylinder port
Symbol Port size
C4 With One-touch fitting for ø4
C6 With One-touch fitting for ø6
C8 With One-touch fitting for ø8

Note) For inch-size One-touch fittings, refer to "Option" on page 2-4-69.

Manual override
Nil: Non-locking push type (Tool required)
B: Locking type (Tool required)
C: Locking type (Manual)

Note) A manual override for pilot valve is provided to the standard model for double type.

Note) LO and MO valves are used for F, P, T, and S kits. The plug connector and lead wire are attached to the manifold.

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

Manifold Option

P. 2-4-59

Blanking plate assembly VVQ2000-10A-4

Name plate [-N4] VVQ2000-N4-Station (1 to Max. stations)

Silencer (For EXH port) AN200-KM8

Blanking plug KQ2P-06

Individual SUP spacer VVQ2000-P-4-C8

DIN rail mounting bracket VVQ2000-57A-4

Block valve VQ2 1/4 1 - □ - □ - □ - PR

Blocking indication label

Individual EXH spacer VVQ2000-R-4-C8

Built-in silencer, direct exhaust [-S]

Port plug VVQ1000-58A

Double check block VVQ2000-FPG-□□

How to Order Manifold Assembly

Example

Single solenoid (24 VDC)
VQ2140-5LO-C8 (4 sets)

Double solenoid (24 VDC)
VQ2240-5LOB-C8 (4 sets)

D-sub connector cable
AXT100 -DS25-030

F kit (D-sub connector)

Manifold base (8 stations)
VV5Q24-08FU2-D

Individual EXH spacer port size C8: One-touch fitting for ø8

VV5Q24-08FU2-D ... 1 set (F kit 8 station manifold base no.)
*VQ2140-5LO-C6 ... 4 sets (Single solenoid part no.)
*VQ2240-5LOB-C6 ... 4 sets (Double solenoid part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Please indicate manifold base type, corresponding valve, and option parts. When entry of part numbers becomes complicated, indicate on the manifold specification sheet.

For replacement parts, refer to page 2-4-109.

Series VQ0000/1000/2000

Body Ported

Plug Lead Unit: Flip Type

Model


Series	Number of solenoids	Model		Flow characteristics						Response time ⁽²⁾ (ms)			Weight (g)		
				1 → 4/2 (P → A/B)			4/2 → 5/3 (A/B → R1/R2)			Standard: 1 W H: 1.5 W	Low wattage: 0.5 W	AC			
				C [dm ³ /(s·bar)]	b	Cv	C [dm ³ /(s·bar)]	b	Cv						
VQ0000	2 position	Single	Metal seal	VQ0140	0.43	0.20	0.10	0.50	0.19	0.12	12 or less	15 or less	29 or less	57	
			Rubber seal	VQ0141	0.49	0.34	0.13	0.59	0.19	0.14	15 or less	20 or less	34 or less		
		Double (Latching)	Metal seal	VQ0240	0.43	0.20	0.10	0.50	0.19	0.12	12 or less	15 or less	29 or less		
			Rubber seal	VQ0241	0.49	0.34	0.13	0.59	0.19	0.14	15 or less	20 or less	34 or less		
	3 position	Closed center	Metal seal	VQ0340	0.34	0.12	0.08	0.36	0.38	0.10	20 or less	26 or less	40 or less		105
			Rubber seal	VQ0341	0.37	0.25	0.09	0.42	0.45	0.12	25 or less	33 or less	47 or less		
Exhaust center	Metal seal	VQ0440	0.36	0.21	0.09	0.48	0.18	0.12	20 or less	26 or less	40 or less				
	Rubber seal	VQ0441	0.37	0.31	0.11	0.59	0.24	0.14	25 or less	33 or less	47 or less				
VQ1000	2 position	Single	Metal seal	VQ1140	0.77	0.14	0.18	0.84	0.14	0.19	12 or less	15 or less	29 or less	57	
			Rubber seal	VQ1141	0.91	0.19	0.21	1.0	0.21	0.25	15 or less	20 or less	34 or less		
		Double (Latching)	Metal seal	VQ1240	0.77	0.14	0.18	0.84	0.14	0.19	12 or less	15 or less	29 or less		
			Rubber seal	VQ1241	0.91	0.19	0.21	1.0	0.21	0.25	15 or less	20 or less	34 or less		
	3 position	Closed center	Metal seal	VQ1340	0.67	0.13	0.16	0.73	0.13	0.17	20 or less	26 or less	40 or less	72	
			Rubber seal	VQ1341	0.78	0.22	0.18	0.84	0.21	0.20	25 or less	33 or less	47 or less		
		Exhaust center	Metal seal	VQ1440	0.74	0.14	0.17	0.84	0.16	0.20	20 or less	26 or less	40 or less		
			Rubber seal	VQ1441	0.78	0.28	0.19	1.0	0.21	0.24	25 or less	33 or less	47 or less		
		Pressure center	Metal seal	VQ1540	0.74	0.14	0.17	0.82	0.18	0.20	20 or less	26 or less	40 or less		
			Rubber seal	VQ1541	0.80	0.28	0.19	0.84	0.21	0.22	25 or less	33 or less	47 or less		
VQ2000	2 position	Single	Metal seal	VQ2140	2.0	0.13	0.43	2.3	0.15	0.58	22 or less	29 or less	49 or less	103	
			Rubber seal	VQ2141	2.3	0.21	0.54	2.7	0.25	0.62	24 or less	31 or less	51 or less		
		Double (Latching)	Metal seal	VQ2240	2.0	0.13	0.43	2.3	0.15	0.58	22 or less	29 or less	49 or less		
			Rubber seal	VQ2241	2.3	0.21	0.54	2.7	0.25	0.62	24 or less	31 or less	51 or less		

Note 1) Cylinder port size C4: (VQ0000), C6: (VQ1000), C8: (VQ2000)


Note 2) As per JIS B 8375-1981 (Supply pressure: 0.5 MPa; with indicator light/surge voltage suppressor; clean air) Subject to the pressure and air quality.

JIS Symbol


2 position single

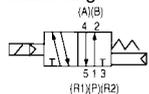

2 position double (Latching)

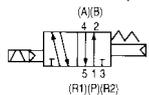


Metal seal

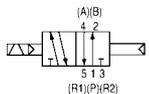


Rubber seal




3 position closed center

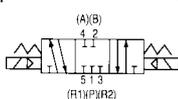

3 position exhaust center

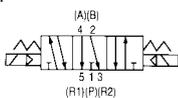

3 position pressure center

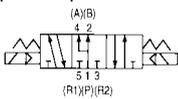

Standard Specifications

Valve specifications	Valve construction	Metal seal	Rubber seal	
	Fluid	Air/Inert gas		
Maximum operating pressure	0.7 MPa (High pressure type: 0.8 MPa) ⁽³⁾			
Min. operating pressure	Single	0.1 MPa	0.15 MPa	
	Double (Latching)	0.1 MPa	0.15 MPa	
	3 position	0.15 MPa	0.2 MPa	
Ambient and fluid temperature	-10 to 50°C ⁽¹⁾			
Lubrication	Not required			
Manual override	Push type/Locking type (Tool required, Manual type) Option			
Impact resistance/Vibration resistance ⁽²⁾	150/30 m/s ²			
Enclosure	Dust-protected			
Solenoid	Coil rated voltage	12, 24 VDC, 100, 110, 200, 220 VAC (50/60 Hz)		
	Allowable voltage fluctuation	±10% of rated voltage		
	Coil insulation type	Class B or equivalent		
	Power consumption (Current)	24 VDC	1 W DC (42 mA), 1.5 W DC (63 mA) ⁽³⁾ , 0.5 W DC (21 mA) ⁽⁴⁾	
		12 VDC	1 W DC (83 mA), 1.5 W DC (125 mA) ⁽³⁾ , 0.5 W DC (42 mA) ⁽⁴⁾	
		100 VAC	Inrush 0.5 VA (5 mA), Holding 0.5 VA (5 mA)	
		110 VAC	Inrush 0.55 VA (5 mA), Holding 0.55 VA (5 mA)	
200 VAC		Inrush 1.0 VA (5 mA), Holding 1.0 VA (5 mA)		
220 VAC	Inrush 1.1 VA (5 mA), Holding 1.1 VA (5 mA)			

Note 1) Use dry air to prevent condensation when operating at low temperatures.

Note 2) Impact resistance: No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

Note 3) Values in the case of high pressure type (1.5 W) specifications.

Note 4) Values in the case of low wattage type (0.5 W) specifications.

Plug Lead Unit: Flip Type Series VQ0000/1000/2000

Manifold Specifications

Series	Base model	Type of connection	Porting specifications		Applicable stations ⁽²⁾	Applicable solenoid valve	5 station weight (g)	
			Port location	Port size ⁽¹⁾				
				1(P), 3(R)				4(A), 2(B)
VQ0000	VV5Q04-□□□	<ul style="list-style-type: none"> ■ F kit-D-sub connector ■ P kit-Flat cable connector ■ T kit-Terminal block ■ C kit-Individual connector ■ S kit-Serial transmission unit 	Side	C6 (ø6) Option Built-in silencer, direct exhaust	C3 (ø3.2) C4 (ø4) M5 (M5 thread)	1 to 16 stations	VQ0□40 VQ0□41	225
VQ1000	VV5Q14-□□□	<ul style="list-style-type: none"> ■ F kit-D-sub connector ■ P kit-Flat cable connector ■ T kit-Terminal block ■ C kit-Individual connector ■ S kit-Serial transmission unit 	Side	C6 (ø6) Option Built-in silencer, direct exhaust	C3 (ø3.2) C4 (ø4) C6 (ø6) M5 (M5 thread)		VQ1□40 VQ1□41	380
VQ2000	VV5Q24-□□□	<ul style="list-style-type: none"> ■ F kit-D-sub connector ■ P kit-Flat cable connector ■ T kit-Terminal block ■ C kit-Individual connector ■ S kit-Serial transmission unit 	Side	C8 (ø8) Option Built-in silencer, direct exhaust	C4 (ø4) C6 (ø6) C8 (ø8)		VQ2□40 VQ2□41	671



Note 1) Inch-size One-touch fittings are also available. For details, refer to page 2-4-69.

Note 2) See page 2-4-69 for details.

VQC

SQ


VQ0

VQ4


VQ5

VQZ

VQD

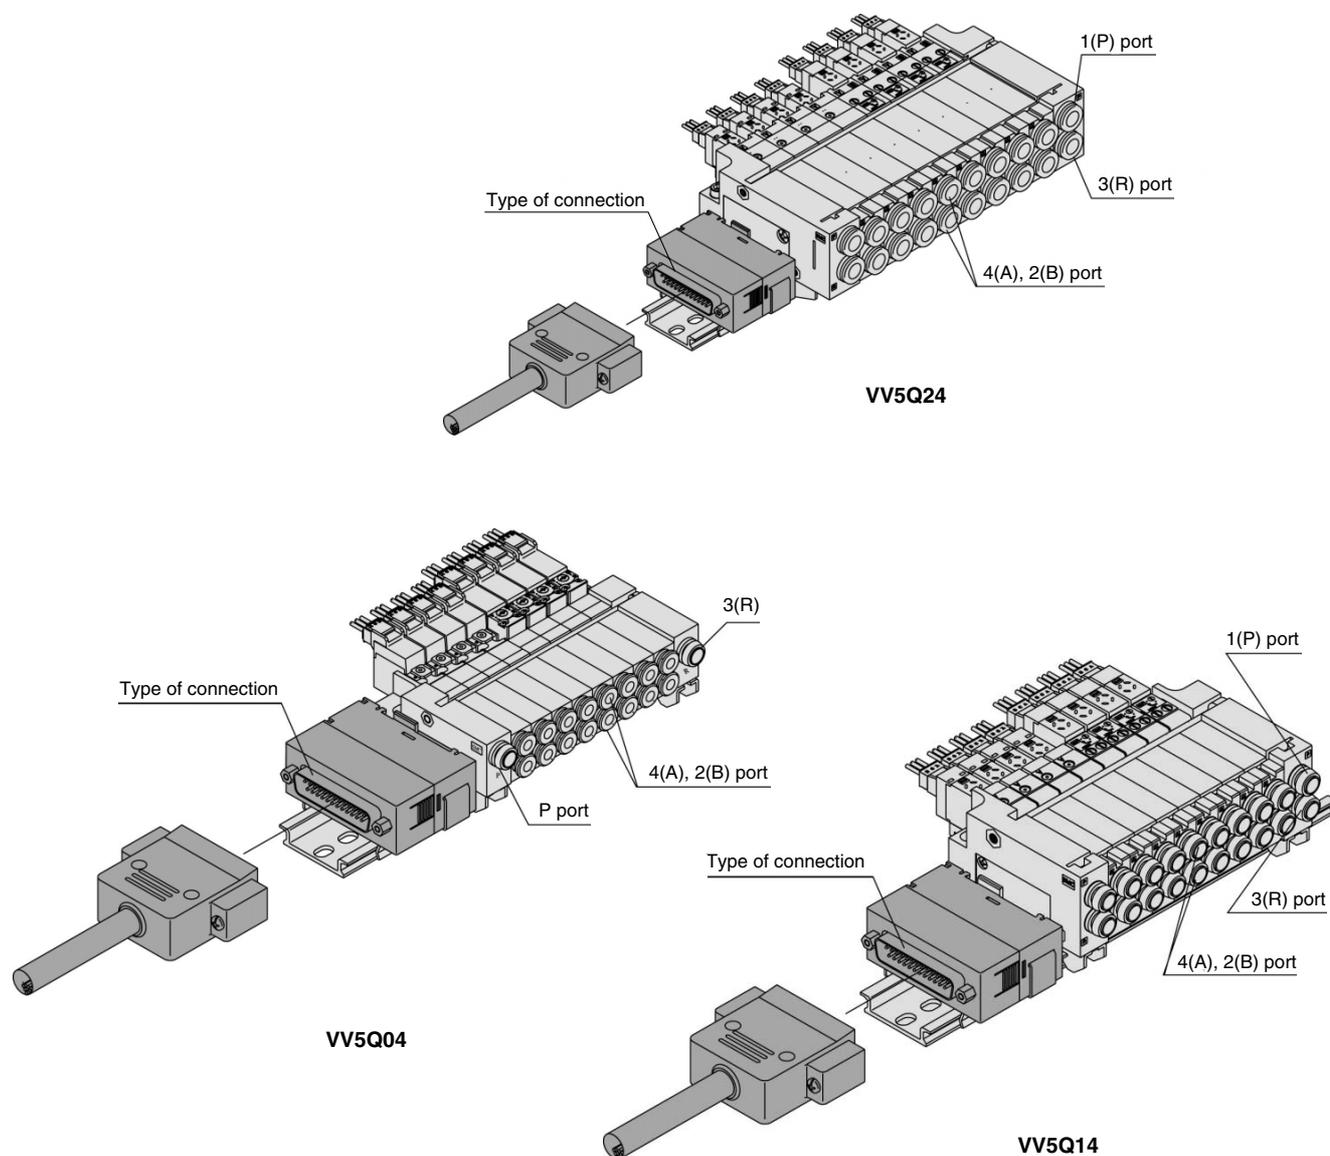

F VQ0000/1000/2000 Kit (D-sub connector)

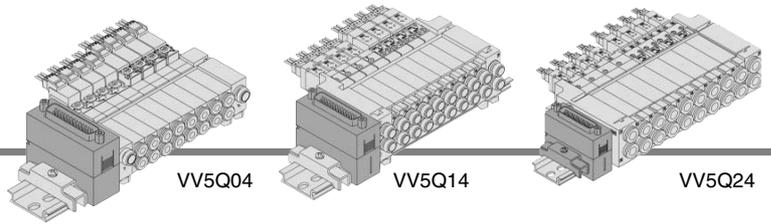

- The D-sub connector reduces installation labor for electrical connections.
- Using the D-sub connector (25P), (15P as an option) conforming to MIL standard permits the use of connectors put on the market and gives a wide interchangeability.
- Top or side receptacle position can be selected in accordance with the available mounting space.
- Maximum stations are 16.

Manifold Specifications VV5Q14

Series	Porting specifications		Applicable stations
	Port location	Port size	
VQ0000	Side	C6, C3, C4, M5	Max. 16 stations
VQ1000	Side	C6, C3, C4, C6, M5	Max. 16 stations
VQ2000	Side	C8, C4, C6, C8	Max. 16 stations

D-sub Connector (25 pins)

AXT100-DS25-015
030
050

(The D-sub connector cable assembly can be ordered individually or included in a specific manifold model no. Refer to How to Order Manifold.)

Multi-core vinyl cable
0.3 mm² x 25C

44
6
55
2-M2.6 x 0.45
14 --- 25
10
1 --- 13
47.04
Terminal no.

Socket side

Wire Color by Terminal No. of D-sub Connector Cable Assembly

Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Gray	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Gray	Red
24	Black	White
25	White	None

D-sub Connector Cable Assembly (Option)

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-DS25-015	Cable 25 core x 24AWG
3 m	AXT100-DS25-030	
5 m	AXT100-DS25-050	

* For other commercial connectors, use a 25 pins type with female connector conforming to MIL-C-24308.

Connector manufacturers' example

- Fujitsu Limited
- Japan Aviation Electronics Industry, Ltd.
- J.S.T. Mfg. Co., Ltd.

Electric Characteristics

Item	Characteristics
Conductor resistance Ω/km, 20°C	65 or less
Insulation resistance V, 1 min, AC	1000
Insulation resistance MΩ/km, 20°C	5 or more

Note) The minimum bending radius of D-sub cable assembly is 20 mm.

Note) Types with 15 pin are also available. For details, refer to page 2-4-68.

Cable assembly

The total number of stations is tabulated starting from station one on the D side.

● **Electrical wiring specifications** on the D side.

D-sub cable assembly 015
AXT100-DS25-030
050

Wire color

D-sub connector	Terminal no.	Polarity	Lead wire color	Dot marking	
1 station	SOLA_1	(-)	Black	None	
	SOLB_14	(-)	(+)	Yellow	Black
2 stations	SOLA_2	(-)	(+)	Brown	None
	SOLB_15	(-)	(+)	Pink	Black
3 stations	SOLA_3	(-)	(+)	Red	None
	SOLB_16	(-)	(+)	Blue	White
4 stations	SOLA_4	(-)	(+)	Orange	None
	SOLB_17	(-)	(+)	Purple	None
5 stations	SOLA_5	(-)	(+)	Yellow	None
	SOLB_18	(-)	(+)	Gray	None
6 stations	SOLA_6	(-)	(+)	Pink	None
	SOLB_19	(-)	(+)	Orange	Black
7 stations	SOLA_7	(-)	(+)	Blue	None
	SOLB_20	(-)	(+)	Red	White
8 stations	SOLA_5	(-)	(+)	Purple	White
	SOLB_21	(-)	(+)	Brown	White
	COM_13	(+)	(-)	Orange	Red

Positive common Negative common (NSD) specifications specifications

Connector terminal no.

As the standard electrical wiring specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 8 stations or less, regardless of valve and option types. Mixed single and double wiring is available as an option. For details, refer to page 2-4-69.

Note) When using the negative common specifications, use valves for negative common. (Refer to page 2-4-69.)

How to Order Manifold

VV5Q 1 4 - 08 F S 1 - D

Series

0	VQ0000
1	VQ1000
2	VQ2000

Manifold

4	Plug lead unit/Flip
---	---------------------

Stations

01	1 station
⋮	⋮
16	16 stations

Note) For details, refer to page 2-4-69.

Cable (Length)

0	Without cable
1	With cable (1.5 m)
2	With cable (3 m)
3	With cable (5 m)

Connector entry direction

U	Top entry
S	Side entry


Option

D (2)	DIN rail mounting style
K (3)	Special wiring specifications (Except double wiring)
N	With name plate
S	Built-in silencer, direct exhaust (U side only)

Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -DNS
 Note 2) F kits are DIN rail mounting styles, include suffix -D.
 Note 3) Specify the wiring specifications on the manifold specification sheet.

Plug Lead Unit: Flip Type Series VQ0000/1000/2000

VQ0000

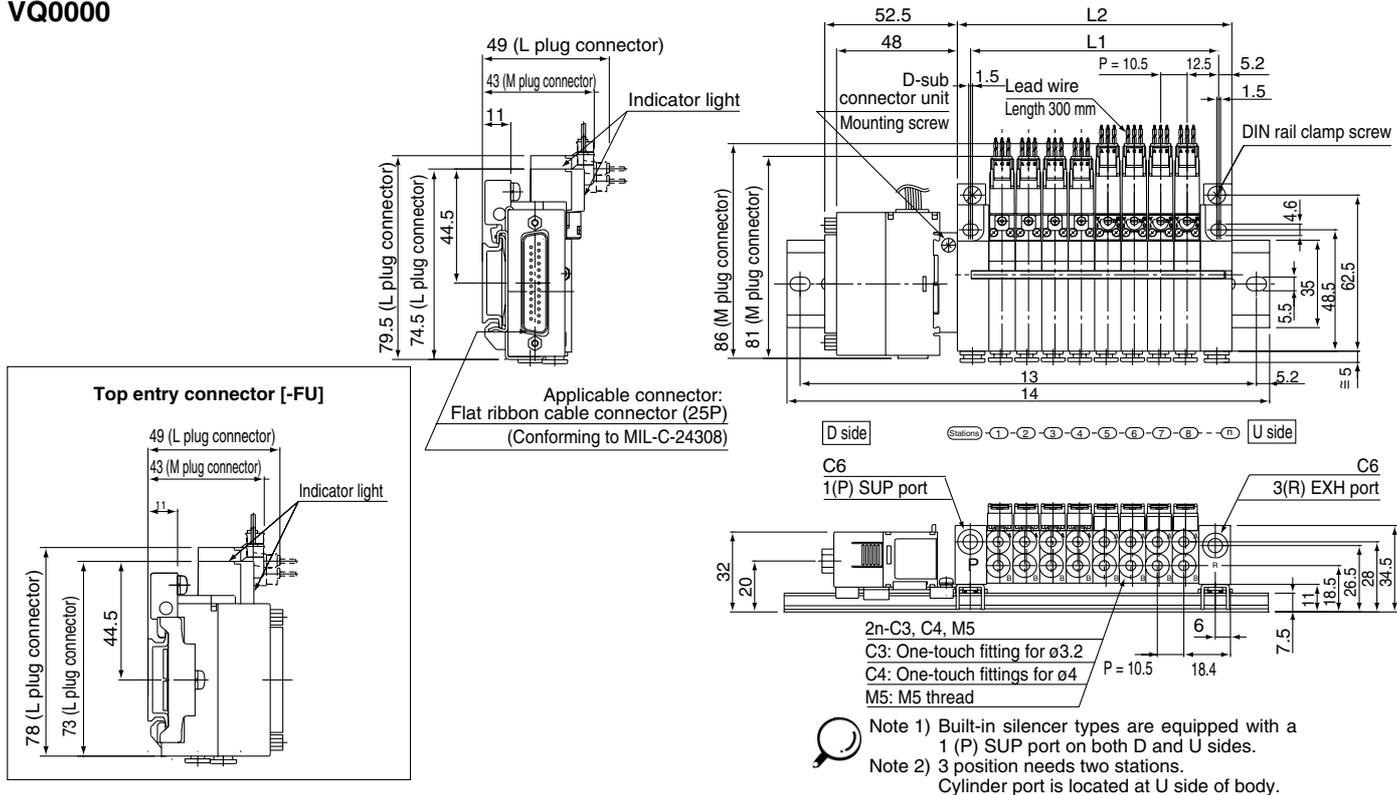

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

Dimensions: Side Entry Connector [-FS]

Formula L1 = 10.5n + 14.5, L2 = 10.5n + 25 n: Station (Maximum 16 stations)

L	n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1		25	35.5	46	56.5	67	77.5	88	98.5	109	119.5	130	140.5	151	161.5	172	182.5
L2		35.5	46	56.5	67	77.5	88	98.5	109	119.5	130	140.5	151	161.5	172	182.5	193
L3		112.5	125	137.5	150	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275
L4		123	135.5	148	160.5	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5

Dimensions: Top Entry Connector [-FU]

L	n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L3		100	100	112.5	125	137.5	150	162.5	162.5	175	187.5	200	212.5	225	237.5	237.5	250
L4		110.5	110.5	123	135.5	148	160.5	173	173	185.5	198	210.5	223	235.5	248	248	260.5

How to Order Valves

VQ 1 1 4 0 Y 5 LO C6

Series

0	VQ0000
1	VQ1000
2	VQ2000

Seal

0	Metal seal
1	Rubber seal

Type of actuation

	VQ0000	VQ1000	VQ2000	
1	2 position single	●	●	●
2	2 position double (Latching)	●	●	●
3	3 position closed center	● ⁽¹⁾	● ⁽²⁾	—
4	3 position exhaust center	● ⁽¹⁾	● ⁽²⁾	—
5	3 position pressure center	—	● ⁽²⁾	—

Function

Symbol	Specifications	DC	AC
Nil	Standard type	(1.0 W)	○ ⁽¹⁾
H ⁽²⁾	High pressure type	(1.5 W)	—
Y ⁽²⁾	Low wattage type	(0.5 W)	—

Note 1) For power consumption of AC type, refer to page 2-4-36.
Note 2) Except double (latching).

Coil voltage

1	100 VAC (50/60 Hz)
3	110 VAC (50/60 Hz)
5	24 VDC
6	12 VDC

Note 1) (2 stations space are occupied.)
Note 2) L plug connector is used for AC.

Note 1) For negative common specifications, refer to "Option" on page 2-4-69.
Note 2) Connector assembly will be required when the F kits add a valve. For part nos., refer to "Option" on page 2-4-69.

How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.

Cylinder port

Symbol	Port size	VQ0000	VQ1000	VQ2000
C3	With One-touch fitting for ø3.2	●	●	—
C4	With One-touch fitting for ø4	●	●	●
C6	With One-touch fitting for ø6	—	●	●
C8	With One-touch fitting for ø8	—	—	●
M5	M5 thread	●	●	—

Note) For inch-size One-touch fittings, refer to "Option" on page 2-4-69.

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)

Note 1) All double latching valves of VQ0000 are non-locking push type. (Refer to page 2-4-66.)
Note 2) A manual override for pilot valve is provided to the standard model for double type.



Electrical entry

LO	L plug connector without connector
MO	M plug connector without connector

Note) Plug connector and lead wire layers are attached to the manifold.

F VQ000/1000/2000 Kit (D-sub connector)

VQ1000

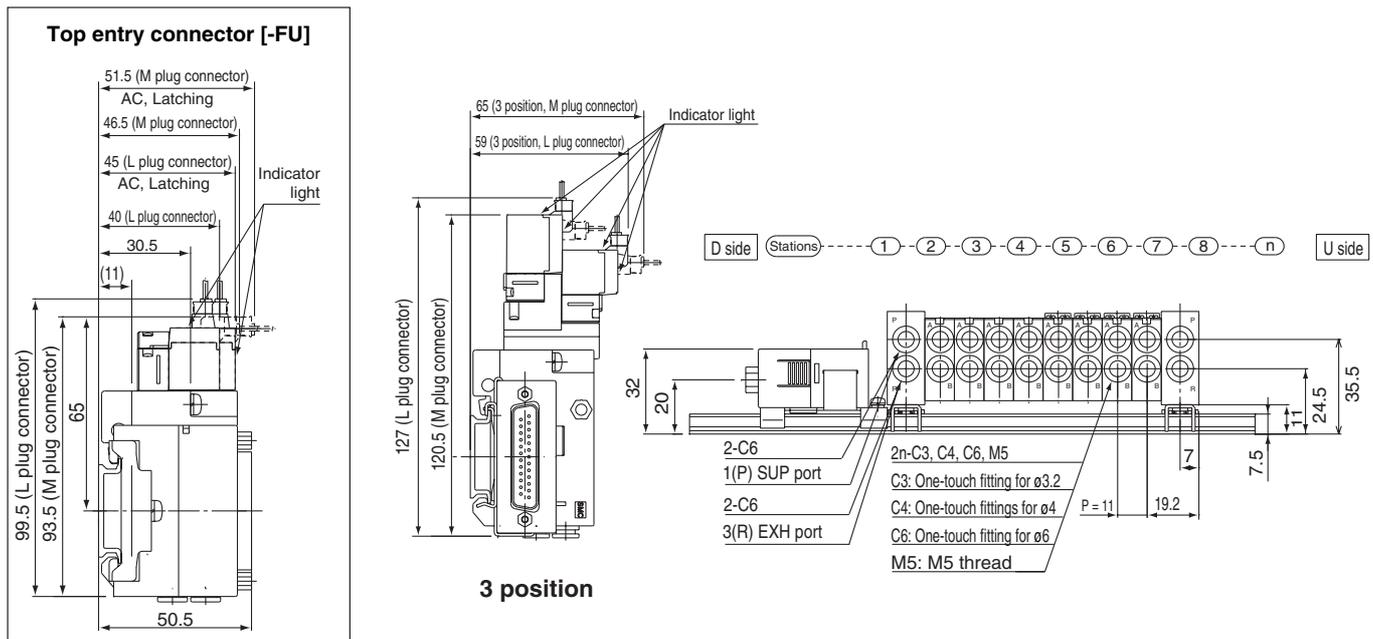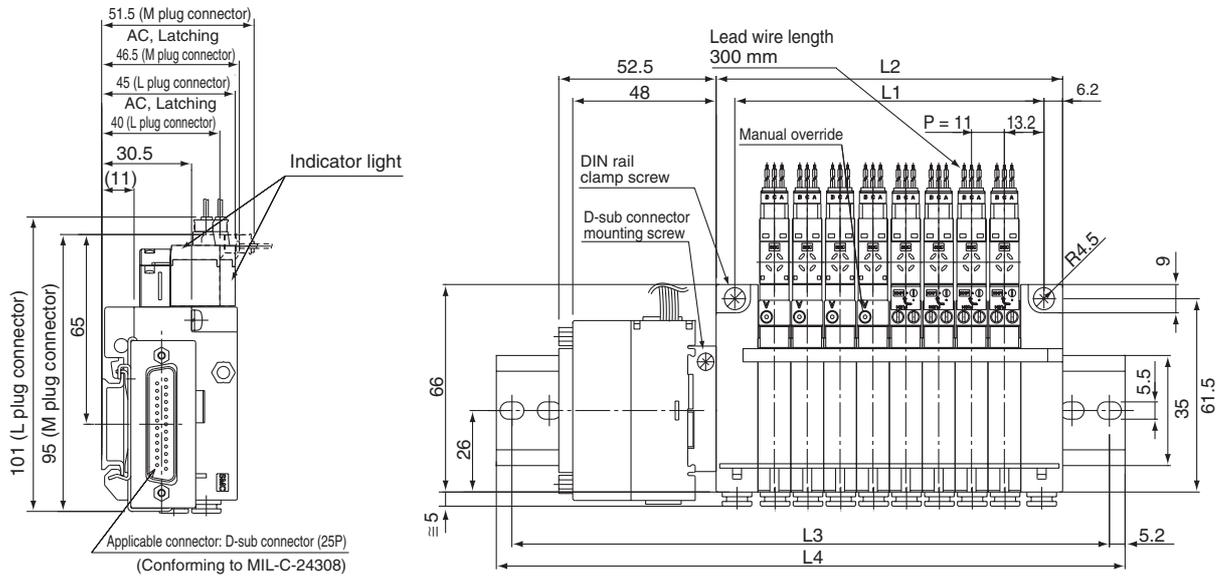

Dimensions: Side Entry Connector [-FS]

Formula $L1 = 11n + 15.5$
 $L2 = 11n + 28$ n: Stations (Maximum 16 stations)



n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	26.5	37.5	48.5	59.5	70.5	81.5	92.5	103.5	114.5	125.5	136.5	147.5	158.5	169.5	180.5	191.5
L2	39	50	61	72	83	94	105	116	127	138	149	160	171	182	193	204
L3	112.5	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	262.5	275	287.5
L4	123	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	273	285.5	298

Dimensions: Top Entry Connector [-FU]



n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L3	100	112.5	125	137.5	137.5	150	162.5	175	187.5	200	212.5	225	225	237.5	250	262.5
L4	110.5	123	135.5	148	148	160.5	173	185.5	198	210.5	223	235.5	235.5	248	260.5	273

Plug Lead Unit: Flip Type Series VQ0000/1000/2000

VQ2000

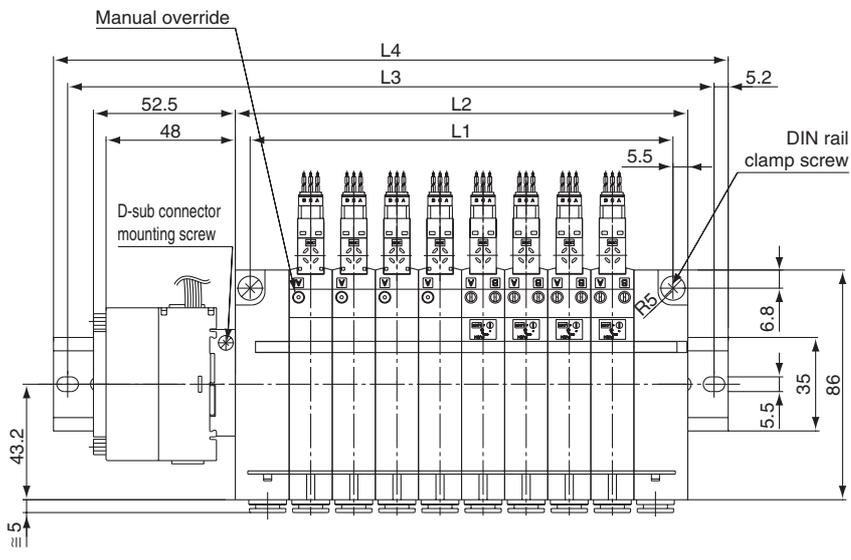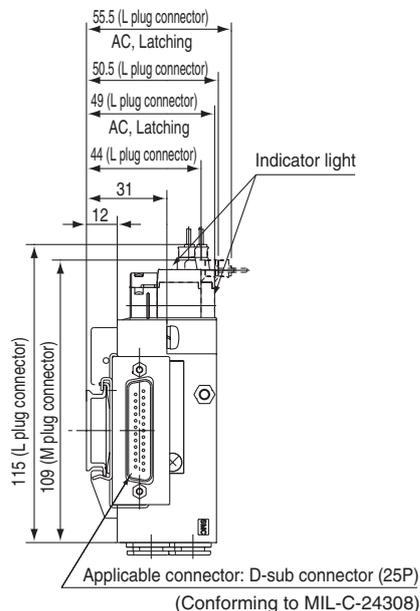

- VQC
- SQ
- VQ0**
- VQ4
- VQ5
- VQZ
- VQD

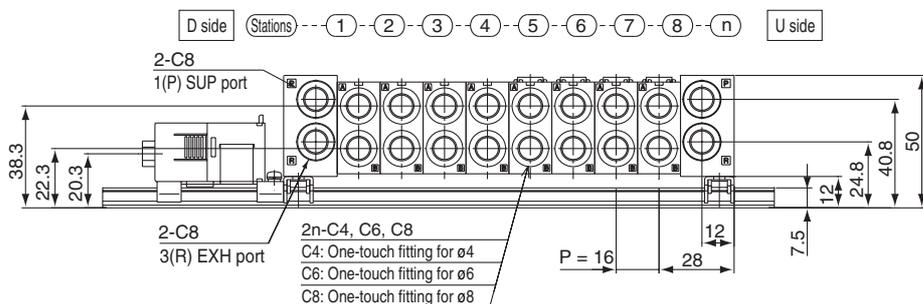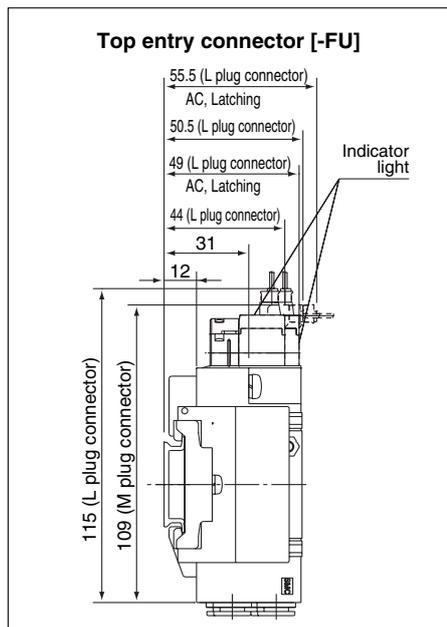

Dimensions: Side Entry Connector [-FS]


Formula L1 = 16n + 29, L2 = 16n + 40 n: Stations (Maximum 16 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	45	61	77	93	109	125	141	157	173	189	205	221	237	253	269	285
L2	56	72	88	104	120	136	152	168	184	200	216	232	248	264	280	296
L3	137.5	150	162.5	187.5	200	212.5	225	250	262.5	275	300	312.5	325	337.5	362.5	375
L4	148	160.5	173	198	210.5	223	235.5	260.5	273	285.5	310.5	323	335.5	348	373	385.5

Dimensions: Top Entry Connector [-FU]

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L3	112.5	137.5	150	162.5	175	200	212.5	225	237.5	262.5	275	287.5	312.5	325	337.5	350
L4	123	148	160.5	173	185.5	210.5	223	235.5	248	273	285.5	298	323	335.5	348	360.5

P VQ0000/1000/2000 Kit (Flat ribbon cable connector)

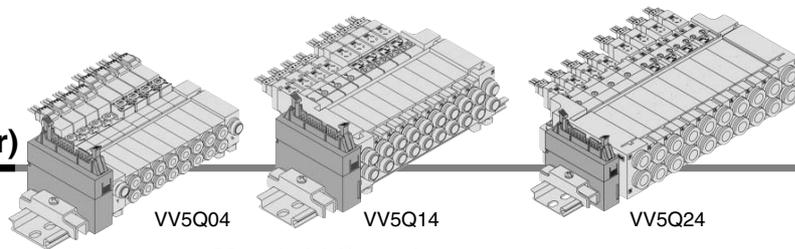


- MIL flat ribbon cable connector reduces installation labor savings for electrical connection.
- Using the connector for flat ribbon cable (26P), (10P, 16P, 20P as an option) conforming to MIL standard permits the use of connectors put on the market and gives a wide interchangeability.
- Top or side receptacle position can be selected in accordance with the available mounting space.
- Maximum stations are 16.

Manifold Specifications

Series	Porting specifications			Applicable stations
	Port location	Port size		
		1(P), 3(R)	4(A), 2(B)	
VQ0000	Side	C6	C3, C4, M5	Max. 16 stations
VQ1000	Side	C6	C3, C4, C6, M5	Max. 16 stations
VQ2000	Side	C8	C4, C6, C8	Max. 16 stations


Flat Ribbon Cable (26 pins)

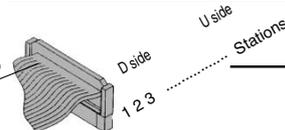

Cable assembly

AXT100-FC26-1 to 3

(Flat ribbon cable connector assembly can be ordered individually or included in a specific manifold model no. Refer to How to Order Manifold.)

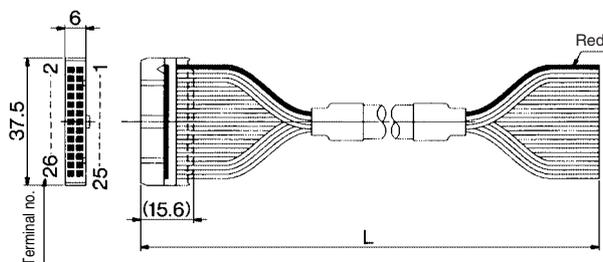

Flat Ribbon Cable Connector Assembly (Option)

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-FC26-1	Cable 26 core x 28AWG
3 m	AXT100-FC26-2	
5 m	AXT100-FC26-3	

* For other commercial connectors, use a 26 pins type with strain relief conforming to MIL-C-83503.

Connector manufacturers' example

- Hirose Electric Co., Ltd.
- Sumitomo 3M Limited
- Fujitsu Limited
- Japan Aviation Electronics Industry, Ltd.
- J.S.T. Mfg. Co., Ltd.
- Oki Electric Cable Co., Ltd.

Note) Types with 10, 16, or 20 pin are also available. For details, refer to page 2-4-69.

VV5Q14

The total number of stations is tabulated starting from station one on the D side.

Electrical wiring specifications

Flat ribbon cable connector

Terminal no.	Polarity	
1 station { SOL.A 1	(-)	(+)
SOL.B 2	(-)	(+)
2 stations { SOL.A 3	(-)	(+)
SOL.B 4	(-)	(+)
3 stations { SOL.A 5	(-)	(+)
SOL.B 6	(-)	(+)
4 stations { SOL.A 7	(-)	(+)
SOL.B 8	(-)	(+)
5 stations { SOL.A 9	(-)	(+)
SOL.B 10	(-)	(+)
6 stations { SOL.A 11	(-)	(+)
SOL.B 12	(-)	(+)
7 stations { SOL.A 13	(-)	(+)
SOL.B 14	(-)	(+)
8 stations { SOL.A 15	(-)	(+)
SOL.B 16	(-)	(+)
COM. 25	(+)	(-)
COM. 26	(+)	(-)

Note) When using the negative common specifications, use valves for negative common. (Refer to page 2-4-69.)

As the standard electrical wiring specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 8 stations or less, regardless of valve and option types. Mixed single and double wiring is available as an option. For details, refer to page 2-4-69.

How to Order Manifold

VV5Q 1 4 - 08 P S 1 - D

Series	
0	VQ0000
1	VQ1000
2	VQ2000

Manifold	
4	Plug lead unit/Flip

Stations	
01	1 station
⋮	⋮
16	16 stations

Note) For details, refer to page 2-4-69.

Cable (Length)	
0	Without cable
1	With cable (1.5 m)
2	With cable (3 m)
3	With cable (5 m)


Connector entry direction	
U	Top entry
S	Side entry

Option	
D ⁽²⁾	DIN rail mounting style
K ⁽³⁾	Special wiring specifications (Except double wiring)
N	With name plate
S	Built-in silencer, direct exhaust (U side only)

- Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -DNS
- Note 2) P kits are DIN rail mounting styles, so include suffix -D.
- Note 3) Specify the wiring specifications on the manifold specification sheet.

Plug Lead Unit: Flip Type Series VQ0000/1000/2000

VQ0000

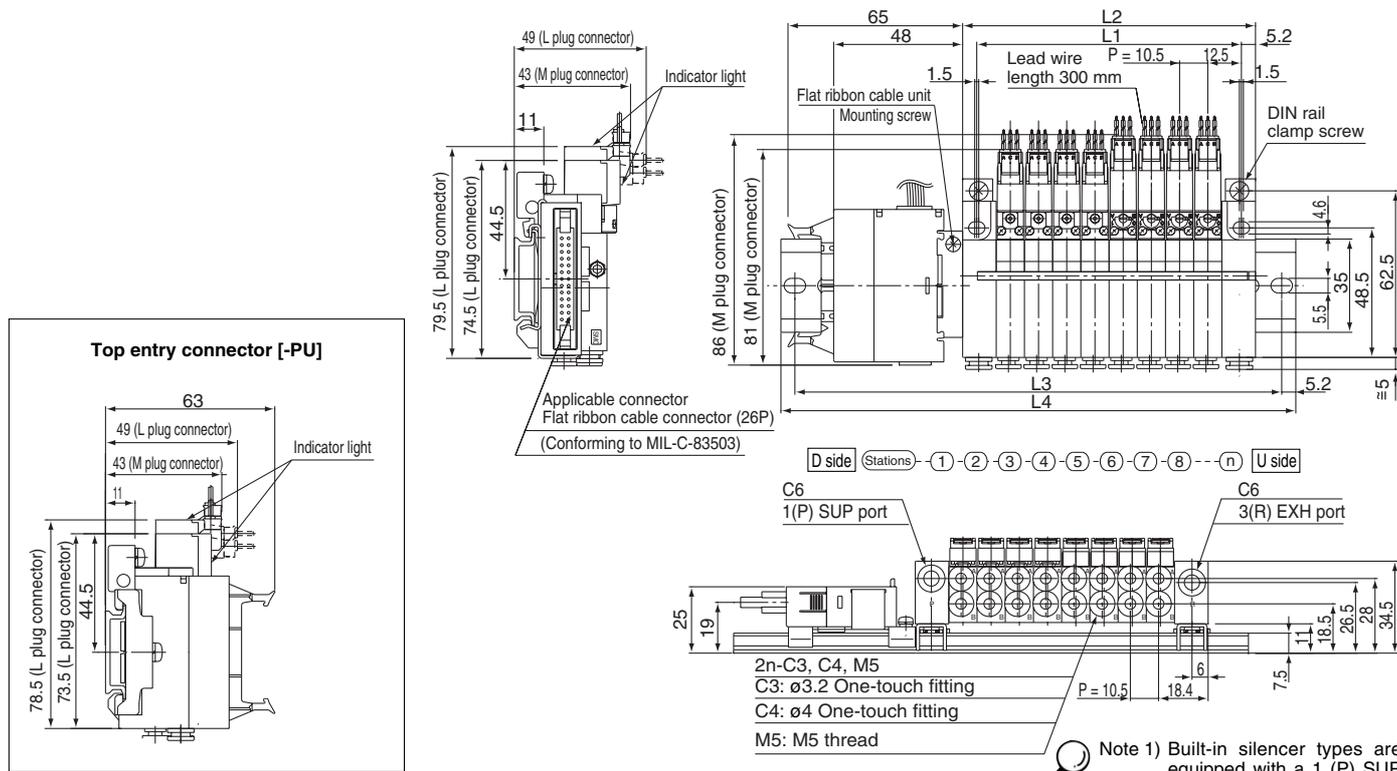

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

Dimensions: Side Entry Connector [-PS]

Formula $L1 = 10.5n + 14.5$ $L2 = 10.5n + 25$ n: Station (Maximum 16 stations)

n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	25	35.5	46	56.5	67	77.5	88	98.5	109	119.5	130	140.5	151	161.5	172	182.5
L2	35.5	46	56.5	67	77.5	88	98.5	109	119.5	130	140.5	151	161.5	172	182.5	193
(L3)	112.5	125	137.5	150	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275
(L4)	123	135.5	148	160.5	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5

Dimensions: Top Entry Connector [-PU]

n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L3	87.5	100	112.5	125	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250
L4	98	110.5	123	135.5	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5

- Note 1) Built-in silencer types are equipped with a 1 (P) SUP port on both D and U sides.
- Note 2) 3 position needs two stations. Cylinder port is located at U side of body.

How to Order Valves



Series

0	VQ0000
1	VQ1000
2	VQ2000

Seal

0	Metal seal
1	Rubber seal

Function

Symbol	Specifications	DC	AC
Nil	Standard type	(1.0 W)	○ ⁽¹⁾
H ⁽²⁾	High pressure type	(1.5 W)	—
Y ⁽²⁾	Low wattage type	(0.5 W)	—

Type of actuation

	VQ0000	VQ1000	VQ2000
1	2 position single	●	●
2	2 position double (Latching)	●	●
3	3 position closed center	● ⁽¹⁾	● ⁽²⁾
4	3 position exhaust center	● ⁽¹⁾	● ⁽²⁾
5	3 position pressure center	—	● ⁽²⁾

Coil voltage

1	100 VAC (50/60 Hz)
3	110 VAC (50/60 Hz)
5	24 VDC
6	12 VDC

Note 1) (2 stations space are occupied.)
 Note 2) L plug connector is used for AC.

Note 1) For negative common specifications, refer to "Option" on page 2-4-69.
 Note 2) Connector assembly will be required when the P kits add a valve. For model no., refer to "Option" on page 2-4-69.

How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.

Cylinder port

Symbol	Port size	VQ0000	VQ1000	VQ2000
C3	With One-touch fitting for ø3.2	●	●	—
C4	With One-touch fitting for ø4	●	●	●
C6	With One-touch fitting for ø6	—	●	●
C8	With One-touch fitting for ø8	—	—	●
M5	M5 thread	●	●	—

Note) For inch-size One-touch fittings, refer to "Option" on page 2-4-69.

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)

Note 1) All double latching valves of VQ0000 are non-locking push type.
 Note 2) A manual override for pilot valve is provided to the standard model for double type.




Electrical entry

LO	L plug connector without connector
MO	M plug connector without connector

Note) Plug connector and lead wire layers are attached to the manifold.

P VQ0000/1000/2000 Kit (Flat ribbon cable connector)

VQ1000

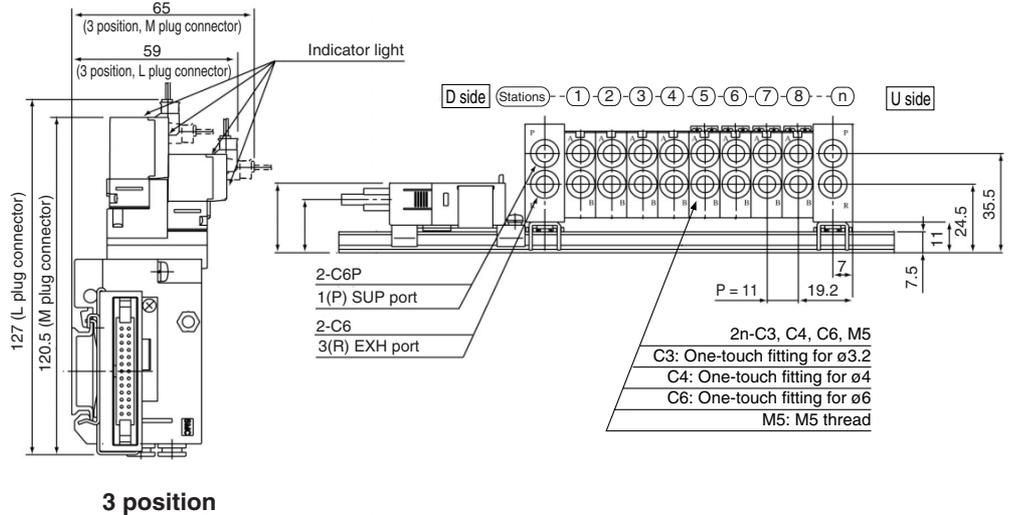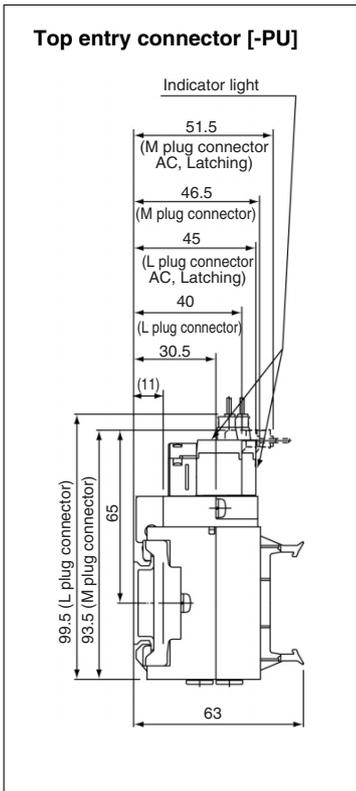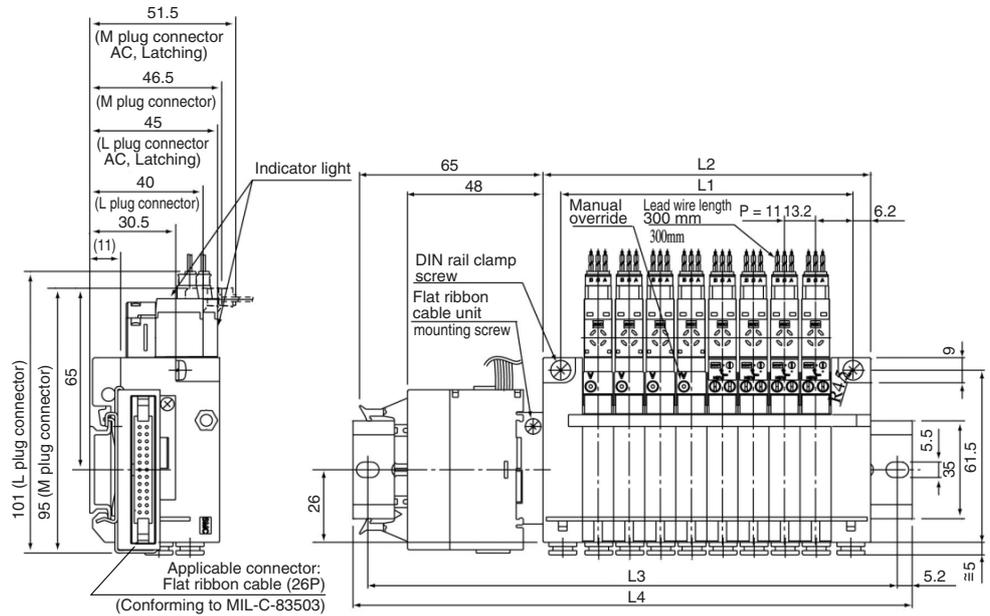

Dimensions: Side Entry Connector [-PS]


Formula $L1 = 11n + 15.5$, $L2 = 11n + 28$ n: Stations (Maximum 16 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	26.5	37.5	48.5	59.5	70.5	81.5	92.5	103.5	114.5	125.5	136.5	147.5	158.5	169.5	180.5	191.5
L2	39	50	61	72	83	94	105	116	127	138	149	160	171	182	193	204
L3	112.5	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	262.5	275	287.5
L4	123	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	273	285.5	298

Dimensions: Top Entry Connector [-PU]

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L3	87.5	100	112.5	125	137.5	150	162.5	162.5	175	187.5	200	212.5	225	237.5	250	262.5
L4	98	110.5	123	135.5	148	160.5	173	173	185.5	198	210.5	223	235.5	248	260.5	273

T VQ000/1000/2000 Kit (Terminal block)

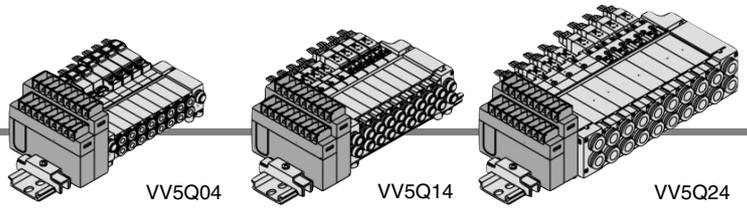

- It is a standard terminal block type.
- Two quantities of terminals can be selected in accordance with the number of stations.
(8 terminals/16 terminals)
- Maximum stations are 16.

Manifold Specifications

Series	Porting specifications		Applicable stations
	Port location	Port size	
VQ0000	Side	C6 4(A), 2(B)	Max. 16 stations
VQ1000	Side	C6 4(A), 2(B)	Max. 16 stations
VQ2000	Side	C8 4(A), 2(B)	Max. 16 stations

Electrical wiring specifications

Terminal no.

1 station { SOLA 1 (-)
SOLB 2 (-)

2 stations { SOLA 3 (-)
SOLB 4 (-)

3 stations { SOLA 5 (-)
SOLB 6 (-)

4 stations { SOLA 7 (-)
SOLB 8 (-)
COM COM (+)

5 stations { SOLA 1 (-)
SOLB 2 (-)

6 stations { SOLA 3 (-)
SOLB 4 (-)

7 stations { SOLA 5 (-)
SOLB 6 (-)

8 stations { SOLA 7 (-)
SOLB 8 (-)
COM COM (+)


In the case of double wiring (standard spec.)
T1 (Terminal block of 1 row): 1 to 4 stations
T2 (Terminal block of 2 rows): 5 to 8 stations
T1 and T2 can be optionally chosen by adopting the combinations of single and double wiring (optional spec.), etc.

The quantity of terminal blocks used depends on the number of manifold stations.

Manifold	No. of terminals
1 to 4 stations	1 row
5 to 8 stations	2 rows

Wiring other than those above is possible. See page 2-4-69 for details.

Double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station, regardless of valve and option types. Mixed single and double wiring is available as an option.
For details, refer to page 2-4-69.

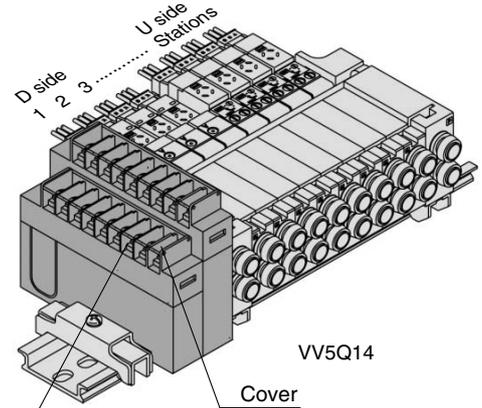

How to connect wires to terminal block

Open the terminal block cover to connect the wires to the terminal block.
(With M3 thread)

How to Order Manifold

VV5Q 1 4 - 08 T 2 - D

Series

0	VQ0000
1	VQ1000
2	VQ2000

Manifold

4	Plug lead unit/Flip
---	---------------------

Stations

01	1 station
⋮	⋮
16	16 stations

Option

D ⁽²⁾	DIN rail mounting style
K ⁽³⁾	Special wiring specifications (Except double wiring)
N	With name plate
S	Built-in silencer, direct exhaust (U side only)

Note 1) When two or more symbols are specified, indicate them alphabetically.
Example) -DNS

Note 2) T kits are DIN rail mounted type, so include suffix -D.
Note 3) Specify the wiring specifications in the manifold specification sheet.



Note 1) For negative common specifications, refer to "Option" on page 2-4-69.

Note 2) As option, the maximum number of stations can be increased based on special wiring specifications. For details, refer to page 2-4-69.

Number of terminals


1	8 terminals in 1 row	Applicable stations 1 to 4 stations (Double), 8 stations (Single)
2	16 terminals in 2 rows	Applicable stations 5 to 8 stations (Double), 16 stations (Single)



Note) The number of terminal blocks can be chosen regardless of station qty. Suffix the option symbol, K, when the wiring specification is special.

Plug Lead Unit: Flip Type Series VQ0000/1000/2000


VQ0000

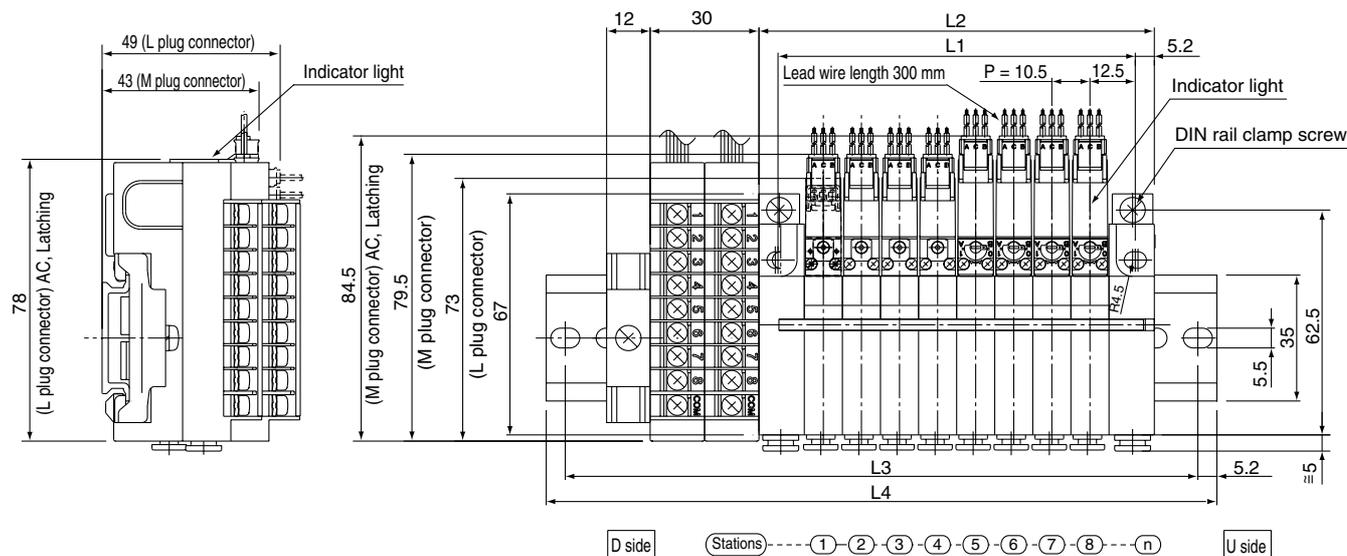

- VQC
- SQ
- VQ0**
- VQ4
- VQ5
- VQZ
- VQD

- Note 1) Built-in silencer types are equipped with a 1 (P) SUP port on both D and U sides.
 Note 2) 3 position needs two stations. Cylinder port is located at U side of body.

This drawing shows the case of VV5Q04-□T2-D□.

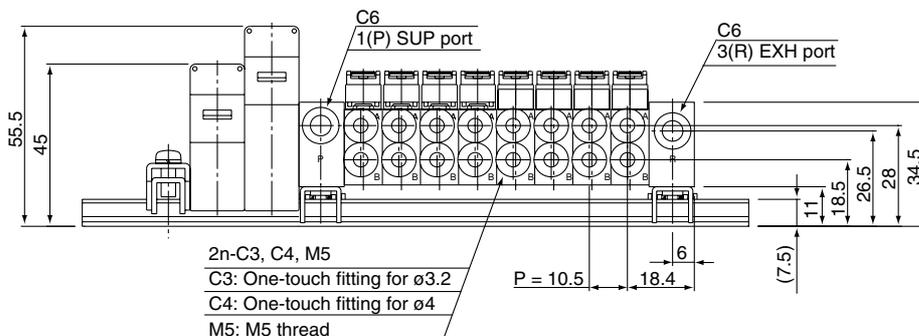

Dimensions

Equation L1 = 10.5n + 14.5, L2 = 10.5 n + 25 n: station (Maximum 16 stations)

n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	25	35.5	46	56.5	67	77.5	88	98.5	109	119.5	130	140.5	151	161.5	172	182.5
L2	35.5	46	56.5	67	77.5	88	98.5	109	119.5	130	140.5	151	161.5	172	182.5	193
L3	100	112.5	125	137.5	150	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5
L4	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273

How to Order Valves

VQ 1 1 4 0 Y 5 LO C6

Series

0	VQ0000
1	VQ1000
2	VQ2000

Seal

0	Metal seal
1	Rubber seal

Function

Symbol	Specifications	DC	AC
Nil	Standard type	(1.0 W)	○ ⁽¹⁾
H ⁽¹⁾	High pressure type	(1.5 W)	—
Y ⁽²⁾	Low wattage type	(0.5 W)	—

- Note 1) For power consumption of AC type, refer to page 2-4-36.
 Note 2) Except double (latching).

Type of actuation

	VQ0000	VQ1000	VQ2000
1	2 position single	●	●
2	2 position double (Latching)	●	●
3	3 position closed center	● ⁽¹⁾	● ⁽²⁾
4	3 position exhaust center	● ⁽¹⁾	● ⁽²⁾
5	3 position pressure center	—	● ⁽²⁾

Coil voltage

1	100 VAC (50/60 Hz)
3	110 VAC (50/60 Hz)
5	24 VDC
6	12 VDC

How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.

Cylinder port

Symbol	Port size	VQ0000	VQ1000	VQ2000
C3	With One-touch fitting for ø3.2	●	●	—
C4	With One-touch fitting for ø4	●	●	●
C6	With One-touch fitting for ø6	—	●	●
C8	With One-touch fitting for ø8	—	—	●
M5	M5 thread	●	●	—

Note) For inch-size One-touch fittings, refer to "Option" on page 2-4-69.

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)

- Note 1) All double latching valves of VQ0000 are non-locking push type. (Refer to page 2-4-66.)
 Note 2) A manual override for pilot valve is provided to the standard model for double type.



Electrical entry

LO	L plug connector without connector
MO	M plug connector without connector

Note) Plug connector and lead wire layers are attached to the manifold.

- Note 1) For negative common specifications, refer to "Option" on page 2-4-69.
 Note 2) Connector assembly will be required when the T kits add a valve. For model no., refer to "Option" on page 2-4-69.

VQ1000

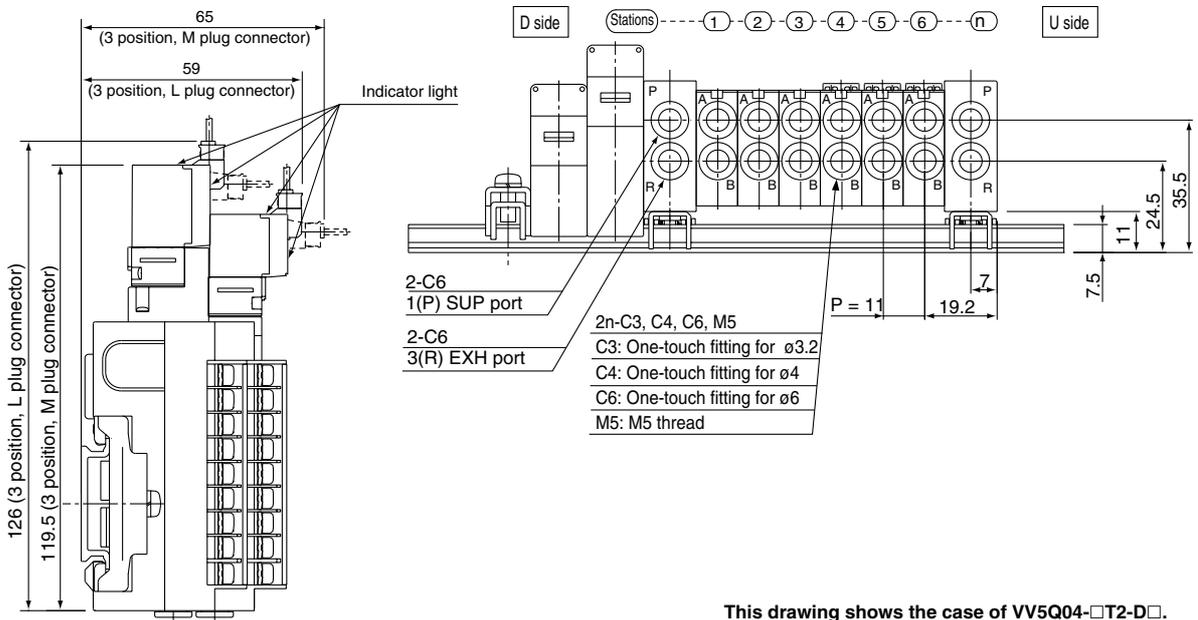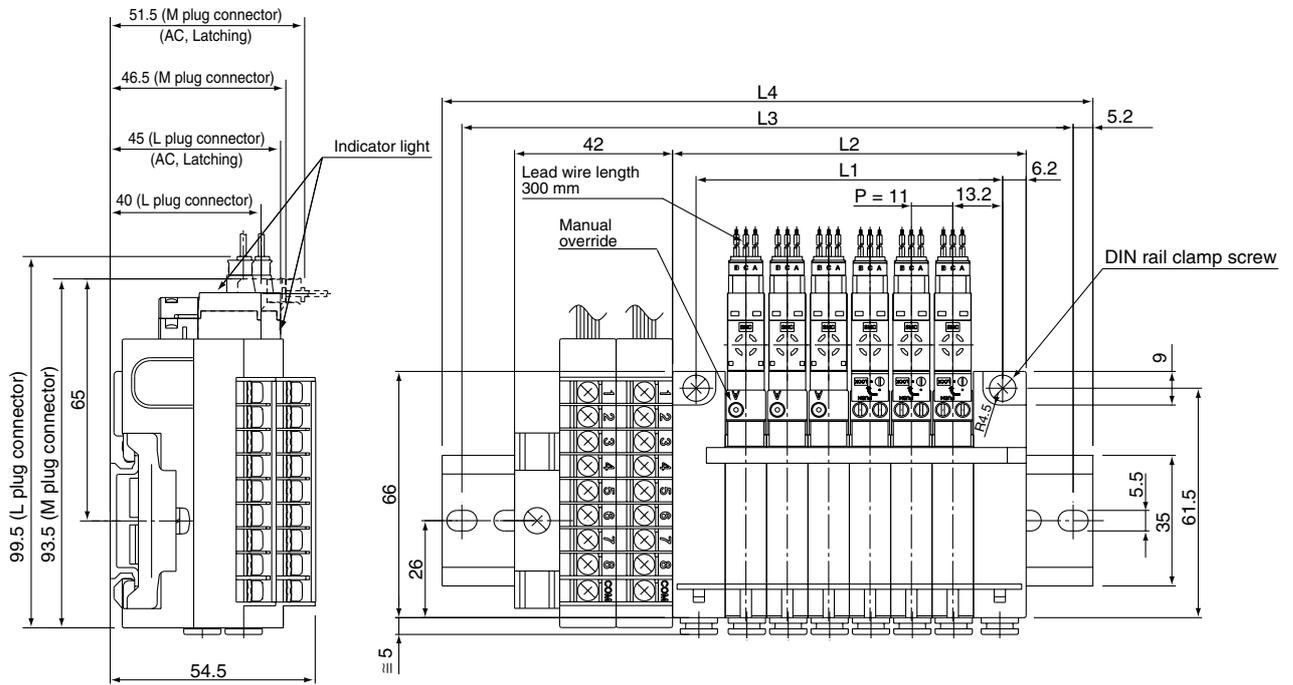

This drawing shows the case of VV5Q04-□T2-D□.


Dimensions

Formula L1 = 11n + 15.5, L2 = 11 n + 28 n: Station (Maximum 16 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	26.5	37.5	48.5	59.5	70.5	81.5	92.5	103.5	114.5	125.5	136.5	147.5	158.5	169.5	180.5	191.5
L2	39	50	61	72	83	94	105	116	127	138	149	160	171	182	193	204
L3	112.5	112.5	125	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	275
L4	123	123	135.5	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	285.5


C VQ0000/1000/2000 Kit (Connector)

- Standard with lead wires connected to each valve individually.
- Maximum stations are 16.

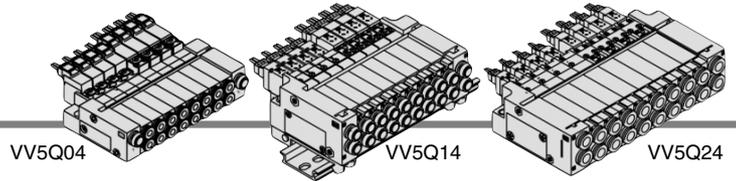


Manifold Specifications

Series	Porting specifications			Applicable stations
	Port location	Port size		
VQ0000	Side	C6	C3, C4, M5	Max. 16 stations
VQ1000	Side	C6	C3, C4, C6, M5	Max. 16 stations
VQ2000	Side	C8	C4, C6, C8	Max. 16 stations

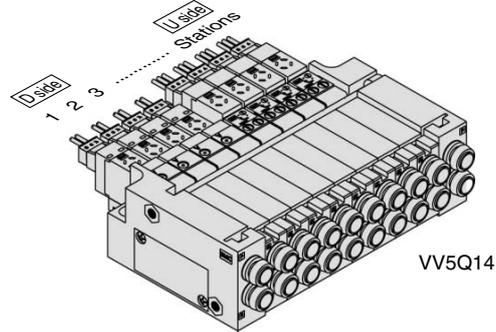

● Wiring specifications: Positive COM

- The lead wires are connected to the valve as shown below. Connect each to the power supply side.

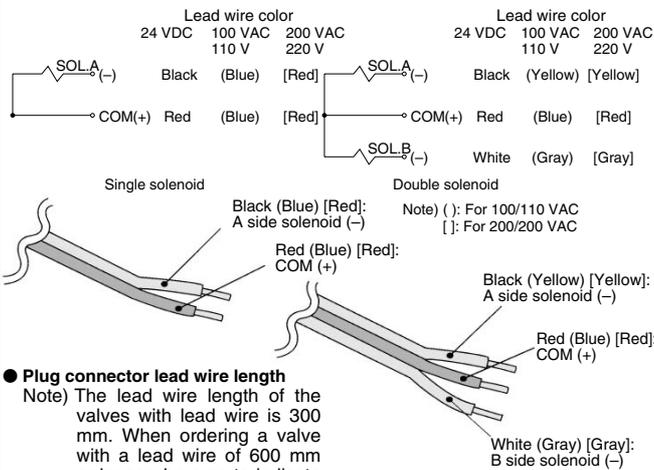

● Plug connector lead wire length

Note) The lead wire length of the valves with lead wire is 300 mm. When ordering a valve with a lead wire of 600 mm or longer, be sure to indicate the model number of the valve without connector and connector assembly.

Example) Lead wire length 1000 mm
VQ1140-5LO-C6... 3 pcs.
AXT661-14A-10 ... 3 pcs.

Connector Assembly Part No. (For DC)


Lead wire length	Single/3 position part no.	Double solenoid part no.
Socket only (3 pcs.)	AXT661-12A	
300 mm	AXT661-14A	AXT661-13A
600 mm	AXT661-14A-6	AXT661-13A-6
1000 mm	AXT661-14A-10	AXT661-13A-10
2000 mm	AXT661-14A-20	AXT661-13A-20
3000 mm	AXT661-14A-30	AXT661-13A-30

Note 1) 100/110 VAC for single: AXT661-31A-*; for double: AXT661-32A-*
200/220 VAC for single: AXT661-34A-*; for double: AXT661-35A-*
* are in accordance with the above table.

Note 2) 3 position type requires 2 sets for A side and B side.

● Wiring specifications: Negative COM (Option)

- The lead wires are connected to the valve as shown below. Connect each to the power supply side.

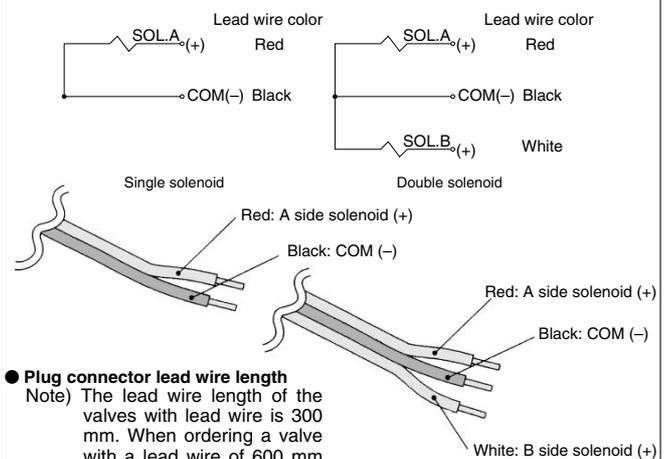

● Plug connector lead wire length

Note) The lead wire length of the valves with lead wire is 300 mm. When ordering a valve with a lead wire of 600 mm or longer, be sure to indicate the model number of the valve without connector and connector assembly.

Example) Lead wire length 1000 mm
VQ1140-5LO-C6...3 pcs.
AXT661-14A-10 ...3 pcs.


Connector Assembly Part No.

Lead wire length	Single/3 position part no.	Double solenoid part no.
Socket only (3 pcs.)	AXT661-12A	
300 mm	AXT661-14AN	AXT661-13AN
600 mm	AXT661-14AN-6	AXT661-13AN-6
1000 mm	AXT661-14AN-10	AXT661-13AN-10
2000 mm	AXT661-14AN-20	AXT661-13AN-20
3000 mm	AXT661-14AN-30	AXT661-13AN-30

Note 1) When using the negative common specifications, use valves for negative common.

Note 2) 3 position type requires 2 sets for A side and B side.


How to Order Manifold

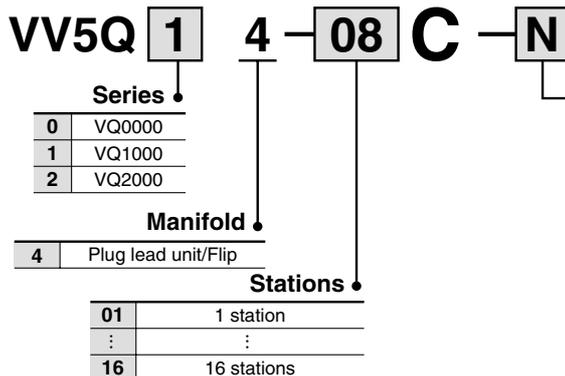

Note 1) When two or more symbols are specified, indicate them alphabetically.
Example) -DNS

Plug Lead Unit: Flip Type Series VQ0000/1000/2000

VQ0000

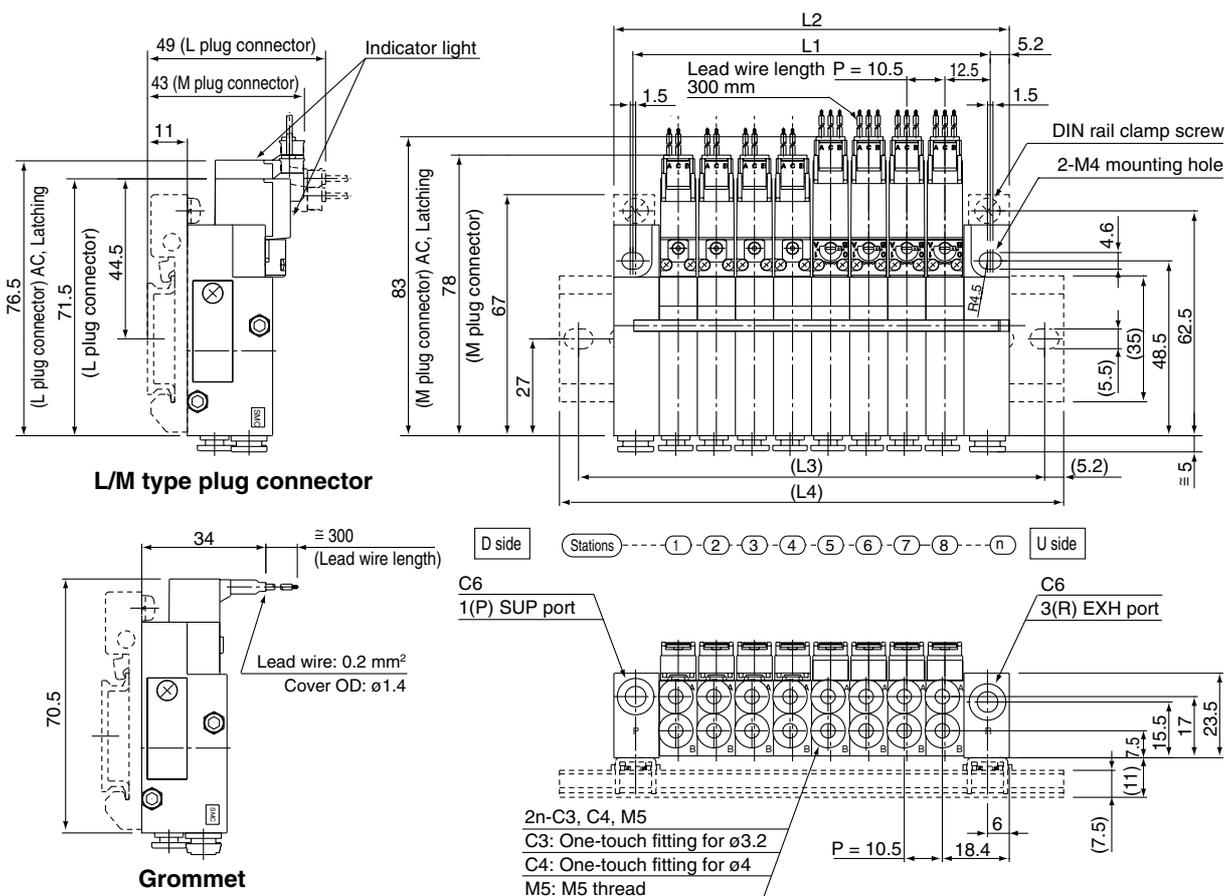

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

The broken lines indicate the DIN rail mounting style [-D].

- Note 1) Built-in silencer types are equipped with a 1 (P) SUP port on both D and U sides.
- Note 2) 3 position needs two stations. Cylinder port is located at U side of body.


Dimensions

Formula L1 = 10.5n + 14.5, L2 = 10.5 n + 25 n: Station (Maximum 16 stations)

n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	25	35.5	46	56.5	67	77.5	88	98.5	109	119.5	130	140.5	151	161.5	172	182.5
L2	35.5	46	56.5	67	77.5	88	98.5	109	119.5	130	140.5	151	161.5	172	182.5	193
(L3)	62.5	75	87.5	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200	212.5	212.5
(L4)	73	85.5	98	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5	223	223

How to Order Valves

How to Order Manifold Assembly

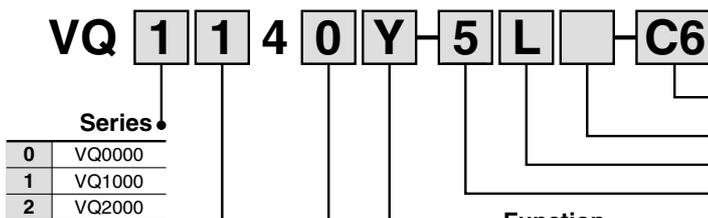

Specify the part numbers for valves and options together beneath the manifold base part number.

Cylinder port

Symbol	Port size	VQ0000	VQ1000	VQ2000
C3	With One-touch fitting for ø3.2	●	●	—
C4	With One-touch fitting for ø4	●	●	●
C6	With One-touch fitting for ø6	—	●	●
C8	With One-touch fitting for ø8	—	—	●
M5	M5 thread	●	●	—

Note) For inch-size One-touch fittings, refer to "Option" on page 2-4-69.

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)

Note 1) All double latching valves of VQ0000 are non-locking push type.

Note 2) A manual override for pilot valve is provided to the standard model for double type.

Electrical entry

G	Grommet (Except latching and 100/110 VAC type)
L	L plug connector with lead wire
LO	L plug connector without connector
M	M plug connector with lead wire
MO	M plug connector without connector

Seal

0	Metal seal
1	Rubber seal

Function

Symbol	Specifications	DC	AC
Nil	Standard type	(1.0 W)	○ ⁽¹⁾
H ⁽²⁾	High pressure type	(1.5 W)	—
Y ⁽²⁾	Low wattage type	(0.5 W)	—

Note 1) For power consumption of AC type, refer to page 2-4-36.

Note 2) Except double (latching)

Type of actuation



	VQ0000	VQ1000	VQ2000
1	2 position single	●	●
2	2 position double (Latching)	●	●
3	3 position closed center	● ⁽¹⁾	● ⁽²⁾
4	3 position exhaust center	● ⁽¹⁾	—
5	3 position pressure center	—	● ⁽²⁾

Note 1) 2 stations space are occupied.
Note 2) L plug connector is used for AC.

Coil voltage

1	100 VAC (50/60 Hz)
2	200 VAC (50/60 Hz)
3	110 VAC (50/60 Hz)
4	220 VAC (50/60 Hz)
5	24 VDC
6	12 VDC

Note 1) For negative common specifications, refer to "Option" on page 2-4-69.

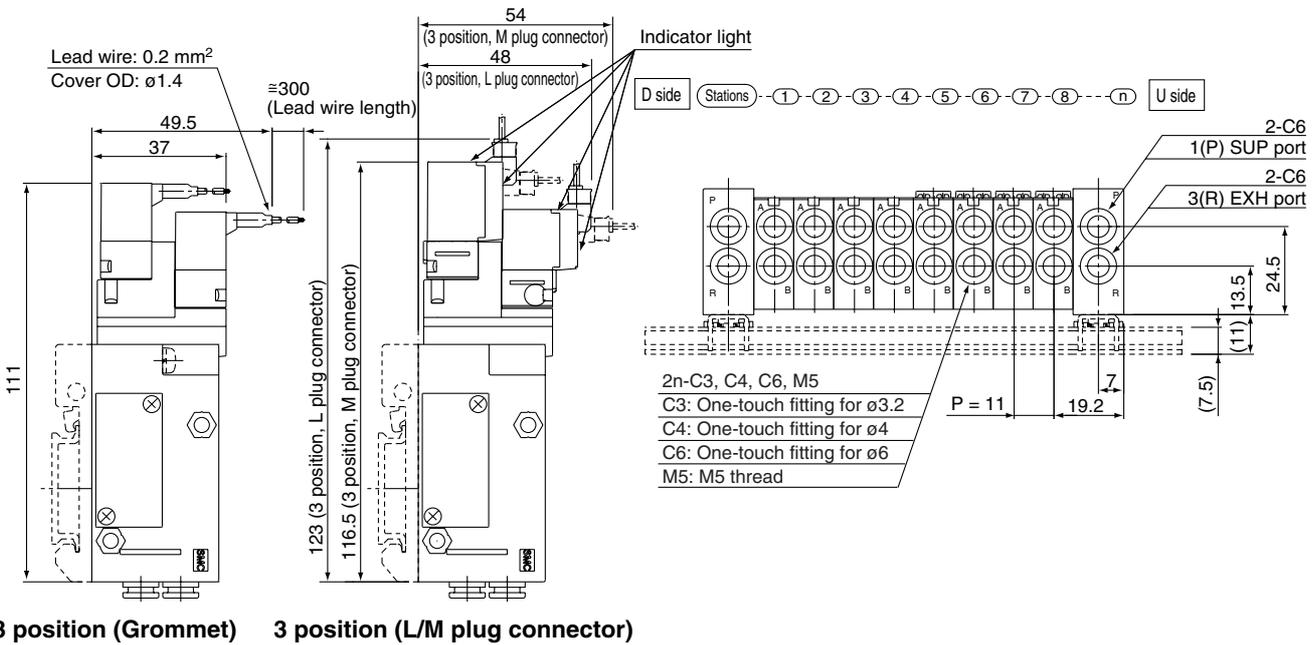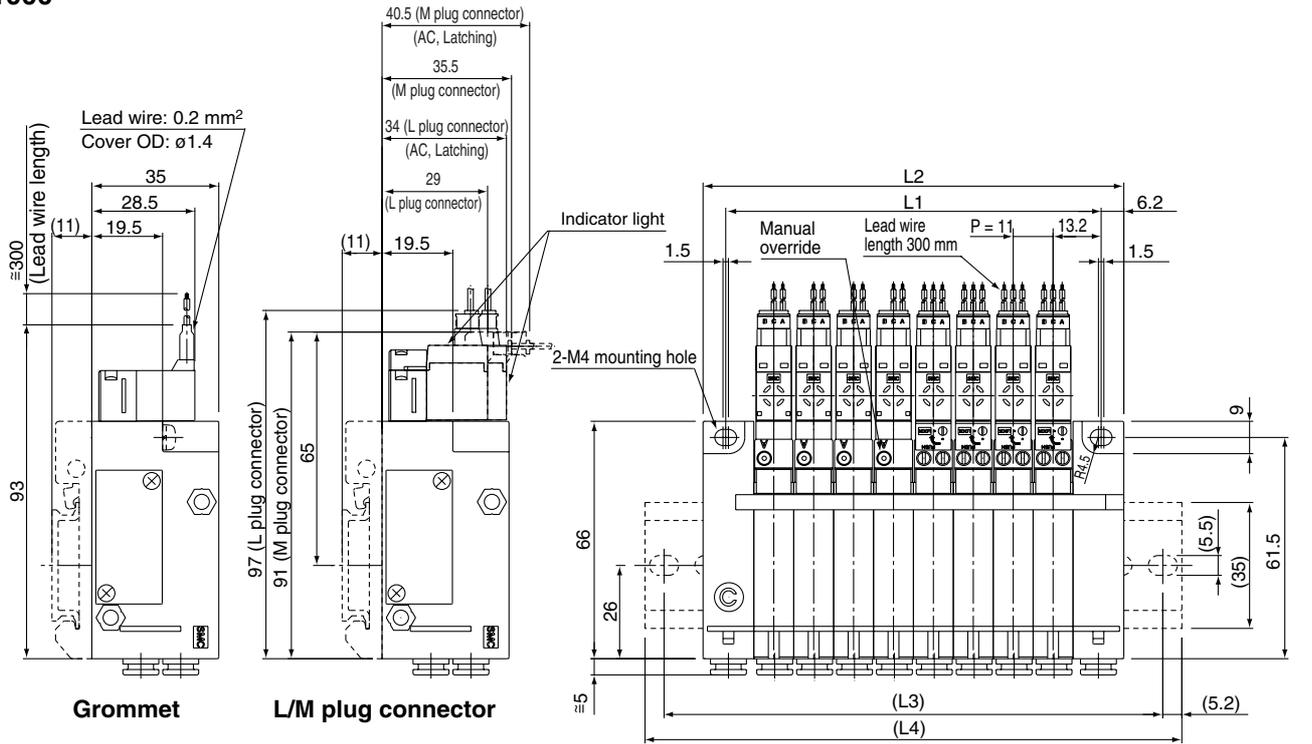
VQ1000

Dimensions

Formula L1 = 11n + 15.5, L2 = 11n + 28 n: Station (Maximum 16 stations)


n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	26.5	37.5	48.5	59.5	70.5	81.5	92.5	103.5	114.5	125.5	136.5	147.5	158.5	169.5	180.5	191.5
L2	39	50	61	72	83	94	105	116	127	138	149	160	171	182	193	204
(L3)	62.5	75	87.5	100	112.5	125	137.5	150	162.5	175	187.5	200	212.5	212.5	225	225
(L4)	73	85.5	98	110.5	123	135.5	135.5	148	160.5	173	185.5	198	210.5	223	223	235.5

Plug Lead Unit: Flip Type Series VQ0000/1000/2000

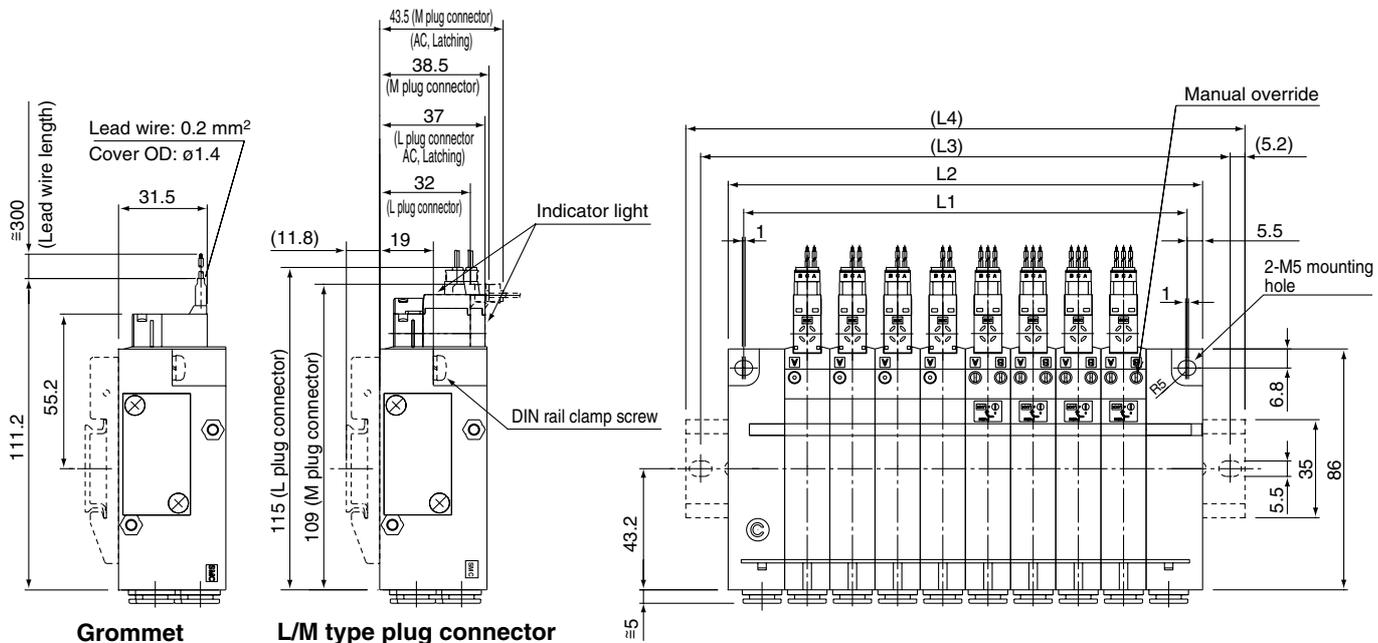VQ2000



- VQC
- SQ
- VQ0**
- VQ4
- VQ5
- VQZ
- VQD

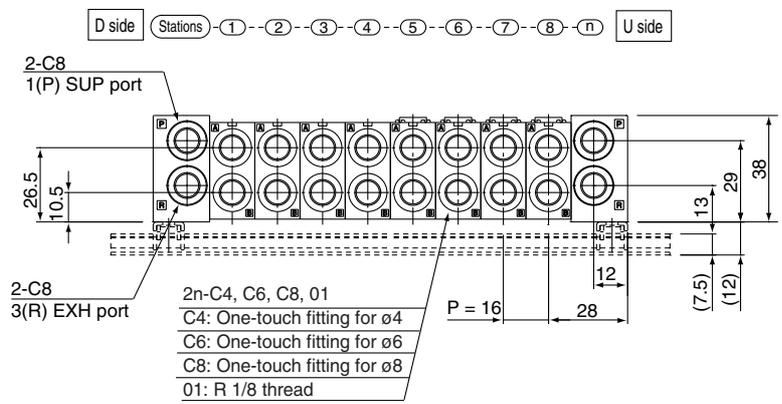


Dimensions

Formula L1 = 16n + 29, L2 = 16n + 40 n: Station (Maximum 16 stations)

n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	45	61	77	93	109	125	141	157	173	189	205	221	237	253	269	285
L2	56	72	88	104	120	136	152	168	184	200	216	232	248	264	280	296
(L3)	87.5	100	112.5	125	150	162.5	175	187.5	212.5	225	237.5	262.5	275	287.5	300	325
(L4)	98	110.5	123	135.5	160.5	173	185.5	198	223	235.5	248	273	285.5	298	310.5	335.5


S VQ0000/1000/2000 Kit (Serial transmission unit)

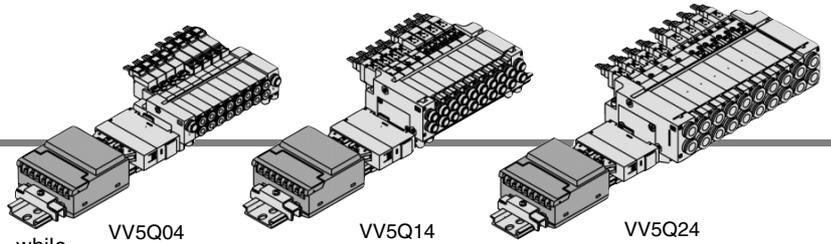

- The serial transmission system reduces wiring work, while minimizing wiring and saving space.
- The system comes in an type SA (generic for small scale systems) for equipment with a small number of I/O points, or 32 points max., type SB (applicable to Mitsubishi Electric models) for controlling 512 I/O points max., type SC (applicable to OMRON models), and type SD (applicable to SHARP models; 504 points max.).
- Maximum 8 stations, optional 16 stations possible. (16 stations available as an option. Indicate 9 to 16 stations on the manifold specification sheet.)

Manifold Specifications

Series	Porting specifications			Applicable stations
	Port location	P, R	A, B	
VQ0000	Side	C6	C3, C4, M5	Max. 16 stations
VQ1000	Side	C6	C3, C4, C6, M5	Max. 16 stations
VQ2000	Side	C10	C4, C6, C8	Max. 16 stations

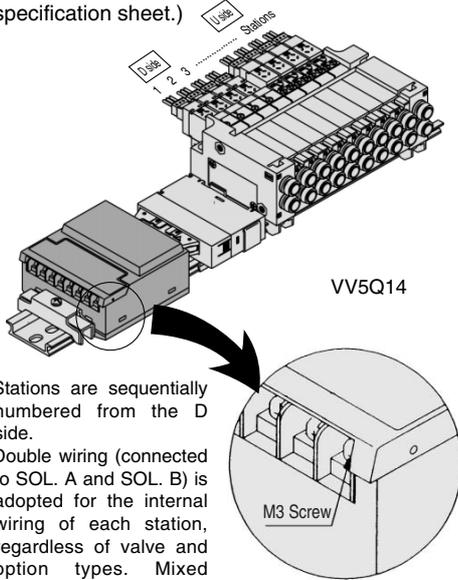

- Stations are sequentially numbered from the D side.
- Double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station, regardless of valve and option types. Mixed single and double wiring is available as an option. For details, refer to page 2-4-69.

Item	Specifications
External power supply	24 VDC±10%
Current consumption (Internal unit)	SA, SB, SD, SFI, SH: 0.1 A/SC: 0.3 A

Name of terminal block (LED)	Type SA With general type SI unit (Series EX300)	Type SB Mitsubishi Electric Corporation MELSECNET/MINI-S3 Data Link System																		
		<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>TRD</td> <td>Lighting during data reception</td> </tr> <tr> <td>RUN/ERR</td> <td>Blinking when received data is normal; Lighting when data reception</td> </tr> </tbody> </table>	LED	Description	TRD	Lighting during data reception	RUN/ERR	Blinking when received data is normal; Lighting when data reception	<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>POWER</td> <td>Lighting when power is turned ON</td> </tr> <tr> <td>RUN</td> <td>Lighting when data transmission with the master station is normal</td> </tr> <tr> <td>RD</td> <td>Lighting during data reception</td> </tr> <tr> <td>SD</td> <td>Lighting during data transmission</td> </tr> <tr> <td>ERR.</td> <td>Lighting when reception data error occurs. Light turns off when the error is corrected.</td> </tr> </tbody> </table>	LED	Description	POWER	Lighting when power is turned ON	RUN	Lighting when data transmission with the master station is normal	RD	Lighting during data reception	SD	Lighting during data transmission	ERR.
LED	Description																			
TRD	Lighting during data reception																			
RUN/ERR	Blinking when received data is normal; Lighting when data reception																			
LED	Description																			
POWER	Lighting when power is turned ON																			
RUN	Lighting when data transmission with the master station is normal																			
RD	Lighting during data reception																			
SD	Lighting during data transmission																			
ERR.	Lighting when reception data error occurs. Light turns off when the error is corrected.																			
Note	<ul style="list-style-type: none"> • T unit • Can be connected with PLC I/O card for serial transmission. EX300-TMB1... For models of Mitsubishi Electric Corporation EX300-TTA1... For models of OMRON Corporation EX300-TFU1... For models of Fuji Electric Co., Ltd. EX300-T001... For general models * Up to 32 points per unit. * No. of output points, 16 points 	<ul style="list-style-type: none"> • Master station: PLC made by Mitsubishi Electric Corporation Series MELSEC-A AJ71PT32-S3, AJ71T32-S3 A1SJ71PT32-S3 * Max. 64 stations, connected to remote I/O stations (Max. 512 points). • No. of output points, 16 points. No. of sta. occupied, 2 stations 																		

* For details on specifications and handling, refer to the separate technical instruction manual.

How to Order Manifold

VV5Q 1 4 - 08 S A - D

Series	
0	VQ0000
1	VQ1000
2	VQ2000

Manifold	
4	Plug lead unit/Flip

Stations	
01	1 station
:	:
08 ^{Note)}	8 station (Double)
16	16 stations (Single)



Note) As option, the max. number of stations can be increased based on special wiring specifications. For details, refer to page 2-4-69.

Model	
0	Without SI unit
A	With general type SI unit (Series EX300)
B	Mitsubishi Electric Corp.: MELSECNET/MINI-S3 Data Link System
C	OMRON Corp.: SYSBUS Wire System
D	SHARP Corp.: Satellite I/O Link System
F1	NKE Corp.: Uni-wire System (16 output points)
H	NKE Corp.: Uni-wire H System

Note) Please consult with SMC for the following serial transmission kits: Matsushita Electric Works, Ltd.; Rockwell Automation, Inc.; SUNX Corporation; Fuji Electric Co., Ltd.; OMRON Corporation.

* The dust-protected type SI unit is applicable, too. For details, please contact SMC.

Option	
D ⁽²⁾	DIN rail mounting style
K ⁽³⁾	Special wiring specifications (Except double wiring)
N	With name plate
S	Built-in silencer, direct exhaust (U side only)

Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -DNS

Note 2) S kits are DIN rail mounting styles, so include suffix -D

Note 3) Specify the wiring specifications in the manifold specification sheet.

Plug Lead Unit: Flip Type Series VQ0000/1000/2000

SI unit output and coil numbering

<Wiring example 1> Double wiring (Standard)

SI unit output no. (Looked by double solenoid valve) SOL. location	0	1	2	3	4	5	6	7	8	9
	A	B	A	B	A	B (*)	A	B (*)	A	B
SI Unit	Double		Double		Single	Single		3 position		
Stations	1		2		3	4		5		

The places of asterisk are not used.

<Wiring example 2> Single/Double Mixed Wiring (Option)
Mixed wiring is available as an option.
Use the manifold specification sheet to specify.

SI unit output no. (Looked by double solenoid valve) SOL. location	0	1	2	3	4	5	6	7
	A	B	A	B	A	B	A	B
SI Unit	Double		Double		Single	Single		3 position
Stations	1		2		3	4		5

	Type SC OMRON Corporation SYSBUS Wire System	Type SD SHARP Corporation Satellite I/O Link System																
Name of terminal block (LED)	<table border="1"> <tr><th>LED</th><th>Description</th></tr> <tr><td>RUN</td><td>Lights when transmission is normal and PLC is in operation mode</td></tr> <tr><td>T/R ERR</td><td>Blinks during data transmission/reception ON when transmission is abnormal.</td></tr> </table>	LED	Description	RUN	Lights when transmission is normal and PLC is in operation mode	T/R ERR	Blinks during data transmission/reception ON when transmission is abnormal.	<table border="1"> <tr><th>LED</th><th>Description</th></tr> <tr><td>POWER</td><td>ON when power supply is ON</td></tr> <tr><td>RUN</td><td>Lights when power is ON and slave stations are operating normally</td></tr> <tr><td>ERROR</td><td>Lights when slave station switch setting is abnormal, communication is abnormal, PLC stopped and defective slave unit</td></tr> <tr><td>R.SET HOLD</td><td>ON for master unit control input</td></tr> </table>	LED	Description	POWER	ON when power supply is ON	RUN	Lights when power is ON and slave stations are operating normally	ERROR	Lights when slave station switch setting is abnormal, communication is abnormal, PLC stopped and defective slave unit	R.SET HOLD	ON for master unit control input
LED	Description																	
RUN	Lights when transmission is normal and PLC is in operation mode																	
T/R ERR	Blinks during data transmission/reception ON when transmission is abnormal.																	
LED	Description																	
POWER	ON when power supply is ON																	
RUN	Lights when power is ON and slave stations are operating normally																	
ERROR	Lights when slave station switch setting is abnormal, communication is abnormal, PLC stopped and defective slave unit																	
R.SET HOLD	ON for master unit control input																	
Note	<ul style="list-style-type: none"> Master station unit: OMRON PLC SYSMAC C(CV) series Types C500-RM201 and C200H-RM201 * 32 units max., transmission terminal connection (512 points max.) No. of output points, 16 points 	<ul style="list-style-type: none"> Master station unit: SHARP's PLC New Satellite Series W ZW-31LM New Satellite Series JW JW-23LM, JW-31LM * Max. 31 units, I/O slave stations connected (504 points max.) No. of output points, 16 points 																

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

How to Order Valves

VQ 1 1 4 0 Y - 5 LO C6

Series

0	VQ0000
1	VQ1000
2	VQ2000

Seal

0	Metal seal
1	Rubber seal

Function

Symbol	Specifications	DC
Nil	Standard type	(1.0 W)
H ^{Note}	High pressure type	(1.5 W)
Y ^{Note}	Low wattage type	(0.5 W)

Note) Except double (latching).

Type of actuation

	VQ0000	VQ1000	VQ2000
1	2 position single	●	●
2	2 position double (Latching)	●	●
3	3 position closed center	● ⁽¹⁾	● ⁽²⁾
4	3 position exhaust center	● ⁽¹⁾	● ⁽²⁾
5	3 position pressure center	—	● ⁽²⁾

Note 1) 2 stations space are occupied.
Note 2) L plug connector is used for AC.

Coil voltage

5	24 VDC/With light/surge voltage suppressor
---	--

Note 1) Connector assembly will be required when the S kits add a valve.
For part nos., refer to "Option" on page 2-4-69.

How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.

Cylinder port

Symbol	Port size	VQ0000	VQ1000	VQ2000
C3	With One-touch fitting for ø3.2	●	●	—
C4	With One-touch fitting for ø4	●	●	●
C6	With One-touch fitting for ø6	—	●	●
C8	With One-touch fitting for ø8	—	—	●
M5	M5 thread	●	●	—

Note) For inch-size One-touch fittings, refer to "Option" on page 2-4-69.

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)

Note 1) All double latching valves of VQ0000 are non-locking push type. (Refer to page 2-4-66.)

Note 2) A manual override for pilot valve is provided to the standard model for double type.


Electrical entry

LO	L plug connector without connector
MO	M plug connector without connector


Note 1) Plug connector and lead wire layers are attached to the manifold.

S VQ0000/1000/2000 Kit (Serial transmission unit)

VQ0000

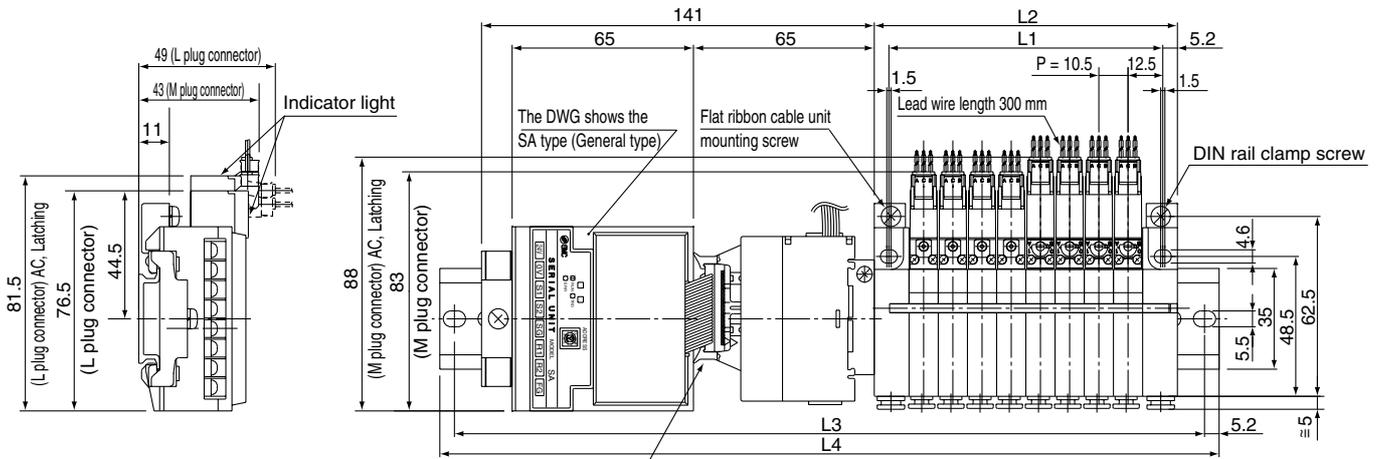

Applicable connector:
Flat ribbon cable connector (20P)
(Conforming to MIL-C-83503)

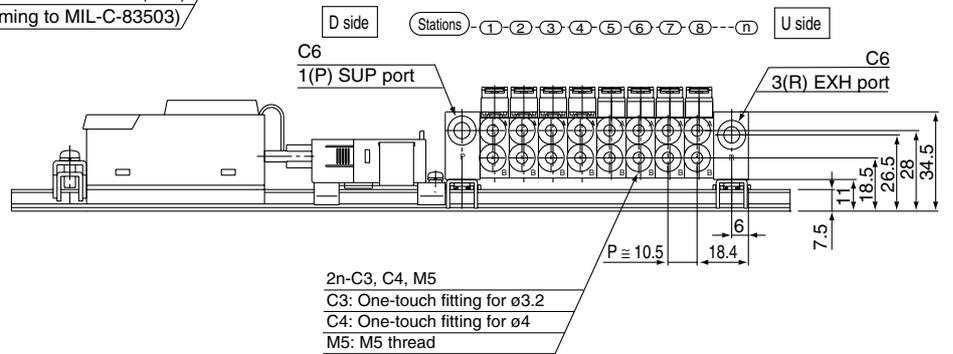

- Note 1) Built-in silencer styles are equipped with a 1(P) SUP port on the both D and U sides.
Note 2) 3 position needs two stations.
Cylinder port is located U side of body.



Dimensions

Formula L1 = 10.5n + 14.5, L2 = 10.5n + 25 n: Station (Maximum 16 stations)


n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	25	35.5	46	56.5	67	77.5	88	98.5	109	119.5	130	140.5	151	161.5	172	182.5
L2	35.5	46	56.5	67	77.5	88	98.5	109	119.5	130	140.5	151	161.5	172	182.5	193
L3	200	212.5	225	237.5	250	250	262.5	275	287.5	300	312.5	312.5	325	337.5	350	362.5
L4	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5	323	323	335.5	348	360.5	373

Plug Lead Unit: Flip Type Series VQ0000/1000/2000

VQ1000

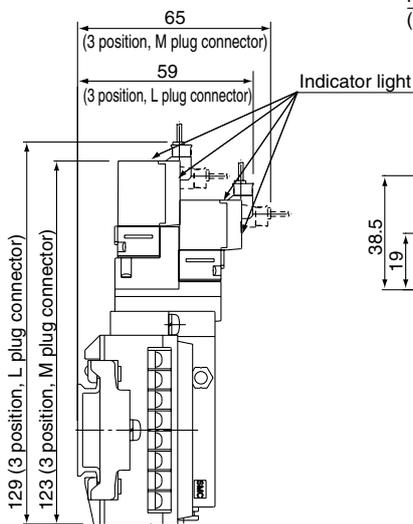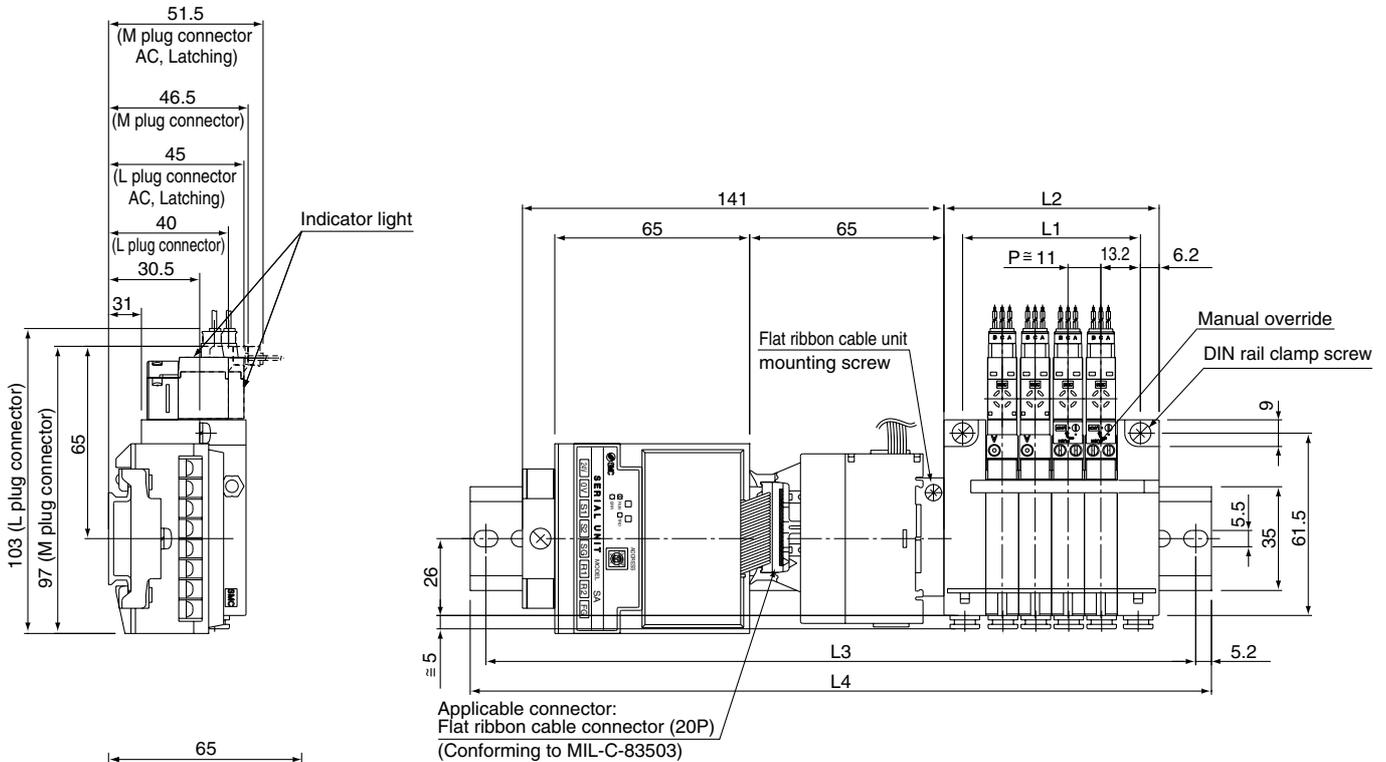

3 position

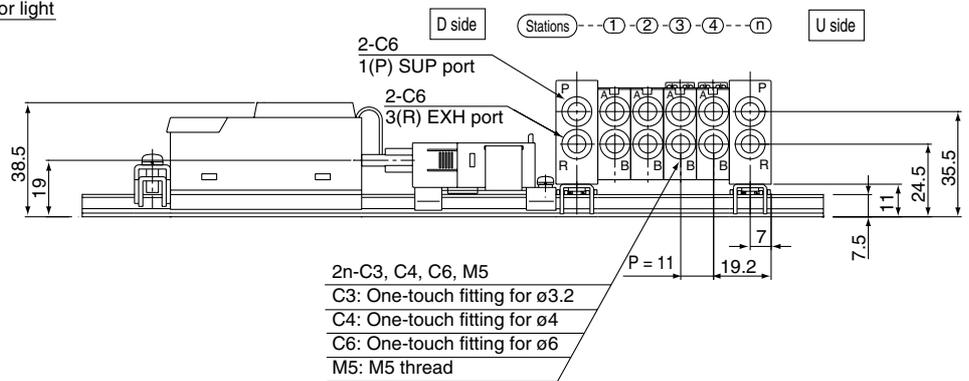

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD


Dimensions

Formula L1 = 11n + 15.5, L2 = 11n + 28 n: Station (Maximum 16 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	26.5	37.5	48.5	59.5	70.5	81.5	92.5	103.5	114.5	125.5	136.5	147.5	158.5	169.5	180.5	191.5
L2	39	50	61	72	83	94	105	116	127	138	149	160	171	182	193	204
L3	212.5	212.5	225	237.5	250	262.5	275	287.5	300	300	312.5	325	337.5	350	362.5	375
L4	223	223	235.5	248	260.5	273	285.5	298	310.5	310.5	323	335.5	348	360.5	373	385.5

S VQ0000/1000/2000 Kit (Serial transmission unit)

VQ 2000

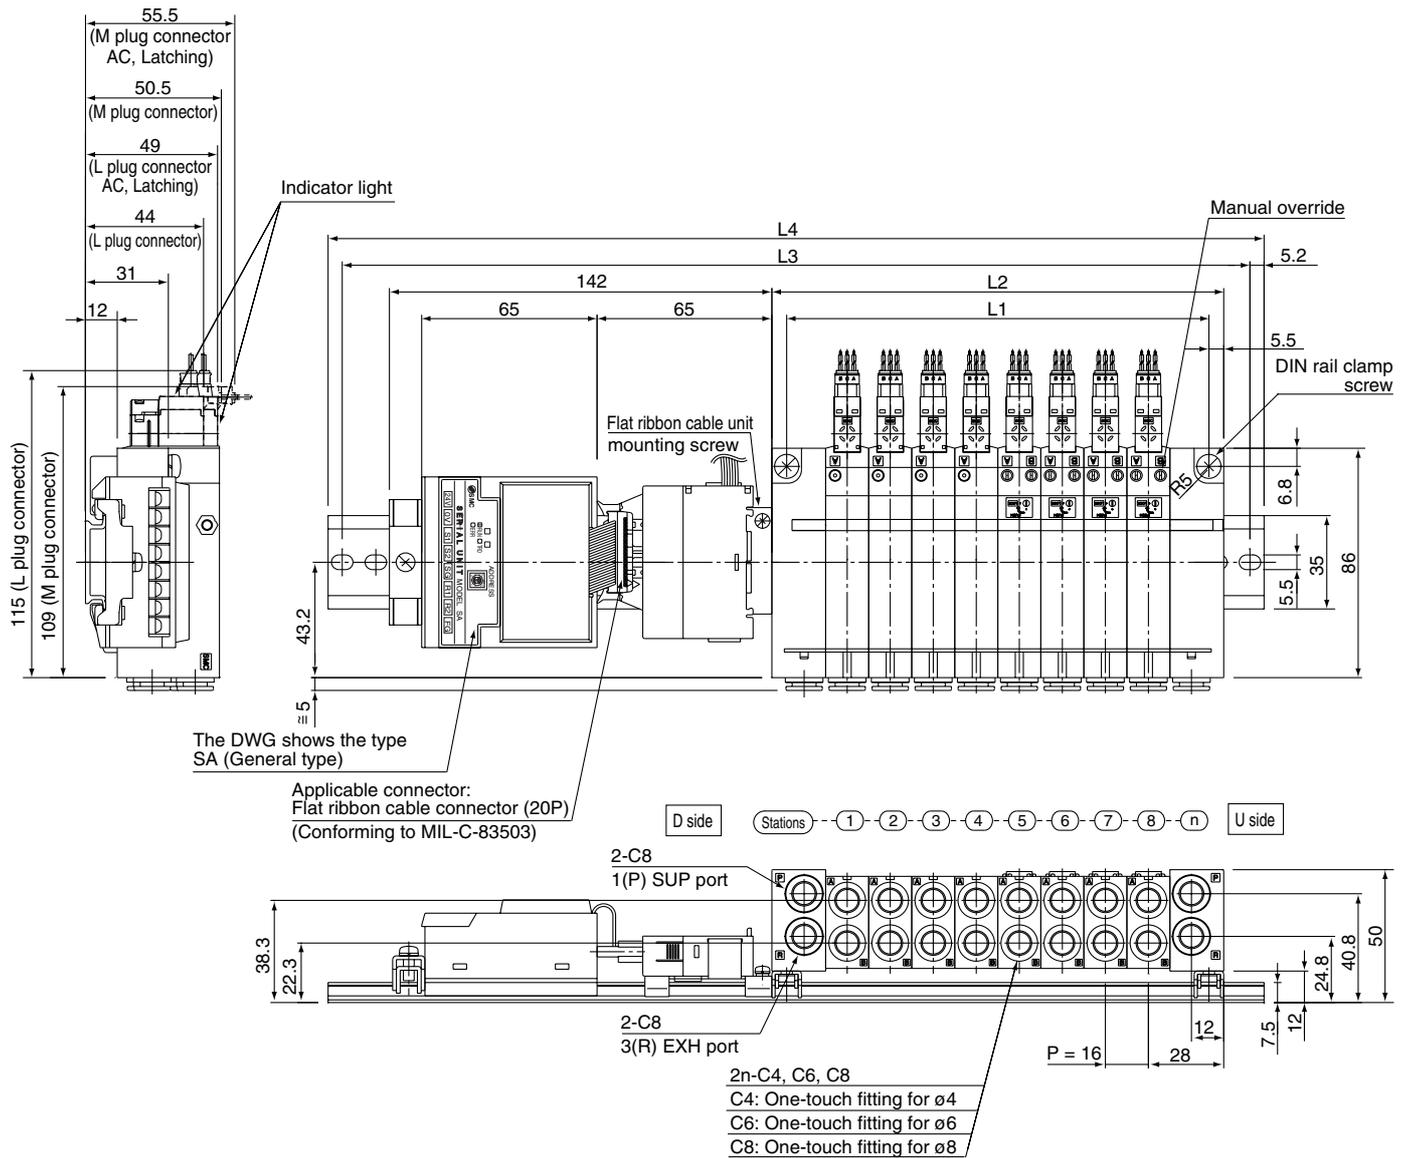

Dimensions

Formula L1 = 16n + 29, L2 = 16n + 40 n: Station (Maximum 16 stations)

n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	45	61	77	93	109	125	141	157	173	189	205	221	237	253	269	285
L2	56	72	88	104	120	136	152	168	184	200	216	232	248	264	280	296
L3	225	237.5	250	275	287.5	300	325	337.5	350	362.5	387.5	400	412.5	437.5	450	462.5
L4	235.5	248	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473


Plug Lead Unit: Flip Type Series VQ0000/1000/2000

Manifold Option Parts for VQ0000

Blanking plate assembly

VVQ0000-10A-4

It is used when a blanking plate is mounted to a manifold in advance for possible valve mounting, etc.

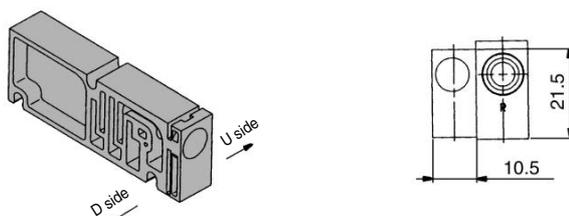


Individual SUP spacer

VVQ0000-P-4-C4

When the same manifold is to be used for different pressures, individual SUP spacers are used as SUP ports for different pressures. (One station space is occupied.) Since the SUP passage on the spacer's D side is blocked in advance, it is mounted on the D side of the valve for individual supply while blocking the valve's U side. (See the application ex.)

* Specify the spacer mounting position and SUP block plate mounting position on the manifold specification sheet.

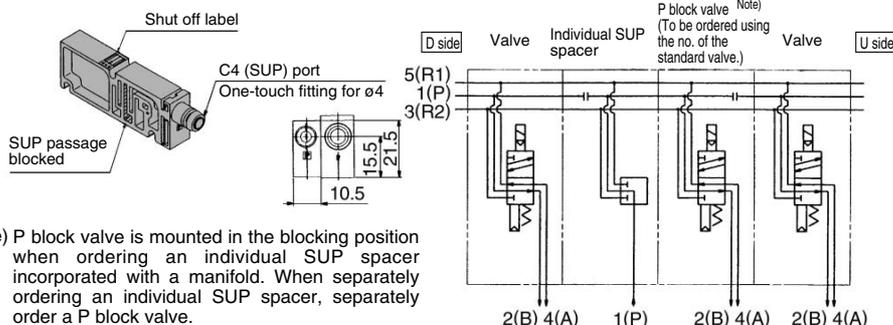


Note) P block valve is mounted in the blocking position when ordering an individual SUP spacer incorporated with a manifold. When separately ordering an individual SUP spacer, separately order a P block valve.

Individual EXH spacer

VVQ0000-R-4-C4

When valve exhaust affects other stations due to the circuit configuration, this spacer is used for individual valve exhaust. (One station space is occupied.) Since the EXH passage on the spacer's D side is blocked in advance, it is mounted on the D side of the valve for individual supply while blocking the valve's U side. (See the application ex.)

* Specify the spacer mounting position and EXH block plate mounting position on the manifold specification sheet.

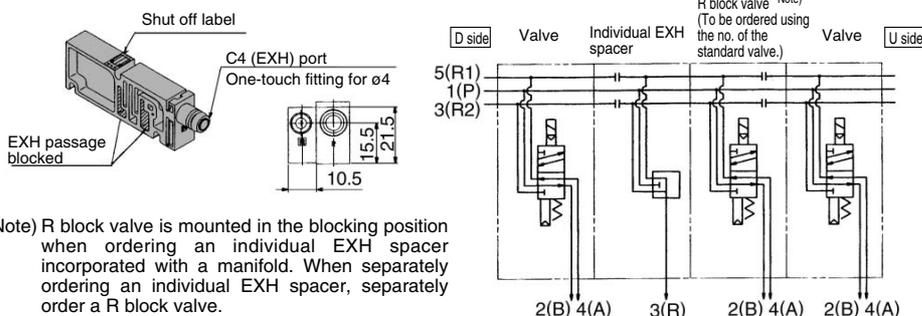

Note) R block valve is mounted in the blocking position when ordering an individual EXH spacer incorporated with a manifold. When separately ordering an individual EXH spacer, separately order a R block valve.

P Block valve

VQ0 $\frac{1}{2}$ 4 $\frac{0}{1}$ -□-□□ - P

For a flip plug-in unit, block plate is built in the valve for blocking SUP and EXH passages. Since the no. is classified by the passage to be blocked, specify it by attaching the option no. to the valve no. The block valve is constructed so that U sides of SUP and EXH passages are blocked.


* Specify the number of stations on the manifold specification sheet.

<Shut off label>

When using block plates for SUP, EXH passage, indication label for confirmation of the blocking position from outside is attached. (One label for each)

* When ordering a block plate incorporated with the manifold no., a block indication label is attached to the manifold.

* Caution on handling P/RP block valve
For manifold other than C kit which is silencer built-in, there's no exhaust port on the D side end plate. Install a spacer for individual EXH on the 1st station separately.

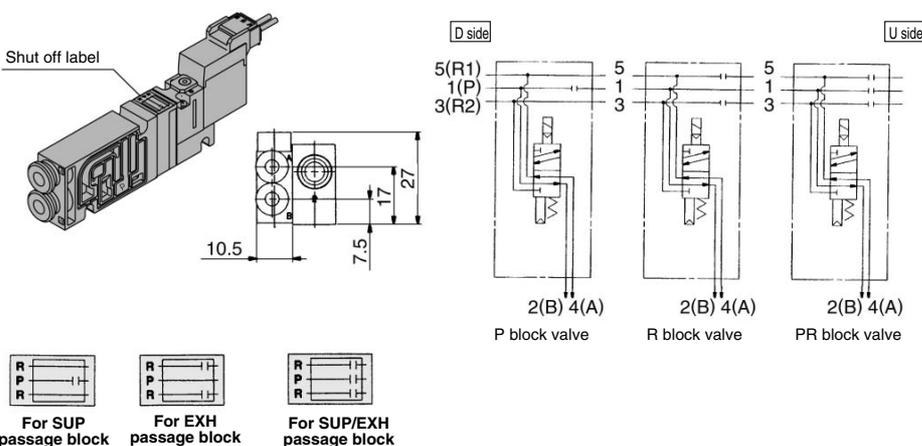


For SUP passage block	VQ0 $\frac{1}{2}$ 4 $\frac{0}{1}$ -□-□□-P
For EXH passage block	VQ0 $\frac{1}{2}$ 4 $\frac{0}{1}$ -□-□□-R
For SUP/EXH passage block	VQ0 $\frac{1}{2}$ 4 $\frac{0}{1}$ -□-□□-PR

Name plate [-N4]

VVQ0000-N4-Station (1 to Max. stations)

It is a transparent resin plate for placing a label that indicates solenoid valve function, etc. Insert it into the groove on the side of the end plate and bend it as shown in the figure.

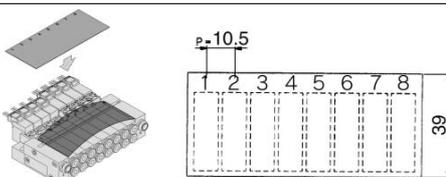


* When ordering assemblies incorporated with a manifold, suffix -N to the manifold no.

Blanking plug

KQ2P- $\frac{23}{04}$ - $\frac{06$

It is inserted into an unused cylinder port and SUP/EXH ports. Purchasing order is available in units of 10 pieces.

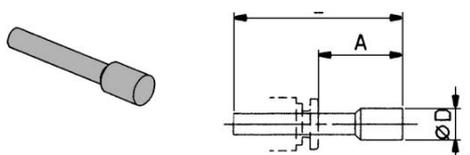

Dimensions

Applicable fittings size ød	Model	A	L	D
3.2	KQP-23	16	31.5	3.2
4	KQP-04	16	32	6
6	KQ2P-06	18	35	8

Series VQ0000/1000/2000


Manifold Option Parts for VQ0000

DIN rail mounting bracket VVQ0000-57A-4


It is used for mounting a manifold on a DIN rail. The DIN rail mounted bracket is fixed to the manifold end plate.

(The specification is the same as that for the option -D.)

1 set of DIN rail mounting bracket is used for 1 manifold (2 DIN rail mounting brackets).

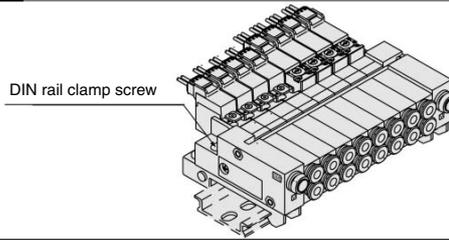

* When ordering assemblies incorporated with a manifold, add suffix -D to the manifold no.

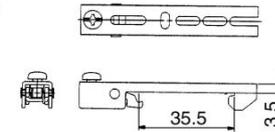


Built-in silencer, Direct exhaust [-S]

This is a type with an exhaust port atop the manifold end plate. The built-in silencer exhibits an excellent noise suppression effect.

F, P, T and S kits are provided with exhaust on one side.

Note) A large quantity of drainage generated in the air source results in exhaust of air together with drainage.

• For maintenance, refer to page 2-4-67.


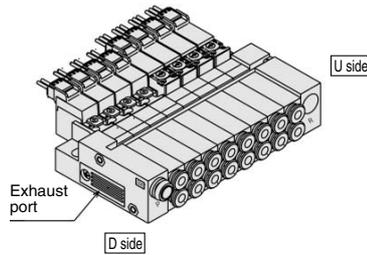


* When ordering assemblies incorporated with a manifold, add suffix -S to the manifold no.

Manifold Option Parts for VQ1000

Blanking plate assembly VVQ1000-10A-4



It is used when a blanking plate is mounted to a manifold in advance for possible valve mounting, etc.

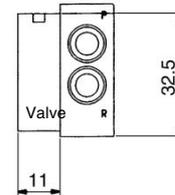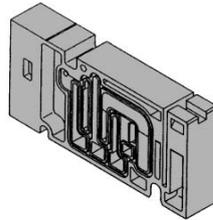

Individual SUP spacer VVQ1000-P-4-C6

When the same manifold is to be used for different pressures, individual SUP spacers are used as SUP ports for different pressures. (One station space is occupied.) Since the SUP passage on the spacer's D side is blocked in advance, it is mounted on the D side of the valve for individual supply while blocking the valve's U side. (See the application ex.)

* Specify the spacer mounting position and SUP block plate mounting position on the manifold specification sheet.

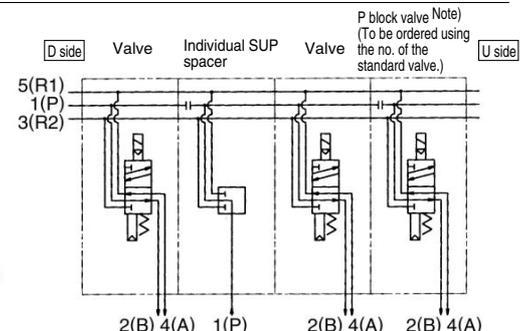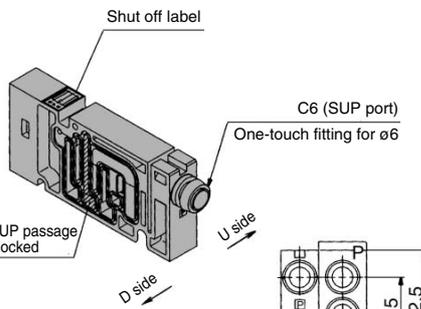

Note) P block valve is mounted in the blocking position when ordering an individual SUP spacer incorporated with a manifold. When separately ordering an individual SUP spacer, separately order a P block valve.

Individual EXH spacer VVQ1000-R-4-C6



When valve exhaust affects other stations due to the circuit configuration, this spacer is used for individual valve exhaust. (One station space is occupied.)

Since the EXH passage on the spacer's D side is blocked in advance, it is mounted on the D side of the valve for individual supply while blocking the valve's U side. (Refer to the application example.)

* Specify the spacer mounting position and EXH block plate mounting position on the manifold specification sheet.

* When the electrical entry is F, P, T, S kit, and if you choose the option with built-in silencer, no exhaust port will be supplied on the D side end plate.

In this case, install a spacer for individual EXH on the 1st station.

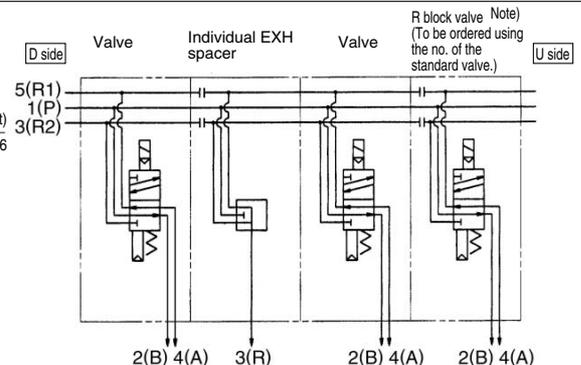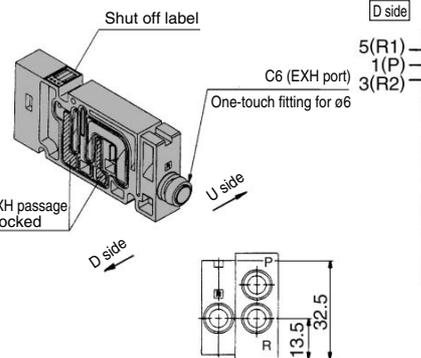

Note) R block valve is mounted in the blocking position when ordering an individual EXH spacer incorporated with a manifold. When separately ordering an individual EXH spacer, separately order an R block valve.

Plug Lead Unit: Flip Type Series VQ0000/1000/2000

Manifold Option Parts for VQ1000

Block valve

VQ1 $\frac{1}{2}$ 4[□]-□-□-□-^P□-^R□

Valve no.
For a flip plug-in unit, block plate is built in the valve for blocking SUP and EXH passages. Since the no. is classified by the passage to be blocked, specify it by attaching the option no. to the valve no. The block valve is constructed so that D sides of SUP and EXH passages are blocked.







* Specify the number of stations on the manifold specification sheet.

<Shut off label>

When using block plates for SUP, EXH passage, indication label for confirmation of the blocking position from outside is attached. (One label for each)

* When ordering a block plate incorporated with the manifold no., a block indication label is attached to the manifold.

* Caution on using R/PR block valve If the electrical entry is selected for an option for built-in silencer when F, P, T, S kit, there will not be the exhaust port on the D side end plate. In this case, mount an individual EXH spacer for the 1st station.

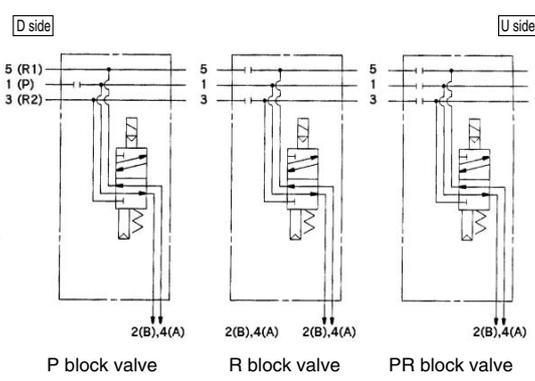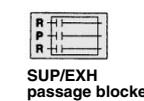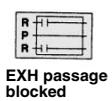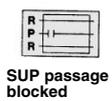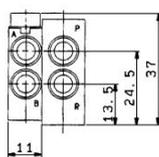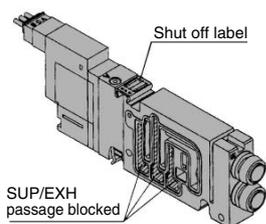



For SUP passage block	VQ1 $\frac{1}{2}$ 4 [□] -□-□-□- ^P
For EXH passage block	VQ1 $\frac{1}{2}$ 4 [□] -□-□-□- ^R
For SUP/EXH passage block	VQ1 $\frac{1}{2}$ 4 [□] -□-□-□- ^{PR}

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

Name plate [-N4]

VVQ1000-N4-Station (1 to Max. stations)

It is a transparent resin plate for placing a label that indicates solenoid valve function, etc. Insert it into the groove on the side of the end plate and bend it as shown in the figure.

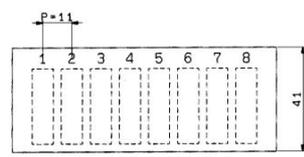
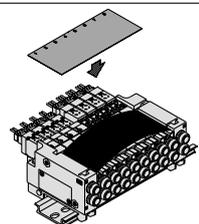


* When ordering assemblies incorporated with manifold, suffix [-N] to the manifold no.

Blanking plug

KQ2P-²³□⁰⁴□⁰⁶

It is inserted into an unused cylinder port and SUP/EXH ports. Purchasing order is available in units of 10 pieces.

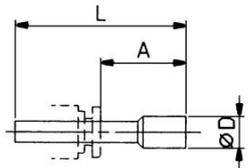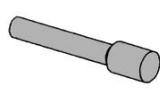

Dimensions


Applicable fittings size ϕ d	Model	A	L	D
3.2	KQ2P-23	16	31.5	5
4	KQ2P-04	16	32	6
6	KQ2P-06	18	35	8

DIN rail mounting bracket

VVQ1000-57A-4

It is used for mounting a manifold on a DIN rail. The DIN rail mounted bracket is fixed to the manifold end plate. (The specification is the same as that for the option -D.)

1 set of DIN rail mounting bracket is used for 1 manifold (2 DIN rail mounting brackets).

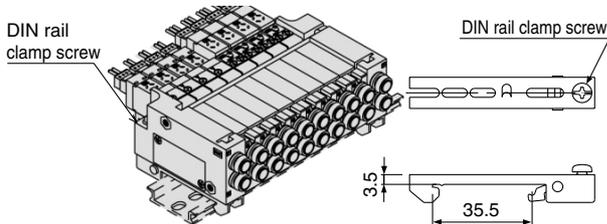


* When ordering assemblies incorporated with manifold, add suffix -D to the manifold no.

Built-in silencer, Direct exhaust [-S]

This is an exhaust port on top of the manifold end plate. The built-in silencer exhibits an excellent noise suppression effect. F, P, T and S kits are provided with exhaust on one side.

Note) A large quantity of drainage generated in the airtsource results in exhaust of air together with drainage.



• For maintenance, refer to page 2-4-67.

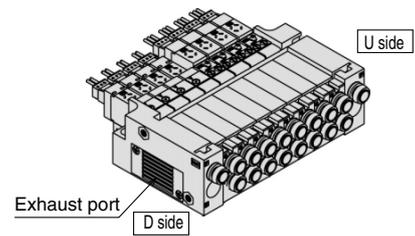

* When ordering assemblies incorporated with manifold, add suffix -S to the manifold no.

Silencer (For EXH port)

This is inserted into the centralized type EXH port (One-touch fitting).

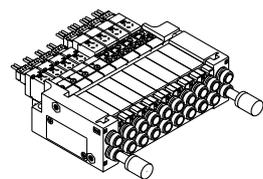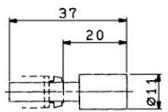

Dimensions

Series	Applicable fittings size ϕ d	Model	A	L	D	Effective area (mm ²)	Noise reduction (dB)
VQ1000	6	AN103-X233	20	37	11	7	25

Port plug



VVQ0000-58A

The plug is used to block the cylinder port when using a 4 port valve as a 3 port valve.

When ordering it incorporated with a manifold, suffix A or B, the symbol of the plug port, to the valve no.

Example) VQ1140-5L-C6-A

↳ A port, Plug

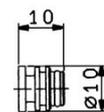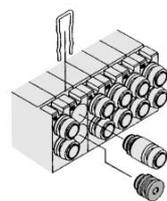

Series VQ0000/1000/2000

Manifold Option Parts



Double check block (Separated type): For VQ0000/1000 VQ1000-FPG-□□

It is used on the outlet side piping to keep the cylinder in the intermediate position for a long time. Combining the double check block with a built-in pilot type double check valve and a 3 position exhaust center solenoid valve will enable the cylinder to stop in the middle or maintain its position for a long time. The combination with a two position single/double solenoid valve will permit this block to be used for preventing the dropping at the cylinder stroke end when the SUP residual pressure is released.

Specifications



Max. operating pressure	0.8 MPa
Min. operating pressure	0.15 MPa
Ambient and fluid temperature	-5 to 50° C
Flow characteristics: C	0.60 dm ³ /(s·bar)
Max. operating frequency	180 CPM

Note) Based on JIS B 8375-1981 (Supply pressure: 0.5 MPa)

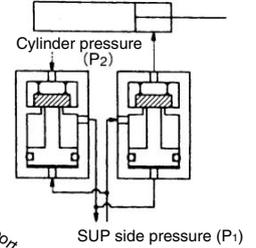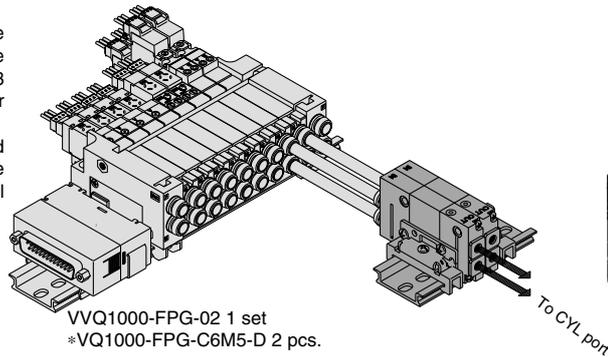

Dimensions

Manifold

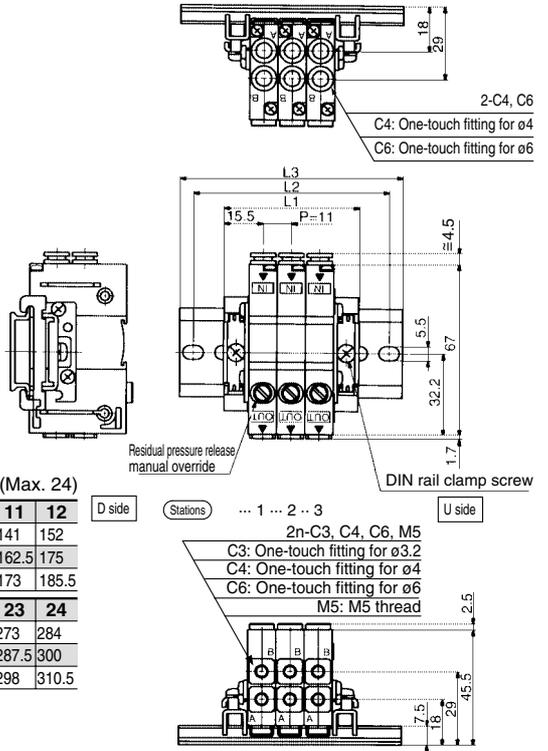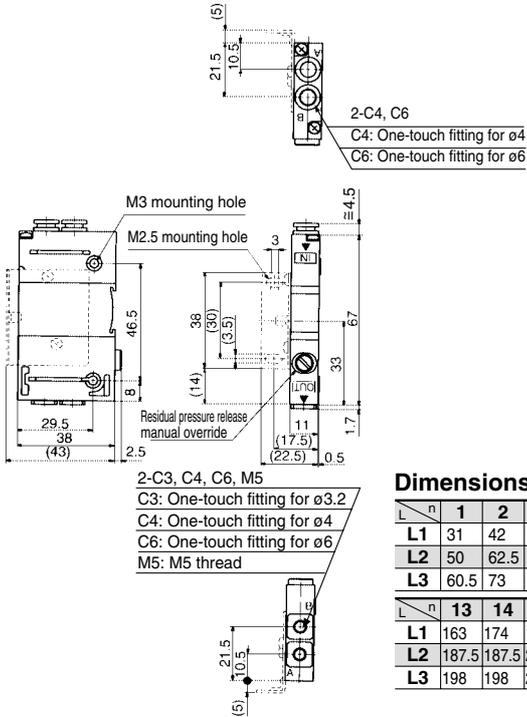

How to Order

Double check block

VQ1000-FPG-**C4** **M5** **F**

IN side port size

C4	One-touch fitting for ø4
C6	One-touch fitting for ø6

OUT side port size

M5	M5 thread
C3	One-touch fitting for ø3.2
C4	One-touch fitting for ø4
C6	One-touch fitting for ø6

Option

Nil	None
F	With bracket
D	DIN rail mounting style (For manifold)
N	Name plate

Note) When two or more symbols are specified, indicate them alphabetically. Example) -DN

Manifold


VVQ1000-FPG-**06**

Stations

01	1 station
⋮	⋮
16	16 stations

<Example>

VVQ1000-FPG-06....6 types of manifold
 *VQ1000-FPG-C4M5-D, 3 sets
 *VQ1000-FPG-C6M5-D, 3 sets } Double check block

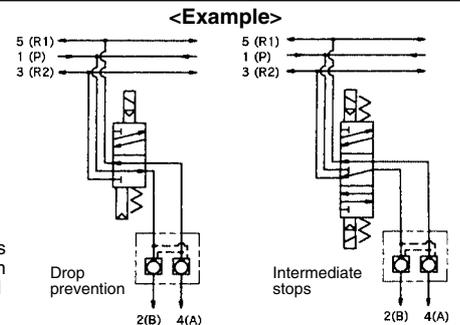

⚠ Caution



- Air leakage from the pipe between the valve and cylinder or from the fittings will prevent the cylinder from stopping for a long time. Check the leakage using neutral household detergent, such as dish washing soap. Also check the cylinder's tube gasket, piston packing and rod packing for air leakage.
- Since One-touch fittings allow slight air leakage, screw piping (with M5 thread) is recommended when stopping the cylinder in the middle for a long time.
- Combining double check block with 3 position closed center or pressure center solenoid valve will not work.
- M5 fitting assembly is attached, not incorporated into the double check block. After screwing in the M5 fittings, mount the assembly on the double check block. (Tightening torque: 0.8 to 1.2 N·m)
- If the exhaust of the double check block is throttled too much, the cylinder may not operate properly and may not stop intermediately.
- Set the cylinder load so that the cylinder pressure will be within two times that of the supply pressure.

Plug Lead Unit: Flip Type Series VQ0000/1000/2000

Manifold Option Parts for VQ2000

Blanking plate assembly VVQ2000-10A-4

It is used when a blanking plate is mounted to a manifold in advance for possible valve mounting, etc.

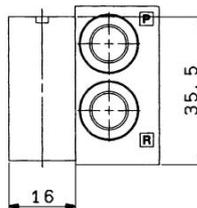
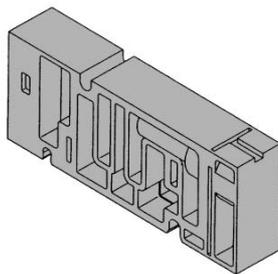


Individual SUP spacer VVQ2000-P-4-C8

When the same manifold is to be used for different pressures, individual SUP spacers are used as SUP ports for different pressures. (One station space is occupied.)

Since the SUP passage on the spacer's D side is blocked in advance, it is mounted on the D side of the valves U side. (Refer to the application example.)

* Specify the spacer mounting position and SUP block plate mounting position on the manifold specification sheet.

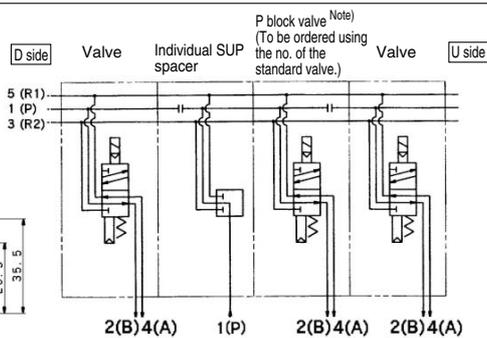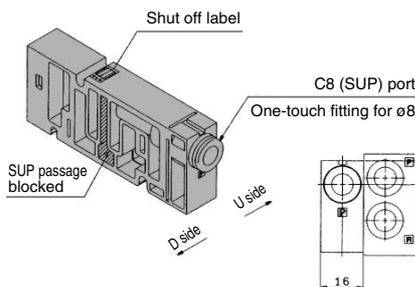

Note) P block valve is mounted in the blocking position when ordering an individual SUP spacer incorporated with a manifold. When separately ordering an individual SUP spacer, separately order a P block valve.



Individual EXH spacer VVQ2000-R-4-C8

When valve exhaust affects other stations due to the circuit configuration, this spacer is used for individual valve exhaust. (1 station space is occupied.)

Since the EXH passage on the spacer's D side is blocked in advance, it is mounted on the D side of the valve for individual supply while blocking the valves U side. (Refer to the application example.)

* Specify the spacer mounting position and EXH block plate mounting position on the manifold specification sheet.

* When the electrical entry is F, P, T, S kit, and if you choose the option with built-in silencer, no exhaust port will be supplied on the D side end plate. In this case, mount a spacer for individual EXH on the 1st station.

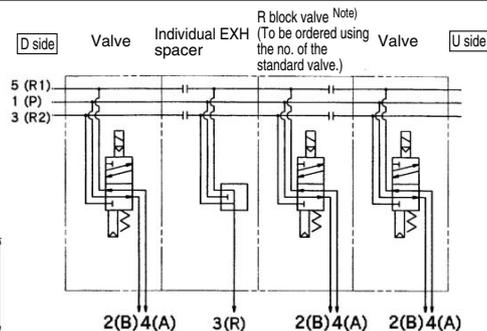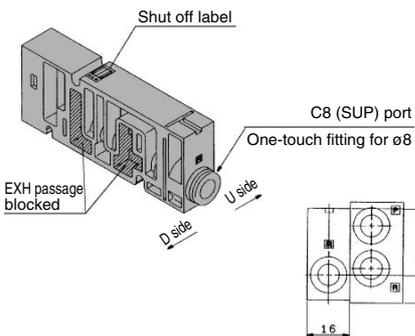

Note) R block valve is mounted in the blocking position when ordering an individual EXH spacer incorporated with a manifold. When separately ordering an individual EXH spacer, separately order a R block valve.

P Block valve VQ2 1/4" - □ - □ - □ - P

For a flip plug-in unit, block plate is built in the valve for blocking SUP and EXH passages. Since the valve is classified by the passage to be blocked, specify it by attaching the option no. to the valve no. The block valve is constructed so that U sides of SUP and EXH passages are blocked.






* Specify the number of stations on the manifold specification sheet.

<Shut off label>

When using block plates for SUP, EXH passage, indication label for confirmation of the blocking position from outside is attached. (One label for each)

* When ordering a block plate incorporated with the manifold no., a block indication label is attached to the manifold.

* Caution on handling P/RP block valve
When the electrical entry is F, P, T, S kit, and if you choose the option with built-in silencer, no exhaust port will be supplied on the D side end plate. In this case, mount a spacer for individual EXH on the 1st station.

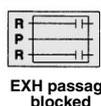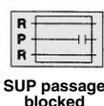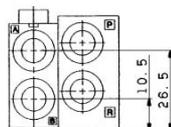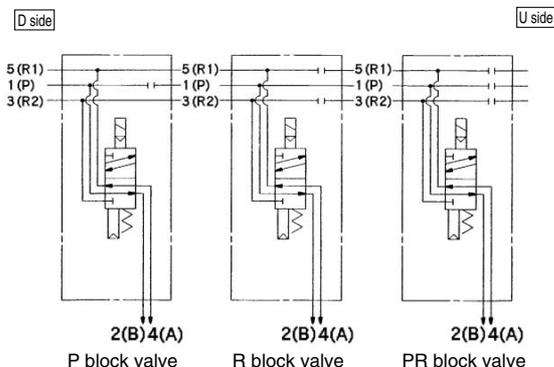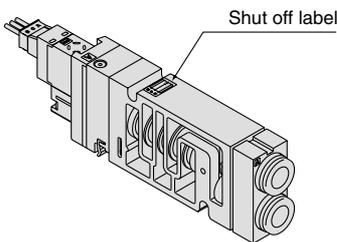

For SUP passage block	VQ2 1/4" - □ - □ - □ - P
For EXH passage block	VQ2 1/4" - □ - □ - □ - R
For SUP/EXH passage block	VQ2 1/4" - □ - □ - □ - PR


Series VQ0000/1000/2000

Manifold Option Parts for VQ2000


Name plate [-N4]

VVQ2000-N4-Station (1 to Max. stations)

It is a transparent resin plate for placing a label that indicates solenoid valve function, etc. Insert it into the groove on the side of the end plate and bend it as shown in the figure.

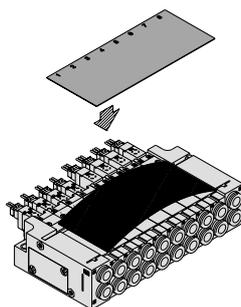

* When ordering assemblies incorporated with a manifold, add suffix N to the manifold no.

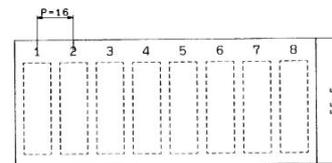


Blanking plug

KQ2P-⁰⁴₀₆₀₈

It is inserted into an unused cylinder port and SUP/EXH ports.

Purchasing order is available in units of 10 pieces.

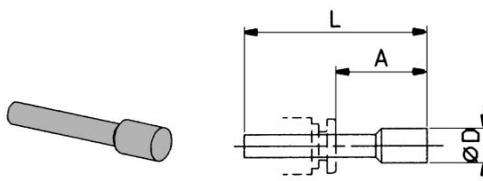

Dimensions


Applicable fittings size ϕ d	Model	A	L	D
4	KQ2P-04	16	32	6
6	KQ2P-06	18	35	8
8	KQ2P-08	20.5	39	10

DIN rail mounting bracket


VVQ2000-57A-4

It is used for mounting a manifold on a DIN rail. The DIN rail mounting bracket is fixed to the manifold end plate. (The specification is the same as that for the option -D.)

1 set of DIN rail mounting bracket is used for 1 manifold (2 DIN rail mounting brackets).

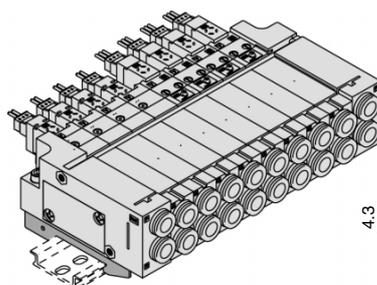

* When ordering assemblies incorporated with a manifold, add suffix -D to the manifold no.

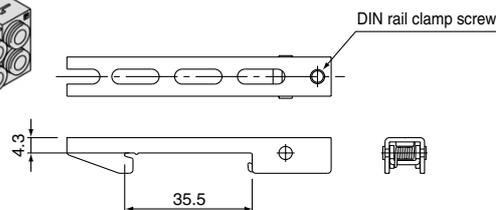

Built-in silencer, Direct exhaust [-S]


This is type with an exhaust port atop the manifold endplate. The built-in silencer exhibits an excellent noise suppression effect.

F, P, T and S kits are provided with exhaust on one side.

Note) A large quantity of drainage generated in the air source results in exhaust of air together with drainage.





• For maintenance, refer to page 2-4-67.

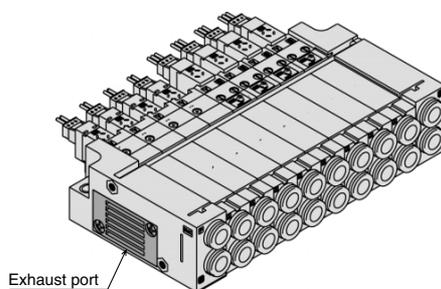

* When ordering assemblies incorporated with a manifold, add suffix -S to the manifold no.

Silencer (For EXH port)

This silencer is to be inserted into the EXH port (One-touch fittings) of the common exhaust.

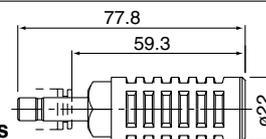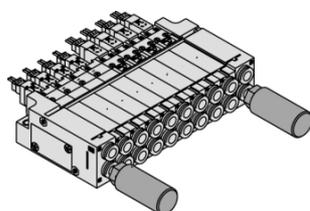

Dimensions

Series	Applicable fittings size ϕ d	Model	A	L	D	Effective area (mm ²)	Noise reduction (dB)
VQ2000	8	AN200-KM8	59.3	77.8	22	20	30

Port plug



VVQ1000-58A

The plug is used to block the cylinder port when using a 4 port valve as a 3 port valve.

When ordering it incorporated with a manifold, suffix A or B, the symbol of the plug port, to the valve no.

Example) VQ2140-5L-C8-A

→A port, Plug

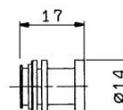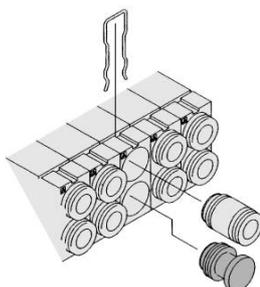

Plug Lead Unit: Flip Type Series VQ0000/1000/2000

Manifold Option

Double check block (Separated type)

VQ2000-FPG-□□-□


It is used on the outlet side piping. Combining the double check block with built-in pilot double check valve and a two-position single/double solenoid valve will prevent the dropping at the cylinder stroke end when the SUP residual pressure is released.

Specifications

Maximum operating pressure	0.8 MPa
Ambient and fluid temperature	0.15 MPa
Ambient and fluid temp.	-5 to 50° C
Flow characteristics: C	3.0 dm ³ /(s·bar)
Max. operating frequency	180 c.p.m


Note) Based on JIS B 8375-1981 (Supply pressure: 0.5 MPa)

<Check valve operation principle>

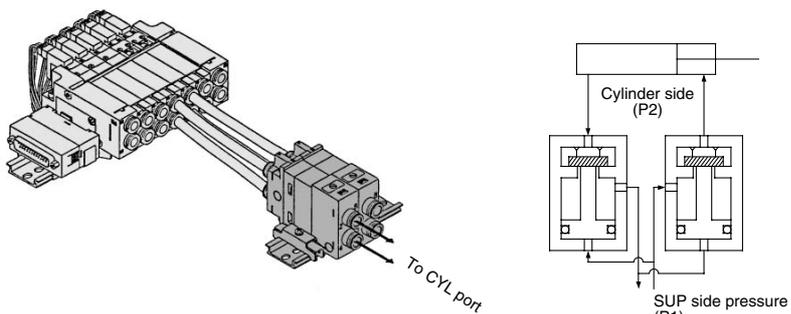


Dimensions

Single unit

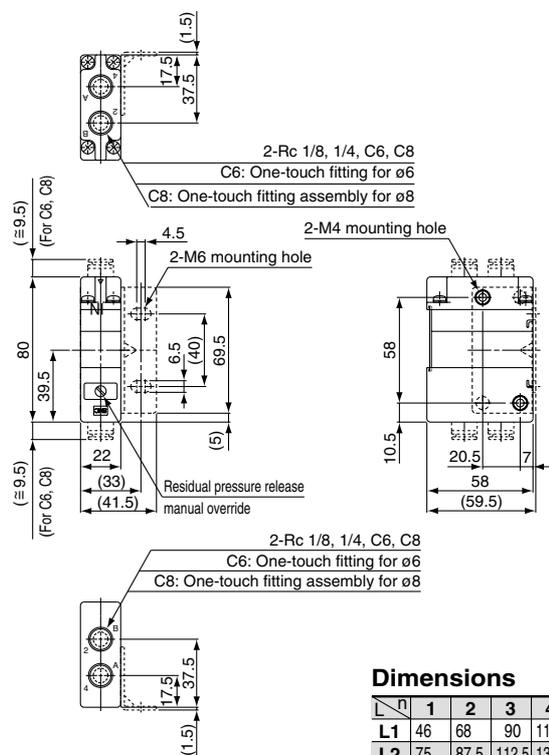

Manifold

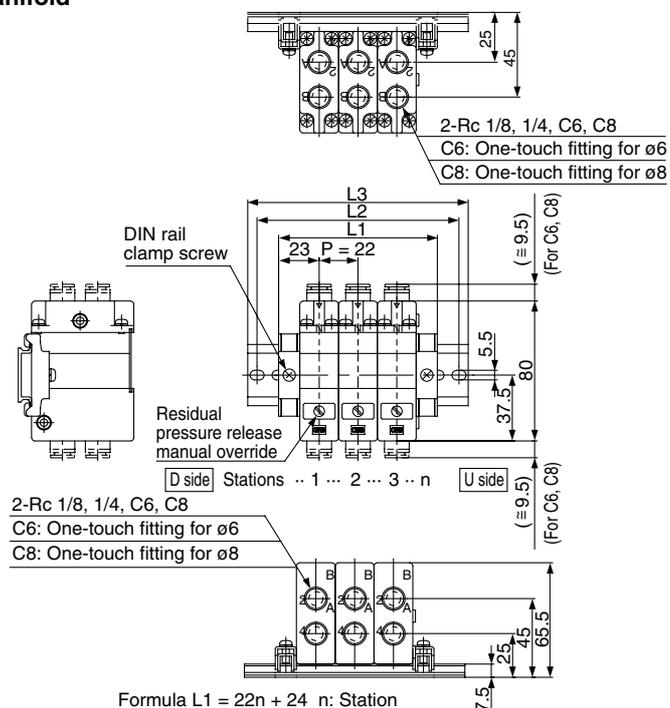

Dimensions

Formula L1 = 22n + 24 n: Station

L	n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1		46	68	90	112	134	156	178	200	222	244	266	288	310	332	354	376
L2		75	87.5	112.5	137.5	162.5	175	200	225	250	262.5	287.5	312.5	337.5	362.5	375	400
L3		85.5	98	123	148	173	185.5	210.5	235.5	260.5	273	298	323	348	373	385.5	410.5

How to Order

Double check block

VQ2000-FPG-01 01 F

IN side port size

01	Rc 1/8
02	Rc 1/4
C6	One-touch fitting for ø6
C8	One-touch fitting for ø8

OUT side port size


01	Rc 1/8
02	Rc 1/4
C6	One-touch fitting for ø6
C8	One-touch fitting for ø8

Option

Nil	None
D	DIN rail mounting style (For manifold)
F	With bracket
N	Name plate

Note) When two or more symbols are specified, indicate them alphabetically. Example) -DN

<Example>

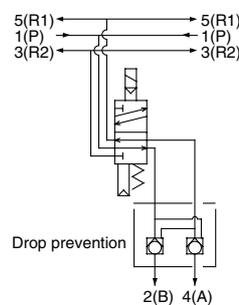

Manifold

VVQ2000-FPG-06

Stations

01	1 station
⋮	⋮
16	16 stations

<Ordering Example>

VVQ2000-FPG-06...6 stations manifold
 *VQ2000-FPG-C6C6-D: 3 sets } Double check block
 *VQ2000-FPG-C8C8-D: 3 sets }

Caution

- Air leakage from the pipe between the valve and cylinder or from the fittings will prevent the cylinder from stopping for a long time. Check the leakage using neutral household detergent, such as dish washing soap. Also check the cylinder's tube gasket, piston packing and rod packing for air leakage.
- Since One-touch fittings allow slight air leakage, screw piping (with M5 thread) is recommended when stopping the cylinder in the middle for a long time.
- When screwing the fittings in the double check block, proper tightening torque is as shown below:
- If the exhaust of the double check block is throttled too much, the cylinder may not operate properly and may not stop intermediately.
- Set the cylinder load so that the cylinder pressure will be within two times that of the supply pressure.

Connection threads	Proper tightening torque (N·m)
Rc 1/8	7 to 9
Rc 1/4	12 to 14



⚠ Precautions

Be sure to read before handling. For Safety Instructions and Solenoid Valve Precautions, refer to page 2-9-2.


Light/Surge Voltage Suppressor

⚠ Caution

The lighting positions are concentrated on one side for both single solenoid and double (latching) type. In the double (latching) type, A side and B side energization are indicated by two colors which match the colors of the manual overrides.

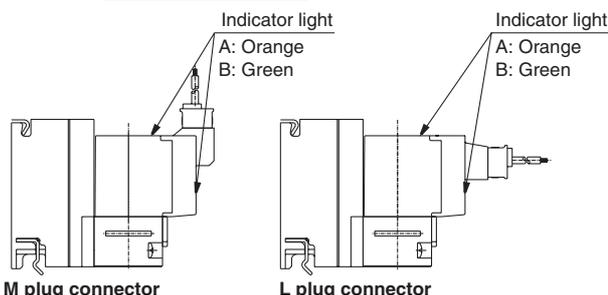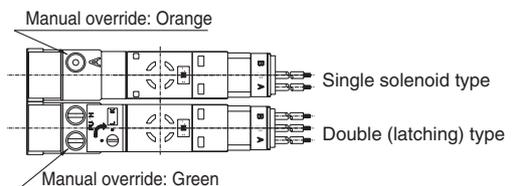

DC circuit diagram

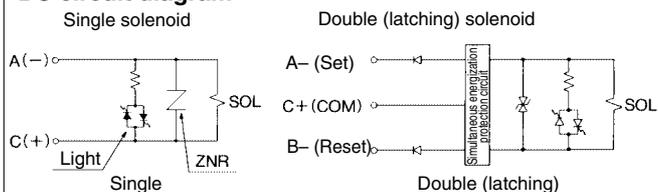

Note 1) • A-side energization: A light (orange) illuminates. Note 3) In the case of double
• B-side energization: B light (green) illuminates. (latching), the electromagnetic
• Equipped with a wiring error prevention (stop valve channel is, A-(set):
diode) mechanism and a surge absorption (ZNR/surge absorption diode) mechanism. P → A, B → R,
B-(reset):
P → B, A → R.

Note 2) Applicable to negative COM specification models.

Double (Latching solenoid) Type

⚠ Caution

Different from the conventional double solenoid, the double type uses a latching (self-holding system) solenoid. Although the appearance is the same as the single solenoid, it is constructed so that the movable iron core in the solenoid is held in the ON position on A and B sides by instantaneous energization (20 ms or more). The usage and function is the same as the double solenoid.

<Special Cautions for Latching Solenoid>

1. Select the circuit in which ON and OFF signals are not energized simultaneously.
2. 20 ms energization time is necessary for self-holding.
3. Avoid using the latching solenoid valves in environments where impact or collisions with the valve might occur. Also, do not use in places where strong magnetic fields are present.
4. Even though the armature in the solenoid of this valve is held on to B side, ON position (Reset), verify either A side, ON position or B side, ON position by energizing prior to use.
5. After manual operation, the main valve will return to its original position. Manual override on the pilot valve side can retain its switching position after manipulation.
6. Please contact SMC for long-term energization applications.
7. If the metal seal type goes down below the minimum operating pressure of supply air (0.1 MPa or less), the main valve will get back the home position. (B side ON position) Therefore, in the event of shutting the supply air or applying the air with being A side ON position remained, cylinder may be pulsated. In the event of manipulating the supply air, the valve's switching position has to be set in the home position side (B side ON position side).


How to Mount/Remove Solenoid Valve

⚠ Caution

<Procedure>

How to Remove

1. Loosen tie-rod bolt B. (Two to four turns)
2. After fully loosening the tie-rod bolt, take off bolt A upward as shown above.
3. Slide the valves aside to make a 1 mm clearance between the valve to be taken off and the others. As shown above, remove the whole valve while holding up the (a) side. (Avoid rough handling of the connector.)

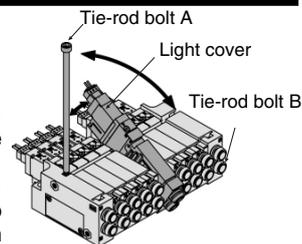

Mounting

Reverse the sequence of steps above to remount.

Tighten the tie-rod bolts with the tightening torque at the right table while using caution not to tighten the only one side unevenly.

Note) Be careful not to push on the light cover while mounting/removing the valve.

Torque Applied to Tie-rod Bolt


Model	Torque
VQ0000	0.5 to 0.7 N·m
VQ1000	1.0 to 1.4 N·m
VQ2000	1.0 to 1.4 N·m

Double (Latching solenoid) Type

⚠ Warning


Without an electric signal for the solenoid valve the manual override is used for switching the main valve.

■ Push type (Tool required)

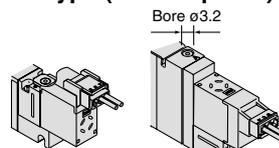


Push down on the manual override button with a small screwdriver until it stops. Release the screwdriver and the manual override will return.

■ Locking slotted type

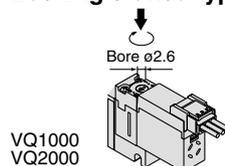


If the manual override is turned by 180° clockwise and the ► mark is adjusted to 1, then pushed in the direction of an arrow (↓), it will be locked in the ON state. If the manual override is turned by 180° counterclockwise and ► mark is adjusted to 0, locking will be released and the manual override will return.

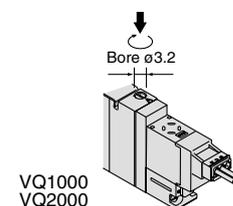

Push down completely on the manual override button with a small screwdriver. While down, turn clockwise 90° to lock it. Turn it counterclockwise to release it.


■ Locking lever type (Option)

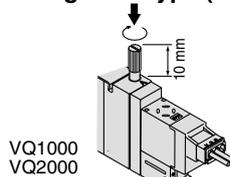

Push down completely on the manual override button with a small screwdriver. While down, turn clockwise 90° to lock it. Turn it counterclockwise to release it.

■ Manual override for double (latching) type

In the case of a double (latching) type, a manual override is provided not only on the body side but to the pilot as a standard. (VQ0000: Pilot valve only). After manual operation, the main valve of the manual on the body side returns to the position before the manual operation, however, the pilot valve manual override maintains the change-over position.

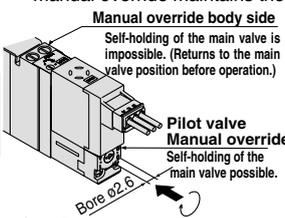

• If the manual override is turned by 180° clockwise and the ► mark is adjusted to A, then pushed in the direction of an arrow (➡), it will be back to the reset condition. (passage P → A)

• If the manual override is turned by 180° counterclockwise and the ► mark is adjusted to B, then pushed in the direction of an arrow (➡), it will be back to the reset condition. (passage P → B) (It is in the reset state at the time of shipment.)

⚠ Caution

Do not apply excessive torque when turning the locking type manual override. (0.1 N·m or less)


Plug Lead Unit: Flip Type Series VQ0000/1000/2000

Replacement of Cylinder Port Fittings

Caution

The cylinder port fittings are a cassette for easy replacement. (Except VQ1000)

The fittings are blocked by a clip inserted from the top of the valve. Remove the clip with a screwdriver to remove fittings. For replacement, insert the fitting assembly until it strikes against the inside wall and then re-insert the clip to the specified position.

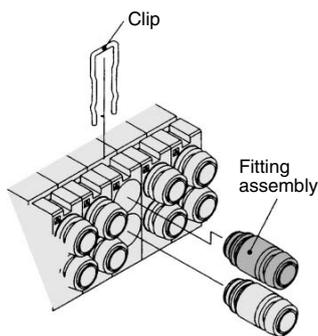

Applicable tubing O.D	Fitting assembly part no.	
	VQ1000	VQ2000
Applicable tubing $\phi 3.2$	VVQ1000-50A-C3	—
Applicable tubing $\phi 4$	VVQ1000-50A-C4	VVQ1000-51A-C4
Applicable tubing $\phi 6$	VVQ1000-50A-C6	VVQ1000-51A-C6
Applicable tubing $\phi 8$	—	VVQ1000-51A-C8

Purchasing order is available in units of 10 pieces.

Caution

1. Protect O-rings from scratches and dust to prevent air leakage.
2. The tightening torque for inserting fittings to the M5 thread assembly should be 0.8 to 1.4 N·m


Mounting/Removing from the DIN Rail

Caution

<Procedure>


How to Remove

1. Loosen the clamp screw on side (a) of the end plate on both sides.
2. Lift side (a) of the manifold base and slide the end plate in the direction of (2) shown in the figure to remove.

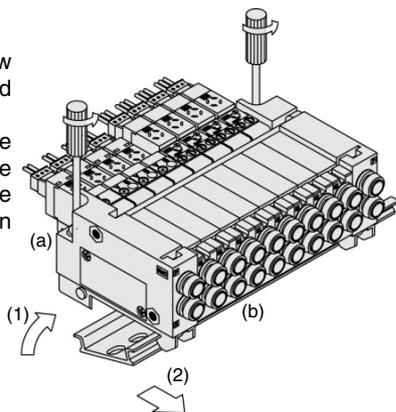

Mounting

1. Hook side (b) of the manifold base on the DIN rail.
2. Press down side (a) and mount the end plate on the DIN rail. Tighten the clamp screw on side (a) of the end plate. The proper tightening torque for screws is 0.4 to 0.6 N·m.

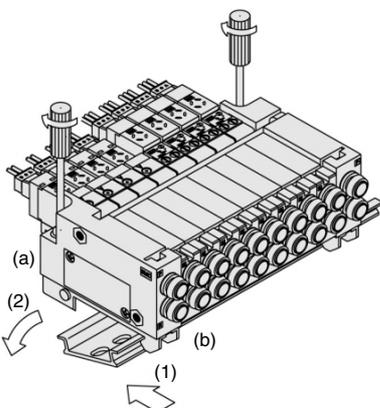

How to Calculate the Flow Rate

For obtaining the flow rate, refer to pages 2-1-8 to 2-1-11.

Built-in Silencer Replacement Element

Caution


A silencer element is incorporated in the end plate on both sides of the manifold base. A dirty and choked element may reduce cylinder speed or cause malfunction. Clean or replace the dirty element.

Element Part No.

Type	Element part no.		
	VQ0000	VQ1000	VQ2000
Built-in silencer, direct exhaust (-S)	VVQ0000-82A-4	VVQ1000-82A-4	VVQ2000-82A-4

* The minimum order quantity is 10 pcs.

Remove the cover from the side of the end plate and remove the old element with a screwdriver, etc.

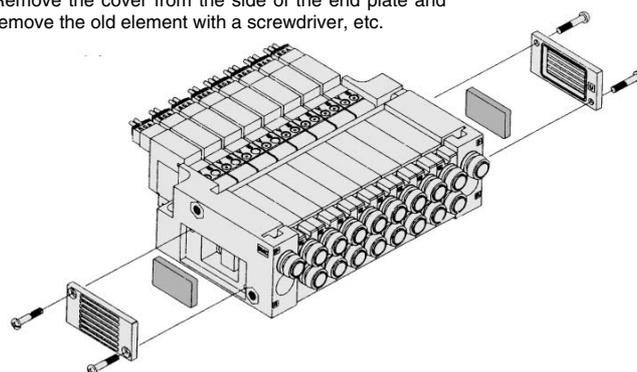


How to Use Plug Connector

Caution

Attaching and detaching connectors

To attach a connector, hold the lever and connector unit between your fingers and insert straight onto the pins of the solenoid valve so that the lever's pawl is pushed into the groove and locks.

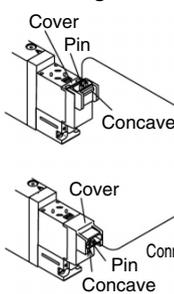


DC indicator Socket Part no. DXT170-71-1
Lead wire 0.2 to 0.33 mm²
(Max. cover diameter $\phi 1.7$ mm)

To detach a connector, remove the pawl from the groove by pushing the lever downward with your thumb, and pull the connector straight out.

Crimping the lead wire and socket

Peel 3.2 to 3.7 mm of the tip of lead wire, enter the core wires and press contact it by a press tool. Be careful so that the cover of lead wire does not enter into the core contacting part.

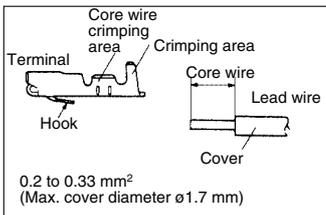


Attaching and detaching lead wires with sockets

Attaching

Insert a socket in the square hole (Indicated as +, -) of connector, push in the lead wire and lock by hanging the hook of socket to the seat of connector. (Pushing-in can open the hook and lock it automatically.) Then confirm the lock by lightly pulling on the lead wire.

Detaching

To detach a socket from a connector, pull out the lead wire while pressing the socket's hook with a stick having a thin tip (approx. 1 mm). If the socket will be used again, first spread the hook outward.

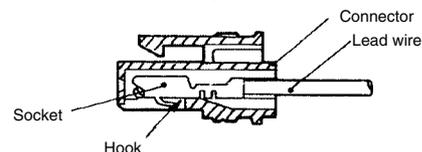


Option


Different Number of Connector Pins

F and P kits with the following number of pins are available. Besides the standard number (F = 25; P = 26) select the desired number of pins and cable length from the cable assembly list. Place an order for the cable assembly separately.

F kit (D-sub connector) 15 pins

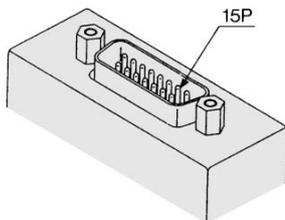

How to order manifold

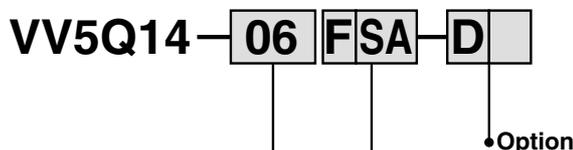

How to Order
 D-sub connector, 15 pins
 Connector location-Side (horizontal)
 Without cable


Kit/Electrical entry

Pins	Location		Top entry		Side entry	
	Kit	UA	Kit	SA		
15P (Max. 7 stations)	Kit F	UA	Kit F	SA		


Wiring specifications

* In the same way as the 25-pin models (standard) the terminal no. 1 is for SOL.A at the 1st station, the terminal no. 9 for SOL.B at the 1st station, and the terminal no. 8 for COM.

P kit (Flat ribbon cable connector) 10 pins, 16 pins, 20 pins

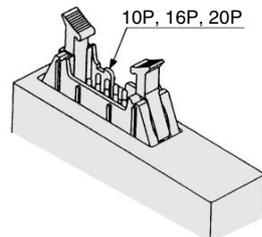

How to order manifold

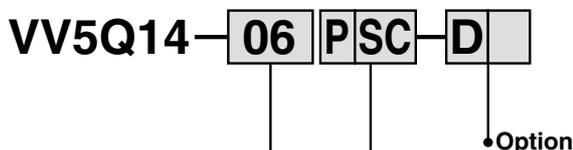


How to Order
 Flat ribbon cable, 20 pins
 Connector location-Side (Horizontal)
 Without cable

Kit/Electrical entry

Pins	Location		Top entry		Side entry	
	Kit	UA	Kit	SA		
10P (Max. 4 stations)	Kit P	UA	Kit P	SA		
16P (Max. 7 stations)		UB		SB		
20P (Max. 8 stations)		UC		SC		

Wiring Specifications


* In the same way as the 26-pin models (standard) the terminal no. 1 is for SOL.A at the 1st station, the terminal no. 2 for SOL.B at the 1st station, and two pins from the max. terminal numbers are for COM.

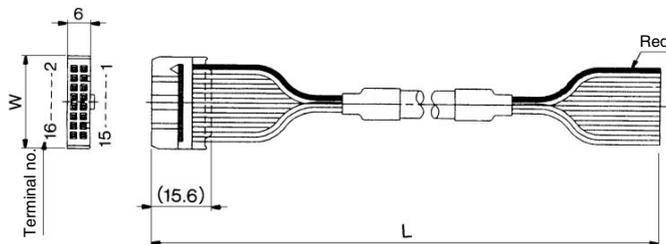

Flat Ribbon Cable Assembly

Cable length (L)	Pins	10P	16P	20P
1.5 m		AXT100-FC10-1	AXT100-FC16-1	AXT100-FC20-1
3 m		AXT100-FC10-2	AXT100-FC16-2	AXT100-FC20-2
5 m		AXT100-FC10-3	AXT100-FC16-3	AXT100-FC20-3
Connector width (W)		17.2	24.8	30

* For other commercial connectors, use a type with strain relief conforming to MIL-C-83503.

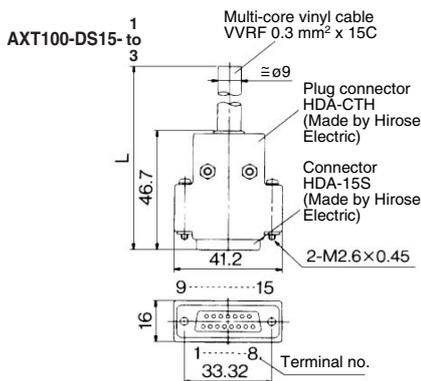

Wire Color by Terminal No. of D-sub Connector Cable Assembly

Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black

D-sub Connector Cable Assembly

Cable length (L)	Pins	15P
1.5 m		AXT100-DS15-1
3 m		AXT100-DS15-2
5 m		AXT100-DS15-3

* For other commercial connectors, use a type conforming to MIL-C-24308.

Special Wiring Specifications

In the internal wiring of F kit, P kit, T kit and S kit, double wiring (connected to SOL. A and SOL. B) is adopted for each station regardless of the valve and option types.

Mixed single and double wiring is available as an option.

1. How to order valves

Indicate an option symbol, -K, for the manifold no. and be sure to specify the mounting position and number of stations of the single and double wiring by means of the manifold specification sheet.

Example)


VV5Q14-09FS0-D K S



Others, option symbols: to be indicated alphabetically.

2. Wiring specifications

Connector terminal numbers are connected from solenoid station 1 on the A side in the order indicated by the arrows without skipping any terminal numbers.

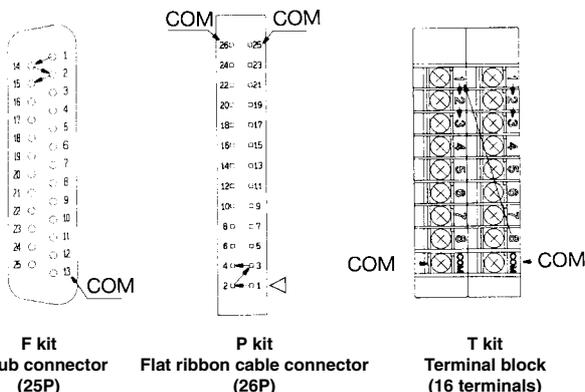

3. Max. number of stations

The maximum number of stations depends upon the number of solenoids. Assuming one for a single and two for a double, determine the number of stations so that the total number is not more than the maximum number given in the following table.

kit	F kit (D-sub connector)		P kit (Flat ribbon cable connector)				T kit (Terminal block)		S kit (Serial)
Type	F□ 25P	F□A 15P	P□ 26P	P□C 20P	P□B 16P	P□A 10P	T1	T2	S□
Max. points	Note) 16	14	Note) 16	Note) 16	14	8	8	16	16

Note) Due to the limitation of internal wiring.

Negative Common Specifications

Specify the valve model no. as shown below for negative COM specification. The standard manifold no. can be used. Please contact SMC for negative COM S kit.

How to order negative COM valves

VQ1140 N-5LO-C6



Inch-size One-touch Fittings

Refer to following model no. for inch-size One-touch fittings.

How to order manifold

VV5Q14-08FS0-DN-00T

P, R port size

VQ0000	ø1/4"
VQ1000	ø1/4"
VQ2000	ø5/16"

How to order valves

VQ1140-5M-N7

Cylinder port

Symbol	N1	N3	N7	N9
Applicable tubing O.D. (Inch)	ø1/8"	ø5/32"	ø1/4"	ø5/16"
A, B port	VQ0000	○	○	—
	VQ1000	—	○	○
	VQ2000	—	○	○

Plug Connector Assembly Model

Connector assembly will be required when the F, P, T, S kits add a valve.

Specify the type of valve and connector assembly.

Connector Assembly Part No.

Specifications		Part no.
Single (2-wire)	Positive common	AXT661-14A-F
	Negative common	AXT661-14AN-F
Double (latching) (3-wire)	Positive common	AXT661-13A-F
	Negative common	AXT661-13AN-F

Note) Lead wire length: 300 mm

Note) The parts numbers above are applicable to VQ0000/1000 (2 to 16 stations) and VQ2000 (2 to 10 stations). VQ2000 (11 to 16 stations) uses AXT661-13A(N)-F425.

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

Series VQ0000/1000/2000

Option

DIN Rail Mounting

Each manifold can be mounted on a DIN rail.
 Order it by indicating an option symbol for DIN rail mounting style, -D. In this case, a DIN rail which is approx. 30 mm longer than the manifold with the specified number of stations is attached. Besides, it is also available in the following cases.

- **When DIN rail is unnecessary (C kit only.)**
 (DIN rail mounting brackets only are attached.)
 Indicate the option symbol, -DO, for the manifold no.

Example)


VV5Q14-08C-DOS



- **When using DIN rail longer than the manifold with specified number of stations**
 Clearly indicate the necessary number of stations next to the option symbol, -D, for the manifold no.

Example)

VV5Q14-08FS1-D09S

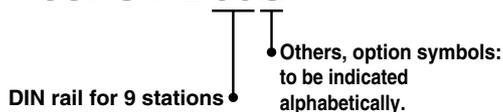


- **When changing the manifold style into a DIN rail mount**
 Order brackets for mounting a DIN rail. (Refer to "Option" on pages 2-4-60, 61 and 64.)

No. VQ0000-57A4 (For VQ0000)
 VQ1000-57A-4 (For VQ1000)
 VQ2000-57A-4 (For VQ2000)
 2 pcs. per one set

- **When ordering DIN rail only**
DIN rail no.: AXT100-DR-n

* Refer to the DIN rail dimension table for determining the length.

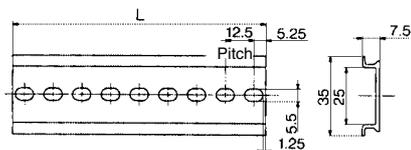

L Dimension

$$L = 12.5 \times n + 10.5$$

No.	1	2	3	4	5	6	7	8	9	10
L dimension	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5
No.	11	12	13	14	15	16	17	18	19	20
L dimension	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5
No.	21	22	23	24	25	26	27	28	29	30
L dimension	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5
No.	31	32	33	34	35	36	37	38	39	40
L dimension	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

Series VQ1000

Body Ported

Plug Lead Unit: Cassette Type

How to Order Manifold

VV5Q1 7 - 08 F U1 - D

Series VQ1000
Manifold
7 Plug lead unit/Cassette

Stations

01	1 station
⋮	⋮

The number of max. stations differs from kit to kit. (Refer to the table below.)

Simple specials are available with SMC Simple Specials System. For details about applicable models, please contact SMC.


Option

D ⁽¹⁾	DIN rail mounting style
K ⁽²⁾	Special wiring specifications (Except double wiring)
N ⁽³⁾	With name plate

- Note 1) Since the manifold is all with DIN rail, and so suffix -D to the part number.
- Note 2) Specify the wiring specifications on the manifold specification sheet. (Except C kit)
- Note 3) Unmountable when the valve's manual override is a locking lever type.
- Note 4) When two or more symbols are specified, indicate them alphabetically.


Kit/Electrical entry/Cable length

F kit
(D-sub connector)

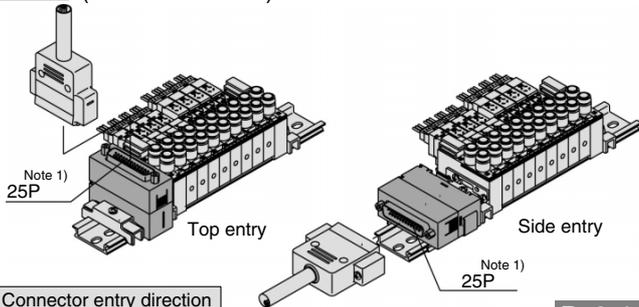


Connector entry direction		P. 2-4-76		Max. 16 ⁽²⁾ stations
Top entry	Side entry	Top entry	Side entry	
Kit F	U0	Kit F	S0	Without cable
	U1		S1	With cable (1.5 m)
	U2		S2	With cable (3 m)
	U3		S3	With cable (5 m)

P kit
(Flat ribbon cable connector)

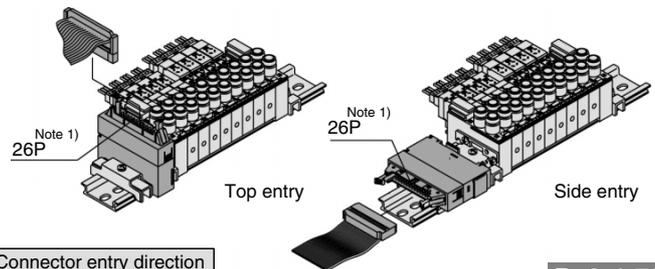

Connector entry direction		P. 2-4-78		Max. 16 ⁽²⁾ stations
Top entry	Side entry	Top entry	Side entry	
Kit P	U0	Kit P	S0	Without cable
	U1		S1	With cable (1.5 m)
	U2		S2	With cable (3 m)
	U3		S3	With cable (5 m)


T kit
(Terminal block)

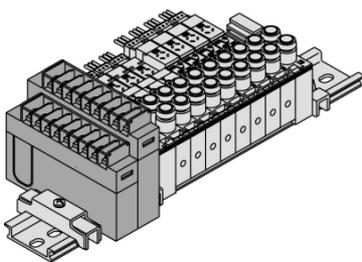

P. 2-4-80

Kit T	1	No. of terminals: 8, 1 row	Applicable stations 1 to 8
	2	No. of terminals: 16, 2 rows	Applicable stations 5 to 16


C kit
(Connector)

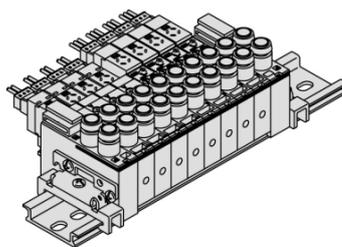

P. 2-4-82

C	Connector kit	Max. 16
---	---------------	---------

S kit
(Serial transmission unit)

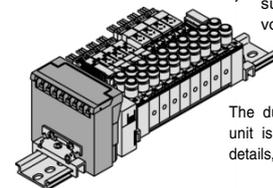

The valve is equipped with an indicator light/surge voltage suppressor and the voltage is 24 VDC.

The dust-protected type SI unit is applicable, too. For details, please contact SMC.

P. 2-4-84

Kit S	Option	Max. 16 ⁽²⁾ stations
0	Without SI unit	
A	With general type SI unit (Series EX300)	
B	Mitsubishi Electric Corp.: MELSECNET/mini-S3 Data Link System	
C	OMRON Corp.: SYSBUS Wire System	
D	SHARP Corp.: Satellite I/O Link System	
E	Matsushita Electric Works: MEWNET-F System	
F1	NKE Corp.: Uni-wire System (16 output points)	
G	Rockwell Automation: Allen Bradley Remote I/O (RIO) System	
H	NKE Corp.: Uni-wire H System	
J1	SUNX Corp.: S-LINK System (16 output points)	
J2	SUNX Corp.: S-LINK System (8 output points)	Max. 8
K	Fuji Electric Co.: T-LINK Mini System	
Q	DeviceNet, CompoBus/D (OMRON Corp.)	Max. 16 stations
R1	OMRON Corp.: CompoBus/S System (16 output points)	
R2	OMRON Corp.: CompoBus/S System (8 output points)	Max. 8
V	Mitsubishi Electric Corp.: CC-LINK System	Max. 16

Note 1) Besides the above, F and P kits with different number of pins are available. For details, refer to page 2-4-92.
Note 2) See page 2-4-93 for details.

Plug Lead Unit: Cassette Type Series VQ1000

How to Order Valves

VQ 1 1 7 0 Y 5 M C6

Series VQ1000

Type of actuation

- 1: 2 position single
- 2: 2 position double (Latching)
- 3: 3 position closed center
- 4: 3 position exhaust center
- 5: 3 position pressure center

Coil voltage

1	100 VAC (50/60 Hz)
2 ^{Note}	200 VAC (50/60 Hz)
3	110 VAC (50/60 Hz)
4 ^{Note}	220 VAC (50/60 Hz)
5	24 VDC
6	12 VDC

Manual override

- Nil: Non-locking push type (Tool required)
- B: Locking type (Tool required)
- C: Locking type (Manual)

Function

Symbol	Specifications	DC	AC
Nil	Standard type	(1.0 W) ○	○ ⁽¹⁾
H ⁽²⁾	High pressure type	(1.5 W) ○	—
Y ⁽²⁾	Low wattage type	(0.5 W) ○	—

Seal

0	Metal seal
1	Rubber seal

Electrical entry

G: Grommet (C kit only. Except double (latching) and AC.	L: L plug connector With lead wire	LO: L plug connector Without lead wire	M: M plug connector With lead wire	MO: M plug connector Without lead wire
	With light/surge voltage suppressor	With light/surge voltage suppressor	With light/surge voltage suppressor	With light/surge voltage suppressor

Cylinder port

C3	With One-touch fitting for ø3.2
C4	With One-touch fitting for ø4
C6	With One-touch fitting for ø6
M5	M5 thread

Note 1) The code is L for elbow piping for all manifold stations. Example) L6: Elbow with One-touch fittings for ø6

Note 2) For inch-size One-touch fittings, refer to "Option" on page 2-4-93.

Note) A manual override for pilot valve is provided to the standard model for double type.

Note 1) For power consumption of AC type, refer to page 2-4-74.

Note 2) Except double (latching).

Note 1) For negative common specifications, refer to "Option" on page 2-4-93.

Note 2) Connector assembly will be required when the F, P, T, S kits add a valve. For model no., refer to "Option" on page 2-4-93.

L type plug connector is used for 3 position AC.

VQC

SQ

VQ0

VQ4

VQ5


VQZ

VQD


Manifold Option

P. 2-4-87


Individual SUP spacer VVQ1000-P-7-C6

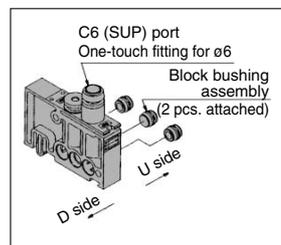


SUP/EXH block bush assembly VVQ1000-87A-B-50

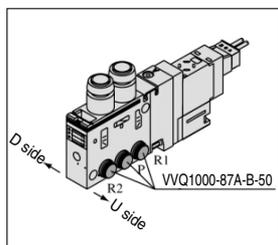


Double Check block VQ1000-FPG-□□

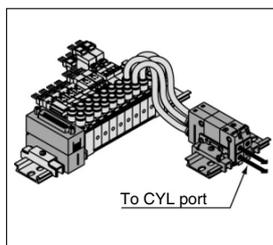


Blanking plug KQ2P-²⁵/₀₄/₀₆

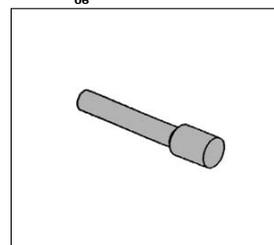


Individual EXH spacer VVQ1000-R-7-C6

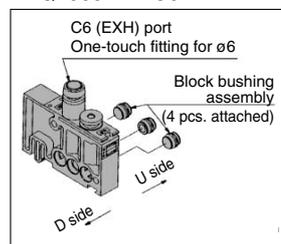


Elbow fitting assembly VVQ1000-F7-L^{C3}/_{C4}/_{C6}

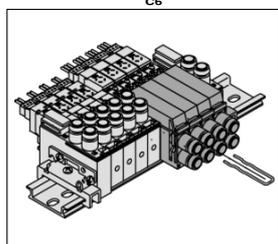


Silencer AN103-X233

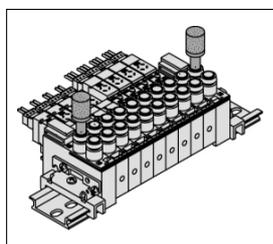


Individual SUP/EXH spacer VVQ1000-PR-7-C6

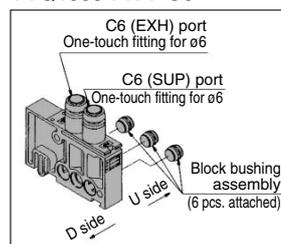

Name plate [-N7] VVQ1000-N7-station (1 to Max. stations)

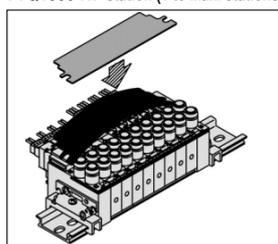

Port plug VVQ000-58A

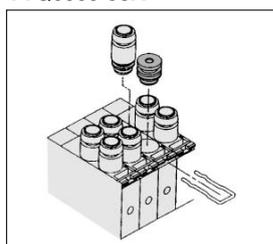

How to Order Manifold Assembly

Example

Single solenoid (24 VDC) VQ1170-5MO-C6 (4 sets)

Double (latching) solenoid (24 VDC) VQ2170-5MOD-C6 (4 sets)

Cylinder port C6: With One-touch fitting for ø6

Manifold base (8 stations) VV5Q17-08FU2-D

D-sub connector cable

F kit (D-sub connector)

3 m

D side

U side

Stations

1 2 3 ... Stations

VV5Q17-08FU2-D 1 set (F kit 8 station manifold base no.)

*VQ1170-5MO-C6 4 sets (Single solenoid part no.)

*VQ1270-5MOB-C6 ... 4 sets (Double latching solenoid part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.


Add the valve and option part number under the manifold base part number. In the case of complex arrangement, specify them on the manifold specification sheet.

• See page 2-4-91 for cylinder port fittings.
• For replacement parts, refer to page 2-4-111.

Series VQ1000

Body Ported

Plug Lead Unit: Cassette Type

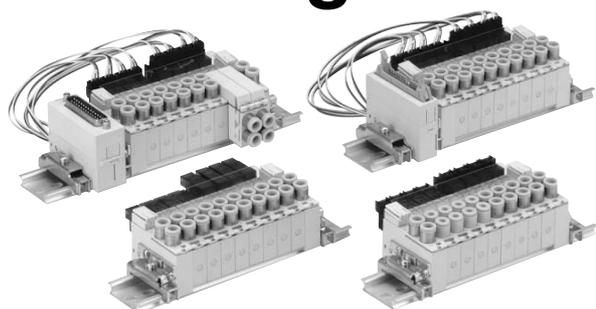


Model

Series	Number of solenoids	Model		Flow characteristics						Response time ⁽²⁾ (ms)		AC	Weight (g)	
				1 → 4/2 (P → A/B)			4/2 → 5/3 (A/B → R1/R2)			Standard: 1 W	Low wattage: 0.5 W			
				C [dm ³ /(s·bar)]	b	Cv	C [dm ³ /(s·bar)]	b	Cv	H: 1.5 W	0.5 W			
VQ1000	2 position	Single	Metal seal	VQ1170	0.56	0.15	0.13	0.60	0.12	0.14	12 or less	15 or less	29 or less	67
			Rubber seal	VQ1171	0.71	0.20	0.17	0.80	0.16	0.19	15 or less	20 or less	34 or less	
		Double (Latching)	Metal seal	VQ1270	0.56	0.15	0.13	0.60	0.12	0.14	12 or less	15 or less	29 or less	
			Rubber seal	VQ1271	0.71	0.20	0.17	0.80	0.16	0.19	15 or less	20 or less	34 or less	
	3 position	Closed center	Metal seal	VQ1370	0.53	0.16	0.12	0.58	0.12	0.14	20 or less	26 or less	40 or less	82
			Rubber seal	VQ1371	0.65	0.23	0.16	0.70	0.20	0.17	25 or less	33 or less	47 or less	
		Exhaust center	Metal seal	VQ1470	0.54	0.16	0.12	0.60	0.12	0.14	20 or less	26 or less	40 or less	
			Rubber seal	VQ1471	0.65	0.23	0.16	0.80	0.16	0.19	25 or less	33 or less	47 or less	
		Pressure center	Metal seal	VQ1570	0.54	0.16	0.12	0.58	0.12	0.14	20 or less	26 or less	40 or less	
			Rubber seal	VQ1571	0.70	0.20	0.17	0.72	0.20	0.17	25 or less	33 or less	47 or less	

Note 1) Cylinder port size C6

Note 2) As per JIS B 8375-1981 (Supply pressure: 0.5 MPa; with indicator light/surge voltage suppressor; clean air. Subject to the pressure and air quality.)

JIS Symbol

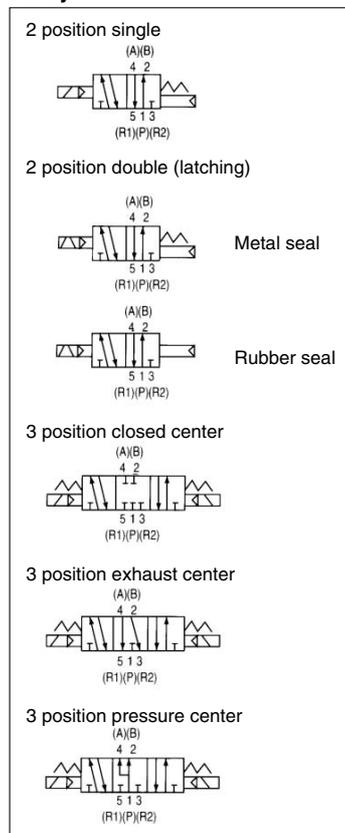

Standard Specifications

Valve specifications	Valve construction	Metal seal	Rubber seal	
	Fluid	Air/Inert gas	Air/Inert gas	
	Maximum operating pressure	0.7 MPa (High pressure type: 0.8 MPa) ⁽³⁾		
	Minimum operating pressure	Single	0.1 MPa	0.15 MPa
		Double (Latching)	0.1 MPa	0.15 MPa
		3 position	0.15 MPa	0.2 MPa
	Ambient and fluid temperature	10 to 50°C ⁽¹⁾		
	Lubrication	Not required		
	Manual override	Push type/Locking type (Tool required, Manual) Option		
	Impact/Vibration resistance ⁽²⁾	150/30 m/s ²		
Enclosure	Dust-protected			
Solenoid	Coil rated voltage	12, 24 VDC, 100, 110, 200, 220 VAC (50/60 Hz)		
	Allowable voltage fluctuation	±10% of rated voltage		
	Coil insulation type	Class B or equivalent		
	Power consumption (Current)	24 VDC	1 W DC (42 mA), 1.5 W DC (63 mA) ⁽³⁾ , 0.5 W DC (21 mA) ⁽⁴⁾	
		12 VDC	1 W DC (83 mA), 1.5 W DC (125 mA) ⁽³⁾ , 0.5 W DC (42 mA) ⁽⁴⁾	
		100 VAC	Inrush 0.5 VA (5 mA), Holding 0.5 VA (5 mA)	
110 VAC		Start-up 0.55 VA (5 mA), Holding 0.55 VA (7.5 mA)		
200 VAC		Inrush 1.0 VA (5 mA), Holding 1.0 VA (5 mA)		
220 VAC	Inrush 1.1 VA (5 mA), Holding 1.1 VA (5 mA)			

Note 1) Use dry air to prevent condensation when operating at low temperatures.

Note 2) Impact resistance: No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

Note 3) Values in the case of high pressure type (1.5 W).

Note 4) Values in the case of low wattage (0.5 W) specifications.

Plug Lead Unit: Cassette Type Series VQ1000

Manifold Specifications

Series	Base model	Type of connection	Porting specifications		Applicable stations ⁽²⁾	Applicable solenoid valve	5 station weight (g)	
			Port location	Port size ⁽¹⁾				
				1(P), 3(R)				4(A), 2(B)
VQ1000	VV5Q17-□□□-D	<ul style="list-style-type: none"> ■ F kit—D-sub connector ■ P kit—Flat ribbon cable connector ■ T kit—Terminal block ■ C kit—Individual connector ■ S kit—Serial transmission unit 	Top	C6 (ø6)	C3 (ø3.2) C4 (ø4) C6 (ø6) M5 (M5 thread)	1 to 16 stations	VQ1□70 VQ1□71	405



Note 1) Inch-size One-touch fittings are also available. For details, refer to page 2-4-93.
 Note 2) For details, refer to page 2-4-93.

VQC

SQ


VQ0

VQ4


VQ5

VQZ

VQD

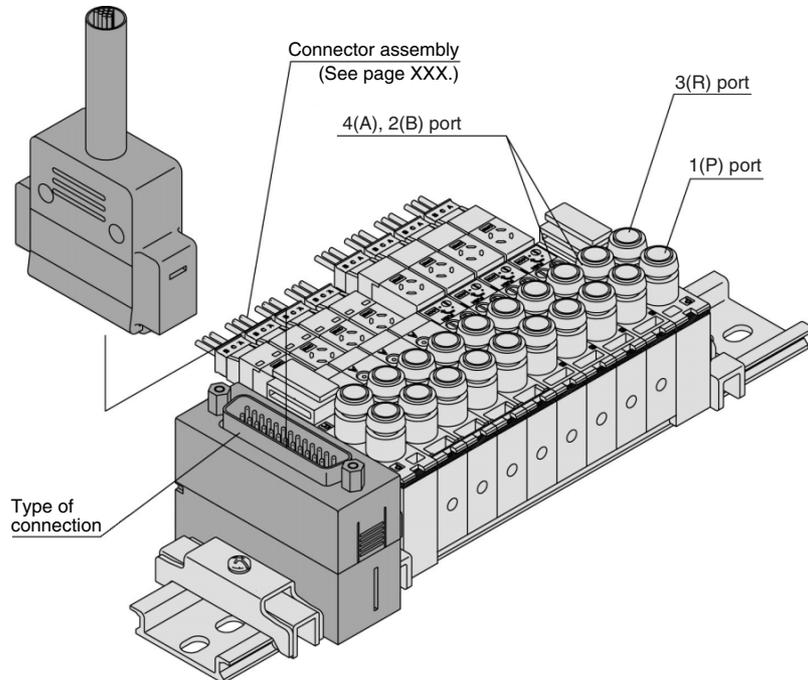

F VQ1000 Kit (D-sub connector)

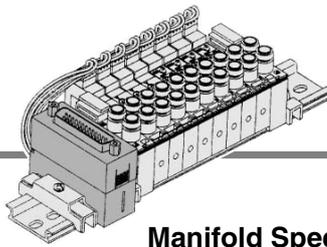

- The D-sub connector reduces installation labor for electrical connections.
- Using the D-sub connector (25P), (15P as an option) conforming to MIL standard permits the use of connectors put on the market and gives a wide interchangeability.
- Top or side receptacle position can be selected in accordance with the available mounting space.
- Maximum stations are 16.

Manifold Specifications

Series	Porting specifications		Applicable stations
	Port location	Port size	
VQ1000	Top	1(P), 3(R)	4(A), 2(B)
		C6	C3, C4, C6, M5

Max. 16 stations

D-sub Connector (25 pins)

AXT100-DS25-015
030
050

(The D-sub connector cable assembly can be ordered individually or included in a specific manifold model no. Refer to How to Order Manifold.)

Multi-core vinyl cable
0.3 mm² x 25C

≅ φ10

SMC

2-M2.6 x 0.45

Socket side

Terminal no.

Wire Color by Terminal No. of D-sub Connector Cable Assembly

Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Gray	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Gray	Red
24	Black	White
25	White	None

D-sub Connector Cable Assembly (Option)

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-DS25-015	Cable 25 core x 24AWG
3 m	AXT100-DS25-030	
5 m	AXT100-DS25-050	

* For other commercial connectors, use a 25 pins type with female connector conforming to MIL-C-24308.

Connector manufacturers' example


- Fujitsu Limited • J.S.T. Mfg. Co., Ltd.
- Japan Aviation Electronics Industry, Ltd.
- Hirose Electric Co., Ltd.

Note) Types with 15 pin are also available. Refer to page 2-4-92 for details.

Electric Characteristics

Item	Characteristics
Conductor resistance Ω/km, 20°C	65 or less
Insulation resistance V, 1 min, AC	1000
Insulation resistance MΩ/km, 20°C	5 or less

Note) The minimum bending radius of D-sub cable assembly is 20 mm.

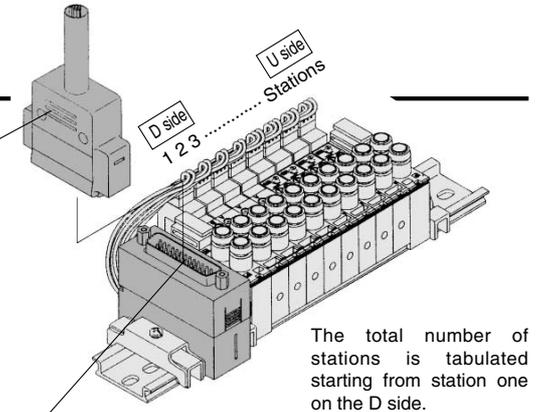

Electrical wiring specifications

D-sub cable assembly 015
AXT100-DS25-030
050 Wire color

D-sub connector


Terminal no.	Polarity	Lead wire color	Dot marking
SOLA_1	(-)	(+)	Black
SOLA_14	(-)	(+)	Yellow
SOLA_2	(-)	(+)	Brown
SOLA_15	(-)	(+)	Pink
SOLA_3	(-)	(+)	Red
SOLA_16	(-)	(+)	Blue
SOLA_4	(-)	(+)	Orange
SOLA_17	(-)	(+)	Purple
SOLA_5	(-)	(+)	Yellow
SOLA_18	(-)	(+)	Gray
SOLA_6	(-)	(+)	Pink
SOLA_19	(-)	(+)	Orange
SOLA_7	(-)	(+)	Blue
SOLA_20	(-)	(+)	Red
SOLA_8	(-)	(+)	Purple
SOLA_21	(-)	(+)	Brown
SOLA_9	(-)	(+)	Gray
SOLA_22	(-)	(+)	Pink
SOLA_10	(-)	(+)	Orange
SOLA_23	(-)	(+)	Blue
SOLA_11	(-)	(+)	Yellow
SOLA_24	(-)	(+)	Black
SOLA_12	(-)	(+)	White
SOLA_25	(-)	(+)	None
SOLA_13	(-)	(+)	None
COM_13	(+)	(-)	Orange

Positive common specifications Negative common specifications

Connector terminal no.



As the standard electrical wiring specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 8 stations or less, regardless of valve and option types. Mixed single and double wiring is available as an option. For details, refer to page 2-4-93. Note) When using the negative common specifications, use valves for negative common. (Refer to page 2-4-93.)

How to Order Manifold

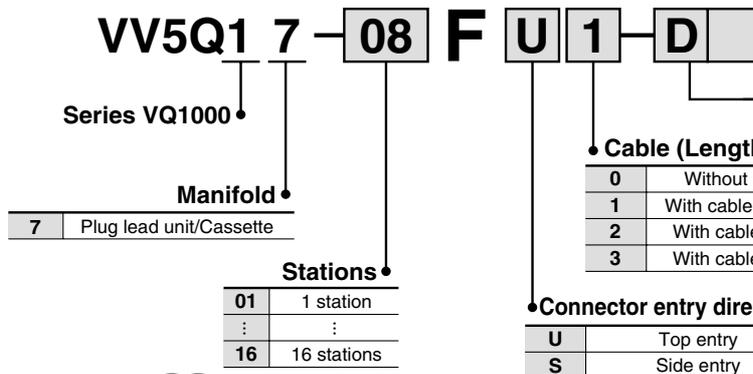

- Note 1) Since the manifold is all with DIN rail, and so suffix -D to the part number.
- Note 2) Specify the wiring specifications in the manifold specification sheet.
- Note 3) Unmountable when the valve's manual override is a locking lever type.
- Note 4) When two or more symbols are specified, indicate them alphabetically.

Plug Lead Unit: Cassette Type Series VQ1000

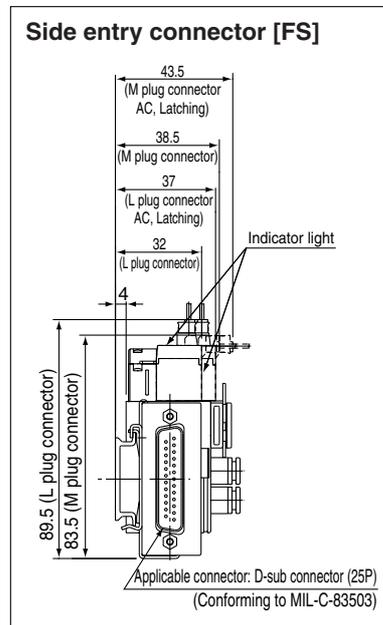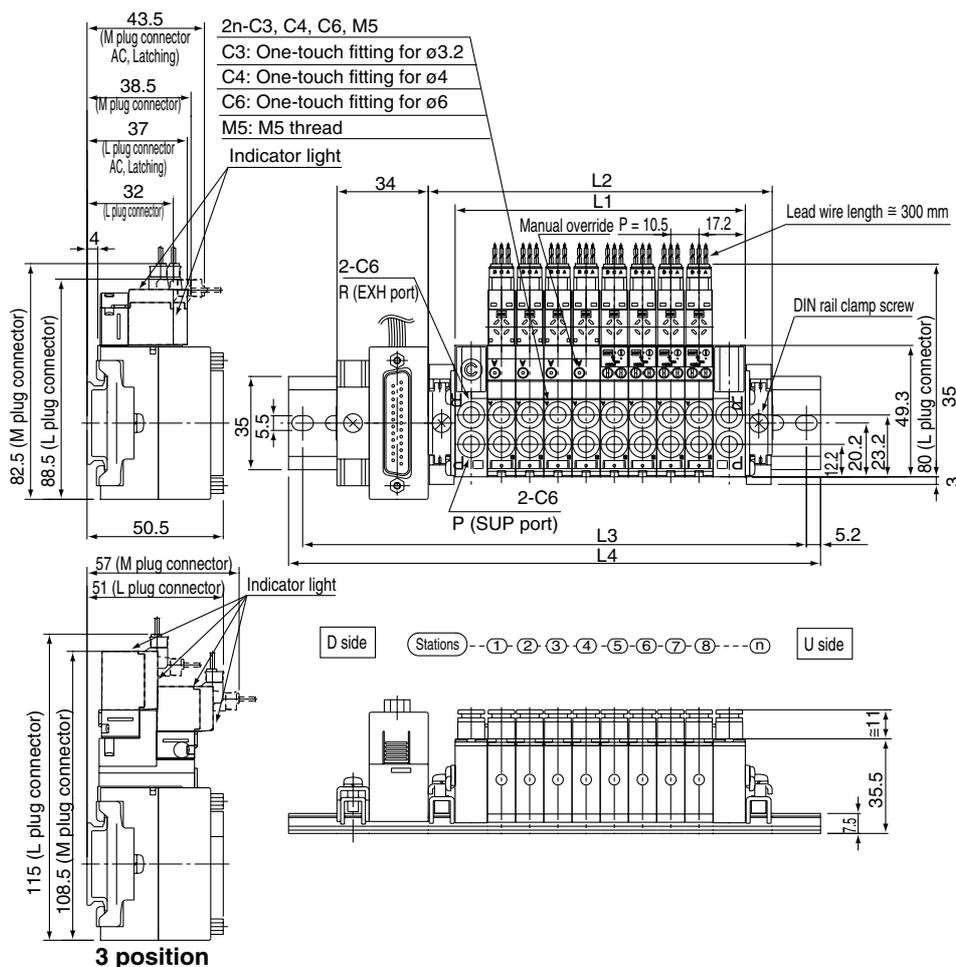

- VQC
- SQ
- VQ0**
- VQ4
- VQ5
- VQZ
- VQD

Dimensions: Top Entry Connector [-FU]


Formula L1 = 10.5n + 24, L2 = 10.5n + 44 n: Station (Maximum 16 stations)

n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	34.5	45	55.5	66	76.5	87	97.5	108	118.5	129	139.5	150	160.5	171	181.5	192
L2	54.5	65	75.5	86	96.5	107	117.5	128	138.5	149	159.5	170	180.5	191	201.5	212
L3	112.5	125	137.5	150	150	162.5	175	187.5	200	212.5	225	225	237.5	250	262.5	275
L4	123	135.5	148	160.5	160.5	173	185.5	198	210.5	223	232.5	235.5	248	260.5	273	285.5

Dimensions: Side Entry Connector [-FS]

n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L3	137.5	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	262.5	275	287.5
L4	148	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273	285.5	298

How to Order Valves

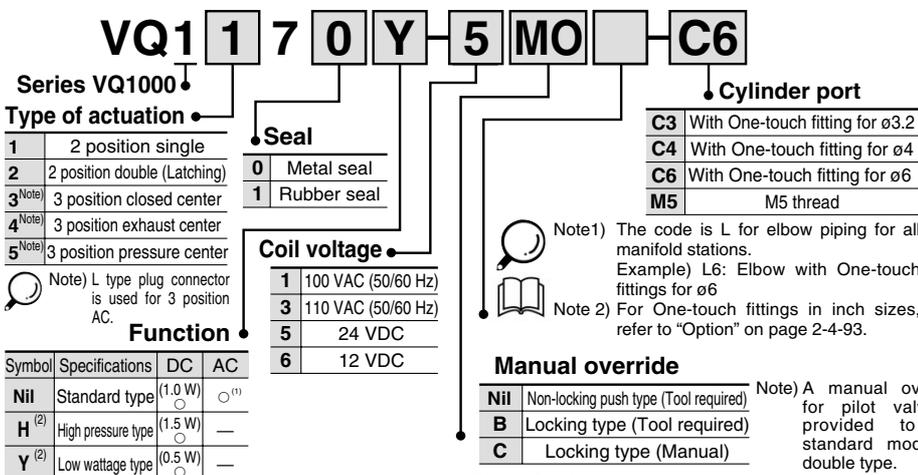


How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.


<Example>
 D-sub connector kit with 3 m cable
 VV5Q17-08FU2-D ... 1 set Manifold base part no.
 *VQ1170-5MO-C6 ... 4 sets Valve part no. (Stations 1 to 4)
 *VQ1270-5MOB-C6... 4 sets Valve part no. (Stations 5 to 8)

Prefix the asterisk to the part nos. of the solenoid valve, etc. Enter in order starting from the first station on the D side. Besides, when the arrangement will be complicated, fill out the Manifold Specification Sheet to instruct us.

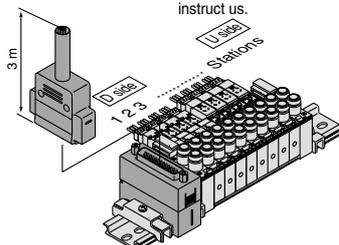

Note 1) For power consumption of AC type, refer to page 2-4-74.
 Note 2) Except double (latching).
 Note 1) For negative common specifications, refer to "Option" on page 2-4-93.
 Note 2) Connector assembly will be required when the F kits add a valve. For part nos., refer to "Option" on page 2-4-93.

P VQ1000 Kit (Flat ribbon cable connector)

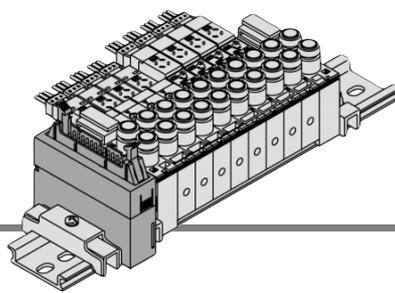

- MIL flat ribbon cable connector reduces installation labor savings for electrical connection.
- Using the connector for flat ribbon cable (26P), (10P, 16P, 20P as an option) conforming to MIL standard permits the use of connectors put on the market and gives a wide interchangeability.
- Top or side receptacle position can be selected in accordance with the available mounting space.
- Maximum stations are 16.


Manifold Specifications

Series	Porting specifications			Applicable stations
	Port location	Port size		
VQ1000	Top	1(P), 3(R)	4(A), 2(B)	Max. 16 stations

Flat Ribbon Cable (26 pins)

Cable assembly

AXT100-FC26-¹to³
 (Flat ribbon cable connector assembly can be ordered individually or included in a specific manifold model no. Refer to How to Order Manifold.

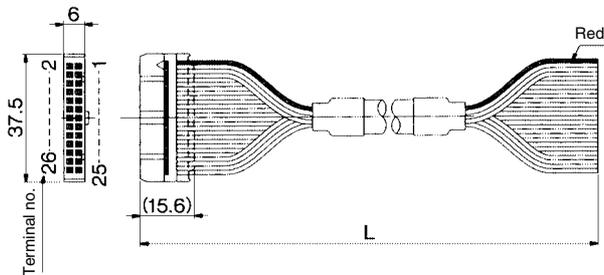

Flat Ribbon Cable Connector Assembly (Option)


Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-FC26-1	Cable 26 core x 28AWG
3 m	AXT100-FC26-2	
5 m	AXT100-FC26-3	

* For other commercial connectors, use a 26 pins type with strain relief conforming to MIL-C-83503.

Connector manufacturers' example

- Sumitomo 3M Limited
- Fujitsu Limited
- Oki Electric Cable Co., Ltd.
- Japan Aviation Electronics Industry, Ltd.
- J.S.T. Mfg. Co., Ltd.

Note) Types with 10, 16, or 20 pin are also available. For details, refer to page 2-4-92.

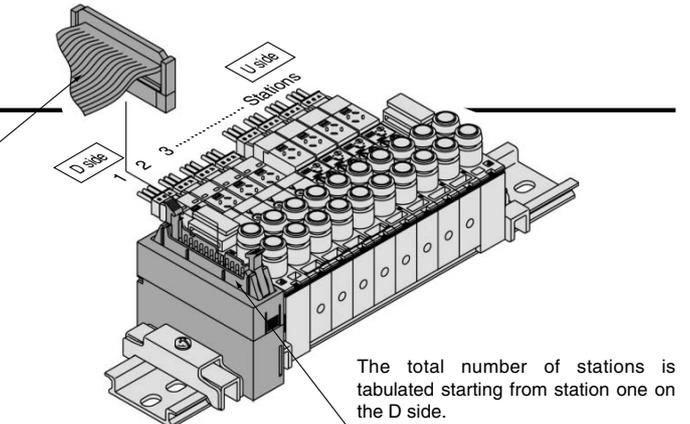

Electrical wiring specifications

Flat ribbon cable connector


Terminal no.	Polarity
26c c25	SOL.A 1 (-)
24c c23	SOL.B 2 (+)
22c c21	SOL.A 3 (-)
20c c19	SOL.B 4 (+)
18c c17	SOL.A 5 (-)
16c c15	SOL.B 6 (+)
14c c13	SOL.A 7 (-)
12c c11	SOL.B 8 (+)
10c c9	SOL.A 9 (-)
8c c7	SOL.B 10 (+)
6c c5	SOL.A 11 (-)
4c c3	SOL.B 12 (+)
2c c1	SOL.A 13 (-)
	SOL.B 14 (+)
	SOL.A 15 (-)
	SOL.B 16 (+)
	COM. 25 (-)
	COM. 26 (+)

Note) Positive common specifications Negative common specifications


As the standard electrical wiring specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 8 stations or less, regardless of valve and option types. Mixed single and double wiring is available as an option. For details, refer to page 2-4-93.

Note) When using the negative common specifications, use valves for negative common. (Refer to page 2-4-93.)

How to Order Manifold

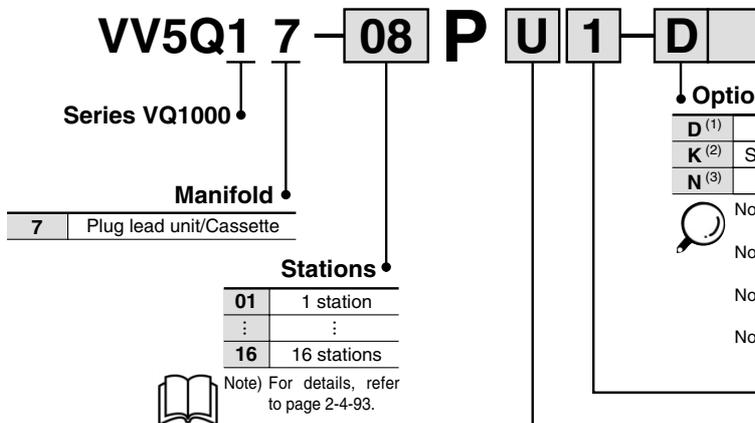

T VQ1000 Kit (Terminal block)

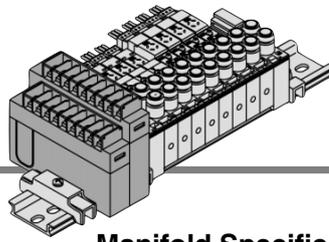

- It is a standard terminal block type.
- Two quantities of terminals can be selected in accordance with the number of stations.
(8 terminals/16 terminals)
- Maximum stations are 16.

Manifold Specifications

Series	Porting specifications			Applicable stations
	Port location	Port size		
VQ1000	Top	1(P), 3(R)	4(A), 2(B)	Max. 16 stations
		C6	C3, C4, C6, M5	

Electrical wiring specifications

T1

T2

Terminal no. 1 station { SOL.A 1 (-)
SOL.B 2 (-)
SOL.A 3 (-)
SOL.B 4 (-)
SOL.A 5 (-)
SOL.B 6 (-)
SOL.A 7 (-)
SOL.B 8 (-)
COM. (+)

Terminal no. 5 stations { SOL.A 1 (-)
SOL.B 2 (-)
SOL.A 3 (-)
SOL.B 4 (-)
SOL.A 5 (-)
SOL.B 6 (-)
SOL.A 7 (-)
SOL.B 8 (-)
COM. (+)

Terminal no. 6 stations { SOL.A 1 (-)
SOL.B 2 (-)
SOL.A 3 (-)
SOL.B 4 (-)
SOL.A 5 (-)
SOL.B 6 (-)
SOL.A 7 (-)
SOL.B 8 (-)
COM. (+)

Terminal no. 7 stations { SOL.A 1 (-)
SOL.B 2 (-)
SOL.A 3 (-)
SOL.B 4 (-)
SOL.A 5 (-)
SOL.B 6 (-)
SOL.A 7 (-)
SOL.B 8 (-)
COM. (+)

Terminal no. 8 stations { SOL.A 1 (-)
SOL.B 2 (-)
SOL.A 3 (-)
SOL.B 4 (-)
SOL.A 5 (-)
SOL.B 6 (-)
SOL.A 7 (-)
SOL.B 8 (-)
COM. (+)


In the case of double wiring (standard spec.)
T1 (Terminal block of 1 row): 1 to 4 station
T2 (Terminal block of 2 rows): 5 to 8 stations
T1 and T2 can be optionally chosen by adopting the combinations of single and double wiring (optional spec.), etc.

The quantity of terminal blocks used depends on the number of manifold stations.

Manifold	Number of terminals
1 to 4 stations	1 row
5 to 8 stations	2 rows

Wiring other than those above is possible.
For details, refer to page 2-4-93.

Double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station, regardless of valve and option types. Mixed single and double wiring is available as an option. For details, refer to page 2-4-93.

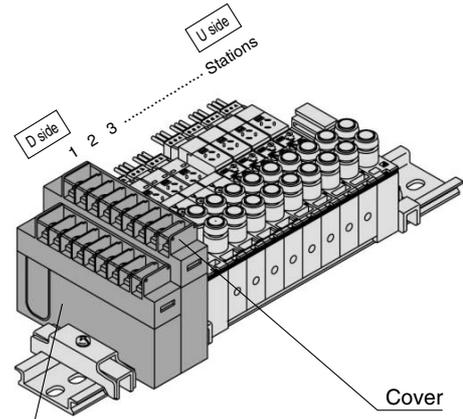

- **How to connect wires to terminal block**
Open the terminal block cover to connect the wires to the terminal block.
(With M3 thread)

How to Order Manifold

VV5Q1 7-08 T 2-D

Series VQ1000

Manifold

7	Plug lead unit/Cassette
---	-------------------------

Stations

01	1 station
⋮	⋮
16	16 stations

Option

D ⁽¹⁾	DIN rail mounting style
K ⁽²⁾	Special wiring specifications (Except double wiring)
N ⁽³⁾	With name plate


Note 1) For negative common specifications, refer to "Option" on page 2-4-93.
Note 2) For details, refer to page 2-4-93.

Number of terminals


1	8 terminals in 1 row	Applicable stations 1 to 4 stations (Double)
2	16 terminals in 2 rows	Applicable stations 5 to 8 stations (Double)

Note) The number of terminal blocks can be chosen regardless of station qty. Suffix the option symbol, K, when the wiring specification is special.



Plug Lead Unit: Cassette Type Series VQ1000

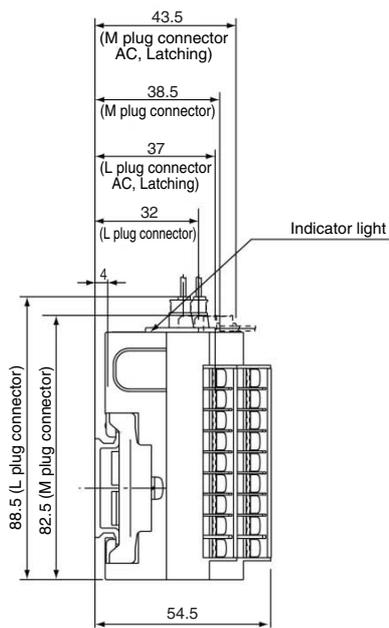

- 2n-C3, C4, C6, M5
- C3: One-touch fitting for ø3.2
- C4: One-touch fitting for ø4
- C6: One-touch fitting for ø6
- M5: M5 thread

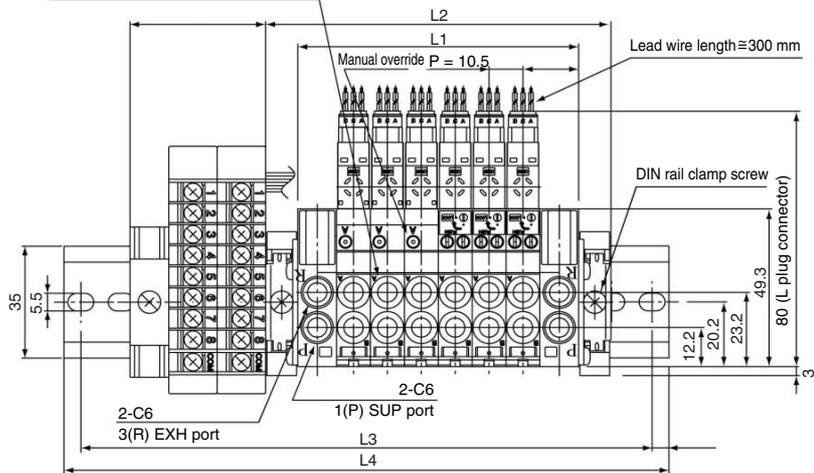

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

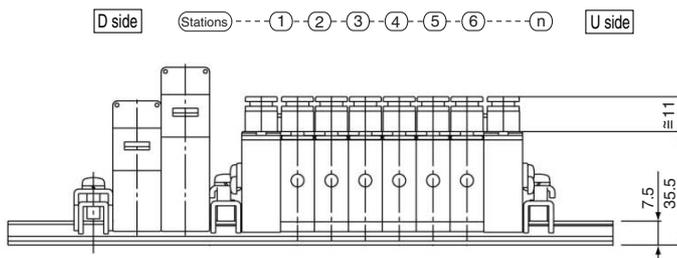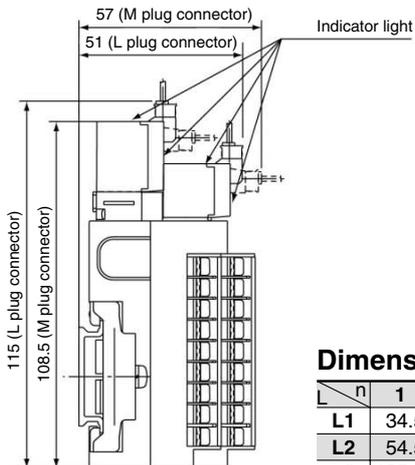

Dimensions

Formula $L1 = 10.5n + 24$, $L2 = 10.5n + 44$ n: Stations (Maximum 16 stations)

n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	34.5	45	55.5	66	76.5	87	97.5	108	118.5	129	139.5	150	160.5	171	181.5	192
L2	54.5	65	75.5	86	96.5	107	117.5	128	138.5	149	159.5	170	180.5	191	201.5	212
L3	125	137.5	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	275	275
L4	135.5	148	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	285.5	285.5

How to Order Valves

VQ1 1 7 0 Y 5 MO C6

Series VQ1000

Type of actuation

1	2 position single
2	2 position double (Latching)
3 ^{Note 1}	3 position closed center
4 ^{Note 1}	3 position exhaust center
5 ^{Note 1}	3 position pressure center

Note 1) L type plug connector is used for 3 position AC.

Seal

0	Metal seal
1	Rubber seal

Function

Symbol	Specifications	DC	AC
Nil	Standard type	(1.0 W)	○ ¹⁾
H ²⁾	High pressure type	(1.5 W)	—
Y ²⁾	Low wattage type	(0.5 W)	—

Note 1) For power consumption of AC type, refer to page 2-4-74.

Note 2) Except double (latching).

Note 1) For negative common specifications, refer to "Option" on page 2-4-93.

Note 2) Connector assembly will be required when the T kits add a valve. For model no., refer to "Option" on page 2-4-93.

Cylinder port

C3	With One-touch fitting for ø3.2
C4	With One-touch fitting for ø4
C6	With One-touch fitting for ø6
M5	M5 thread

Note 1) The code is L for elbow piping for all manifold stations.

Note 2) For inch-size One-touch fittings, refer to "Option" on page 2-4-93.

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)

Note) A manual override for pilot valve is provided to the standard model for double type.

Electrical entry

LO	L plug connector without connector
MO	M plug connector without connector

Note) Plug connector and lead wire layers are attached to the manifold.

How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>

Connector kit


VV5Q17-08T2-D 1 set—Manifold base part no.

*VQ1170-5MO-C6 4 sets—Valve part no. (Stations 1 to 4)


*VQ1270-5MOB-C6 4 sets—Valve part no. (Stations 5 to 8)

Prefix the asterisk to the part nos. of the solenoid valve, etc.

Enter in order starting from the first station on the D side. Besides, when the arrangement will be complicated, fill out the Manifold Specification Sheet to instruct us.

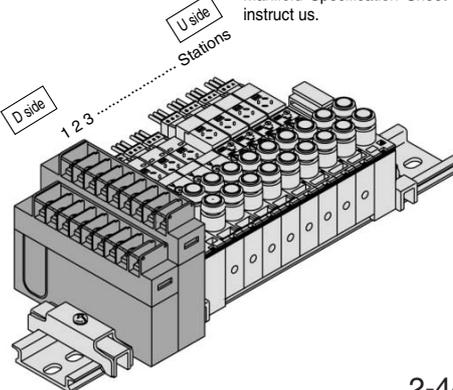


C VQ1000 Kit (Connector)

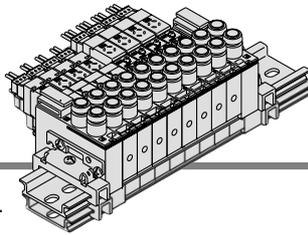

- Standard with lead wires connected to each valve individually.
- Maximum stations are 16.


Manifold Specifications

Series	Porting specifications			Applicable stations
	Port location	Port size		
VQ1000	Top	1(P), 3(R)	4(A), 2(B)	Max. 16 stations
		C6	C3, C4, C6, M5	

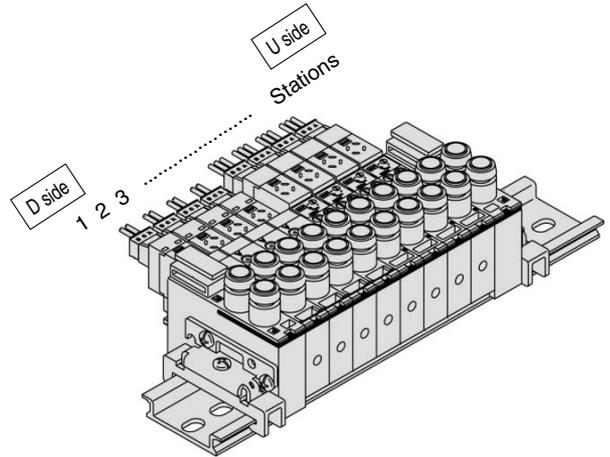

● Wiring specifications: Positive COM

- The lead wires are connected to the valve as shown below. Connect each to the power supply side.

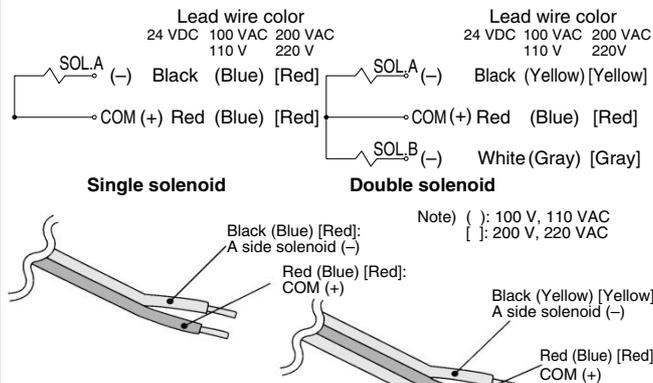

● Plug connector lead wire length

Note) The length of the lead wire provided is 300 mm. When ordering a valve with a lead wire of 600 mm or longer, be sure to indicate the model number of the valve without connector and connector assembly.

Example) Lead wire length 1000 mm
VQ1170-5LO-C6...3 pcs.
AXT661-14A-103 pcs.

Connector Assembly Part No. (For DC)


Lead wire length	Single/3 position part no.	Double solenoid part no.
Socket only (3 pcs.)	AXT661-12A	
300A	AXT661-14A	AXT661-13A
600A	AXT661-14A-6	AXT661-13A-6
1000A	AXT661-14A-10	AXT661-13A-10
2000A	AXT661-14A-20	AXT661-13A-20
3000A	AXT661-14A-30	AXT661-13A-30

Note 1) 100/110 VAC for single: AXT661-31A-*; for double: AXT661-32A-*
200/220 VAC for single: AXT661-34A-*; for double: AXT661-35A-*
* are in accordance with the above table.

Note 2) 3 position type requires 2 sets for A side and B side.

● Wiring specifications: Negative COM (Option)

- The lead wires are connected to the valve as shown below. Connect each to the power supply side.

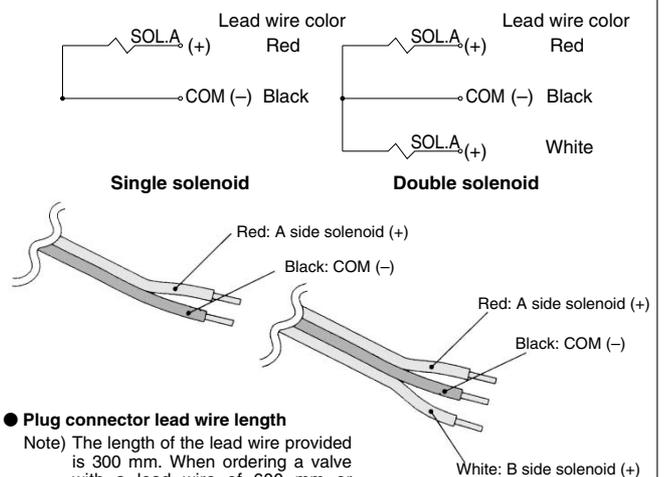

● Plug connector lead wire length

Note) The length of the lead wire provided is 300 mm. When ordering a valve with a lead wire of 600 mm or longer, be sure to indicate the model number of the valve without connector and connector assembly.

Example) Lead wire length 1000 mm
VQ1170N-5LO-C6...3 pcs.
AXT661-14AN-103 pcs.


Connector Assembly Part No. (For DC)

Lead wire length	Single/3 position part no.	Double solenoid part no.
Socket only (3 pcs.)	AXT661-12A	
300A	AXT661-14AN	AXT661-13AN
600A	AXT661-14AN-6	AXT661-13AN-6
1000A	AXT661-14AN-10	AXT661-13AN-10
2000A	AXT661-14AN-20	AXT661-13AN-20
3000A	AXT661-14AN-30	AXT661-13AN-30


Note 1) When using the negative common specifications, use valves for negative common.

Note 2) 3 position type requires 2 sets for A side and B side.

How to Order Manifold

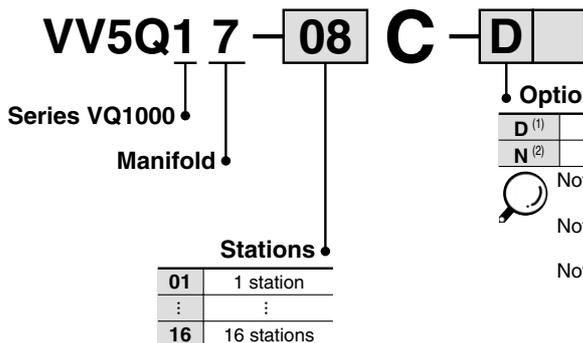

Plug Lead Unit: Cassette Type Series VQ1000

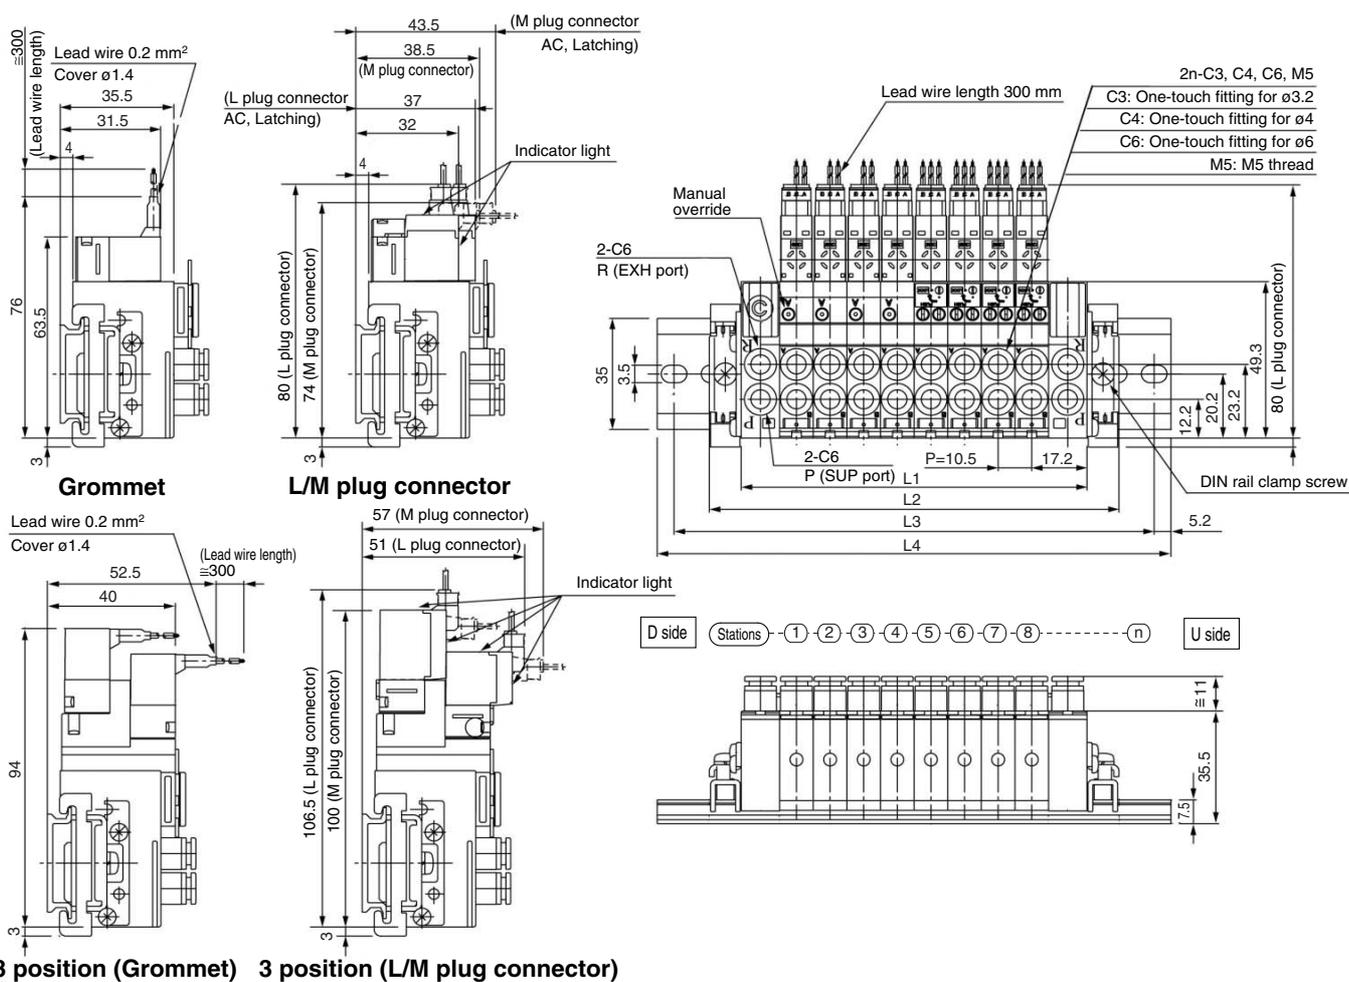

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

Dimensions

Formula L1 = 10.5n + 24, L2 = 10.5n + 44 n: Station (Maximum 16 stations)

n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	34.5	45	55.5	66	76.5	87	97.5	108	118.5	129	139.5	150	160.5	171	181.5	192
L2	54.5	65	75.5	86	96.5	107	117.5	128	138.5	149	159.5	170	180.5	191	201.5	212
L3	75	87.5	100	112.5	125	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	
L4	85.5	98	110.5	123	135.5	148	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248

How to Order Valves

Series VQ1000
Type of actuation

1	2 position single
2	2 position double (Latching)
3 ^{Note}	3 position closed center
4 ^{Note}	3 position exhaust center
5 ^{Note}	3 position pressure center

Seal

0	Metal seal
1	Rubber seal

Coil voltage

1	100 VAC (50/60 Hz)
2	200 VAC (50/60 Hz)
3	110 VAC (50/60 Hz)
4	220 VAC (50/60 Hz)
5	24 VDC
6	12 VDC

Function

Symbol	Specifications	DC	AC
Nil	Standard type (1.0 W)	○	○ ⁽¹⁾
H ⁽²⁾	High pressure type (1.5 W)	○	—
Y ⁽³⁾	Low wattage type (0.5 W)	○	—

Cylinder port

C3	With One-touch fitting for ø3.2
C4	With One-touch fitting for ø4
C6	With One-touch fitting for ø6
M5	M5 thread

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)

Electrical entry

G	Grommet (Except double (latching) and AC)
L	L plug connector with lead wire
LO	L plug connector without connector
M	M plug connector with lead wire
MO	M plug connector without connector


Notes:
Note 1) The code is L for elbow piping for all manifold stations.
Note 2) Example) L6: Elbow with One-touch fittings for ø6
For inch-size One-touch fittings, refer to "Option" on page 2-4-93.
Note 1) For power consumption of AC type, refer to page 2-4-74.
Note 2) Except double (latching).
Note 1) For negative common specifications, refer to "Option" on page 2-4-93.

How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.
<Example>
Connector kit with 3 m cable
VV5Q17-08C-D ...1 set—Manifold base part no.
*VQ1170-5M-C6...4 sets—Valve part no. (Stations 1 to 4)
*VQ1270-5MB-C6...4 sets—Valve part no. (Stations 5 to 8)

Prefix the asterisk to the part nos. of the solenoid valve, etc.
Enter in order starting from the first station on the D side. When entry of part numbers becomes complicated, indicate on the manifold specification sheet.


S VQ1000 Kit (Serial transmission unit)

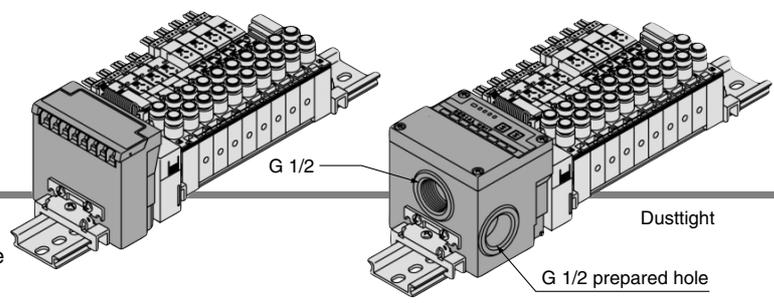

- The serial transmission system reduces wiring work, while minimizing wiring and saving space.
- The system comes in an type SA (generic for small scale systems) for equipment with a small number of I/O points, or 32 points max., type SB (applicable to Mitsubishi Electric models) for controlling 512 I/O points max., type SC (applicable to OMRON models), and type SD (applicable to SHARP models; 504 points max.).
- 16 stations max. (Specify a model with more than 8 stations by using a manifold specification sheet.)

Manifold Specifications

Series	Porting specifications		Applicable stations
	Port location	Port size	
VQ1000	Top	1(P), 3(R)	4(A), 2(B)
		C6	C3, C4, C6, M5

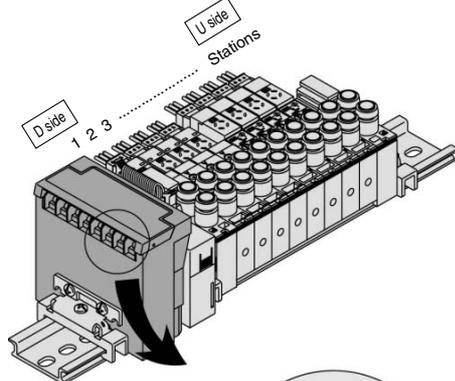

- Stations are counted from station 1 on the D side.
- As the standard electrical wiring specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 8 stations or less, regardless of valve and option types. Mixed single and double wiring is available as an option. For details, refer to page 2-4-93.

Item	Specifications
External power supply	24 VDC +10%, -5%
Current consumption (Internal unit)	SA, SB, SD, SE, SF, SG, SH, SJ, SK, SQ, SV, SR: 0.1 A, SC: 0.3 A

	Type SA With general type SI unit (Series EX300)	Type SB Mitsubishi Electric Corporation MELSECNET/MINI-S3 Data Link System																		
Name of terminal block (LED)	<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>TRD</td> <td>Lighting during data reception</td> </tr> <tr> <td>RUN/ERR</td> <td>Blinking when received data is normal; Lighting when data reception</td> </tr> </tbody> </table>	LED	Description	TRD	Lighting during data reception	RUN/ERR	Blinking when received data is normal; Lighting when data reception	<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>POWER</td> <td>Lighting when power is turned ON</td> </tr> <tr> <td>RUN</td> <td>Lighting when data transmission with the master station is normal</td> </tr> <tr> <td>RD</td> <td>Lighting during data reception</td> </tr> <tr> <td>SD</td> <td>Lighting during data transmission</td> </tr> <tr> <td>ERR.</td> <td>Lighting when reception data error occurs. Light turns off when the error is corrected.</td> </tr> </tbody> </table>	LED	Description	POWER	Lighting when power is turned ON	RUN	Lighting when data transmission with the master station is normal	RD	Lighting during data reception	SD	Lighting during data transmission	ERR.	Lighting when reception data error occurs. Light turns off when the error is corrected.
LED	Description																			
TRD	Lighting during data reception																			
RUN/ERR	Blinking when received data is normal; Lighting when data reception																			
LED	Description																			
POWER	Lighting when power is turned ON																			
RUN	Lighting when data transmission with the master station is normal																			
RD	Lighting during data reception																			
SD	Lighting during data transmission																			
ERR.	Lighting when reception data error occurs. Light turns off when the error is corrected.																			
Note	<ul style="list-style-type: none"> ● T unit Can be connected with PLC I/O card for serial transmission. EX300-TMB1 ...For models of Mitsubishi Electric Corporation EX300-TTA1 ...For models of OMRON Corporation EX300-TFU1 ...For models of Fuji Electric Co., Ltd. EX300-TOO1 ...For general models * Up to 32 points per unit. ● No. of output points, 16 points 	<ul style="list-style-type: none"> ● Master station: PLC made by Mitsubishi Electric Corporation Series MELSEC-A AJ71PT32-S3, AJ71T32-S3 A1S71PT32-S3 * Max. 64 stations, connected to remote I/O stations (Max. 512 points). ● No. of output points, 16 points. No. of sta. occupied, 2 stations 																		

* For details on specifications and handling, refer to the separate technical instruction manual.

How to Order Manifold

VV5Q1 7 - 08 S A - D - XP

Series VQ1000
Manifold: 7 Plug lead unit/Cassette
Stations: 08 (Note)

Model

O	Without SI unit	
A	With general type SI unit (Series EX300)	
B	Mitsubishi Electric Corp.: MELSECNET/MINI-S3 Data Link System	Max. 16 stations
C	OMRON Corp.: SYSBUS Wire System	
D	SHARP Corp.: Satellite I/O Link System	
E	Matsushita Electric Works: MEWNET-F System	
F1	NKE Corp.: Uni-wire System (16 output points)	
G	Rockwell Automation: Allen Bradley Remote I/O (RIO) System	
H	NKE Corp.: Uni-wire H System	
J1	SUNX Corp.: S-LINK System (16 output points)	Max. 8
J2	SUNX Corp.: S-LINK System (8 output points)	
K	Fuji Electric Co.: T-LINK Mini System	Max. 16 stations
Q	DeviceNet, CompoBus/D (OMRON Corp.)	
R1	OMRON Corp.: CompoBus/S System (16 output points)	Max. 8
R2	OMRON Corp.: CompoBus/S System (8 output points)	
V	Mitsubishi Electric Corp.: CC-LINK System	Max. 16

Dust-protected type (-XP)
Suffix "-XP" for the dust-protected SI units. (Except SE and SQ)

Option

D ⁽¹⁾	DIM rail mounting style
K ⁽²⁾	Special wiring specifications (Except double wiring)
N ⁽³⁾	With name plate

Note 1) Since the manifold is all with DIN rail, and so suffix -D to the part number.
Note 2) Specify the wiring specifications in the manifold specification sheet.
Note 3) Unmountable when the valve's manual override is a locking lever type.
Note 4) When two or more symbols are specified, indicate them alphabetically.

Note) As an option, the maximum number of stations can be increased based on special wiring specifications. For details, refer to page 2-4-93.



Plug Lead Unit: Cassette Type Series VQ1000

SI unit output and coil numbering

<Wiring example 1> Double wiring (Standard)

SI unit output no. (Looked by double solenoid valve)	0	1	2	3	4	5	6	7	8	9
SOL. location	A	B	A	B	A	B	A	B	A	B
SI unit	Double	Double	Double	Single (*)	Single (*)	3 position				
Stations	1	2	3	4	5					

The places of asterisk are not used.

<Wiring example 2> Single/Double mixed wiring (Option)

Mixed wiring is available as an option. Use the manifold specification sheet to specify.

SI unit output no. (Looked by double solenoid valve)	0	1	2	3	4	5	6	7
SOL. location	A	B	A	B	A	B	A	B
SI unit	Double	Double	Single	Single	3 position			
Stations	1	2	3	4	5			

	Type SC OMRON Corporation SYSBUS Wire System	Type SD SHARP Corporation Satellite I/O Link System																		
Name of terminal block (LED)	<table border="1"> <tr><th>LED</th><th>Description</th></tr> <tr><td>RUN</td><td>Lights when transmission is normal and PLC is in operation mode</td></tr> <tr><td>T/R</td><td>Blinks during data transmission/reception</td></tr> <tr><td>ERR</td><td>ON when transmission is abnormal</td></tr> </table>	LED	Description	RUN	Lights when transmission is normal and PLC is in operation mode	T/R	Blinks during data transmission/reception	ERR	ON when transmission is abnormal	<table border="1"> <tr><th>LED</th><th>Description</th></tr> <tr><td>POWER</td><td>ON when power supply is ON</td></tr> <tr><td>RUN</td><td>Lights when power is ON and slave stations are operating normally</td></tr> <tr><td>ERROR</td><td>Lights when slave station switch setting is abnormal, communication is abnormal, PLC stopped and defective slave unit</td></tr> <tr><td>R.SET HOLD</td><td>ON for master unit control input</td></tr> </table>	LED	Description	POWER	ON when power supply is ON	RUN	Lights when power is ON and slave stations are operating normally	ERROR	Lights when slave station switch setting is abnormal, communication is abnormal, PLC stopped and defective slave unit	R.SET HOLD	ON for master unit control input
LED	Description																			
RUN	Lights when transmission is normal and PLC is in operation mode																			
T/R	Blinks during data transmission/reception																			
ERR	ON when transmission is abnormal																			
LED	Description																			
POWER	ON when power supply is ON																			
RUN	Lights when power is ON and slave stations are operating normally																			
ERROR	Lights when slave station switch setting is abnormal, communication is abnormal, PLC stopped and defective slave unit																			
R.SET HOLD	ON for master unit control input																			
Note	<ul style="list-style-type: none"> Master station unit: OMRON PLC SYSMAC C(CV) series Types C500-RM201 and C200H-RM201 * 32 units max., transmission terminal connection (512 points max.) No. of output points, 16 points 	<ul style="list-style-type: none"> Master station unit: SHARP's PLC New Satellite Series W ZW-31LM New Satellite Series JW JW-23LM, JW-31LM * Max. 31 units, I/O slave stations connected (504 points max.) No. of output points, 16 points 																		

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

How to Order Valves

VQ1 1 7 0 Y - 5 MO - C6

Series VQ1000

Type of actuation

1	2 position single
2	2 position double (Latching)
3 ^{Note)}	3 position closed center
4 ^{Note)}	3 position exhaust center
5 ^{Note)}	3 position pressure center

Seal

0	Metal seal
1	Rubber seal

Note) L type plug connector is used for 3 position AC.

Function

Symbol	Specifications	DC
Nil	Standard type	(1.0 W)
H ^{Note)}	High pressure type	(1.5 W)
Y ^{Note)}	Low wattage type	(0.5 W)

Note) Except double (latching).

Coil voltage

5	24 VDC, With indicator light and surge voltage suppressor
---	---

Note) Connector assembly will be required when the S kits add a valve. For model no., refer to "Option" on page 2-4-93.

Cylinder ports

C3	With One-touch fitting for ø3.2
C4	With One-touch fitting for ø4
C6	With One-touch fitting for ø6
M5	M5 thread

Note 1) The code is L for elbow piping for all manifold stations. Example) L6: Elbow with One-touch fittings for ø6

Note 2) For inch-size One-touch fittings, refer to "Option" on page 2-4-93.

Manual override

Nil	Non-locking push type (Tool required)
B ^{Note)}	Locking type (Tool required)
C	Locking type (Manual)

Note) A manual override for pilot valve is provided to the standard model for double type.

Electrical entry

LO	L plug connector without connector
MO	M plug connector without connector

Note) Plug connector and lead wire layers are attached to the manifold.

How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.


<Example>

Serial transmission unit kit

VV5Q17-08SA-D ... 1 set-Manifold base part no.
 *VQ1170-5MO-C6 ... 4 sets-Valve part no. (Stations 1 to 4)
 *VQ1270-5MOB-C6 ... 4 sets-Valve part no. (Stations 5 to 8)

Prefix the asterisk to the part nos. of the solenoid valve, etc.





Enter in order starting from the first station on the D side. Besides, when the arrangement will be complicated, fill out the Manifold Specification Sheet to instruct us.

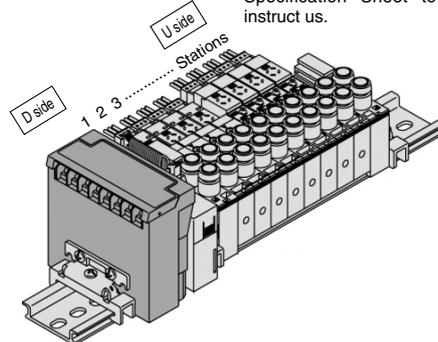




VQ1000 Kit (Serial transmission unit)

Dust-protected type SI unit

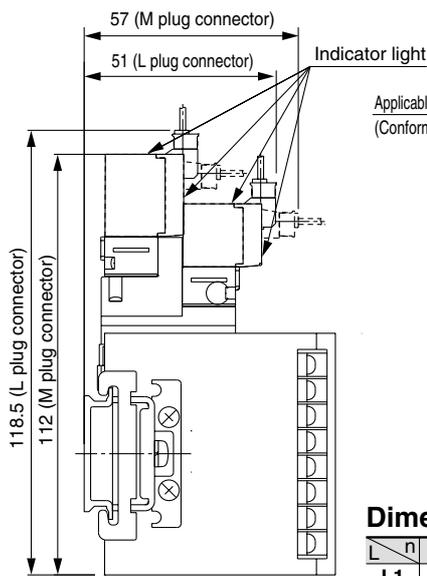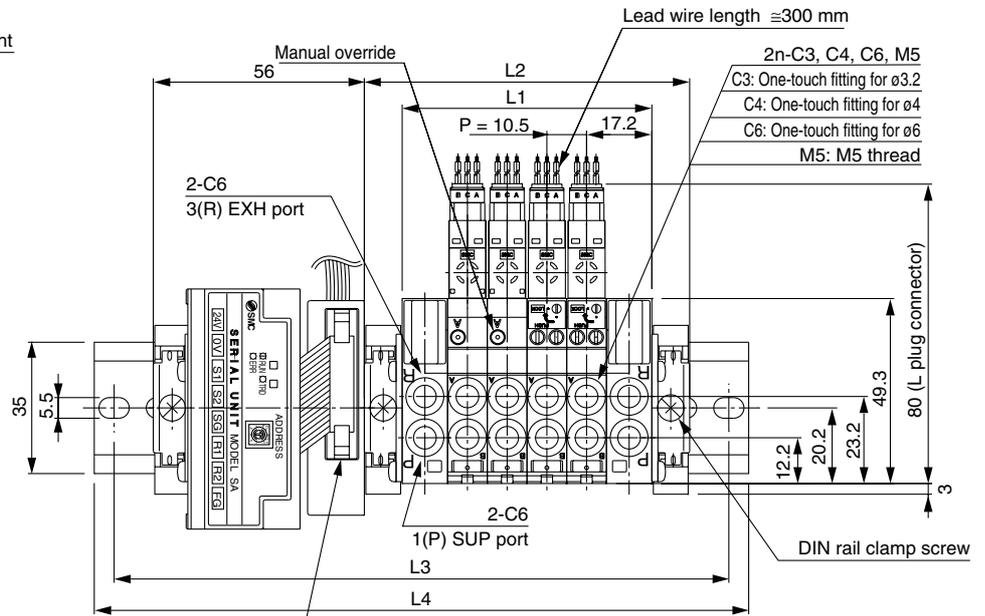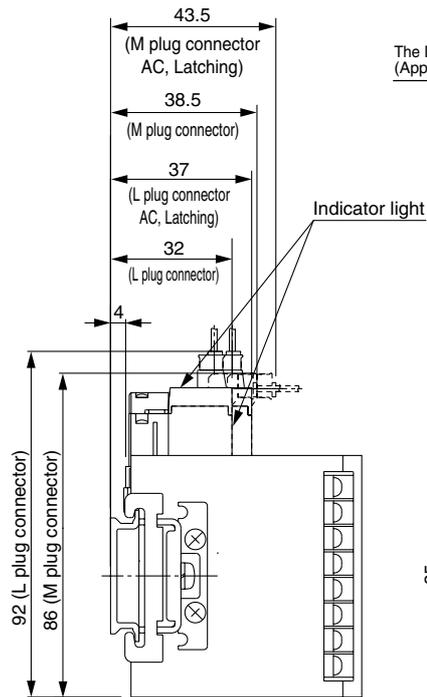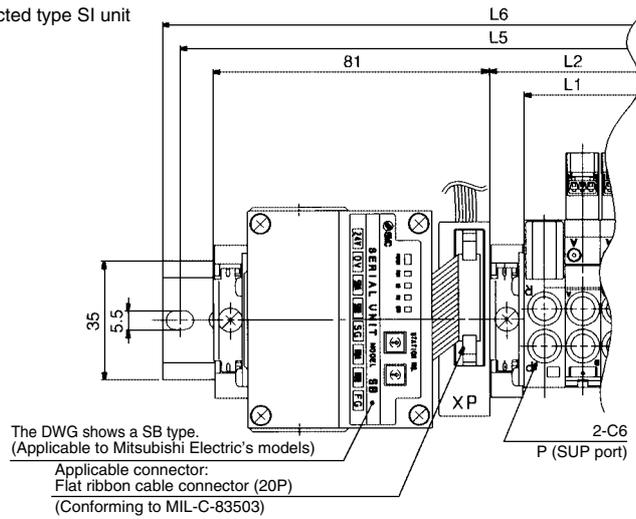

Applicable connector: Flat ribbon cable connector (26P)
(Conforming to MIL-C-83503)

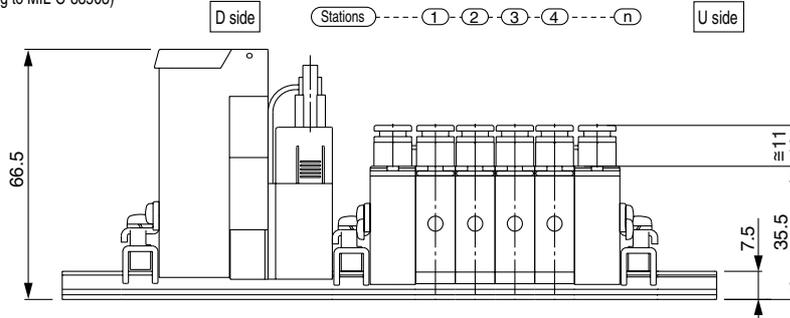

3 position

Dust-protected type SI unit: $L5 = L3 + 25$, $L6 = L4 + 25$

Dimensions

Formula $L1 = 10.5n + 24$, $L2 = 10.5n + 44$ n: Station (Maximum 16 stations)

n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	34.5	45	55.5	66	76.5	87	97.5	108	118.5	129	139.5	150	160.5	171	181.5	192
L2	54.5	65	75.5	86	96.5	107	117.5	128	138.5	149	159.5	170	180.5	191	201.5	212
L3	137.5	150	162.5	175	187.5	200	212.5	225	237.5	250	262.5	275	287.5	298	308	318
L4	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5	323	335.5

Manifolds with SI unit for Matsushita Electric Works' MEWNET FP and Rockwell Automation's model are the same with L5 and L6 dimensions of dust-protected type SI unit.

Plug Lead Unit: Cassette Type Series VQ1000


Manifold Option Parts

Individual SUP spacer VVQ1000-P-7-C6

When the same manifold is to be used for different pressures, individual SUP spacers are used as SUP ports for different pressures. (One station space is occupied.) Block both sides of the station, for which the supply pressure from the individual SUP spacer is used, with SUP block plates. (See the application ex.)

* Specify the spacer mounting position and SUP block plate mounting position on the manifold specification sheet. The block plate are used in two places for one set. (Two SUP block plates for blocking SUP station are attached to the individual SUP spacer.)

* The spacer's specification can be changed (from an individual SUP spacer to an individual EXH spacer) by changing the coupling of the fittings and bushing.

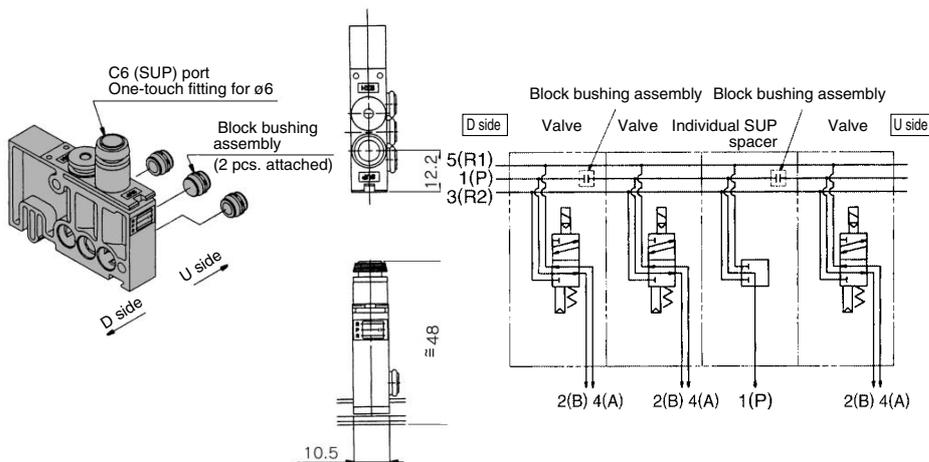

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD


Individual EXH spacer VVQ1000-R-7-C6

When valve exhaust affects other stations due to the circuit configuration, this spacer is used for individual valve exhaust. (One station space is occupied.)

Block both sides of the individual valve EXH station.

* Specify the spacer mounting position and EXH block plate mounting position on the manifold specification sheet. The block plate are used in two places for one set. (Four EXH block plates for blocking EXH station are attached to the individual EXH spacer.)

* The spacer's specification can be changed (from an individual EXH spacer to an individual SUP spacer) by changing the coupling of the fittings and bushing.

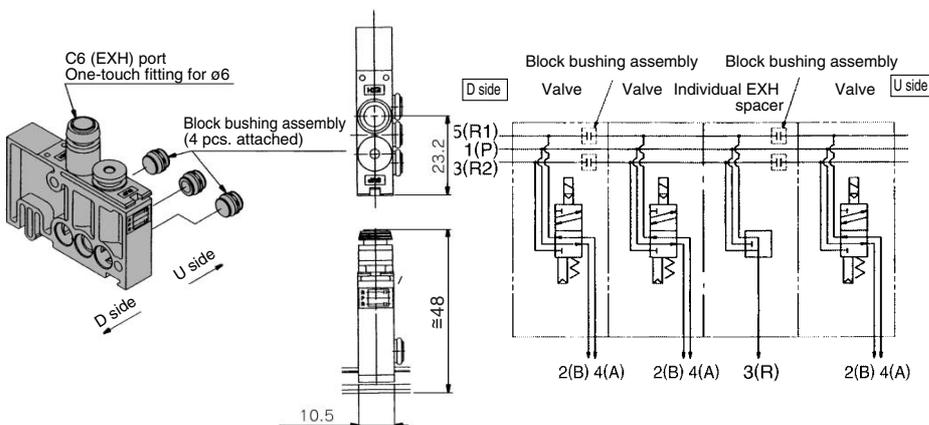

Individual SUP/EXH spacer VVQ1000-PR-7-C6


This spacer has both functions of the above individual SUP and EXH spacers. (Refer to the application example.)

* Specify the spacer mounting position and SUP/EXH block plate mounting position on the manifold specification sheet. The block plates are used in two places for one set.

(A SUP/EXH block plates for blocking SUP/EXH station are attached to the individual SUP/EXH spacer.)

* When using the spacer not for individual SUP/EXH but for improving the ability to supply/exhaust air, it is unnecessary to block the SUP/EXH passage. In this case, place an order via VVQ1000-PRA-7-C6.

* The spacer's specification can be changed by changing the coupling of the fittings and bushing.

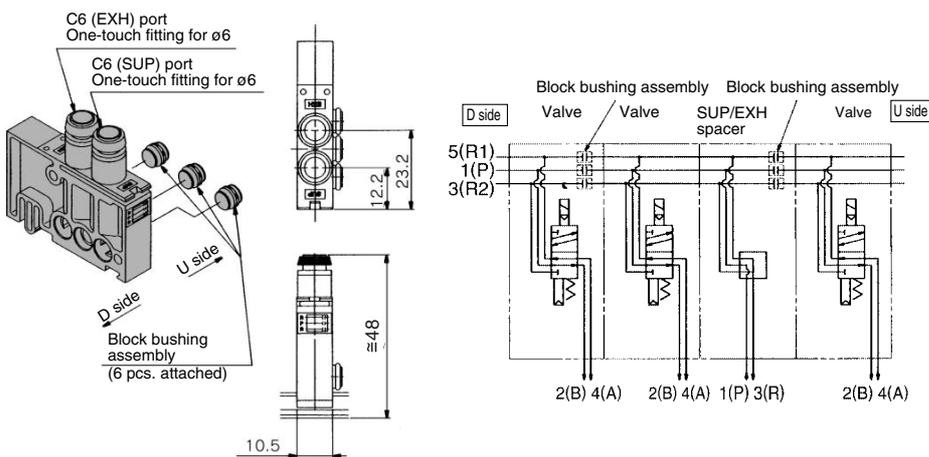

Series VQ1000

Manifold Option Parts

SUP/EXH Block bushing assembly VVQ1000-87A-B-50

<For SUP>

When one manifold is to be used for different, high and low pressures, this block bushing assembly is used between the stations under a different pressure. The block assembly is mounted on the U side of the valve's SUP passage.

* Specify the number stations on the manifold specification sheet.



<For EXH>

When a valve exhaust affects other stations due to the circuit configuration, this block bushing assembly is used between the stations whose EXH passages are to be separated each other. Since the block bushing assembly is mounted on the U side of the valve's R1 and R2 passages, two assemblies are necessary for one station.

* Specify the number stations on the manifold specification sheet.

<Shut off label>

When using block bushing assembly for SUP, EXH passage, indication label for confirmation of the blocking position from outside is attached. (One label for each)

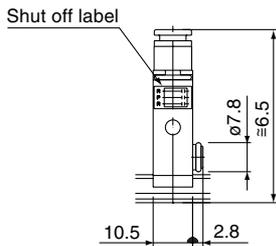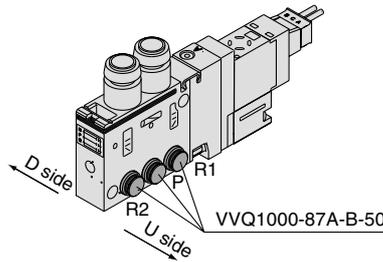

SUP passage blocked




EXH passage blocked



SUP/EXH passage blocked



* Can be included in manifold model no.

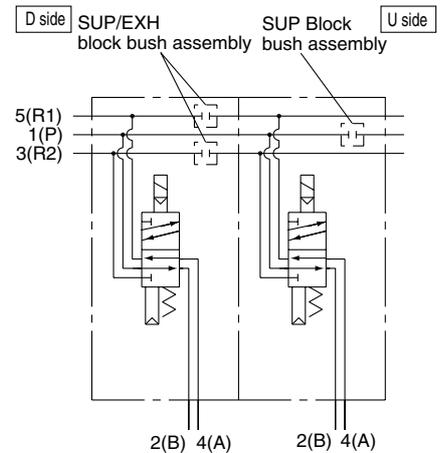



<Example>



* When ordering a block bush incorporated with the manifold, a block indication label is attached to the manifold.

Elbow fitting assembly VVQ1000-F7-L (C3, C4, C6)

It is used in a side-valve-port application.

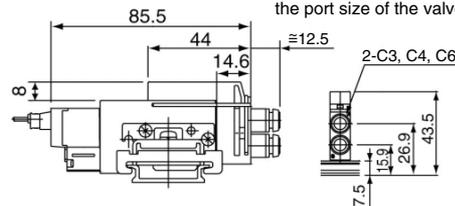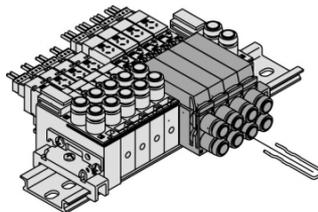


* When ordering it incorporated with a valve, the port size of the valve no. is LC.

Name plate [-N7]


VVQ1000-N7-Station (1 to Max. stations)

It is a transparent resin plate for placing a label that indicates solenoid valve function, etc. Insert it into the groove on the side of the end plate and bend it as shown in the figure. Open the face plate seating when the manual override is operating.

* It is not applicable to locking manual override.

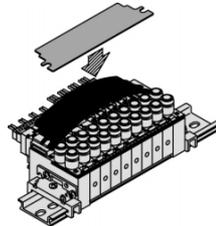



* When ordering assemblies incorporated with a manifold, suffix -N to the manifold no.

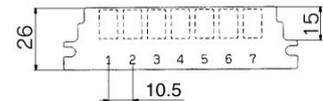

Blanking plug

KQ2P-²³/₀₄/₀₆

Used for unused cylinder port, SUP and EXH port. Purchasing order is available in units of 10 pieces.

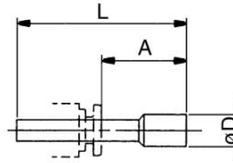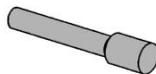



Dimensions

Applicable fittings size ϕd	Model	A	L	D
3.2	KQ2P-23	16	31.5	5
4	KQ2P-04	16	32	6
6	KQ2P-06	18	35	8

Silencer

AN103-X233

This silencer is to be inserted into the EXH port (One-touch fittings) of the common exhaust type.

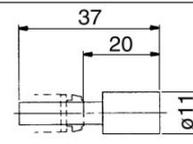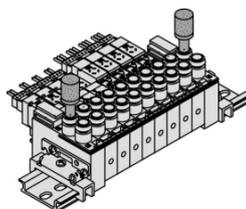

Dimensions

Series	Applicable fittings size ϕd	Model	A	L	D	Effective area (mm ²)	Noise reduction (dB)
VQ1000	6	AN103-X233	20	37	11	7	25

Port plug


VVQ0000-58A

The plug is used to block the cylinder port when using a 4 port valve as a 3 port valve.

When ordering it incorporated with a manifold, suffix A or B, the symbol of the plug port, to the valve no.

Example) VQ1170-5L-C6-A

└─ A port, Plug

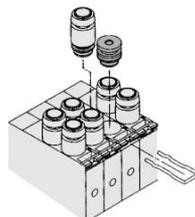



⚠ Precautions

Be sure to read before handling. For Safety Instructions and Solenoid Valve Precautions, refer to page 2-9-2.


Light/Surge Voltage Suppressor

⚠ Caution

The standard model is equipped with an indicator light and surge voltage suppressor. The lighting positions are concentrated on one side for both single solenoid type and double (latching) type. In the double (latching) type, A side and B side energization are indicated by two colors which match the colors of the manual overrides.

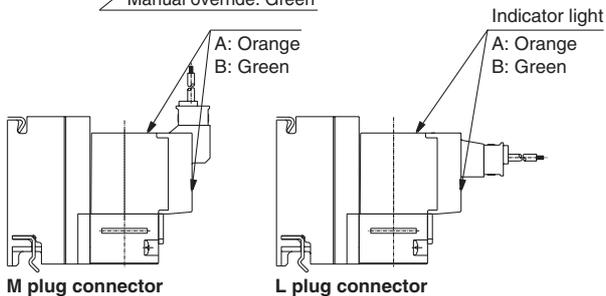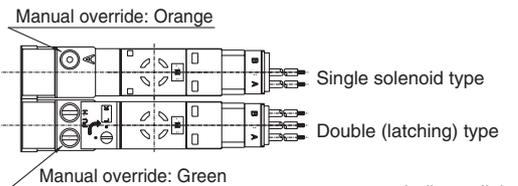

DC circuit diagram

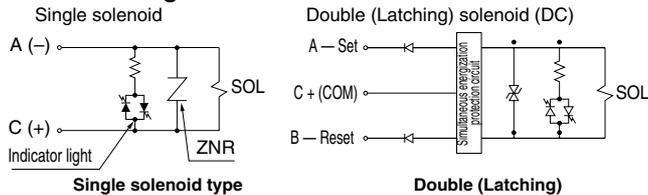

- Single solenoid type**
- Note 1) • A-side energization: A light (orange) illuminates.
 - B-side energization: B light (green) illuminates.
 - Equipped with a wiring error prevention (stop diode) mechanism.
 - Surge absorption (ZNR/surge absorption diode) mechanism.
- Note 2) Applicable to negative COM specification models.
- Double (Latching)**
- Note 3) In the case of double (latching), the electromagnetic valve channel is, A-(set): P → A, B → R
B-(reset): P → B, A → R

Double (Latching solenoid) Type

⚠ Caution

Different from the conventional double solenoid, the double type uses a latching (self-holding system) solenoid. Although the appearance is the same as the single solenoid, it is constructed so that the movable iron core in the solenoid is held in the ON position on A and B sides by instantaneous energization (20 ms or more). The usage and function is the same as the double solenoid type.

<Special Cautions for Latching Solenoid>


1. Select the circuit in which ON and OFF signals are not energized simultaneously.
2. 20 ms energization time is necessary for self-holding.
3. Avoid using the latching solenoid valves in environments where impact or collisions with the valve might occur.
Also, do not use in places where strong magnetic fields are present.
4. Even though the armature in the solenoid of this valve is held on to B side, ON position (Reset), verify either A side, ON position or B side, ON position by energizing prior to use.
After manual operation, the main valve will return to its original position.
5. Manual override on the pilot valve side can retain its switching position after manipulation.
6. Please contact SMC for long-term energization applications.
7. In the case of metal seal type, if the supply air goes down below the minimum operating pressure (0.1 MPa or less), the main valve will be back to the home position (B side ON position). Therefore, when the supply air is shut off or applied while leaving A side ON position, cylinder may be pulsated. The valve's switching position when the supply air is operated should be installed on the home position side (B side ON position).

Manual Override

⚠ Warning


Without an electric signal for the solenoid valve the manual override is used for switching the main valve.

■ Push type (Tool required)

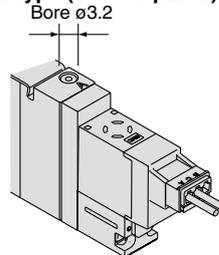


Push down on the manual override button with a small screwdriver until it stops. Release the screwdriver and the manual override will return.

■ Locking slotted type

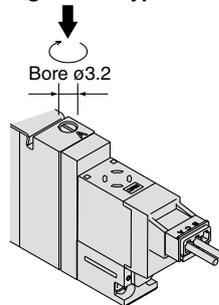

Push down on the manual override button with a small screwdriver until it stops. While down, turn clockwise by 90° to lock it. Turn it counterclockwise to release it.

■ Locking lever type (Option)

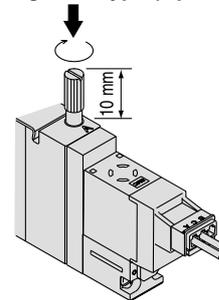


Push down completely on the manual override button with a small screwdriver. While down, turn clockwise 90° to lock it. Turn it counterclockwise to release it.

■ Manual override for double (latching) type

In case of a double (latching) type, a manual override is provided not only on the body side but to the pilot as a standard specification.

After manual operation, the main valve of the manual override on the body side returns to the position before the manual operation, however, the pilot valve manual override maintains the change-over position.

Turn before pushing.

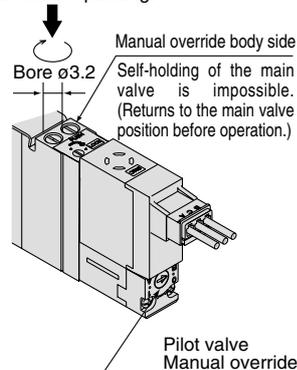

- If the manual override is turned by 180° clockwise and the ► mark is adjusted to A, then pushed in the direction of an arrow (➡), it will be back to the reset condition. (passage P → A)
- If the manual override is turned by 180° counterclockwise and the ► mark is adjusted to B, then pushed in the direction of an arrow (➡), it will be back to the reset condition. (passage P → B) (It is in the reset state at the time of shipment.)


⚠ Caution

Do not apply excessive torque when turning the locking type manual override. (0.1 N·m or less)

How to Mount/Remove Solenoid Valve

⚠ Caution

<Procedure>

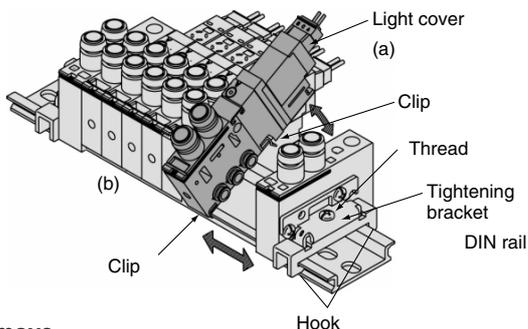

How to Remove

1. Loosen the clamp screw on one side.
2. Slightly slide a part the valve stations on both sides of the station to be removed.
3. Pull up side (a) of the valve station and remove it from the DIN rail.

How to mount

1. Take procedures 1 and 2 above to make an open space in the position for mounting a new valve station.
2. Diagonally insert the clip on the side (b) of the valve station to the DIN rail.
3. Press down on the valve station and insert the clip on the side (a) of the valve station to the DIN rail.
4. Slide the valve stations together so that there is no clearance between them. Position the clamp screw and tighten. (Proper tightening torque: 0.7 to 1.0 N·m)

Note) Be careful to keep O-ring or gallery dust free since dirt may cause air leakage.


Be sure both hooks of the bracket are fixed to the DIN rail.

Use caution not to apply force on the light cover when mounting or dismounting the valve.

Replacement of Cylinder Port Fittings

⚠ Caution

The cylinder port fittings are a cassette for easy replacement. The fittings are blocked by a clip inserted from the side of the valve. Remove the clip with a screwdriver and remove fittings. For replacement, insert the fitting assembly until it strikes against the inside wall and then reinsert the clip to the specified position.

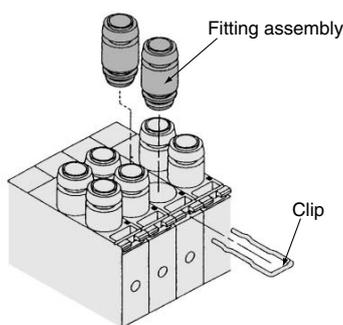

Applicable tubing O.D	Fitting assembly part no.
Applicable tubing ø3.2	VVQ1000-50A-C3
Applicable tubing ø4	VVQ1000-50A-C4
Applicable tubing ø6	VVQ1000-50A-C6

* Purchasing order is available in units of 10 pieces.

⚠ Caution

1. Protect O-rings from scratches and dust to prevent air leakage.
2. The tightening torque for inserting fittings to the M5 thread ass'y should be 0.8 to 1.4 N·m.

How to Use Plug Connector

⚠ Caution

For details, refer to page 2-4-67.

⚠ Caution

For obtaining the flow rate, refer to pages 2-1-8 to 2-1-11.

VQC

SQ

VQ0

VQ4

VQ5

VQZ


VQD

Option


Different Number of Connector Pins

F and P kits with the following number of pins are available besides the standard number (F = 25; P = 26). Select the desired number of pins and cable length from the cable assembly list. Place an order for the cable assembly separately.

F kit (D-sub connector) 15 pins

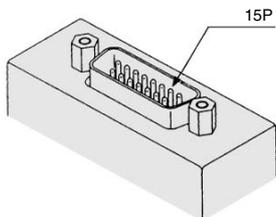

How to order manifold

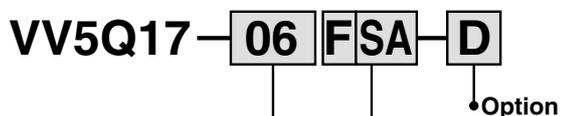

Stations

How to Order
D-sub connector, 15 pins
Connector location--Side (horizontal)
Without cable

Kit/Electrical entry

Pins	Location	Top entry		Side entry	
15 pins (Max. 14 stations)		Kit F	UA	Kit F	SA

Wiring Specifications

Like 25-pin models (standard), terminal no. 1 will be the 1st station SOL.A, and terminal no. 9 for the 1st station SOL.B. Then COM will be the terminal no. 8.

Multi-core vinyl cable VVRF 0.3 mm² x 15C

Plug connector HDA-CTH (Made by Hirose Electric)

Connector HDA-15S (Made by Hirose Electric)

2-M2.6 x 0.45

Terminal no.

Wire Color by Terminal No. of D-sub Connector Cable Assembly


Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black

D-sub Connector Cable Assembly


Cable length (L)	Pins	15P
1.5 m		AXT100-DS15-1
3 m		AXT100-DS15-2
5 m		AXT100-DS15-3

* For other commercial connectors, use a type conforming to MIL-C-24308.

P kit (Flat ribbon cable connector) 10 pins, 16 pins, 20 pins

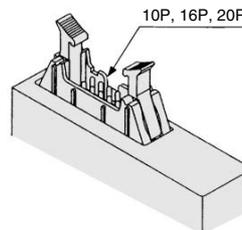

How to order manifold

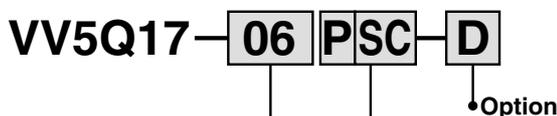

Stations


How to Order
Flat ribbon cable, 20 pins
Connector location--Side (Horizontal)
Without cable

Kit/Electrical entry

Pins	Location	Top entry		Side entry	
10 pins (Max. 8 stations)		Kit P	UA	Kit P	SA
16 pins (Max. 14 stations)			UB		SB
20 pins (Max. 16 stations)			UC		SC

Wiring Specifications

Similarly to 26-pin models (standard), the terminal no. 1 will be allocated to SOL.A of the 1st. station, and terminal no. 2 for SOL.B of the 1st. station. COM occupies 2 pins from the maximum no. of terminal.

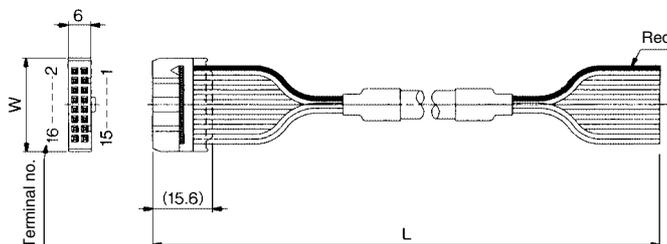

Flat Ribbon Cable Assembly

Cable length (L)	Pins	10P	16P	20P
1.5 m		AXT100-FC10-1	AXT100-FC16-1	AXT100-FC20-1
3 m		AXT100-FC10-2	AXT100-FC16-2	AXT100-FC20-2
5 m		AXT100-FC10-3	AXT100-FC16-3	AXT100-FC20-3
Connector width (W)		17.2	24.8	30

* For other commercial connectors, use a type with strain relief conforming to MIL-C-83503.

Special Wiring Specifications

In the internal wiring of F kit, P kit, J kit, G kit, T kit and S kit, double wiring (connected to SOL. A and SOL. B) is adopted for each station regardless of the valve and option types. Mixed single and double wiring is available as an option.

1. How to order valves

Indicate an option symbol, -K, for the manifold no. and be sure to specify the mounting position and number of stations of the single and double wiring by means of the manifold specification sheet.

Example)


VV5Q17-09FU0-D K S



Others, option symbols: **•** to be indicated alphabetically.

2. Wiring specifications

Connector terminal numbers are connected from solenoid station 1 on the A side in the order indicated by the arrows without shipping any terminal numbers.

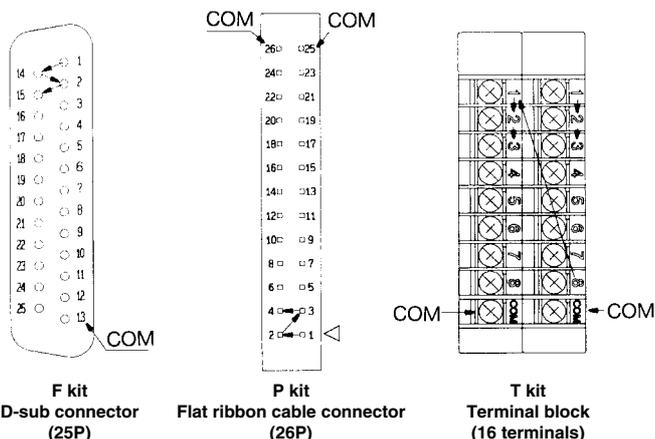

3. Max. number of stations

The maximum number of stations depends upon the number of solenoids. Assuming one for a single and two for a double, determine the number of stations so that the total number is not more than the maximum number given in the following table.

kit	F kit (D-sub connector)		P kit (Flat ribbon cable connector)				T kit (Terminal block)		S kit (Serial)
Type	F _S □ 25P	F _S A 15P	P _S □ 26P	P _S C 20P	P _S B 16P	P _S A 10P	T1	T2	S□
Max. points	Note) 16	14	Note) 16	Note) 16	14	8	8	16	16

Note) Due to the limitation of internal wiring.

Negative Common Specifications

Specify the valve model no. as shown below for negative COM specification. The standard manifold no. can be used. Please contact SMC for negative COM S kit.

How to order negative COM valves

VQ1170 N-5MO-C6



• Negative common specifications

Inch-size One-touch Fittings

Refer to following model no. for inch-size One-touch fittings.

How to order manifold
VV5Q17-08FSO-DN-00T

1(P), 3(R) port size ø1/4"

How to order valves

VQ1170-5M-N7

• Cylinder port

Symbol	N1	N3	N7
Applicable tube O.D. (Inch)	ø1/8"	ø5/32"	ø1/4"

Plug Connector Assembly Model

Connector assembly will be required when the F, P, T, S kits add a valve.

Specify the valve and connector assembly.

Connector Assembly Part No.

Specifications		Part no.
Single (2-wire)	Positive common	AXT661-14A-F
	Negative common	AXT661-14AN-F
Double (latching) (3-wire)	Positive common	AXT661-13A-F
	Negative common	AXT661-13AN-F

Note) Lead wire length: 300 mm

DIN Rail Mounting


Each manifold can be mounted on a DIN rail. Order it by indicating an option symbol for DIN rail mounting style, -D. In this case, a DIN rail which is approx. 30 mm longer than the manifold with the specified number of stations is attached. Besides, it is also available in the following cases.

● When using DIN rail longer than the manifold with specified number of stations

Clearly indicate the necessary number of stations next to the option symbol, -D, for the manifold no.

Example)

VV5Q17-08FU1-D09S

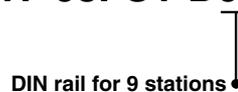


Others, option symbols: **•** to be indicated alphabetically.

● When ordering DIN rail only

DIN rail no.: **AXT100-DR-n**

* Refer to the DIN rail dimension table for determining the length.

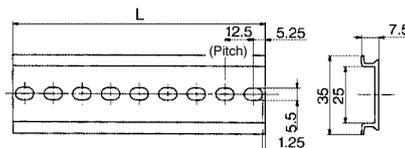

L Dimension

L = 12.5 x n + 10.5

No.	1	2	3	4	5	6	7	8	9	10
L dimension	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5
No.	11	12	13	14	15	16	17	18	19	20
L dimension	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5
No.	21	22	23	24	25	26	27	28	29	30
L dimension	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5
No.	31	32	33	34	35	36	37	38	39	40
L dimension	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5

Series VQ Single Unit

For individual use of a single valve.



VQ1000

Model

Series	Number of solenoids	Model	Flow characteristics						Response time (ms) ⁽²⁾			Weight (g)		
			1 → 4/2 (P → A/B)			4/2 → 5/3 (A/B → R1/R2)			Standard: 1 W H: 1.5 W	Low wattage: 0.5 W	AC			
			C [dm ³ /(s·bar)]	b	Cv	C [dm ³ /(s·bar)]	b	Cv						
Body ported VQ1000 Cassette Plug lead	2 position	Single	Metal seal	VQ1160	0.56	0.15	0.13	0.60	0.12	0.14	12 or less	15 or less	29 or less	50
			Rubber seal	VQ1161	0.71	0.20	0.17	0.80	0.16	0.19	15 or less	20 or less	34 or less	
		Double (Latching)	Metal seal	VQ1260	0.56	0.15	0.13	0.60	0.12	0.14	12 or less	15 or less	29 or less	
			Rubber seal	VQ1261	0.71	0.20	0.17	0.80	0.16	0.19	15 or less	20 or less	34 or less	
	3 position	Closed center	Metal seal	VQ1360	0.53	0.16	0.12	0.58	0.12	0.14	20 or less	26 or less	40 or less	65
			Rubber seal	VQ1361	0.65	0.23	0.16	0.70	0.20	0.17	25 or less	33 or less	47 or less	
		Exhaust center	Metal seal	VQ1460	0.54	0.16	0.12	0.60	0.12	0.14	20 or less	26 or less	40 or less	
			Rubber seal	VQ1461	0.65	0.23	0.16	0.80	0.16	0.19	25 or less	33 or less	47 or less	
		Pressure center	Metal seal	VQ1560	0.54	0.16	0.12	0.58	0.12	0.14	20 or less	26 or less	40 or less	
			Rubber seal	VQ1561	0.70	0.20	0.17	0.72	0.20	0.17	25 or less	33 or less	47 or less	




Note 1) Cylinder port size C6 (VQ1000)

Note 2) As per JIS B 8375-1981 (Supply pressure: 0.5 MPa; with indicator light/surge voltage suppressor; clean air. Subject to the pressure and air quality.)

Standard Specifications

JIS Symbol

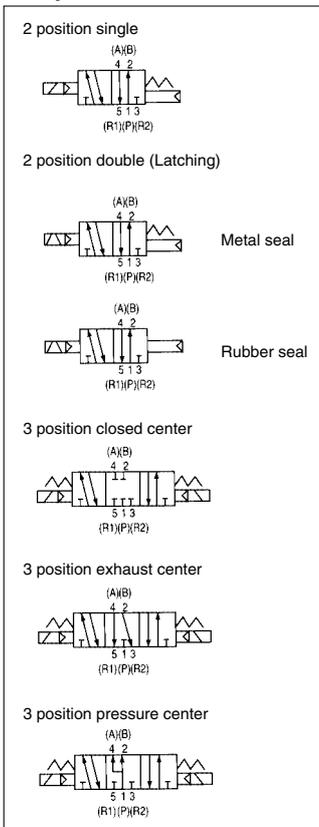

Valve specifications	Valve construction	Metal seal	Rubber seal	
	Fluid	Air/Inert gas	Air/Inert gas	
	Maximum operating pressure	0.7 MPa (High pressure type: 0.8 MPa)		
	Min. operating pressure	Single	0.1 MPa	0.15 MPa
		Double (Latching)	0.1 MPa	0.15 MPa
		3 position	0.15 MPa	0.2 MPa
	Ambient and fluid temperature	-10 to 50°C ⁽¹⁾		
	Lubrication	Not required		
	Manual override ⁽²⁾	Push type/Locking type (Tool required, Manual type) Option		
	Impact/Vibration resistance	150/30 m/s ²		
Enclosure	Dust tight			
Solenoid	Coil rated voltage	12, 24 VDC, 100, 110, 200, 220 VAC (50/60 Hz)		
	Allowable voltage fluctuation	±10% of rated voltage		
	Coil insulation type	Class B or equivalent		
	Power consumption (Current)	24 VDC	1 W DC (42 mA), 1.5 W DC (63 mA) ⁽³⁾ , 0.5 W DC (21 mA) ⁽⁴⁾	
		12 VDC	1 W DC (83 mA), 1.5 W DC (125 mA) ⁽³⁾ , 0.5 W DC (42 mA) ⁽⁴⁾	
		100 VAC	Inrush 0.5 VA (5 mA), Holding 0.5 VA (5 mA)	
		110 VAC	Inrush 0.55 VA (5 mA), Holding 0.55 VA (5 mA)	
200 VAC	Inrush 1.0 VA (5 mA), Holding 1.0 VA (5 mA)			
220 VAC	Inrush 1.1 VA (5 mA), Holding 1.1 VA (5 mA)			



Note 1) Use dry air to prevent condensation when operating at low temperatures.

Note 2) Impact resistance: No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

Note 3) Values in the case of high pressure type (1.5 W) specifications.

Note 4) Values in the case of low wattage type (0.5 W) specifications.

How to Order Valves

VQ1 1 6 0 Y 5 L C6

Series VQ1000

Symbol

1	2 position single
2	2 position double (Latching)
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center

Seal

0	Metal seal
1	Rubber seal

Function

Symbol	Specifications	DC	AC
Nil	Standard type	(1.0 W)	○ ⁽¹⁾
H ⁽²⁾	High pressure type	(1.5 W)	—
N	Negative common type	○	—
Y ⁽²⁾	Low wattage type	(0.5 W)	—

Note 1) For power consumption of AC type, refer to page 2-4-94.
 Note 2) Except double (latching).
 Note 3) When two or more symbols are specified, indicate them alphabetically.

Sub-plate SUP, Cylinder port

C3	With One-touch fitting for ø3.2
C4	With One-touch fitting for ø4
C6	With One-touch fitting for ø6
M5	M5 thread

Note 1) For inch-size One-touch fittings, refer to "Option" on page 2-4-93.
 Note 2) EXH port is a direct exhaust (with built-in silencer).

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)

Note) A manual override for pilot valve is provided to the standard model for double type.

Electrical entry

G	Grommet (Except double (latching) and AC)
L	L plug connector with lead wire
LO	L plug connector without connector
M	M plug connector with lead wire
MO	M plug connector without connector


Coil rated voltage

1	100 VAC (50/60 Hz)
2	200 VAC (50/60 Hz)
3	110 VAC (50/60 Hz)
4	220 VAC (50/60 Hz)
5	24 VDC
6	12 VDC

VQC
SQ
VQ0
VQ4
VQ5
VQZ
VQD

Wiring Specifications: Positive COM

- The lead wires are connected to the valve as shown below. Connect each to the power supply side.

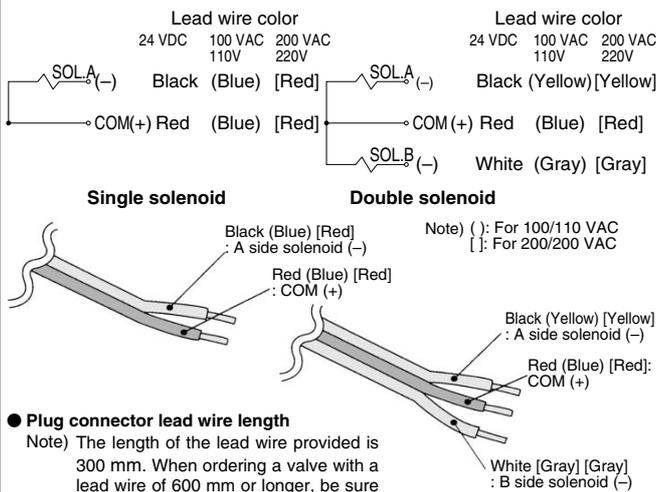

Plug connector lead wire length

Note) The length of the lead wire provided is 300 mm. When ordering a valve with a lead wire of 600 mm or longer, be sure to indicate the model number of the valve without connector and connector assembly.

Example) Lead wire length 1000 mm
 VQ1160-5LO-C6.....3 pcs.
 AXT661-14A-10.....3 pcs.

Connector Assembly Part No. (For DC)


Lead wire length	Single/3 position part no.	Double solenoid part no.
Socket only (3 pcs.)	AXT661-12A	
300 mm	AXT661-14A	AXT661-13A
600 mm	AXT661-14A-6	AXT661-13A-6
1000 mm	AXT661-14A-10	AXT661-13A-10
2000 mm	AXT661-14A-20	AXT661-13A-20
3000 mm	AXT661-14A-30	AXT661-13A-30

Note 1) 100/110 VAC for single: AXT661-31A-*; for double: AXT661-32A-*
 200/220 VAC for single: AXT661-34A-*; for double: AXT661-35A-*
 * are in accordance with the above table.

Note 2) 3 position type requires 2 sets for A side and B side.

Wiring Specifications: Negative COM (Option)

- The lead wires are connected to the valve as shown below. Connect each to the power supply side.

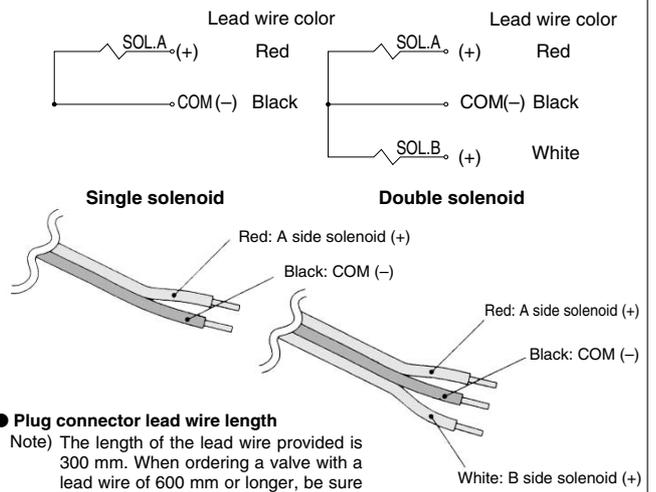

Plug connector lead wire length

Note) The length of the lead wire provided is 300 mm. When ordering a valve with a lead wire of 600 mm or longer, be sure to indicate the model number of the valve without connector and connector assembly.

Example) Lead wire length 1000 mm
 VQ1160N-5LO-C6.....3 pcs.
 AXT661-14AN-10.....3 pcs.

Connector Assembly Part No.

Lead wire length	Single/3 position part no.	Double solenoid part no.
Socket only (3 pcs.)	AXT661-12A	
300 mm	AXT661-14AN	AXT661-13AN
600 mm	AXT661-14AN-6	AXT661-13AN-6
1000 mm	AXT661-14AN-10	AXT661-13AN-10
2000 mm	AXT661-14AN-20	AXT661-13AN-20
3000 mm	AXT661-14AN-30	AXT661-13AN-30


Note 1) When using the negative common specifications, use valves for negative common.

Note 2) 3 position type requires 2 sets for A side and B side.


Series VQ

Dimensions

2 position single/double (Latching): VQ1₂6⁰₁

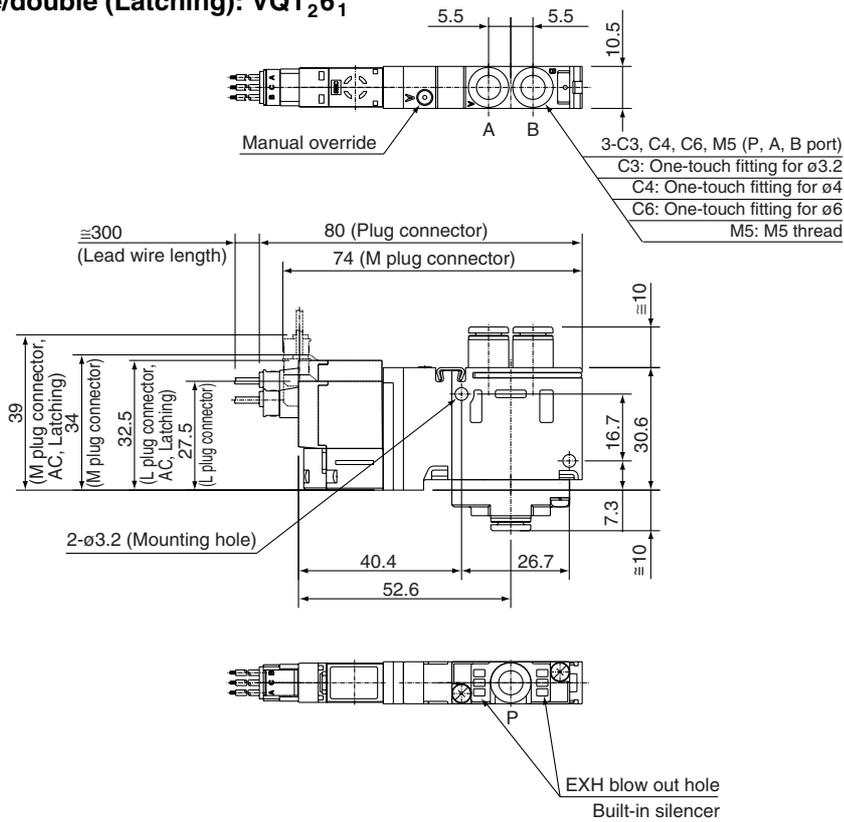



3 position closed center/exhaust center/pressure center: VQ1₃6⁰₅1

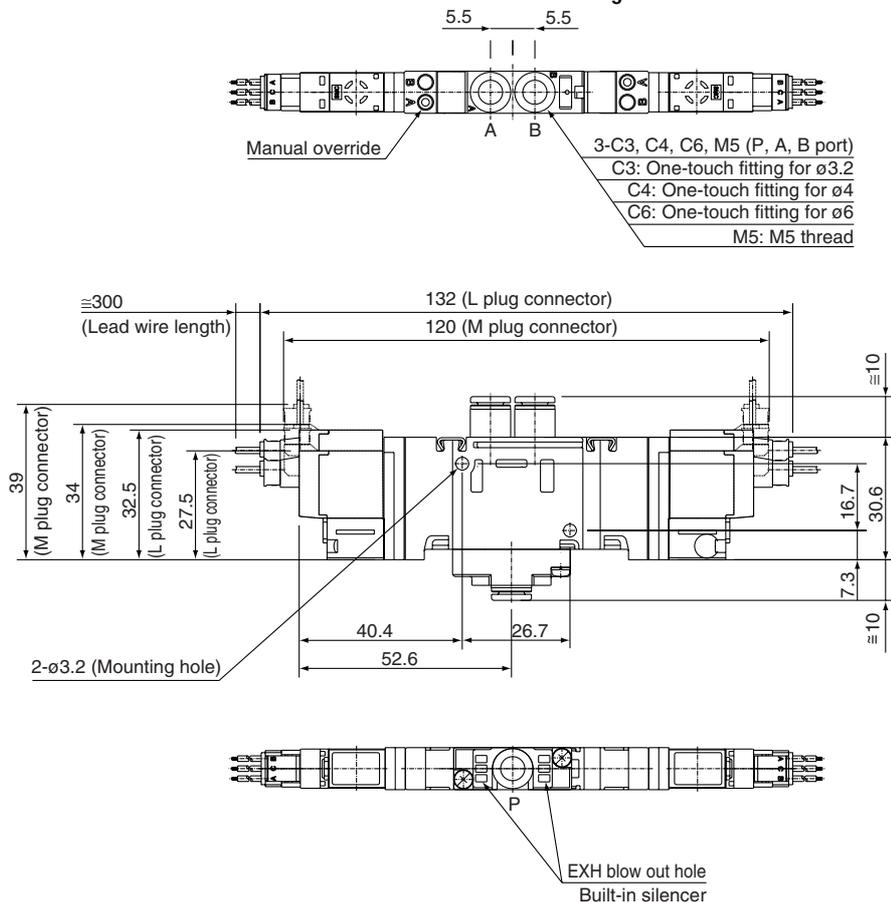



Series VQ Construction Main Parts, Replacement Parts

Construction: VQ1000/Plug-in Unit, Flip Type



Metal seal Single/Double (Latching)

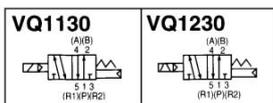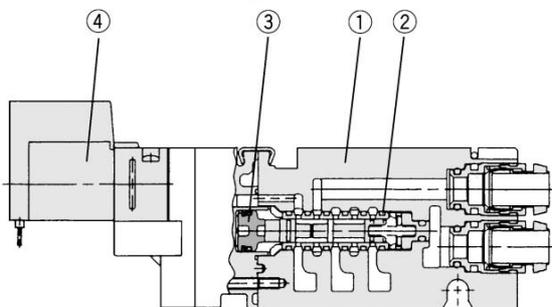



3 position

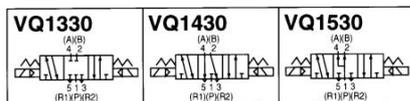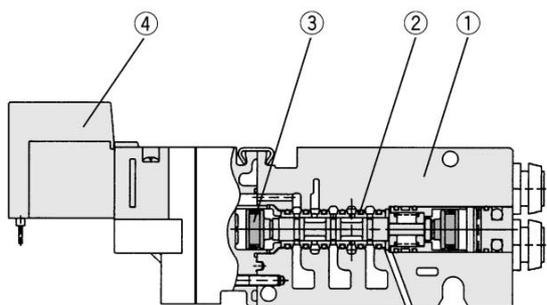

Rubber seal Single/Double (Latching)

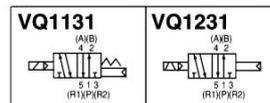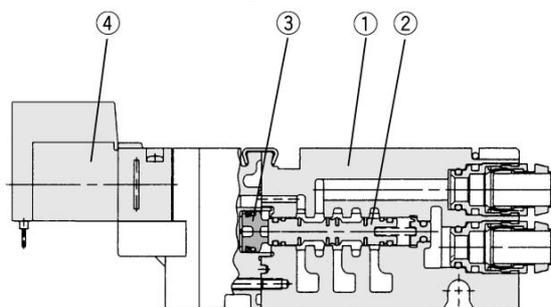

3 position

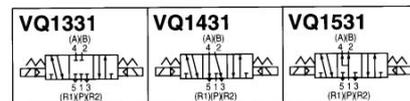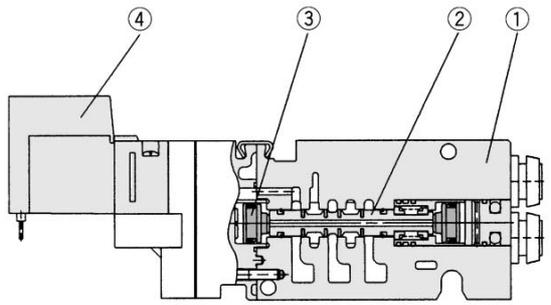

Component Parts

No.	Description	Material	Note
①	Body	Aluminum die-casted	
②	Spool/Sleeve	Stainless steel	
③	Piston	Resin	

④ Pilot valve assembly

Single/3 position	VQ111 ^(H) / _(Y) -□F Voltage ↓ 1 to 6	
Double (Latching)	VQ110L-□F Voltage ↓ 1 to 6	

Note (H): 1.5 W, (Y): 0.5 W

Component Parts

No.	Description	Material	Note
①	Body	Aluminum die-casted	
②	Spool valve	Aluminum/HNBR	
③	Piston	Resin	



④ Pilot valve assembly

Single/3 position	VQ111 ^(H) / _(Y) -□F Voltage ↓ 1 to 6	
Double (Latching)	VQ110L-□F Voltage ↓ 1 to 6	



Note (H): 1.5 W, (Y): 0.5 W

Construction: VQ000, 1000, 2000/Plug Lead Unit, Flip Type



Metal seal
VQ0000

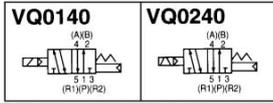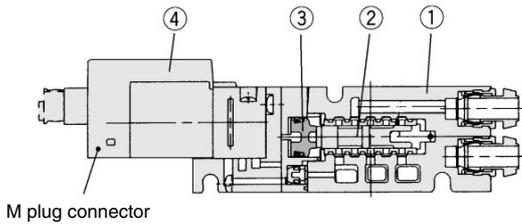



Rubber seal
VQ0000

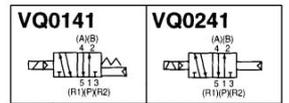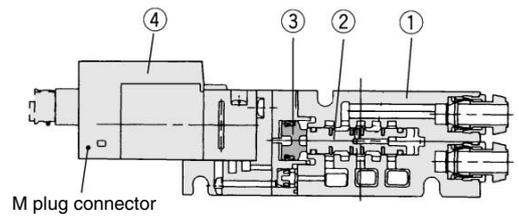



VQ1000
Single/Double (Latching)

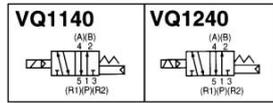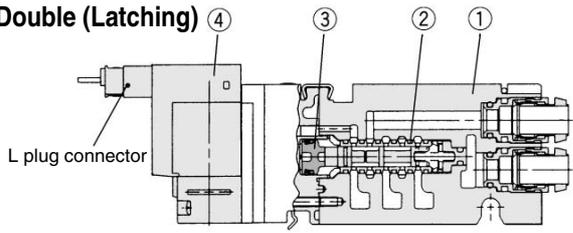



VQ1000
Single/Double (Latching)

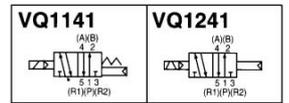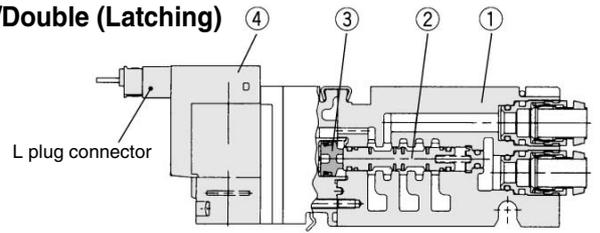



3 position

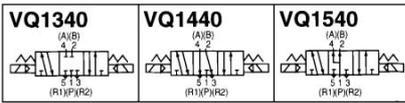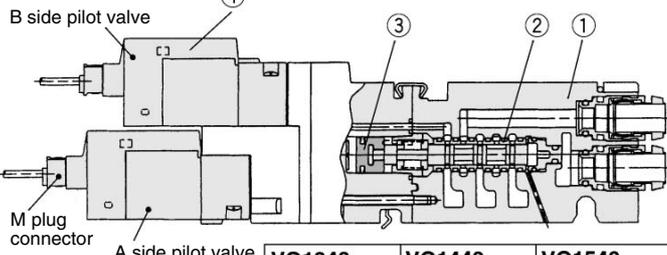



3 position

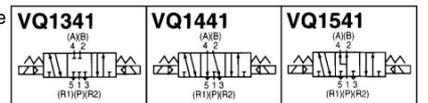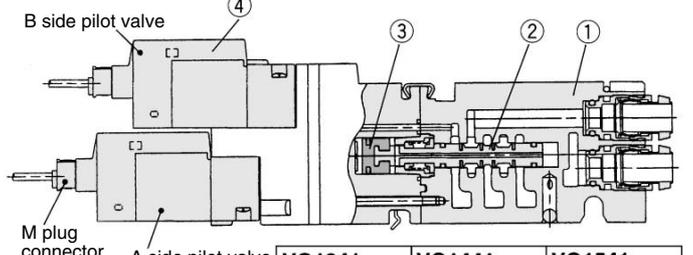

VQ2000

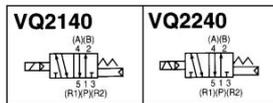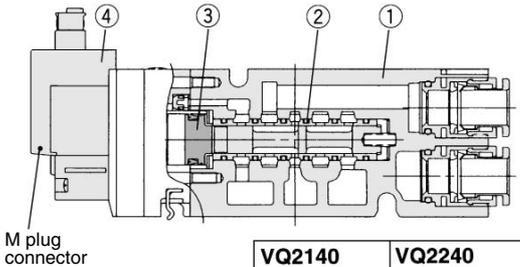

VQ2000

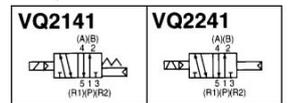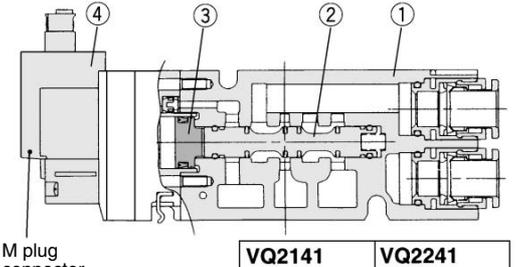

Component Parts

No.	Description	Material	Note
①	Body	Aluminum die-casted	
②	Spool/Sleeve	Stainless steel	
③	Piston	Resin	

④ Pilot valve assembly

Single 3 position (VQ1000)	VQ111 <small>Note</small> (H) L Nil (VQ0000) (Y) M -2 (VQ1000) (G) 3 (VQ2000) Voltage 1 to 6 <small>0: VQ0000</small> <small>1: VQ1000, VQ2000</small>	
Double (Latching)	VQ110L <small>Note</small> L Nil (VQ0000) M -2 (VQ1000) 3 (VQ2000) Voltage 1 to 6	
3 position (VQ1000)	VQ111 <small>Note</small> (H) L Nil (VQ0000) (Y) M -2 (VQ1000) (G) Nil (B side (Top side)) Voltage 1 to 6	The direction of the L and M connectors of a pilot valve is opposite to that of the single and double type.

Note 1) (H): 1.5 W, (Y): 0.5 W, G type: DC only

Component Parts

No.	Description	Material	Note
①	Body	Aluminum die-casted	
②	Spool valve	Aluminum/HNBR	
③	Piston	Resin	

④ Pilot valve assembly



Single 3 position (VQ1000)	VQ111 <small>Note</small> (H) L Nil (VQ0000) (Y) M -2 (VQ1000) (G) 3 (VQ2000) Voltage 1 to 6 <small>0: VQ0000</small> <small>1: VQ1000, VQ2000</small>	
Double (Latching)	VQ110L <small>Note</small> L Nil (VQ0000) M -2 (VQ1000) 3 (VQ2000) Voltage 1 to 6	
3 position (VQ1000)	VQ111 <small>Note</small> (H) L Nil (VQ0000) (Y) M -2 (VQ1000) (G) Nil (B side (Top side)) Voltage 1 to 6	The direction of the L and M connectors of a pilot valve is opposite to that of the single and double type.

Note 1) (H): 1.5 W, (Y): 0.5 W, G type: DC only



Series VQ

Construction: VQ1000/Plug Lead Unit, Cassette Type

Metal seal Single/Double (Latching)

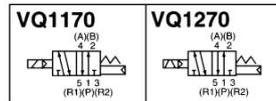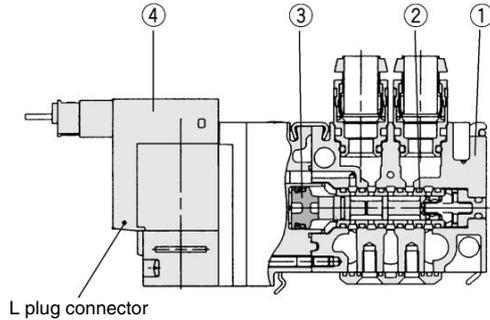

3 position

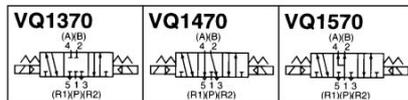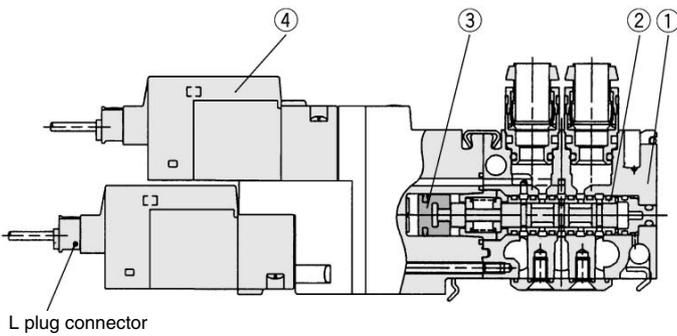

Component Parts



No.	Description	Material	Note
①	Body	Zinc die-casted	
②	Spool/Sleeve	Stainless steel	
③	Piston	Resin	

④ Pilot valve assembly



Single	Note) VQ111 (H) (Y) □ M - X18 - 2 Voltage 1 to 6	
Double (Latching)	VQ110L - □ M - 2 Voltage 1 to 6	
3 position	Note) VQ111 (H) (Y) □ M - X18 (A side (Bottom side)) Voltage 1 to 6 Nil (B side (Top side))	The direction of the L and M connectors of a pilot valve is opposite to that of the single and double type.

Note 1) (H): 1.5 W, (Y): 0.5 W, G type: DC only

Rubber seal Single/Double (Latching)

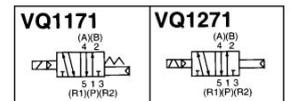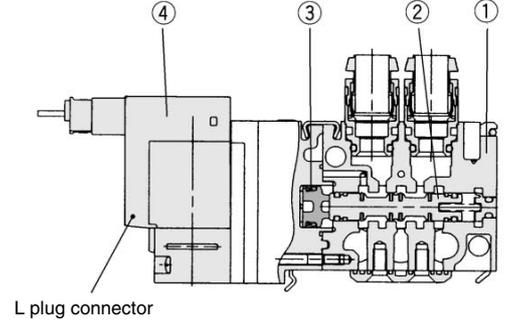

3 position

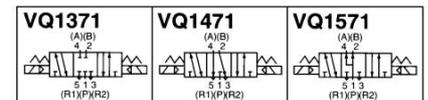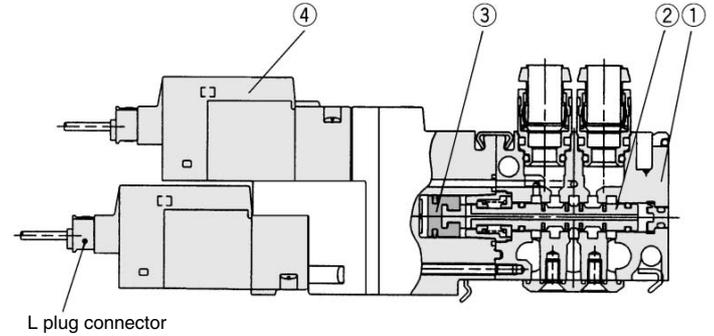

Component Parts

No.	Description	Material	Note
①	Body	Zinc die-casted	
②	Spool valve	Aluminum/HNBR	
③	Piston	Resin	


④ Pilot valve assembly

Single	Note) VQ111 (H) (Y) □ M - X18 - 2 Voltage 1 to 6	
Double (Latching)	VQ110L - □ M - 2 Voltage 1 to 6	
3 position	Note) VQ111 (H) (Y) □ M - X18 (A side (Bottom side)) Voltage 1 to 6 Nil (B side (Top side))	The direction of the L and M connectors of a pilot valve is opposite to that of the single and double type.


Note 1) (H): 1.5 W, (Y): 0.5 W, G type: DC only

Construction: VQ1000/Single Unit


Metal seal Single/Double (Latching)

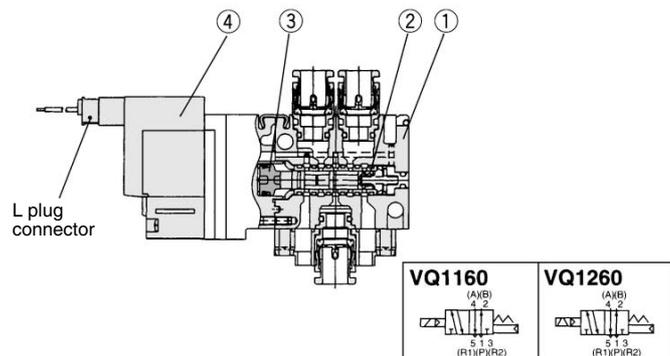


3 position

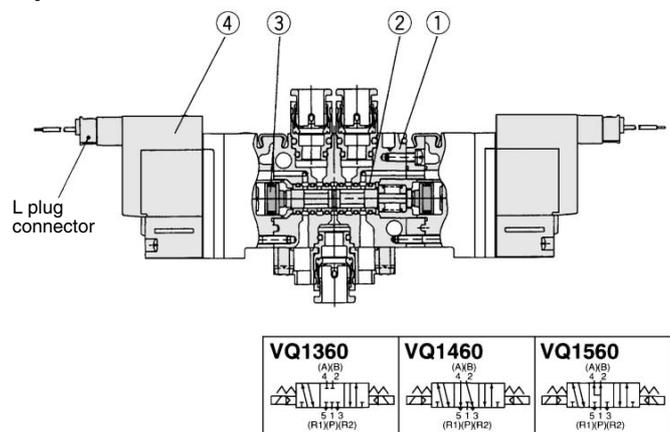

Rubber seal Single/Double (Latching)

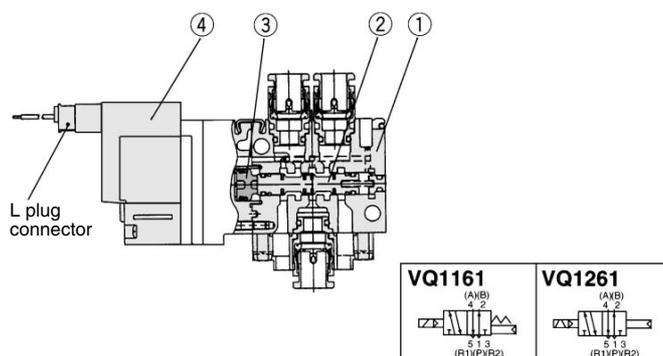

3 position

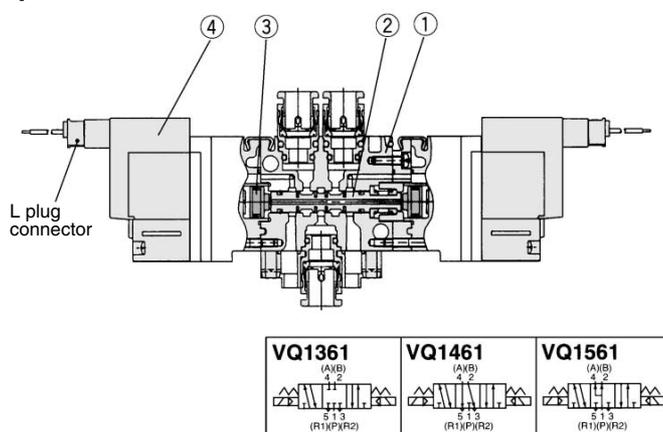

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

Component Parts

No.	Description	Material	Note
①	Body	Zinc die-casted	
②	Spool/Sleeve	Stainless steel	
③	Piston	Resin	

④ Pilot valve assembly

Single/3 position	Note) VQ111 ^(H) - □ ^L M-2 (Y) □ ^G Voltage 1 to 6	
Double (Latching)	VQ110L - □ ^L M-2 Voltage 1 to 6	

⦿ Note 1) (H): 1.5 W, (Y): 0.5 W, G type: DC only

Component Parts

No.	Description	Material	Note
①	Body	Zinc die-casted	
②	Spool valve	Aluminum/HNBR	
③	Piston	Resin	

④ Pilot valve assembly

Single/3 position	Note) VQ111 ^(H) - □ ^L M-2 (Y) □ ^G Voltage 1 to 6	
Double (Latching)	VQ110L - □ ^L M-2 Voltage 1 to 6	


⦿ Note 1) (H): 1.5 W, (Y): 0.5 W, G type: DC only

Exploded View of Manifold

VQ1000 (VV5Q13)/Plug-in Unit, Flip Type

(F, P, J, L, S kit)

* For how to increase the stations, refer to the instruction manual.

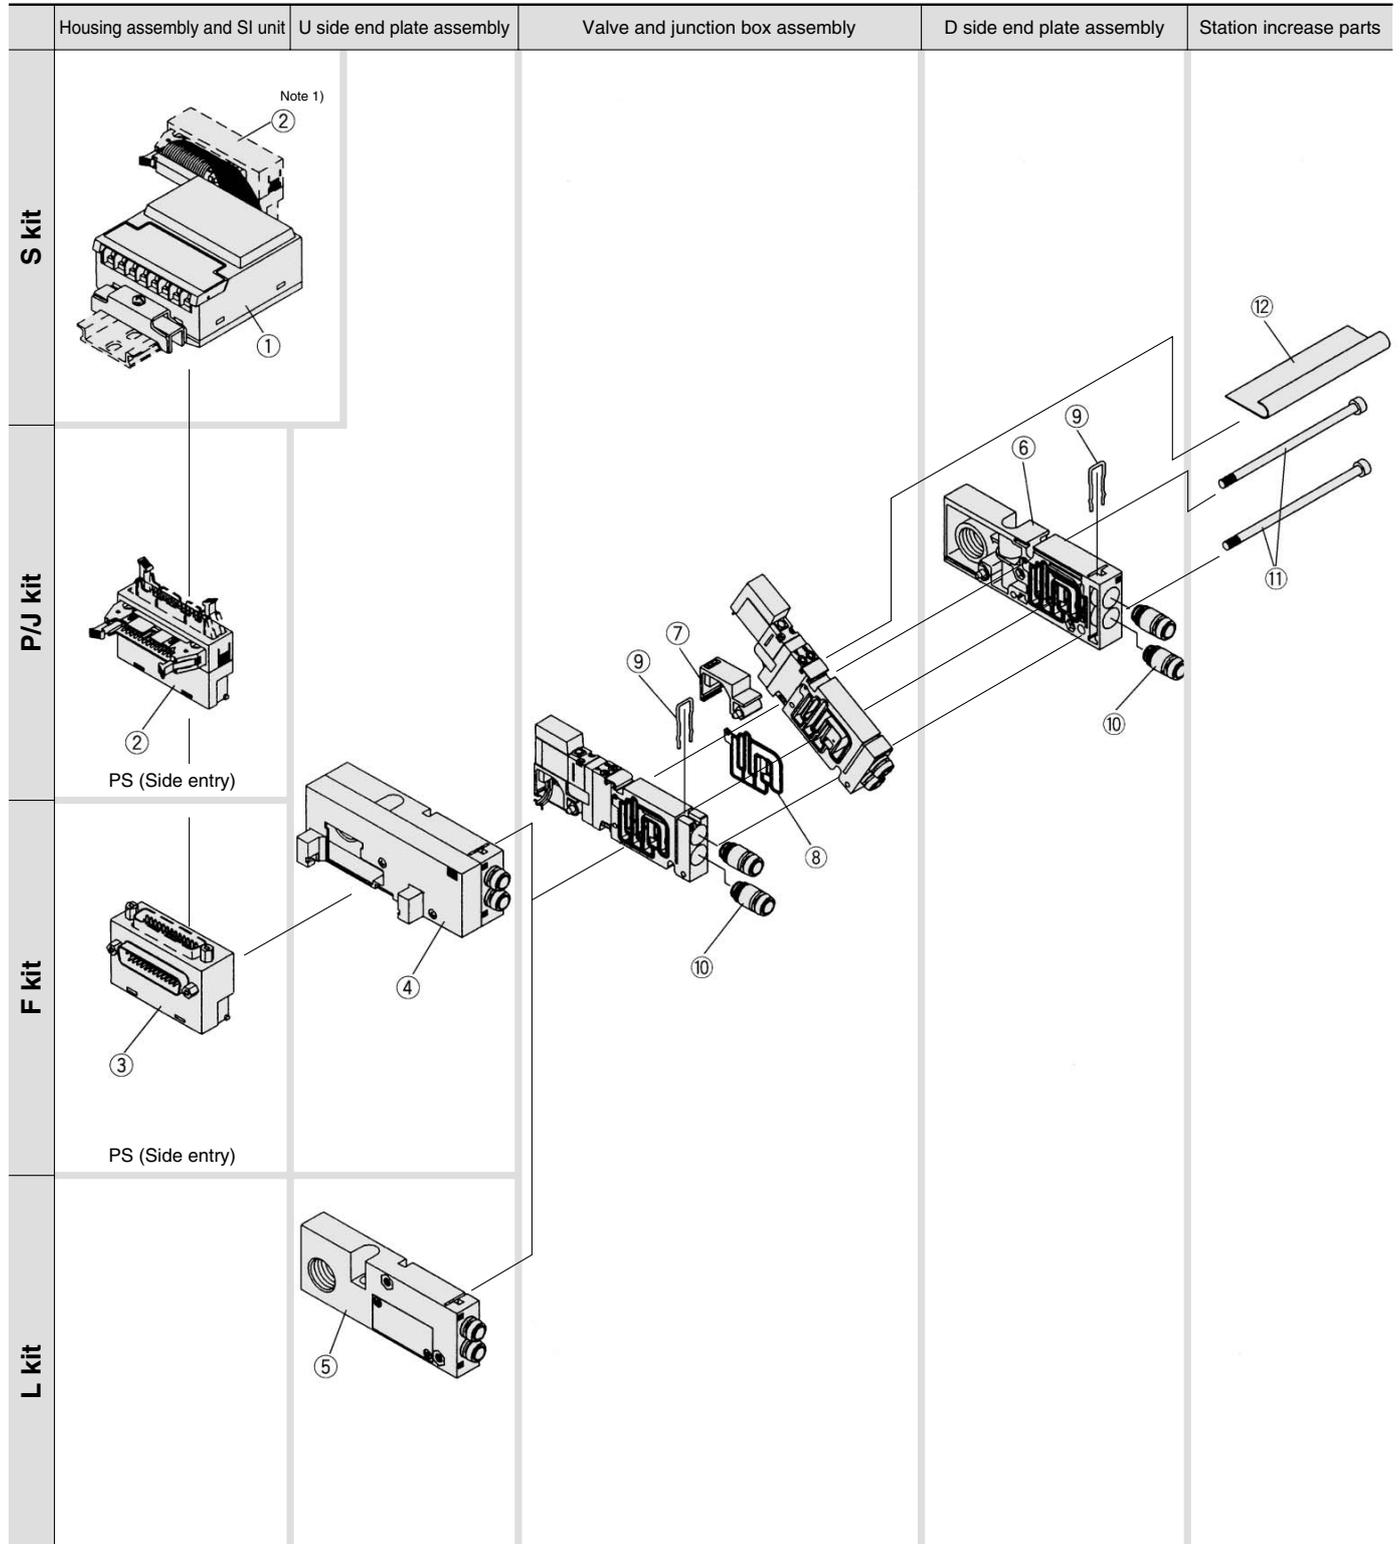

Note 1) S kit is composed of a flat ribbon cable housing assembly (AXT100-1-PU20) of ① SI unit and ② P kit (20 pins).

<Housing Assembly and SI Unit>

Housing assembly and SI unit no.

No.	Manifold	Part no.	Description
①	(SA kit)	EX330-S001	General type SI unit (Series EX300)
	(SB kit)	EX130-SMB1	SI unit for MELSECNET/MINI-S3 Data Link System (Mitsubishi Electric Corporation)
	(SC kit)	EX130-STA1	SI unit for SYSBUS Wire System (OMRON Corporation)
	(SD kit)	EX130-SSH1	SI unit for Satellite I/O Link System (SHARP Corporation)
	(SF1 kit)	EX130-SUW1	SI unit for 16 point Uni-wire System (NKE Corporation)
	(SH kit)	EX130-SUH1	SI unit for 16 point Uni-wire H System (NKE Corporation)
②	P _S ^U kit	AXT100-1-P _S ^U □ ⁽²⁾	Flat cable housing assembly □ = Number of pins: 26, 20, 16, 10
	J _S ^U kit	AXT100-1-J _S ^U 20 ⁽²⁾	Flat cable housing assembly
③	F _S ^U kit	AXT100-1-F _S ^U □ ⁽²⁾	D-sub connector housing assembly □ = Number of pins: 25, 15



Note 1) S kit is composed of a flat ribbon cable housing assembly (AXT100-1-PU20) of ① SI unit and ② P kit (20 pins).

Place an order for AXT-100-1-PS20 separately.

Note 2) Top/vertical entry connector for FU and PU while side (horizontal) entry connector for FS and PS.

<D Side End Plate Assembly>

④⑤ D side end plate assembly no.

VVQ1000-3A-3-□-□

Option

Nil: Common exhaust
S: Built-in silencer, direct exhaust⁽¹⁾

Electrical entry

F: For F kit
P: For P kit
J: For J kit
L: For L kit
S: For S kit



Note 1) Applicable for L kit only

Note 2) The housing assembly and SI unit of F/P/J/S kit are not included. Separately place an order for ①, ②, and ③.

Note 3) The ⑩'s fitting assembly is included.

<U Side End Plate Assembly No.>

⑥ U side end plate assembly no.

VVQ1000-2A-3-□

Option

Nil: Common exhaust
S: Built-in silencer, direct exhaust



Note) The ⑩'s fitting assembly is included.

<Junction Box Assembly>

⑦ Junction box assembly no.

VVQ1000-1A-3-□

Electrical entry

F1: For F kit
P1: P, G, T, S kit for 1 to 12 stations/Double wiring
P2: G, S kit for 13 to 16 stations/Double wiring
P3: G, S kit for 1 to 16 stations/Single wiring
L0□: L0 kit^{Note)}
L1□: L1 kit^{Note)} } □: Stations (1 to 16)
L2□: L2 kit^{Note)}



Note) Lead wire assembly for extensions is attached.

<Replacement Parts>

No.	Part no.	Description	Material	Number
⑧	VVQ1000-80A-3-2	Seal	HNBR	12
⑨	VVQ1000-80A-4	Clip	Stainless steel	12



Note) A set of parts containing 12 pcs. each is enclosed.

<Fittings Assembly>

⑩ Fittings assembly part no.

VVQ1000-50A-□

Port size

C3: Applicable tubing ø3.2
C4: Applicable tubing ø4
C6: Applicable tubing ø6⁽¹⁾



Note 1) Standard SUP/EXH port is C6.

Note 2) Purchasing order is available in units of 10 pieces.

<Station Increase Parts>

* The station can be increased up to 2 stations.

No. ⁽³⁾	Part no.	Description	Material	Number ⁽¹⁾
⑪	VVQ1000-105A-3-□ ⁽²⁾	Tie-rod bolt	Carbon steel	2
⑫		Junction cover	Stainless steel	1



Note 1) Each number of replacement parts are included in one set.

Note 2) □: Number of stations (01 to 16)

Note 3) ⑪ and ⑫ are in one set.

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

Series VQ

VQ0000 (VV5Q04)/Plug Lead Unit, Flip Type

(F, P, T, S kit)

* For how to increase the stations, refer to the instruction manual.

	Housing assembly and SI unit ⁽³⁾	U side end plate assembly	Valve	D side end plate assembly	Station increase parts
S kit	<p>Connector ^{Note 2)} assembly</p> <p>Note 1)</p> <p>Note 4)</p> <p>①</p> <p>②</p>				
P kit	<p>Connector ^{Note 2)} assembly</p> <p>Note 4)</p> <p>②</p> <p>PS (Side entry)</p>				
F kit	<p>Connector ^{Note 2)} assembly</p> <p>Note 4)</p> <p>③</p> <p>FS (Side entry)</p>				
T kit	<p>Connector ^{Note 2)} assembly</p> <p>Note 4)</p> <p>④</p> <p>⑤</p>				
		<p>⑥</p>	<p>⑦</p> <p>⑧</p> <p>⑩</p>	<p>⑨</p>	

Note 1) S kit is composed of a flat ribbon cable housing assembly (AXT100-2-PU20) of ① SI unit and ② P kit (20 pins).

Note 2) Since no connector assembly is included, order it separately. (Refer to page 2-4-69.)

Note 3) A housing assembly is not used for a C kit.

Note 4) A DIN rail clamping bracket is attached to each.

<Housing Assembly and SI Unit>

Housing assembly and SI unit no.

No.	Manifold	Part no.	Description
① ⁽¹⁾	(SA kit)	EX330-S001	General type SI unit (Series EX300)
	(SB kit)	EX130-SMB1	SI unit for MELSECNET/MINI-S3 Data Link System (Mitsubishi Electric Corporation)
	(SC kit)	EX130-STA1	SI unit for SYSBUS Wire System (OMRON Corporation)
	(SD kit)	EX130-SSH1	SI unit for Satellite I/O Link System (SHARP Corporation)
	SF1 kit	EX130-SUW1	SI unit for 16 point Uni-wire System (NKE Corporation)
	SH kit	EX130-SUH1	SI unit for 16 point Uni-wire H System (NKE Corporation)
②	P _S ^U kit	AXT100-2-P _S ^U □ ⁽²⁾	Flat ribbon cable housing assembly □ = Number of pins: 26, 20, 16, 10
③	F _S ^U kit	AXT100-2-F _S ^U □ ⁽²⁾	D-sub connector housing assembly □ = Number of pins: 25, 15
④ ⁽³⁾	T kit	AXT100-2-TB1	Terminal block assembly (8 terminals)
⑤ ⁽³⁾	T kit	AXT100-2-TB2	Terminal block assembly (8 terminals)

Note 1) S kit is composed of a flat ribbon cable housing assembly (AXT100-2-PS20) of ① SI unit and ② P kit (20 pins). Place an order for AXT100-2-PS20 separately.

Note 2) Top/vertical entry connector for FU and PU while side (horizontal) entry connector for FS and PS.

Note 3) In the case of standard specifications and double wiring, ④ is for 1 to 4 stations and ⑤ is for 5 to 8 stations.

Since no connector assembly is included, order it separately. (Refer to page 2-4-69.)

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

<D Side End Plate Assembly>

⑥ D side end plate assembly no.

VVQ0000-3A-4-□

Option

S: Built-in silencer, direct exhaust

P: Exclusively for SUP

The end plate style is subject to the kit. The combination as standard is as follows.

Kit	Part no.	U side end plate assembly	D side end plate assembly
F, P, S kit	Common exhaust type	VVQ0000-3A-4-P	VVQ0000-2A-4-R
	Built-in silencer, direct exhaust	VVQ0000-3A-4-P	VVQ0000-2A-4-S
C kit	Common exhaust type	VVQ0000-3A-4-P	VVQ0000-2A-4-R
	Built-in silencer, direct exhaust	VVQ0000-3A-4-S	VVQ0000-2A-4-S

<U Side End Plate Assembly No.>

⑦ U side end plate assembly no.

VVQ0000-2A-4-□

Option

S: Built-in silencer, direct exhaust

R: Exclusively for EXH (Common exhaust type)

<Replacement Parts>

No.	Part no.	Description	Material	Number
⑧	VVQ0000-80A-4-2	Seal	HNBR	12

Note) A set of parts containing 12 pcs. each is enclosed.

<Station Increase Parts>

No. ⁽³⁾	Part no.	Description	Material	Number ⁽¹⁾
⑨	VVQ0000-105A-4-□ ⁽²⁾	Tie-rod bolt	Carbon steel	2
⑩		Guide rod	Stainless steel	1

Note 1) Each number of replacement parts are included in one set.

Note 2) □: Number of stations (01 to 16)

Note 3) ⑨ and ⑩ are in one set.

Series VQ

VQ1000 (VV5Q14)/Plug Lead Unit, Flip Type

(F, P, T, S kit)

* For how to increase the stations, refer to the instruction manual.

	Housing assembly and SI unit ⁽³⁾	U side end plate assembly	Valve	D side end plate assembly	Station increase parts
S kit	<p>Connector ^{Note 2)} assembly</p> <p>Note 1)</p> <p>Note 4)</p> <p>1</p> <p>2</p>				
P kit	<p>Connector ^{Note 2)} assembly</p> <p>Note 1)</p> <p>2</p> <p>PS (Side entry)</p>				
F kit	<p>Connector ^{Note 2)} assembly</p> <p>Note 4)</p> <p>3</p> <p>FS (Side entry)</p>				
T kit	<p>Note 2) Connector assembly</p> <p>Note 4)</p> <p>5</p> <p>Note 4)</p> <p>4</p>				
			<p>6</p> <p>7</p> <p>8</p> <p>9</p> <p>10</p> <p>11</p> <p>12</p>		

Note 1) S kit is composed of a flat ribbon cable housing assembly (AXT100-2-PU20) of ① SI unit and ② P kit (20 pins).

Note 2) Since no connector assembly is included, order it separately. (Refer to page 2-4-69.)

Note 3) A housing assembly is not used for a C kit.

Note 4) A DIN rail clamping bracket is attached to each.

<Housing Assembly and SI Unit>

Housing assembly and SI unit no.

No.	Manifold	Part no.	Description
① ⁽¹⁾	(SA kit)	EX330-S001	General type SI unit (Series EX300)
	(SB kit)	EX130-SMB1	SI unit for MELSECNET/MINI-S3 Data Link System (Mitsubishi Electric Corporation)
	(SC kit)	EX130-STA1	SI unit for SYSBUS Wire System (OMRON Corporation)
	(SD kit)	EX130-SSH1	SI unit for Satellite I/O Link System (SHARP Corporation)
	(SF1 kit)	EX130-SUW1	SI unit for 16 point Uni-wire System (NKE Corporation)
	(SH kit)	EX130-SUH1	SI unit for 16 point Uni-wire H System (NKE Corporation)
②	P _S ^U kit	AXT100-2-P _S ^U □ ⁽²⁾	Flat ribbon cable housing assembly □ = Number of pins: 26, 20, 16, 10
③	F _S ^U kit	AXT100-2-F _S ^U □ ⁽²⁾	D-sub connector housing assembly □ = Number of pins: 25, 15
④ ⁽³⁾	T kit	AXT100-2-TB1	Terminal block assembly (8 terminals)
⑤ ⁽³⁾	T kit	AXT100-2-TB2	Terminal block assembly (8 terminals)

Note 1) S kit is composed of a flat ribbon cable housing assembly (AXT100-2-PS20) of ① SI unit and ② P kit (20 pins). Place an order for AXT100-2-PS20 separately.

Note 2) Top/vertical entry connector for FU and PU while side (horizontal) entry connector for FS and PS.

Note 3) Since no connector assembly is included, order it separately. (Refer to page 2-4-69.)

Note 4) In the case of standard specifications and double wiring, ④ is for 1 to 4 stations and ⑤ is for 5 to 8 stations.



VQC
SQ
VQ0
VQ4
VQ5
VQZ
VQD

<D Side End Plate Assembly>

⑥ D side end plate assembly no.

VVQ1000-3A-4-□

Option

Nil: Common exhaust

S: Built-in silencer, direct exhaust (Applicable for C kit only)



Note) The ⑩'s fitting assembly is included.

<U Side End Plate Assembly No.>

⑦ U side end plate assembly no.

VVQ1000-2A-4-□

Option

Nil: Common exhaust

S: Built-in silencer, direct exhaust



Note) The ⑩'s fitting assembly is included.

<Replacement Parts>

No.	Part no.	Description	Material	Number
⑧	VVQ1000-80A-3-2	Seal	HNBR	12
⑨	VVQ1000-80A-4	Clip	Stainless steel	12



Note) A set of parts containing 12 pcs. each is enclosed.

<Fittings Assembly>

⑩ Fittings assembly part no.

VVQ1000-50A-□

Port size

C3: Applicable tubing ø3.2

C4: Applicable tubing ø4

C6: Applicable tubing ø6⁽¹⁾



Note 1) Standard SUP/EXH port is C6.

Note 2) Purchasing order is available in units of 10 pieces.

<Station Increase Parts>

No. ⁽³⁾	Part no.	Description	Material	Number ⁽¹⁾
⑪	VVQ1000-105A-4-□ ⁽²⁾	Tie-rod bolt	Carbon steel	2
⑫		Guide rod	Stainless steel	1



Note 1) Each number of replacement parts are included in one set.

Note 2) □: Number of stations (01 to 16)

Note 3) ⑪ and ⑫ are in one set.

Series VQ

VQ2000 (VV5Q24)/Plug Lead Unit, Flip Type

(F, P, T, S kit)

* For how to increase the stations, refer to the instruction manual.

	Housing assembly and SI unit ⁽³⁾	U side end plate assembly	Valve	D side end plate assembly	Station increase parts
S kit	<p>Connector^{Note 2)} assembly</p> <p>Note 1)</p> <p>Note 4)</p> <p>①</p> <p>②</p>				
P kit	<p>Note 2) Connector assembly</p> <p>Note 4)</p> <p>PS (Side entry)</p> <p>②</p>				
F kit	<p>Connector^{Note 2)} assembly</p> <p>Note 4)</p> <p>FS (Side entry)</p> <p>②</p>	<p>⑥</p>	<p>⑧</p>	<p>⑦</p>	<p>⑪</p>
T kit	<p>Connector^{Note 2)} assembly</p> <p>Note 4)</p> <p>④</p> <p>⑤</p>				



Note 1) S kit is composed of a flat ribbon cable housing assembly (AXT100-2-PU20) of ① SI unit and ② P kit (20 pins).

Note 2) Since no connector assembly is included, order it separately. (Refer to page 2-4-69.)

Note 3) A housing assembly is not used for a C kit.

Note 4) A DIN rail clamping bracket is attached to each.



<Housing Assembly and SI Unit>

Housing assembly and SI unit no.

No.	Manifold	Part no.	Description
① ⁽¹⁾	(SA kit)	EX330-S001	General type SI unit (Series EX300)
	(SB kit)	EX130-SMB1	SI unit for MELSECNET/MINI-S3 Data Link System (Mitsubishi Electric Corporation)
	(SC kit)	EX130-STA1	SI unit for SYSBUS Wire System (OMRON Corporation)
	(SD kit)	EX130-SSH1	SI unit for Satellite I/O Link System (SHARP Corporation)
	SF1 kit	EX130-SUW1	SI unit for 16 point Uni-wire System (NKE Corporation)
	SH kit	EX130-SUH1	SI unit for 16 point Uni-wire H System (NKE Corporation)
②	P _S ^U kit	AXT100-2-P _S ^U □ ⁽²⁾	Flat ribbon cable housing assembly □ = Number of pins: 26, 20, 16, 10
③	F _S ^U kit	AXT100-2-F _S ^U □ ⁽²⁾	D-sub connector housing assembly □ = Number of pins: 25, 15
④ ⁽³⁾	T kit	AXT100-2-TB1	Terminal block assembly (8 terminals)
⑤ ⁽³⁾	T kit	AXT100-2-TB2	Terminal block assembly (8 terminals)



Note 1) S kit is composed of a flat ribbon cable housing assembly (AXT100-2-PS20) of ① SI unit and ② P kit (20 pins). Place an order for AXT100-2-PS20 separately.

Note 2) Top/vertical entry connector for FU and PU while side (horizontal) entry connector for FS and PS.

Note 3) Since no connector assembly is included, order it separately. (Refer to page 2-4-93.)



Note 4) In the case of standard specifications and double wiring, ④ is for 1 to 4 stations and ⑤ is for 5 to 8 stations.

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

<D Side End Plate Assembly>

⑥ D side end plate assembly no.

VVQ2000-3A-4-□

Option

Nil: Common exhaust

S: Built-in silencer, direct exhaust
(Applicable for C kit only)



Note) The ⑩'s fitting assembly is included.

<U Side End Plate Assembly No.>

⑦ U side end plate assembly no.

VVQ2000-2A-4-□

Option

Nil: Common exhaust

S: Built-in silencer, direct exhaust



Note) The ⑩'s fitting assembly is included.

<Replacement Parts>

No.	Part no.	Description	Material	Number
⑧	VVQ2000-80A-3-2	Seal	HNBR	12
⑨	VVQ2000-80A-3-4	Clip	Stainless steel	12



Note) A set of parts containing 12 pcs. each is enclosed.

<Fittings Assembly>

⑩ Fittings assembly part no.

VVQ1000-51A-□

Port size

C4: Applicable tubing ø4

C6: Applicable tubing ø6

C8: Applicable tubing ø8⁽¹⁾



Note 1) Standard SUP/EXH port is C8.

Note 2) Purchasing order is available in units of 10 pieces.

<Station Increase Parts>

No. ⁽³⁾	Part no.	Description	Material	Number ⁽¹⁾
⑪	VVQ2000-105A-4-□ ⁽²⁾	Tie-rod bolt	Carbon steel	2
⑫		Guide rod	Stainless steel	1



Note 1) Each number of replacement parts are included in one set.

Note 2) □: Number of stations (01 to 16)


Note 3) ⑪ and ⑫ are in one set.

Series VQ

VQ1000 (VV5Q17)/Plug Lead Unit, Cassette Type

(F, P, T, S kit)

* For how to increase the stations, refer to the instruction manual.

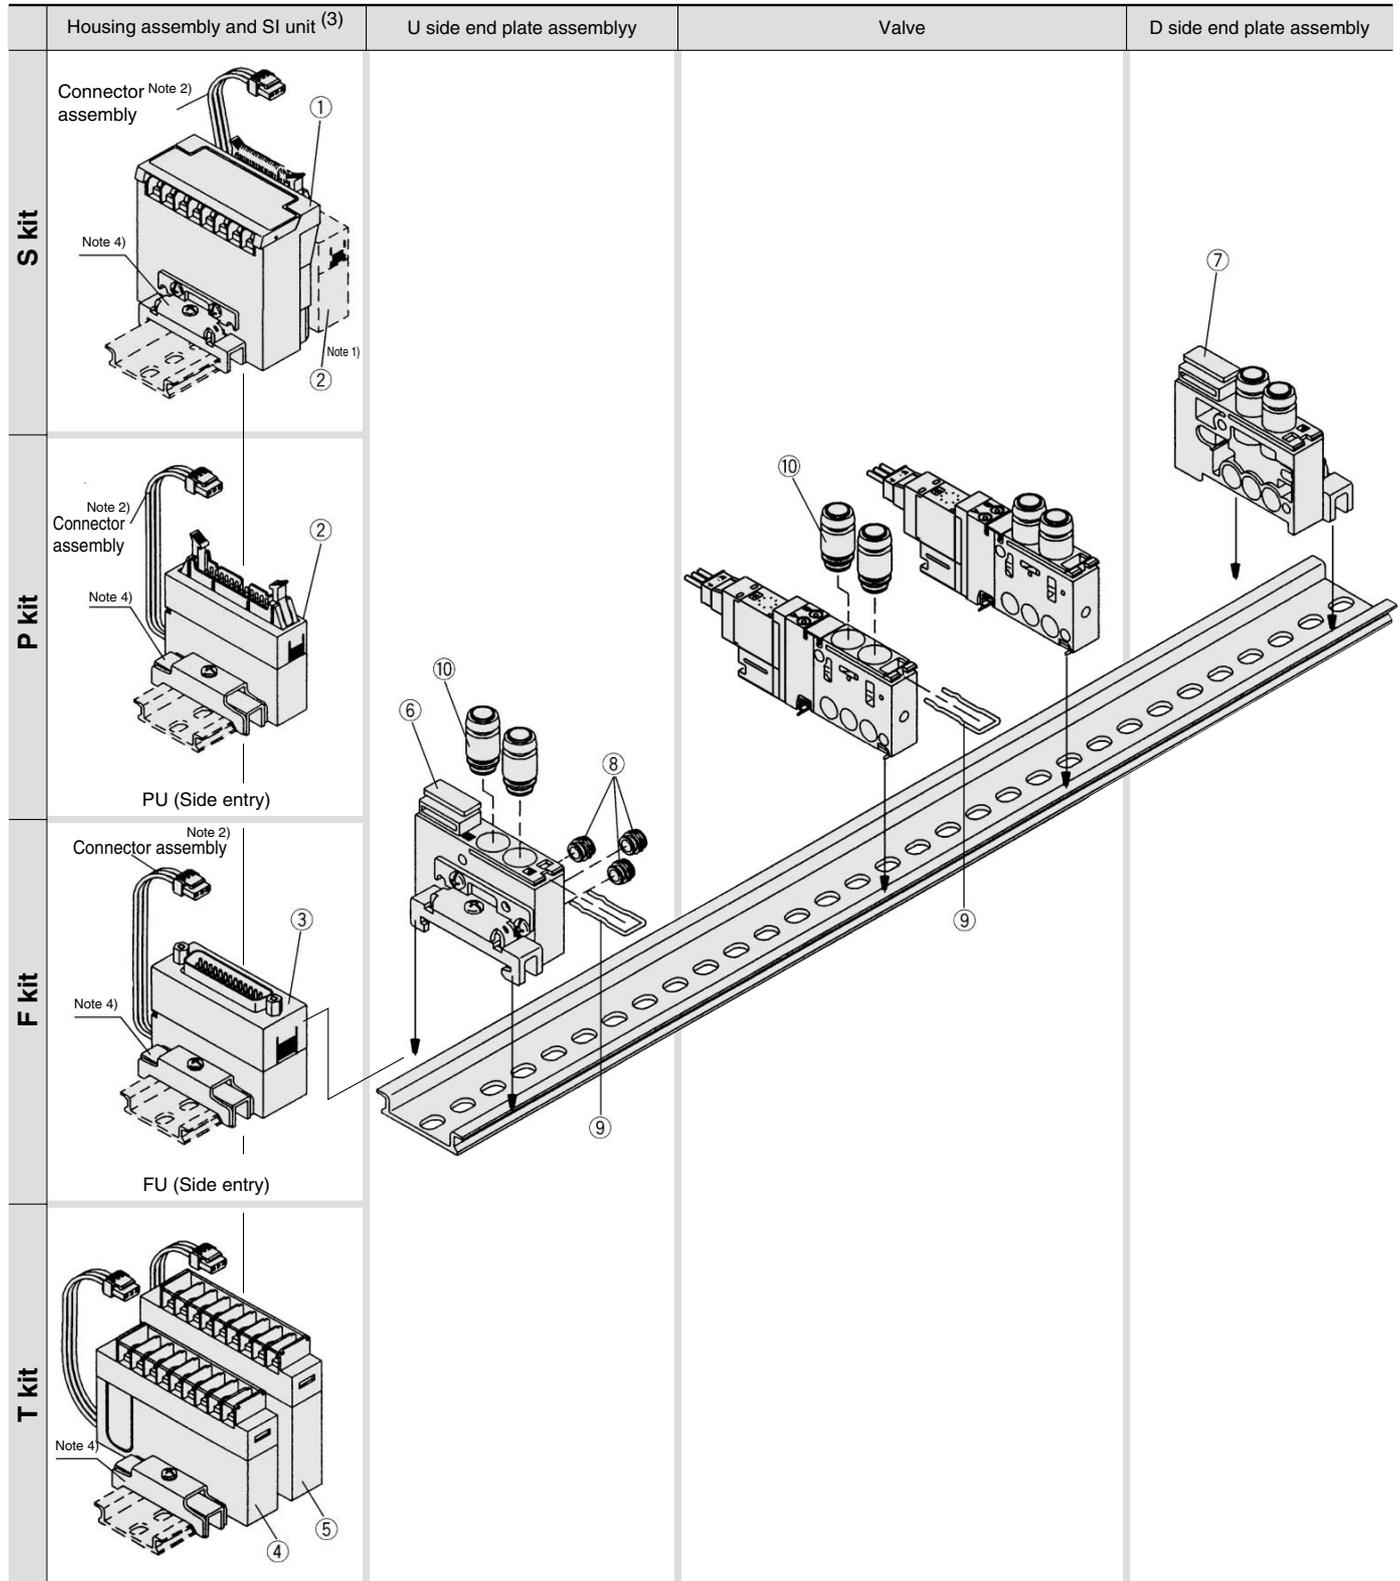

Note 1) S kit is composed of a flat ribbon cable housing assembly (AXT100-2-PU20) of ① SI unit and ② P kit (20 pins).

Note 2) Since no connector assembly is included, order it separately. (Refer to page 2-4-93.)

Note 3) A housing assembly is not used for a C kit.

Note 4) A DIN rail clamping bracket is attached to each.

<Housing Assembly and SI Unit>

Housing assembly and SI unit no.

No.	Manifold	Part no.	Description
	(SA kit)	EX321-S001(-XP)	General type SI unit (Series EX300)
	(SB kit)	EX121-SMB1(-XP)	SI unit for MELSECNET/MINI-S3 Data Link System (Mitsubishi Electric Corporation)
	(SC kit)	EX121-STA1(-XP)	SI unit for SYSBUS Wire System (OMRON Corporation)
	(SD kit)	EX121-SSH1(-XP)	SI unit for Satellite I/O Link System (SHARP Corporation)
	(SE kit)	EX121-SPA1	SI unit for MEWNET-F System (Matsushita Electric Works Ltd.)
	(SF1kit)	EX121-SUW1(-XP)	SI unit for 16 point Uni-wire System (NKE Corporation)
	(SG kit)	EX121-SAB1(-XP)	SI unit for Allen Bradley Remote I/O (RIO) System (Rockwell Automation, Inc.)
① ⁽¹⁾	(SH kit)	EX121-SUH1(-XP)	SI unit for 16 point Uni-wire H System (NKE Corporation)
	(SJ1 kit)	EX121-SSL1(-XP)	SI unit for 16 point S-LINK System (SUNX Corporation)
	(SJ2 kit)	EX121-SSL2(-XP)	SI unit for 8 point S-LINK System (SUNX Corporation)
	(SK kit)	EX121-SFU1(-XP)	SI unit for T-LINK Mini System (Fuji Electric Co.,Ltd.)
	(SQ kit)	EX121-SDN1	SI unit for DeviceNet, CompoBus/D (OMRON Corporation)
	(SR1 kit)	EX121-SCS1(-XP)	SI unit for 16 point CompoBus/S System (OMRON Corporation)
	(SR2 kit)	EX121-SCS2(-XP)	SI unit for 8 point CompoBus/S System (OMRON Corporation)
	(SV kit)	EX121-SMJ1(-XP)	Mitsubishi Electric Corporation: CC-LINK System
②	P _S ^U kit	AXT100-2-P _S ^U □ ⁽²⁾	Flat ribbon cable housing assembly □ = Number of pins: 26, 20, 16, 10
③	F _S ^U kit	AXT100-2-F _S ^U □ ⁽²⁾	D-sub connector housing assembly □ = Number of pins: 25, 15
④ ⁽³⁾	T kit	AXT100-2-TA1	Terminal block assembly (8 terminals)
⑤ ⁽³⁾	T kit	AXT100-2-TA2	Terminal block assembly (8 terminals)



Note 1) A S kit is composed of a flat ribbon cable housing assembly (AXT100-2-PS20) of ① SI unit and ② P kit (20 pins). Place an order for AXT100-2-PS20 separately. Suffix -XP for dustproof type SI unit.

Note 2) Top/vertical entry connector for FU and PU while side (horizontal) entry connector for FS and PS.

Note 3) Since no connector assembly is included, order it separately. (Refer to page 2-4-93.)

Note 4) In the case of standard specifications and double wiring, ④ is for 1 to 4 stations and ⑤ is for 5 to 8 stations.



VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

<D Side End Plate Assembly>

⑥ D side end plate assembly no.

VVQ1000-3A-7



Note) The ⑩'s fitting assembly is included.

<U Side End Plate Assembly No.>

⑦ U side end plate assembly no.

VVQ1000-2A-7



Note) The ⑩'s fitting assembly is included.

<Replacement Parts>

No.	Part no.	Description	Material	Number
⑧	VVQ1000-80A-7-2	Bushing assembly		3
⑨	VVQ1000-80A-7-4	Clip	Stainless steel	12

<Fittings Assembly>

⑩ Fittings assembly part no.

VVQ1000-50A-□

Port size

C3: Applicable tubing ø3.2

C4: Applicable tubing ø4

C6: Applicable tubing ø6⁽¹⁾



Note 1) Standard SUP/EXH port is C6.

Note 2) Purchasing order is available in units of 10 pieces.

Base Mounted Metal Seal/Rubber Seal Series VQ

Space-saving profile

All pilot valves are compactly mounted on one side. The space-saving design of mounting all fittings on one side permits mounting in three directions.

Space-saving 45% less
Capacity-saving 50% less



VQ0000
(VV5Q05)

Unprecedented high speed response and long service life


(Metal seal, single, with indicator light/surge voltage suppressor)

VQ0000	10 ms	} 200 million cycles
VQ1000	10 ms	
VQ2000	20 ms	
Dispersion accuracy ±2 ms		


Thin compact design with large flow capacity

Model	Manifold pitch (mm)	Flow characteristics		Cylinder size
		Metal seal C [dm ³ /(s·bar)]	Rubber seal C [dm ³ /(s·bar)]	
VQ0000	10.7	0.44	0.53	Up to ø40
VQ1000	10.5	0.72	1.0	Up to ø50
VQ2000	16	2.6	3.2	Up to ø80

* Flow characteristics: 4/2 → 5/3 (A/B → R1/R2)

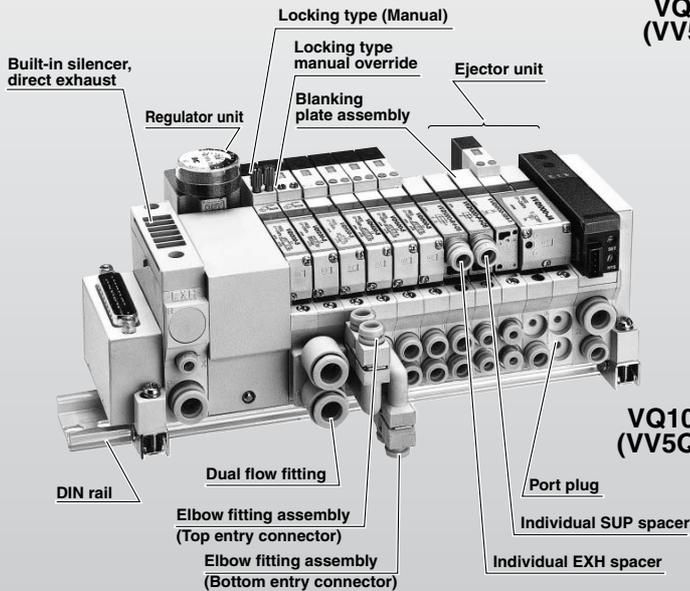

VQ1000
(VV5Q11)

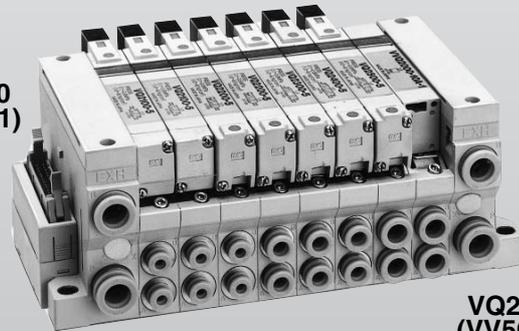

VQ2000
(VV5Q21)

* The photo does not show an actual use example.

A variety of options

Innovative mounting methods

The non-bias, one-clamp structure permits easy valve replacement. (Plug-in unit)

Built-in One-touch fittings for easy piping.

A variety of common wiring methods are standardized.

F kit (D-sub connector) Number of pins: 15, 25 Top entry Side entry	P kit (Flat ribbon cable connector) Number of pins: 10, 16, 20, 26 Top entry Side entry	J kit (Flat ribbon cable connector) Number of pins: 20 (PC Wiring System compliant) Top entry Side entry		
G kit (Flat ribbon cable with terminal block) Number of pins: 20 	T kit (Terminal box) 	L kit (Lead wire) 	S kit (Serial transmission unit) 	M kit (Multi-connector kit) (VQ2000 only)

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

Valve Specifications

Base Mounted

		Sonic conductance C [dm ³ /(s·bar)] (4/2 → 5/3) (A/B → R1/R2)		Type of actuation					Voltage			Electrical entry		Manual override						
				Double	Single	3 position	Single	Double	Closed center	Exhaust center	Pressure center	12 V 24 V DC	100 V 110 V AC (50/60 Hz)	200 V 220 V AC (50/60 Hz)	Plug-in	Grommet	L plug connector	M plug connector	Push type, Tool required	Locking type
Plug-in	Series VQ1000	Rubber seal	VQ□00	0.72	0.72	●	●	●	●	●	●	●	●					●	●	●
		Metal seal	VQ1□01	1.0	0.65							(F/L kit only)								
	P. 2-4-120		P. 2-4-128																	
	Series VQ2000	Rubber seal	VQ2□00	2.6	2.0	●	●	●	●	●	●	●	●						●	●
Metal seal		VQ2□01	3.2	2.2							(F/L kit only)									
P. 2-4-124		P. 2-4-128																		
Plug lead	Series VQ0000	Rubber seal	VQ0□50	0.44	0.32	●	●	●	●		●	●	●	●	●	●	●	●	●	●
		Metal seal	VQ0□51	0.53	0.44															
	P. 2-4-182		P. 2-4-186																	
	Series VQ1000	Rubber seal	VQ1□10	0.72	0.72	●	●	●	●	●	●				●				●	●
Metal seal		VQ1□11	1.0	0.65																
P. 2-4-184		P. 2-4-186																		













VQC
SQ
VQ0
VQ4
VQ5
VQZ
VQD

										Option	
P. 2-4-215										External pilot	
										D-sub connector 15P	
										Flat ribbon cable 10P 16P 20P	
		For S kit, please contact SMC.		For S kit, please contact SMC.		For S, G kit, please contact SMC.		For S, G kit, please contact SMC.		Negative common specifications	
										One-touch fitting Inch size	
		Except L kit		Except L kit		Except L kit		Except L kit		For special wiring spec.	
P. 2-4-210										Blanking plate	
										Individual SUP/EXH	
										SUP/EXH passage spacer	
										Name plate	
										Back pressure check valve	
		Standard								DIN rail mounting style	
										Built-in silencer	
										Silencer for EXH port	
										Elbow fitting for cylinder port	
										Two stations matching fittings for double flow rate	
										Plug for cylinder port	
										Regulator unit	
										Ejector unit mounted	
										Double check block	
P. 2-4-215											
		For S kit, please contact SMC.		For S kit, please contact SMC.		For S, G kit, please contact SMC.		For S, G kit, please contact SMC.			
		Except L kit		Except L kit		Except L kit		Except L kit			
P. 2-4-210											
P. 2-4-177											
		For S kit, please contact SMC.		For S kit, please contact SMC.		For S, G kit, please contact SMC.		For S, G kit, please contact SMC.			
		Except L kit		Except L kit		Except L kit		Except L kit			
P. 2-4-166											
P. 2-4-208											
















Series VQ/Base Mounted: Variations

Manifold Variations

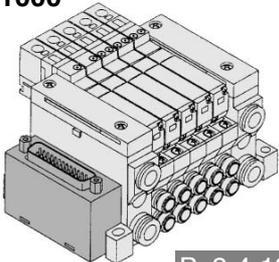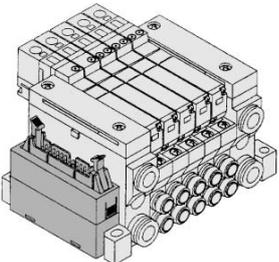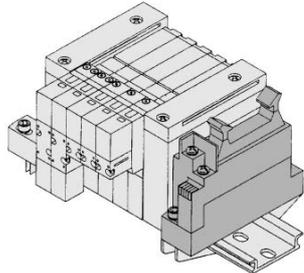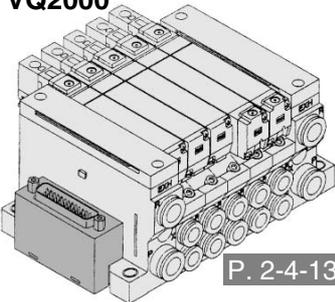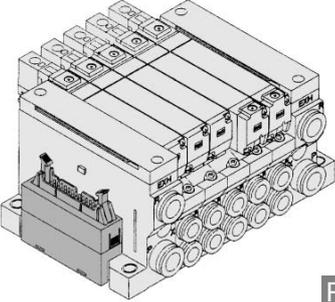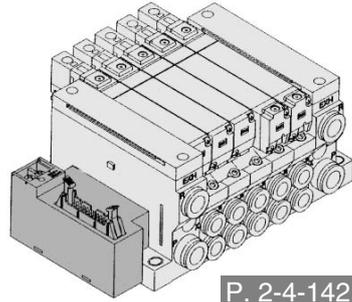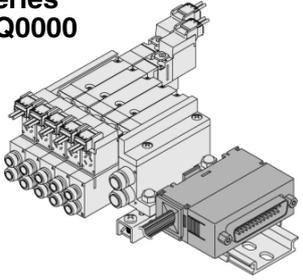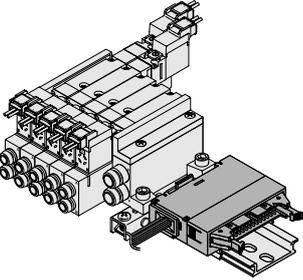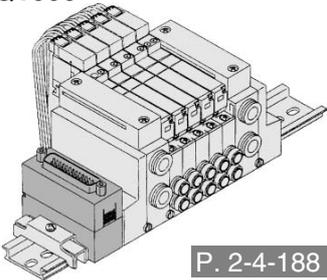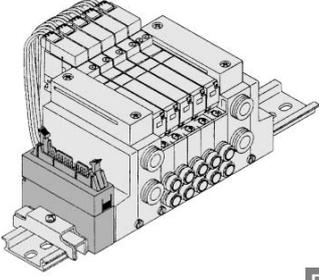	F kit	P kit	J kit	G kit
	D-sub connector Conforming to MIL D-sub connector	Flat ribbon cable connector (26, 20, 16, 10 pins) Conforming to MIL flat ribbon cable connector	Flat ribbon cable connector (20 pins) Conforming to MIL flat ribbon cable connector PC Wiring System compatible	Flat ribbon cable with power supply terminal block Conforming to MIL flat ribbon cable connector Applicable to OMRON's serial transmission unit PC Wiring System compatible
Plug-in	Series VQ1000  P. 2-4-130	 P/J kit P. 2-4-134	 P. 2-4-142	
	Series VQ2000  P. 2-4-130	 P/J kit P. 2-4-134	 P. 2-4-142	
Plug Lead	Series VQ0000  P. 2-4-188	 P kit only P. 2-4-192	 P. 2-4-192	—
	Series VQ1000  P. 2-4-188	 P kit only P. 2-4-192	 P. 2-4-192	—

Manifold Variations

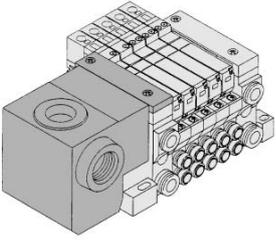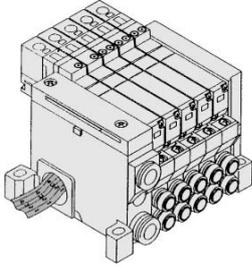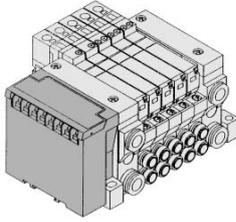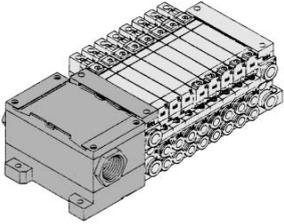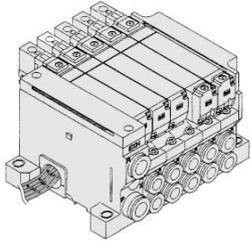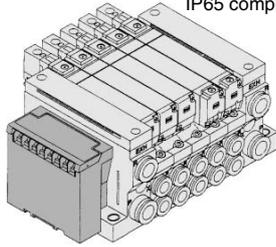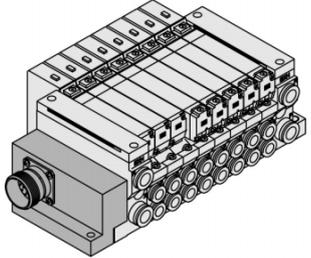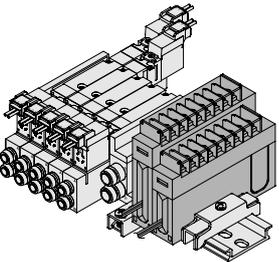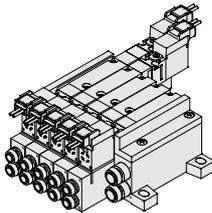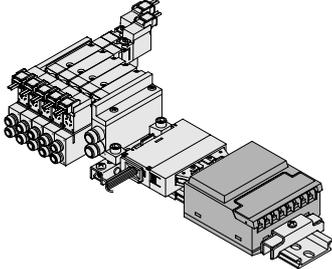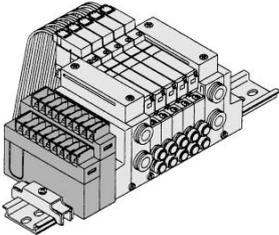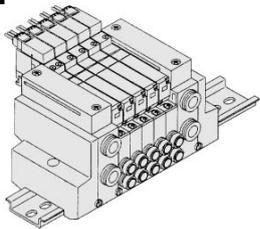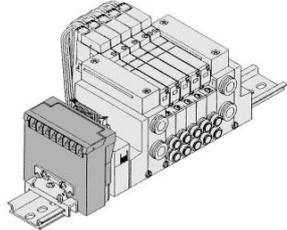T kit	L C kit	S kit	M kit
<p>Terminal block box (Terminal block)</p> <p>Terminal blocks are compactly arranged on one side.</p>	<p>Lead wire</p> <p>Direct electrical entry type</p>	<p>Serial transmission unit</p> <p>Enables single-wire solenoid valve-PLC operation</p>	<p>Circular connector</p> <p>IP65 (Dusttight/Low jetproof type)</p>
 <p>Terminal block box P. 2-4-146</p>	<p>L kit</p>  <p>Lead wire kit P. 2-4-150</p>	 <p>Serial transmission unit P. 2-4-154</p>	<p style="text-align: center;">—</p>
 <p>Enclosure IP65 compliant P. 2-4-146</p>	<p>L kit</p>  <p>Lead wire kit P. 2-4-150</p>	<p>Enclosure IP65 compliant</p>  <p>Enclosure IP65 compliant P. 2-4-154</p>	 <p>W type only P. 2-4-158</p>
 <p>Terminal block P. 2-4-196</p>	<p>C kit</p>  <p>Terminal block P. 2-4-200</p>	 <p>Serial transmission unit P. 2-4-204</p>	<p style="text-align: center;">—</p>
 <p>Terminal block P. 2-4-196</p>	<p>C kit</p>  <p>Terminal block P. 2-4-200</p>	 <p>Serial transmission unit P. 2-4-204</p>	<p style="text-align: center;">—</p>

VQC

SQ

VQ0

VQ4


VQ5

VQZ

VQD

Cylinder Speed Chart

Use as a guide for selection.
Please confirm the actual conditions with
SMC Sizing Program.

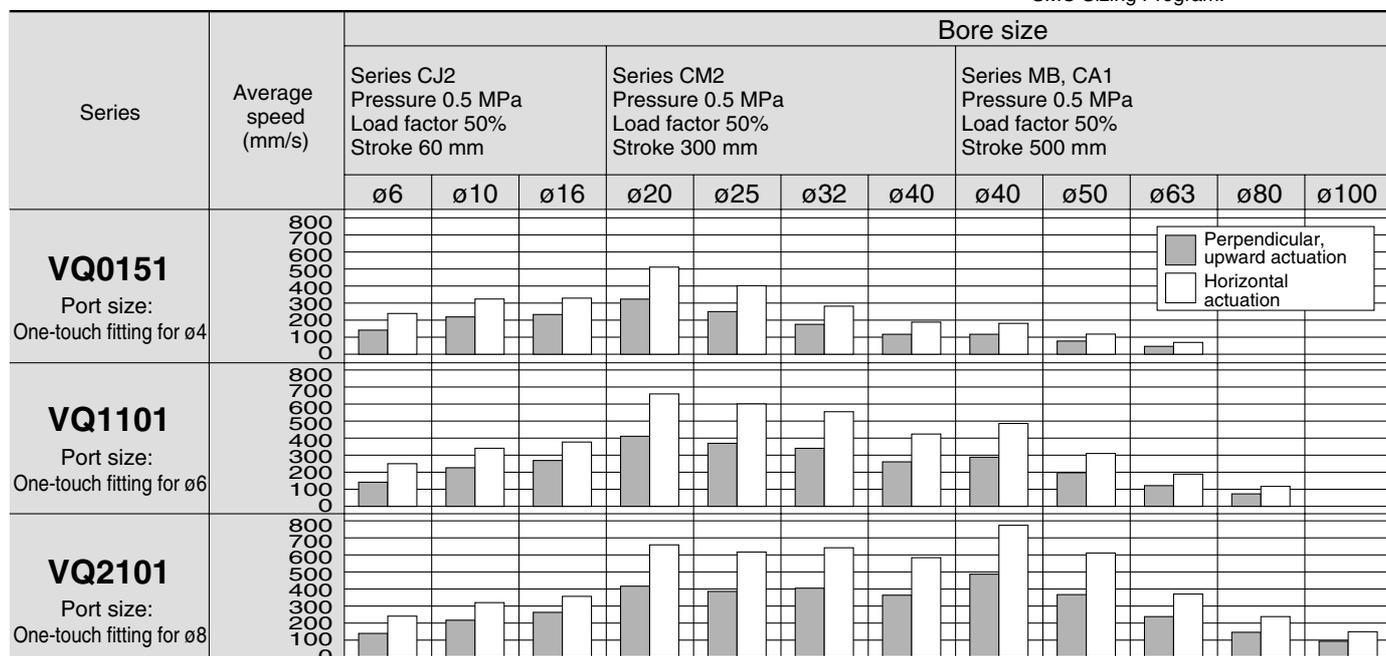

- VQC
- SQ
- VQ0**
- VQ4
- VQ5
- VQZ
- VQD

* It is when the cylinder is extending that is meter-out controlled by speed controller which is directly connected with cylinder, and its needle valve with being fully open.
* The average velocity of the cylinder is what the stroke is divided by the total stroke time.
* Load factor: ((Load weight x 9.8)/Theoretical force) x 100%

Conditions

Series	Conditions	Series CJ2	Series CM2	Series MB, CA1
VQ0151	Tube bore x Length		T0425 x 1 m	
	Speed controller		AS2001F-04	
	Silencer		AN103-X233	
VQ1101	Tube bore x Length		T0604 x 1 m	
	Speed controller		AS3001F-06	
	Silencer		AN103-X233	
VQ2101	Tube bore x Length		T0806 x 1 m	
	Speed controller		AS3001F-08	
	Silencer		AN200-KM8	

Series VQ1000 Base Mounted Plug-in Unit

How to Order Manifold

VV5Q 1 1-08 C6 F U1

Series
1 VQ1000

Manifold
1 Plug-in unit

Stations
01 1 station
:
:

The maximum and minimum number of stations are varied depending on kit. (Refer to the table below.)

Option

Symbol	Option
Nil	None
2	200/220 VAC models (Applicable to F and L kits)
B	With back pressure check valve ⁽²⁾
D	DIN rail mounting
G1	1 set of regulator unit ⁽³⁾
G2	2 sets of regulator unit ⁽³⁾
G3	3 sets of regulator unit ⁽³⁾
J	With vacuum ejector unit ⁽⁴⁾
K	Special wiring specifications (Not double wiring) ⁽⁵⁾
N	With name plate
R	External pilot ⁽⁶⁾
S	Built-in silencer, direct exhaust

Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BRS

Note 2) Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. If not all stations need this check valve, specify the stations where check valves are installed by using the manifold specification sheet.

Note 3) Specify the mounting position in the manifold specification sheet.

Note 4) Refer to page 2-4-170 for the details of ejector mounted styles. A combination of "J" and "N" is unavailable.

Note 5) Specify the wiring by means of the manifold specification sheet. (Except L kit)

Note 6) Indicate "R" for the valve with external pilot.

Cylinder port

Symbol	Port size	Symbol	Port size
C3	With One-touch fitting for ø3.2	L6	W/ elbow One-touch fitting ø6 for top piping
C4	With One-touch fitting for ø4	L5	Elbow M5 thread for top piping
C6	With One-touch fitting for ø6	B3	W/ elbow One-touch fitting ø3.2 for bottom piping
M5	M5 thread	B4	W/ elbow One-touch fitting ø4 for bottom piping
CM	With mixed size/with port plug ⁽¹⁾	B6	W/ elbow One-touch fitting ø6 for bottom piping
L3	W/ elbow One-touch fitting ø3.2 for top piping	B5	Elbow M5 thread for bottom piping
L4	W/ elbow One-touch fitting ø4 for top piping	LM	Mixed size for elbow piping



Note 1) Specify "Mixed size/with port plug" in the manifold specification sheet.

Note 2) Inch-size One-touch fittings are also available. For details, refer to page 2-4-179.

Note 3) M5 fittings for M5 thread are attached without being incorporated.



Simple specials are available with SMC Simple Specials System. For details about applicable models, please contact SMC.

Kit/Electrical entry/Cable length

F kit (D-sub connector)		P kit (Flat ribbon cable connector)		J kit (Flat ribbon cable connector (20P))		G Kit (Flat ribbon cable connector with power supply terminal block)	
Top entry		Top entry		Top entry		Top entry	
Side entry		Side entry		Side entry		Side entry	
P. 2-4-130		P. 2-4-134		P. 2-4-138		P. 2-4-142	
Connector entry direction		Connector entry direction		Connector entry direction		Connector entry direction	
Top entry	Side entry	Top entry	Side entry	Top entry	Side entry	Top entry	Side entry
Kit U0	Kit S0	Kit U0	Kit S0	Kit U0	Kit S0	Kit U0	Kit S0
U1	S1	U1	S1	U1	S1	U1	S1
U2	S2	U2	S2	U2	S2	U2	S2
U3	S3	U3	S3	U3	S3	U3	S3
Without cable	Without cable	Without cable	Without cable	Without cable	Without cable	Without cable	Without cable
With cable (1.5 m)	With cable (1.5 m)	With cable (1.5 m)	With cable (1.5 m)	With cable (1.5 m)	With cable (1.5 m)	With cable (1.5 m)	With cable (1.5 m)
With cable (3 m)	With cable (3 m)	With cable (3 m)	With cable (3 m)	With cable (3 m)	With cable (3 m)	With cable (3 m)	With cable (3 m)
With cable (5 m)	With cable (5 m)	With cable (5 m)	With cable (5 m)	With cable (5 m)	With cable (5 m)	With cable (5 m)	With cable (5 m)
2 to 24 stations	2 to 24 stations	2 to 24 stations	2 to 24 stations	2 to 16 stations	2 to 16 stations	2 to 16 stations	2 to 16 stations



Note 1) Besides the above, F and P kits with different number of pins are available. Refer to page 2-4-177 for details.

Note 2) For details, refer to page 2-4-178.

How to Order Valves

VQ 1 1 0 0 Y 5

Series
1 VQ1000

Type of actuation
1 2 position single
2 Metal 2 position double
2 Rubber 2 position double

Seal
0 Metal seal
1 Rubber seal

Manual override
Nil: Non-locking push type (Tool required)
B: Push-locking slotted type
C: Locking type (Manual)

Light/Surge voltage suppressor
Nil Yes
E (Note) None
Note) Inapplicable to the S kit.

Function

Symbol	Specifications	DC	AC
Nil	Standard type	(1.0 W)	○ (Note)
H	High pressure type	(1.5 W)	—
Y	Low wattage type	(0.5 W)	—

Note) For power consumption of AC type, refer to page 2-4-129.
Note) For external pilot and negative COM specifications, refer to "Option" on pages 2-4-178 to 2-4-179.

Coil voltage

1	100 VAC (50/60 Hz)
2 (Note)	200 VAC (50/60 Hz)
3	110 VAC (50/60 Hz)
4 (Note)	220 VAC (50/60 Hz)
5	24 VDC
6	12 VDC

Note) 200/220 VAC models are applicable to F and L kits.

Function
3 3 position closed center
4 3 position exhaust center
5 3 position pressure center
A 4 position dual 3 port valve
B 4 position dual 3 port valve
C 4 position dual 3 port valve

Note) Rubber seal type only.

How to Order Manifold Assembly

Example

Single solenoid (24 VDC) VQ1100-5 (4 sets)
Double solenoid (24 VDC) VQ1200-5 (4 sets)
Blanking plate VQ1000-10A-1 (1 set)
D-sub connector
Cylinder ports C6: With One-touch fitting for ø6
Manifold base (9 stations) VV5Q11-09C6FU2


VV5Q11-09C6FU2 1 set (F kit 9 station manifold base no.)
*VQ1100-5 4 sets (Single solenoid part no.)
*VQ1200-5 4 sets (Double solenoid part no.)
*VV1000-10A-1 1 set (Blanking plate part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Specify the part numbers for valves and options together beneath the manifold base part number. Besides, when the arrangement will be complicated, specify them by means of the manifold specification sheet.


- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

T kit (Terminal box)

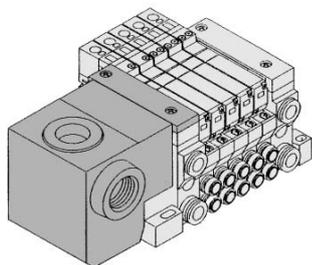


P. 2-4-146

L kit (Lead wire cable)

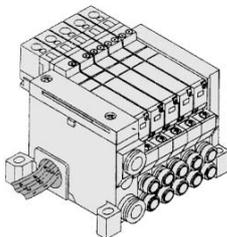

P. 2-4-150

S kit (Serial transmission unit)

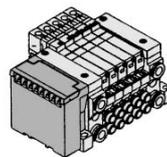

The valve is equipped with an indicator light and surge voltage suppressor, and the voltage is 24 VDC. The dust proof SI unit is also available. Refer to page 2-4-154 for details.

P. 2-4-154


Kit T O Terminal block box 2 to 24 stations⁽²⁾

Kit L 0 With cable (0.6 m) 1 to 8 stations
1 With cable (1.5 m)
2 With cable (3 m)


Kit S	Options	Max. stations
0	Without SI unit	
A	With general type SI unit (Series EX300)	
B	Mitsubishi Electric Corp.: MELSECNET/MINI-S3 Data Link System	
C	OMRON Corp.: SYSBUS Wire System	
D	SHARP Corp.: Satellite I/O Link System	
E	Matsushita Electric Works: MEWNET-F System	
F1	NKE Corp.: Uni-wire System (16 output points)	
G	Rockwell Automation: Allen Bradley Remote I/O (RIO) System	
H	NKE Corp.: Uni-wire H System	
J1	SUNX Corp.: S-LINK System (16 output points)	
J2	SUNX Corp.: S-LINK System (8 output points)	Max. 8 stations
K	Fuji Electric Co.: T-LINK Mini System	
Q	DeviceNet, CompoBus/D (OMRON Corp.)	Max. 16 stations
R1	OMRON Corp.: CompoBus/S System (16 output points)	
R2	OMRON Corp.: CompoBus/S System (8 output points)	Max. 8 stations
V	Mitsubishi Electric Corp.: CC-LINK System	Max. 16 stations

Manifold Option


Blanking plate assembly
VVQ1000-10A-1

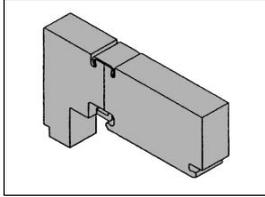


SUP block plate
VVQ1000-16A

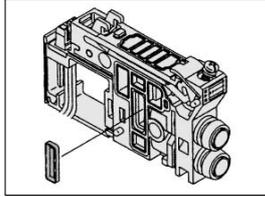


Double check block
VQ1000-FPG-□□

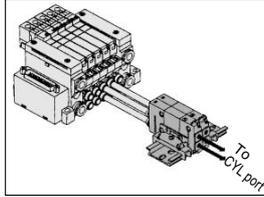


2 stations matching fitting assembly
VVQ1000-52A-C8

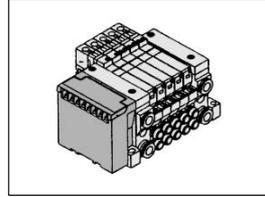


Blanking plug
KQ2P-
□□□□□□

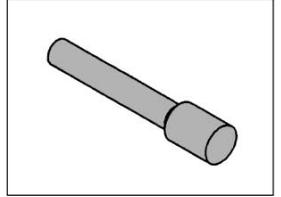


Individual SUP spacer
VVQ1000-P-1-C6

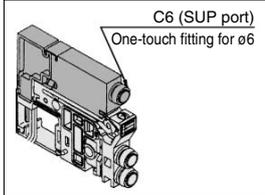


EXH block base assembly
VVQ1000-19A-
□□□□□□□□

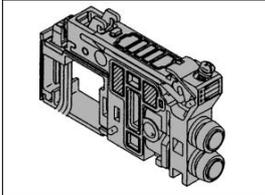


Elbow fitting assembly
VVQ1000-F-L
□□□□□□□□

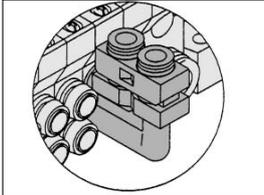


Silencer (For EXH port)
AN200-KM8/AN203-KM8

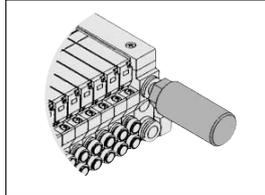


Blanking plate with connector
VVQ1000-1C□-□

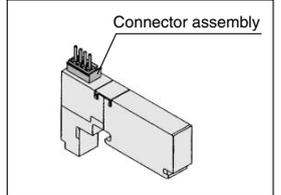


Individual EXH spacer
VVQ1000-R-1-C6

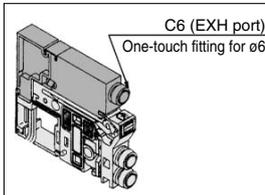


Back pressure check valve assembly [-B]
VVQ1000-18A

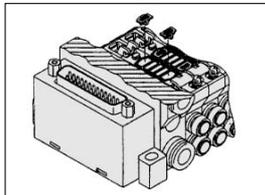

DIN rail mounting bracket [-D]
VVQ1000-57A

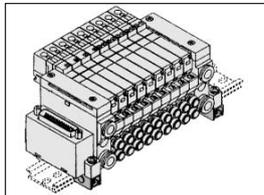


Regulator unit
VVQ1000-AR-1

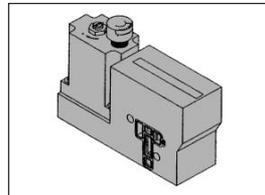


- For cylinder port fittings part no., refer to page 2-4-175.
- For replacement parts, refer to page 2-4-227.


With vacuum ejector unit
[-J□]

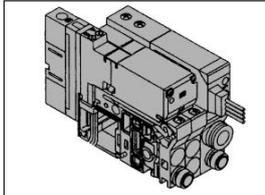


Name plate [-N]
VVQ1000-_{NC} Station (1 to Max. stations)

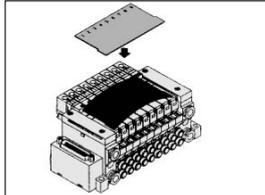

Built-in silencer,
direct exhaust [-S]

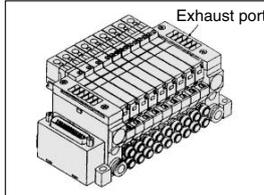

Port plug
VVQ0000-58A

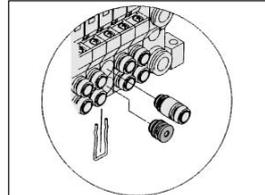

Series VQ2000

Base Mounted Plug-in Unit

How to Order Manifold

Series
2 VQ2000

Manifold
1 Plug-in unit

Cylinder port
08 C6 F U1

Kit type
L8 B4 B6 B8 LM

Option
B D K N R S W

Symbol	Option
Nil	None
B	Back pressure check valve ⁽²⁾
D	DIN rail mounting style
K	Special wiring specifications (Except double wiring) ⁽³⁾
N	With name plate
R	External pilot ⁽⁴⁾
S	Built-in silencer, direct exhaust
W	Enclosure: Dust tight/splashproof type (IP65) [T, L, S and M kits only]

Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -DNR.

Note 2) Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. If not all stations need this check valve, specify the stations where check valves are installed by manifold specification sheet.

Note 3) Specify the wiring specifications in the manifold specification sheet. (Except L kit)

Note 4) Indicate "R" for the valve with external pilot.

Stations

Symbol	Port size	Symbol	Port size
C4	With One-touch fitting for ø4	L8	W/ elbow One-touch fitting ø8 for top piping
C6	With One-touch fitting for ø6	B4	W/ elbow One-touch fitting ø6 for bottom piping
C8	With One-touch fitting for ø8	B6	W/ elbow One-touch fitting ø6 for bottom piping
CM	With mixed size/with port plug ⁽¹⁾	B8	W/ elbow One-touch fitting ø8 for bottom piping
L4	W/ elbow One-touch fitting ø4 for top piping	LM	Mixed size for elbow piping
L6	W/ elbow One-touch fitting ø4 for top piping		

The maximum and minimum number of stations are varied depending on kit. (Refer to the table below.)

Note 1) Specify "Mixed size/with port plug" on the manifold specification sheet.

Note 2) Inch-size One-touch fittings are available. For details, refer to page 2-4-179.

Simple specials are available with SMC Simple Specials System. For details about applicable models, Contact SMC.

Kit/Electrical entry/Cable length

F kit (D-sub connector)

Note 1) 25P

Connector entry direction: Top entry, Side entry

P. 2-4-130

Kit	U0	U1	U2	U3	S0	S1	S2	S3
	Without cable	With cable (1.5 m)	With cable (3 m)	With cable (5 m)				

P kit (Flat ribbon cable connector)

Note 1) 26P

Connector entry direction: Top entry, Side entry

P. 2-4-134

Kit	U0	U1	U2	U3	S0	S1	S2	S3
	Without cable	With cable (1.5 m)	With cable (3 m)	With cable (5 m)				

J kit (Flat ribbon cable connector (20P))

Note 1) 26P

Connector entry direction: Top entry, Side entry

P. 2-4-138

Kit	U0	U1	U2	U3	S0	S1	S2	S3
	Without cable	With cable (1.5 m)	With cable (3 m)	With cable (5 m)				

G kit (Flat ribbon cable connector with power supply terminal block)

Compatible only with 24 VDC valves.

Connector entry direction: Top entry, Side entry

P. 2-4-142

Kit	U0	U1	U2	U3	S0	S1	S2	S3
	Without cable	With cable (1.5 m)	With cable (3 m)	With cable (5 m)				

How to Order Valves

VQ 2 1 0 0 Y 5

Series
2 VQ2000

Type of actuation

1	2 position single (A)(B) (R1)(P1)(R2)	Note A	4 position dual 3 port valve (A) (N.C) 1 (N.C)
	2 position double (A)(B) (R1)(P1)(R2)	Note B	4 position dual 3 port valve (B) (N.O) 1 (N.O)
2	Metal		
	Rubber	Note C	4 position dual 3 port valve (C) (N.C) 1 (N.O)

Enclosure
Nil: Dust-protected
W: Dusttight/Low jetproof type (IP65)

Manual override
Nil: Non-locking push type (tool required)
B: Push-locking slotted type
C: Locking type (Manual)

Light/Surge voltage suppressor
Nil: Yes
E: None
Note: Inapplicable to the S kit.

Coil voltage

1	100 VAC (50/60 Hz)
2	200 VAC (50/60 Hz)
3	110 VAC (50/60 Hz)
4	220 VAC (50/60 Hz)
5	24 VDC
6	12 VDC

Note) 200/220 VAC models are applicable to F and L kits.

Function

Symbol	Specifications	DC	AC
Nil	Standard type	(1.0 W)	Note
H	High pressure type	(1.5 W)	—
Y	Low wattage type	(0.5 W)	—

Note) For power consumption of AC type, refer to page 2-4-129.
Note) For external pilot and negative COM specifications, refer to "Option" on page 2-4-178 to 2-4-179.

Seal
0: Metal seal
1: Rubber seal

Note) For sub-plate single unit type, refer to page 2-4-165.

Note) Rubber seal type only.

How to Order Manifold Assembly

Example

Double solenoid (24 VDC)
VQ2200-5 (4 sets)

Single solenoid (24 VDC)
VQ2100-5 (3 sets)

Blanking plate
VQ2000-10A-1 (1 set)

D-sub connector
AXT100-DS25-030

F kit (D-sub connector)

Manifold base (8 stations)
VV5Q21-08C8FU2


VV5Q21-08C8FU2 ... 1 set (F kit 8 station manifold base no.)
*VQ2100-5 3 sets (Single solenoid part no.)
*VQ2200-5 4 sets (Double solenoid part no.)
*VVQ2000-10A-1 ... 1 set (Blanking plate part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Specify the part numbers for valves and options together beneath the manifold base part number. Besides, when the arrangement will be complicated, specify them by means of the manifold specification sheet.

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD


T kit (Terminal box)

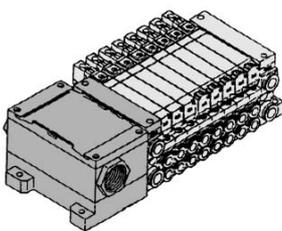

Dust tight/Low jetproof type (IP65) available P. 2-4-146

Kit T	O	Terminal block box	2 to 20 stations ⁽²⁾
-------	---	--------------------	---------------------------------


L kit (Lead wire cable)

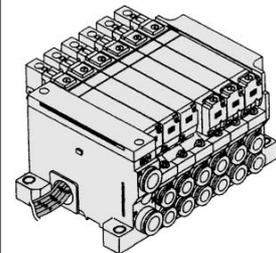

Dust tight/Low jetproof type (IP65) available P. 2-4-150

Kit L	0	With cable (0.6 m)	1 to 8 stations
	1	With cable (1.5 m)	
	2	With cable (3 m)	

S kit (Serial transmission unit)⁽⁴⁾

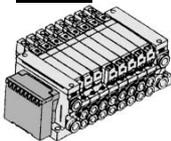


The valve is equipped with an indicator light and surge voltage suppressor, and the voltage is 24 VDC. The dusttight SI unit is available. Refer to page 2-4-154 for details. Dusttight/splashproof type (IP65) is also available. (Except SE and SG.)

P. 2-4-154

Kit S	Option	Description	Max. stations	
Kit S	O	Without SI unit	Max. 16 stations ⁽²⁾	
	A	With general type SI unit (Series EX300)		
	B	Mitsubishi Electric Corp.: MELSECNET/MINI-S3 Data Link System	Max. 16 stations ⁽²⁾	
	BB ⁽⁴⁾	Mitsubishi Electric Corp.: MELSECNET/MINI-S3 Data Link System(2 power supply lines)		
	C	OMRON Corp.: SYSBUS Wire System		
	D	SHARP Corp.: Satellite I/O Link System		
	E	Matsushita Electric Works: MEWNET-F System		
	F1	NKE Corp.: Uni-wire System (16 output points)		
	G	Rockwell Automation: Allen Bradley Remote I/O (RIO) System		
	H	NKE Corp.: Uni-wire H System		
	J1	SUNX Corp.: S-LINK System (16 output points)		
	J2	SUNX Corp.: S-LINK System (8 output points)		Max. 8 stations
	K	Fuji Electric Co.: T-LINK Mini System		Max. 16 stations
	Q	DeviceNet, CompoBus/D (OMRON Corp.)		
	R1	OMRON Corp.: CompoBus/S System (16 output points)		
	R2	OMRON Corp.: CompoBus/S System (8 output points)		
V	Mitsubishi Electric Corp.: CC-LINK System	Max. 16 stations		

M kit (Multi-connector)

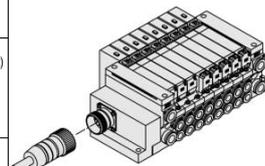


P. 2-4-162

Kit M	0	Without cable	2 to 24 stations ⁽²⁾
	1	With cable (1.5 m)	
	2	With cable (3 m)	


Note 1) Besides the above, F and P kits with different number of pins are available. Refer to page 2-4-177 for details.
 Note 2) For details, refer to page 2-4-178.
 Note 3) Refer to the pages on respective kits for IP65 type. (T, L and S kits)
 Note 4) Kits with IP65 enclosure applicable to input/output are also available. Refer to page 2-4-162 for details.

Manifold Option


Blanking plate assembly
VVQ2000-10A-1

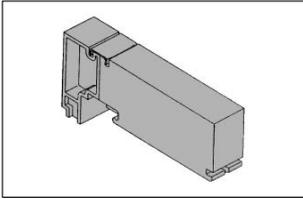


SUP block plate
VVQ2000-16A

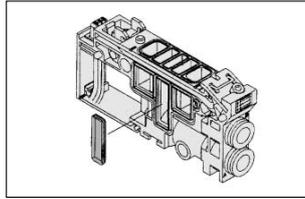


DIN rail mounting bracket [-D]
VVQ2000-57A

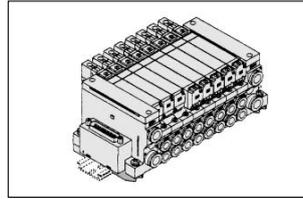


Port plug
VVQ1000-58A

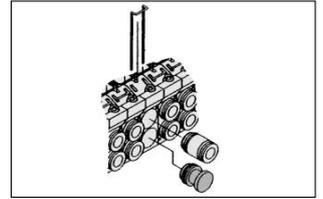


Individual SUP spacer
VVQ2000-P-1-C8

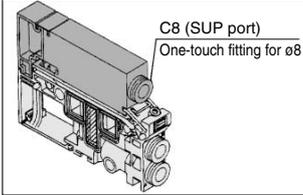


EXH block plate
VVQ2000-19A

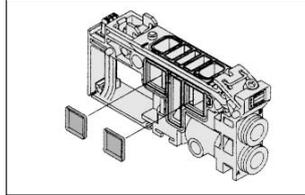


Built-in silencer,
direct exhaust [-S]

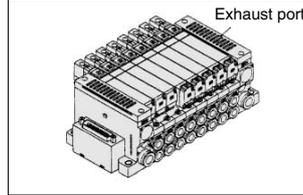


Blanking plug
KQ2P-
ø4
ø6
ø8
ø16

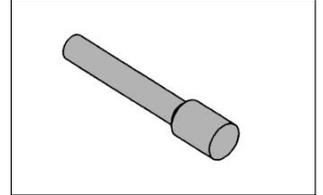


Individual EXH spacer
VVQ2000-R-1-C8

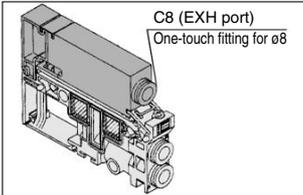

Name plate [-N]
VVQ2000-N-Station (1 to Max. stations)

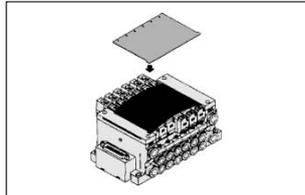


Silencer (For EXH port)
AN200-KM10

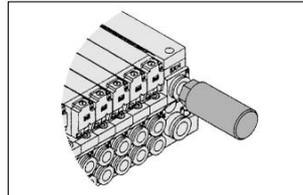


- For cylinder port fittings part no., refer to page 2-4-175.
- For replacement parts, refer to page 2-4-227.


Back pressure check valve assembly [-B]
VVQ2000-18A

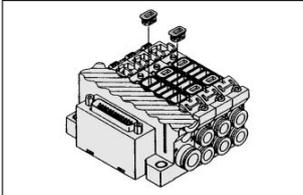


Elbow fitting assembly
VVQ2000-F-L (C4, C6, C8)

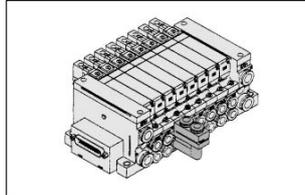

2 stations matching fitting assembly
VVQ2000-52A-C10

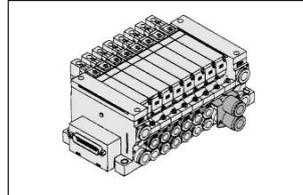

Double check block
VQ2000-FPG-□□

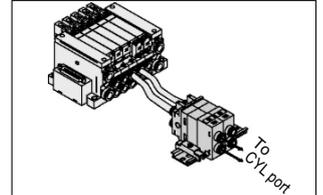

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

Series VQ1000/2000

Base Mounted Plug-in Unit



Model

Series	Number of solenoids	Model		Flow characteristics ⁽¹⁾						Response time (ms) ⁽²⁾			Weight (g)	
				1 → 2/4 (P → A/B)			2/4 → 3/5 (A/B → R1/R2)			Standard: 1 W H: 1.5 W	Low wattage: 0.5 W	AC		
				C [dm ³ /(s·bar)]	b	Cv	C [dm ³ /(s·bar)]	b	Cv					
VQ1000	2 position	Single	Metal seal	VQ1100	0.70	0.15	0.16	0.72	0.25	0.18	12 or less	15 or less	29 or less	64
			Rubber seal	VQ1101	0.85	0.20	0.21	1.0	0.30	0.25	15 or less	20 or less	34 or less	
		Double	Metal seal	VQ1200	0.70	0.15	0.16	0.72	0.25	0.18	10 or less	13 or less	13 or less	
			Rubber seal	VQ1201	0.85	0.20	0.21	1.0	0.30	0.25	15 or less	20 or less	20 or less	
	3 position	Closed center	Metal seal	VQ1300	0.68	0.15	0.16	0.72	0.25	0.18	20 or less	26 or less	40 or less	78
			Rubber seal	VQ1301	0.70	0.20	0.16	0.65	0.42	0.18	25 or less	33 or less	47 or less	
		Exhaust center	Metal seal	VQ1400	0.68	0.15	0.16	0.72	0.25	0.18	20 or less	26 or less	40 or less	
			Rubber seal	VQ1401	0.70	0.20	0.16	1.0	0.30	0.25	25 or less	33 or less	47 or less	
		Pressure center	Metal seal	VQ1500	0.70	0.15	0.16	0.72	0.25	0.18	20 or less	26 or less	40 or less	
			Rubber seal	VQ1501	0.85	0.20	0.21	0.65	0.42	0.18	25 or less	33 or less	47 or less	
4 position	Dual 3 port valve	Rubber seal	VQ1 ^A _B 01 C	0.70	0.20	0.16	0.70	0.20	0.16	25 or less	33 or less	47 or less		
VQ2000	2 position	Single	Metal seal	VQ2100	2.0	0.15	0.46	2.6	0.15	0.60	22 or less	29 or less	49 or less	90
			Rubber seal	VQ2101	2.2	0.28	0.55	3.2	0.30	0.80	24 or less	31 or less	51 or less	
		Double	Metal seal	VQ2200	2.0	0.15	0.46	2.6	0.15	0.60	15 or less	20 or less	20 or less	
			Rubber seal	VQ2201	2.2	0.28	0.55	3.2	0.30	0.80	20 or less	26 or less	26 or less	
	3 position	Closed center	Metal seal	VQ2300	2.0	0.15	0.46	2.0	0.18	0.46	29 or less	38 or less	58 or less	110
			Rubber seal	VQ2301	2.0	0.28	0.49	2.2	0.31	0.60	34 or less	44 or less	64 or less	
		Exhaust center	Metal seal	VQ2400	2.0	0.15	0.46	2.6	0.15	0.60	29 or less	38 or less	58 or less	
			Rubber seal	VQ2401	2.0	0.28	0.49	3.2	0.30	0.80	34 or less	44 or less	64 or less	
		Pressure center	Metal seal	VQ2500	2.4	0.17	0.57	2.0	0.18	0.46	29 or less	38 or less	58 or less	
			Rubber seal	VQ2501	3.2	0.28	0.80	2.2	0.31	0.60	34 or less	44 or less	64 or less	
	4 position	Dual 3 port valve	Rubber seal	VQ2 ^A _B 01 C	1.8	0.28	0.46	1.8	0.28	0.46	34 or less	44 or less	64 or less	




Note 1) Cylinder port size C6: (VQ1000), C8: (VQ2000) without check valve option for prevention of back pressure.

Note 2) As per JIS B 8375-1981 (Supply pressure; 0.5 MPa; with indicator light/surge voltage suppressor; clean air)

The response time is subject to the pressure and quality of the air. The values at the time of ON are given for double types.

Standard Specifications

JIS Symbol

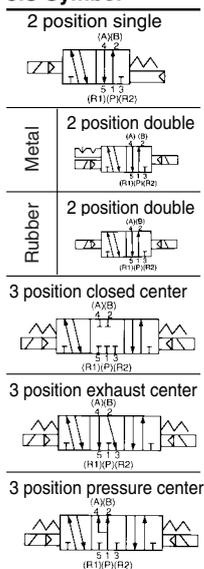

Valve specifications	Valve construction	Metal seal	Rubber seal	
	Fluid	Air/Inert gas	Air/Inert gas	
	Maximum operating pressure	0.7 MPa (High pressure type: 0.8 MPa)		
	Minimum operating pressure	Single	0.1 MPa	0.15 MPa
		Double	0.1 MPa	0.1 MPa
		3 position	0.1 MPa	0.2 MPa
	Ambient and fluid temperature	-10 to 50°C ⁽¹⁾		
	Lubrication	Not required		
	Manual override	Push type/Locking type (Tool required, Manual type) Option		
	Impact/Vibration resistance ⁽²⁾	150/30 m/s ²		
Enclosure	Dust-protected, Dust tight/Low jetproof type (IP65) ⁽⁵⁾			
Solenoid	Coil rated voltage	12, 24 VDC, 100, 110, 200, 220 VAC (50/60 Hz)		
	Allowable voltage fluctuation	±10% of rated voltage		
	Coil insulation type	Class B or equivalent		
	Power consumption (Current)	24 VDC	1 W DC (42 mA), 1.5 W DC (63 mA) ⁽³⁾ , 0.5 W DC (21 mA) ⁽⁴⁾	
		12 VDC	1 W DC (83 mA), 1.5 W DC (125 mA) ⁽³⁾ , 0.5 W DC (42 mA) ⁽⁴⁾	
		100 VAC	Inrush 1.2 VA (12 mA), Holding 1.2 VA (12 mA)	
		110 VAC	Inrush 1.3 VA (12 mA), Holding 1.3 VA (12 mA)	
200 VAC		Inrush 2.4 VA (12 mA), Holding 2.4 VA (12 mA)		
220 VAC	Inrush 2.6 VA (12 mA), Holding 2.6 VA (12 mA)			

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD




Note 1) Use dry air to prevent condensation when operating at low temperatures.
 Note 2) Impact resistance ... No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)
 Vibration resistance ... No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)
 Note 3) Value for high voltage type (1.5 W)
 Note 4) Value for low voltage type (0.5 W)
 Note 5) Dusttight/Low jetproof type (IP65) is available on T, L, S and M kits of VQ2000.


Manifold Specifications

Series	Base model	Type of connection	Porting specifications		Applicable stations ⁽²⁾	Applicable solenoid valve	5 station weight (g)	
			Port location	Port size ⁽¹⁾				
VQ1000	VV5Q11-□□□	<ul style="list-style-type: none"> F kit—D-sub connector P kit—Flat ribbon cable connector J kit—Flat ribbon cable connector (20P) G kit—Flat ribbon cable connector with terminal block T kit—Terminal box L kit—Lead wire cable S kit—Serial transmission unit 	Side	1(P), 3(R)	4(A), 2(B)	F, P, T kits 2 to 24 stations (J, G, S kit) 2 to 16 stations (L kit) 1 to 8 stations	VQ1□00 VQ1□01	628 (Single) 759 (Double, 3 position)
				C8 (ø8) Option (Built-in silencer, direct exhaust)	C3 (ø3.2) C4 (ø4) C6 (ø6) M5 (M5 thread)			
VQ2000	VV5Q21-□□□	<ul style="list-style-type: none"> F kit—D-sub connector P kit—Flat ribbon cable connector J kit—Flat ribbon cable connector (20P) G kit—Flat ribbon cable connector with terminal block T kit—Terminal box L kit—Lead wire cable S kit—Serial transmission unit M kit—Multi-connector 	Side	C10 (ø10) Option (Built-in silencer, direct exhaust)	C4 (ø4) C6 (ø6) C8 (ø8)	(F, P kits) 2 to 24 stations (J, G, S kit) 2 to 16 stations (L kit) 1 to 8 stations (T kit) 2 to 20 stations	VQ2□00 VQ2□01	1051 (Single) 1144 (Double, 3 position)

Note 1) Inch-size One-touch fittings are also available. For details, refer to page 2-4-179.
 Note 2) For details, refer to page 2-4-178.

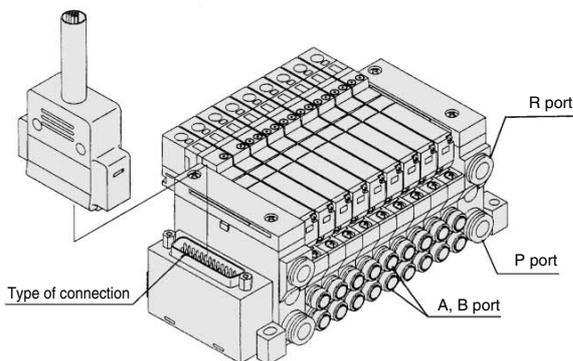


VV5Q11

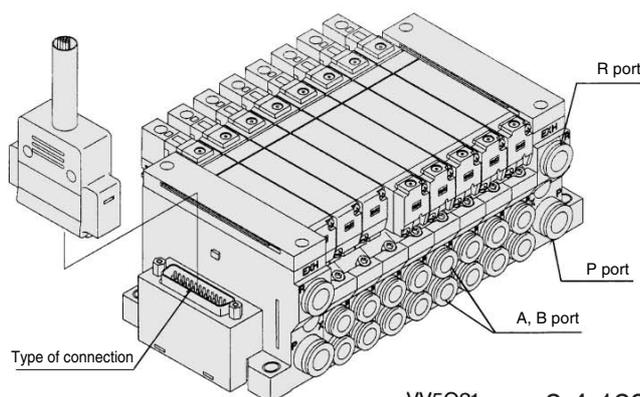

VV5Q21

F VQ1000/2000 Kit (D-sub connector)

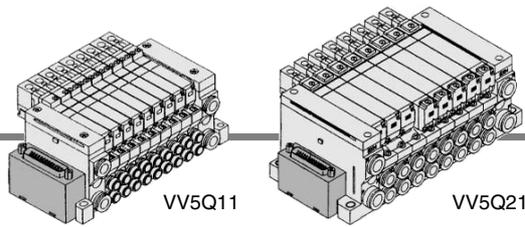

- The D-sub connector reduces installation labor for electrical connections.
- Using the D-sub connector (25P), (15P as an option) conforming to MIL standard permits the use of connectors put on the market and gives a wide interchangeability.
- Top or side receptacle position can be selected in accordance with the available mounting space.
- Maximum stations are 24.

Manifold Specifications


Series	Porting specifications		Applicable stations
	Port location	Port size	
VQ1000	Side	C8	Max. 24 stations
VQ2000	Side	C10	Max. 24 stations

D-sub Connector (25 pins)

Cable Assembly ●

AXT100-DS25-015
030
050

(The D-sub connector cable assembly can be ordered individually or included in a specific manifold model no. Refer to How to Order Manifold.)

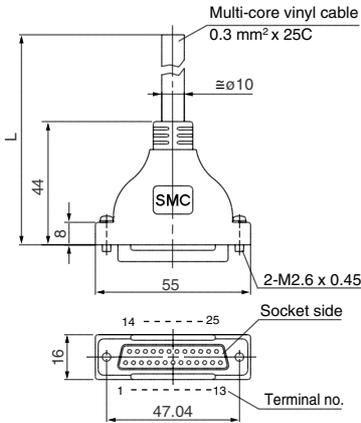

D-sub Connector Cable Assembly (Option)

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-DS25-015	Cable 25 core x 24AWG
3 m	AXT100-DS25-030	
5 m	AXT100-DS25-050	

* For other commercial connectors, use a 25 pins type with female connector conforming to MIL-C-24308.

Connector manufacturers' example

- Fujitsu Limited
- Japan Aviation Electronics Industry, Ltd.
- J.S.T. Mfg. Co., Ltd.
- Hirose Electric Co., Ltd.

Electric Characteristics

Item	Characteristics
Conductor resistance Ω/km, 20°C	65 or less
Voltage limit V, 1 min, AC	1000
Insulation resistance MΩkm, 20°C	5 or more

Note) The min. bending radius of D-sub cable assembly is 20 mm.

Wire Color by Terminal No. of D-sub Connector Cable Assembly

Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Gray	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Gray	Red
24	Black	White
25	White	None



Note) Types with 15 pin are also available. Refer to page 2-4-177 for details.

How to Order Manifold

VV5Q 1 1-08 C6 F U 1-N

Series

1	VQ1000
2	VQ2000

Manifold

1	Plug-in unit
---	--------------

Stations

02	2 stations
⋮	⋮
24	24 stations

Note) For details, refer to page 2-4-178.

Connector entry direction

U	Top entry
S	Side entry

Cylinder port

Symbol	Port size	VQ1000	VQ2000
C3	With One-touch fitting for ø3.2	●	
C4	With One-touch fitting for ø4	●	●
C6	With One-touch fitting for ø6	●	●
C8	With One-touch fitting for ø8		●
M5	M5 thread	●	
CM	With mixed size/with port plug	●	● (3)

Note 1) Insert "L" (top piping) or "B" (bottom piping) for elbow type. Example) B6 (Elbow One-touch fittings for ø6, bottom piping.)
Note 2) Indicate "LM" for models with elbow fittings and mixed cylinder port sizes.
Note 3) Specify "Mixed size/with port plug" in the manifold specification sheet.
Note 4) Inch-size One-touch fittings are available. For details, refer to page 2-4-179.

Cable (Length)

0	Without cable
1	With cable (1.5 m)
2	With cable (3 m)
3	With cable (5 m)

Option

Symbol	Option	VQ1000	VQ2000	Note
Nil	None	●	●	
B	With back pressure check valve	●	●	(2)
D	DIN rail mounting style	●	●	
G1	1 set of regulator unit			
G2	2 sets of regulator unit	●		(3)
G3	3 sets of regulator unit			
J□	With vacuum ejector unit	●		(4)
K	Special wiring specifications (Not double wiring)	●	●	(5)
N	With name plate	●	●	
R	External pilot	●	●	(6)
S	Built-in silencer, direct exhaust	●	●	

Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BRS
Note 2) Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. If not all stations need this check valve, specify the stations where check valves are installed by using the manifold specification sheet.
Note 3) Specify the mounting position in the manifold specification sheet.
Note 4) Refer to page 2-4-170 for the details of ejector mounted styles. A combination of "J" and "N" is unavailable.
Note 5) Specify the wiring by using of the manifold specification sheet.
Note 6) Indicate "R" for the valve with external pilot.

VQC

SQ


VQ0

VQ4


VQ5

VQZ

VQD

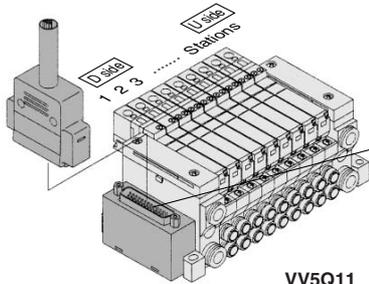

VV5Q11

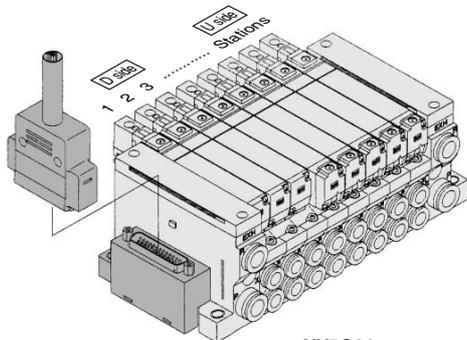

VV5Q21

The total number of stations is tabulated starting from station one on the D side.

Electrical wiring specifications

D-sub connector

D-sub connector assembly
015
AXT100-DS25-030 Wire color
050

Terminal no.	Polarity	Lead wire color	Dot marking
SOL.A, 1	(-)	(+) Black	None
SOL.B, 14	(-)	(+) Yellow	Black
SOL.A, 2	(-)	(+) Brown	None
SOL.B, 15	(-)	(+) Pink	Black
SOL.A, 3	(-)	(+) Red	None
SOL.B, 16	(-)	(+) Blue	White
SOL.A, 4	(-)	(+) Orange	None
SOL.B, 17	(-)	(+) Purple	None
SOL.A, 5	(-)	(+) Yellow	None
SOL.B, 18	(-)	(+) Gray	None
SOL.A, 6	(-)	(+) Pink	None
SOL.B, 19	(-)	(+) Orange	Black
SOL.A, 7	(-)	(+) Blue	None
SOL.B, 20	(-)	(+) Red	White
SOL.A, 8	(-)	(+) Purple	White
SOL.B, 21	(-)	(+) Brown	White
SOL.A, 9	(-)	(+) Gray	Black
SOL.B, 22	(-)	(+) Pink	Red
SOL.A, 10	(-)	(+) White	Black
SOL.B, 23	(-)	(+) Gray	Red
SOL.A, 11	(-)	(+) White	Red
SOL.B, 24	(-)	(+) Black	White
SOL.A, 12	(-)	(+) Yellow	Red
SOL.B, 25	(-)	(+) White	None
COM, 13	(+)	(-) Orange	Red

As the standard electrical wiring specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 12 stations or less, regardless of valve and option types. Mixed single and double wiring is available as an option. For details, refer to page 2-4-178.

Note) When using the negative common specifications, use valves for negative common. (Refer to page 2-4-178.) For details, refer to "Option" on page 2-4-178.

How to Order Valves

VQ 1 1 0 0 Y - 5

Series

1	VQ1000
2	VQ2000

Type of actuation

1	2 position single
2	2 position double
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center

Seal

0	Metal seal
1	Rubber seal

Function

Symbol	Specifications	DC	AC
Nil	Standard type	(1.0 W) ○	(Note) ○
H	High pressure type	(1.5 W) ○	—
Y	Low wattage type	(0.5 W) ○	—

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)

Light/Surge voltage suppressor

Nil	Yes
E	None

Coil voltage

1	100 VAC (50/60 Hz)
2	200 VAC (50/60 Hz)
3	110 VAC (50/60 Hz)
4	220 VAC (50/60 Hz)
5	24 VDC
6	12 VDC

Note) For external pilot and negative COM specifications, refer to "Option" on pages 2-4-178 to 2-4-179.


Note) For power consumption of AC type, refer to page 2-4-129.

How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>
D-sub connector kit with cable (3 m)
VV5Q11-09C6FU2 1 set—Manifold base no.
*VQ1100-5 2 sets—Valve part no. (Stations 1 to 2)
*VQ1200-5 4 sets—Valve part no. (Stations 3 to 6)
*VQ1300-5 2 sets—Valve part no. (Stations 7 to 8)
*VVQ1000-10A-1 1 set—Blanking plate part no. (Station 9)



Prefix the asterisk to the part nos. of the solenoid valve, etc. Write sequentially from the 1st station on the D side. When part nos. are complicated, specified by using the manifold specification sheet.

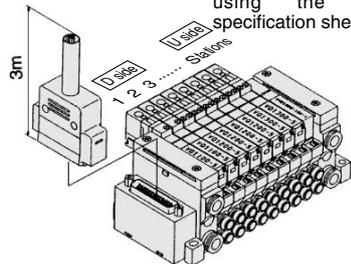

F VQ1000/2000 Kit (D-sub connector)

VQ1000

The broken lines indicate the DIN rail mounting style [-D] and the side entry connection [-FS].

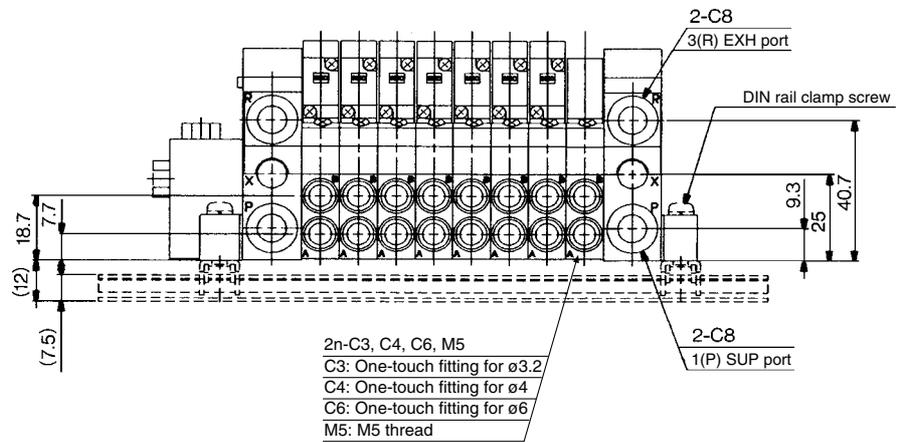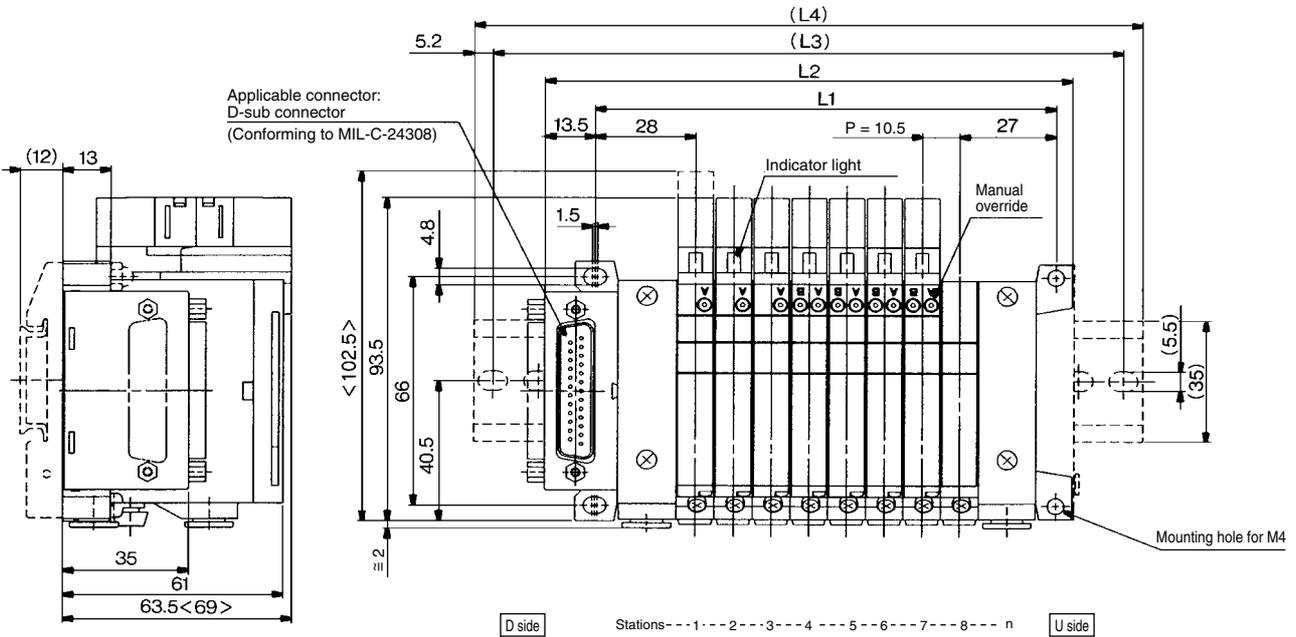

< >: AC

Dimensions

Formula L1 = 10.5n + 44.5, L2 = 10.5n + 62.5 n: Station (Maximum 24 stations)

L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1		65.5	76	86.5	97	107.5	118	128.5	139	149.5	160	170.5	181	191.5	202	212.5	223	233.5	244	254.5	265	275.5	286	296.5
L2		83.5	94	104.5	115	125.5	136	146.5	157	167.5	178	188.5	199	209.5	220	230.5	241	251.5	262	272.5	283	293.5	304	314.5
(L3)		112.5	125	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5	300	312.5	325	325	337.5
(L4)		123	135.5	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5	323	335.5	335.5	348


Vacuum ejector unit style: Formula L1 = 10.5n + 28.7 + (Number of ejector units x 26.7)

L2 = 10.5n + 46.3 + (Number of ejector units x 26.7)


L4 is L2 plus about 30.

VQ2000

The broken lines indicate the DIN rail mounting style [-D] and the side entry connection [-FS].

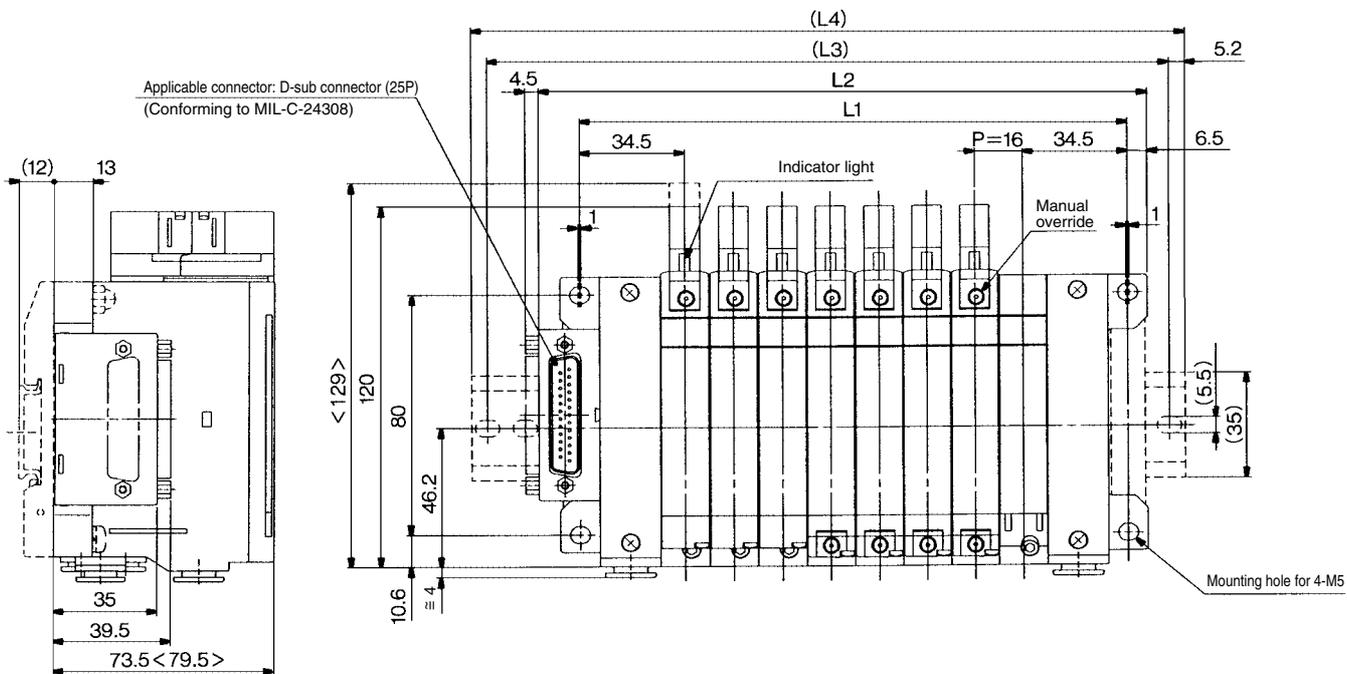

- VQC
- SQ
- VQ0**
- VQ4
- VQ5
- VQZ
- VQD

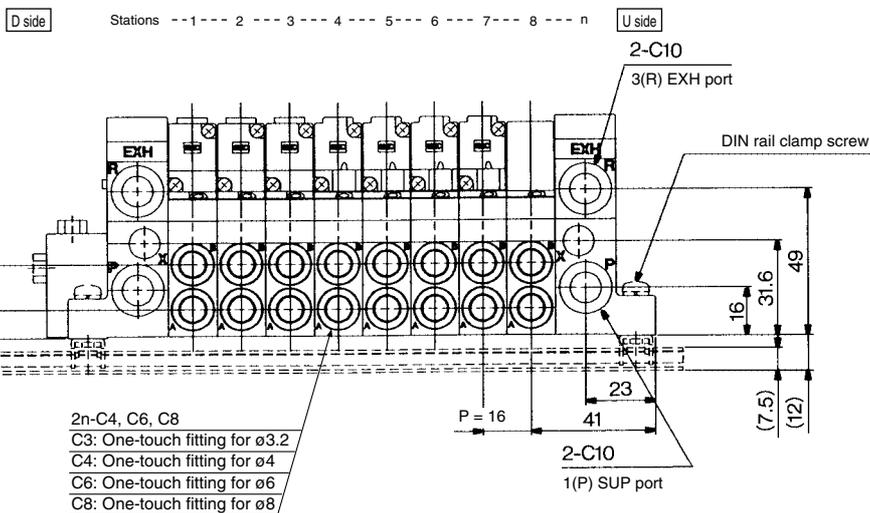


< >: AC

Dimensions

Formula $L1 = 16n + 53$, $L2 = 16n + 73$ n: Station (Maximum 24 stations)

L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1		85	101	117	133	149	165	181	197	213	229	245	261	277	293	309	325	341	357	373	389	405	421	437
L2		105	121	137	153	169	185	201	217	233	249	265	281	297	313	329	345	361	377	393	409	425	441	457
(L3)		137.5	150	162.5	187.5	200	212.5	225	250	262.5	275	300	312.5	325	337.5	350	375	387.5	400	412.5	437.5	450	462.5	487.5
(L4)		148	160.5	173	198	210.5	223	235.5	260.5	273	285.5	310.5	323	335.5	348	360.5	385.5	398	410.5	423	448	460.5	473	498

P VQ1000/2000 Kit (Flat ribbon cable connector)

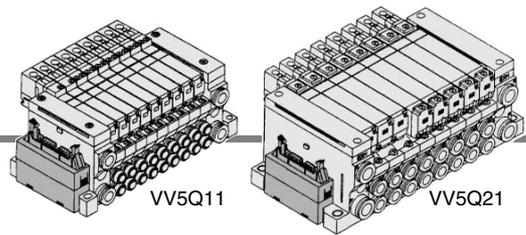


- MIL flat ribbon cable connector reduces installation labor for electrical connection.
- Using the connector for flat ribbon cable (26P) conforming to MIL standard permits the use of connectors put on the market and gives a wide interchangeability.
- Top or side receptacle position can be selected in accordance with the available mounting space.
- Maximum stations are 24.

Manifold Specifications

Series	Porting specifications		Applicable stations
	Port location	Port size	
VQ1000	Side	1(P), 3(R) 4(A), 2(B)	Max. 24 stations
VQ2000	Side	C8 C4, C6, C8	Max. 24 stations

Flat Ribbon Cable (26 pins)

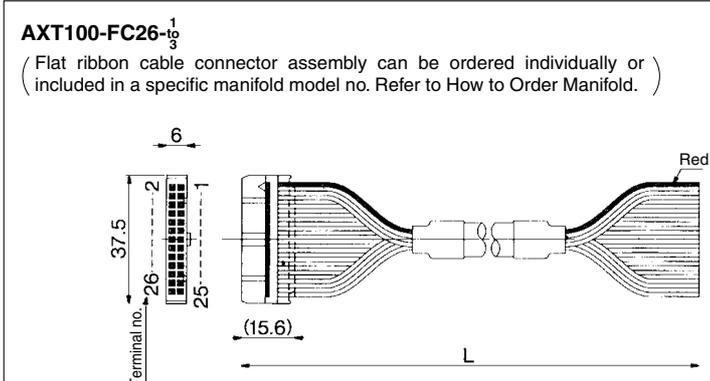

AXT100-FC26-1
 (Flat ribbon cable connector assembly can be ordered individually or included in a specific manifold model no. Refer to How to Order Manifold.)

Flat Ribbon Cable Connector Assembly (Option)


Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-FC26-1	Cable 26 core x 28AWG
3 m	AXT100-FC26-2	
5 m	AXT100-FC26-3	

* For other commercial connectors, use a 26 pins type with strain relief conforming to MIL-C-83503.

Connector manufacturers' example


- Hirose Electric Co., Ltd.
- Sumitomo 3M Limited
- Fujitsu Limited
- Japan Aviation Electronics Industry, Ltd.
- J.S.T. Mfg. Co., Ltd.
- Oki Electric Cable Co., Ltd.

Cable assembly

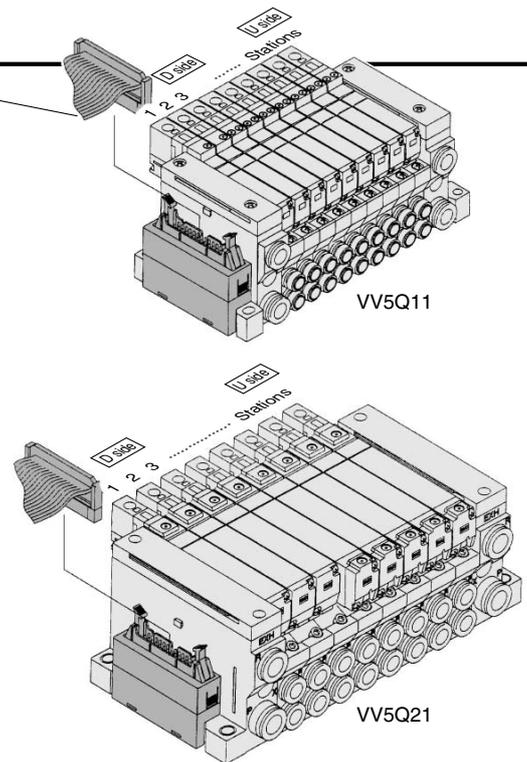

The total number of stations is tabulated starting from one on the D side.

How to Order Manifold

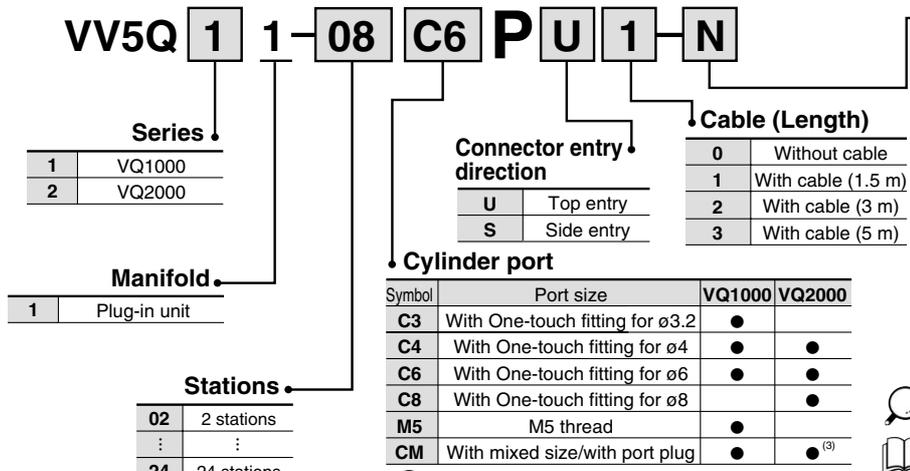

Option

Symbol	Option	VQ1000	VQ2000	Note
Nil	None	●	●	
B	Back pressure check valve	●	●	(2)
D	DIN rail mounting style	●	●	
G1	1 set of regulator unit			(3)
G2	2 sets of regulator unit	●		
G3	3 sets of regulator unit			
J□	With vacuum ejector unit	●		(4)
K	Special Wiring Specifications (Not double wiring)	●	●	(5)
N	With name plate	●	●	
R	External pilot	●	●	(6)
S	Built-in silencer, direct exhaust	●	●	

- Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BRS
- Note 2) Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. If not all stations need this check valve, specify the stations where check valves are installed by using the manifold specification sheet.
- Note 3) Specify the mounting position in the manifold specification sheet.
- Note 4) Refer to page 2-4-170 for the details of ejector mounted styles. A combination of "J" and "N" is unavailable.
- Note 5) Specify the wiring specifications in the manifold specification sheet.
- Note 6) Indicate "R" for the valve with external pilot.

Note) For details, refer to page 2-4-178.

- Note 1) Insert "L" (top piping) or "B" (bottom piping) for elbow type. Example) B6 (Elbow One-touch fittings for ø6, bottom piping.)
- Note 2) Indicate "LM" for models with elbow fittings and mixed cylinder port sizes.
- Note 3) Specify "Mixed size/with port plug" in the manifold specification sheet.
- Note 4) Inch-size One-touch fittings are available. For details, refer to page 2-4-179.



VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

● Electrical wiring specifications

Terminal no.	Polarity
SOL.A. 1	(-) (+)
SOL.B. 2	(-) (+)
SOL.A. 3	(-) (+)
SOL.B. 4	(-) (+)
SOL.A. 5	(-) (+)
SOL.B. 6	(-) (+)
SOL.A. 7	(-) (+)
SOL.B. 8	(-) (+)
SOL.A. 9	(-) (+)
SOL.B. 10	(-) (+)
SOL.A. 11	(-) (+)
SOL.B. 12	(-) (+)
SOL.A. 13	(-) (+)
SOL.B. 14	(-) (+)
SOL.A. 15	(-) (+)
SOL.B. 16	(-) (+)
SOL.A. 17	(-) (+)
SOL.B. 18	(-) (+)
SOL.A. 19	(-) (+)
SOL.B. 20	(-) (+)
SOL.A. 21	(-) (+)
SOL.B. 22	(-) (+)
SOL.A. 23	(-) (+)
SOL.B. 24	(-) (+)
COM. 25	(+) (-)
COM. 26	(+) (-)

As the standard electrical wiring specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 12 stations or less, regardless of valve and option types. Mixed single and double wiring is available as an option. For details, refer to page 2-4-178.

Note) When using the negative common specifications, use valves for negative common. (Refer to page 2-4-178.) For details, refer to "Option" on page 2-4-178.

How to Order Valves

VQ **1** **1** **0** **0** **Y** - **5** [] []

Series

1	VQ1000
2	VQ2000

Type of actuation

1	2 position single
2	2 position double
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)

Light/Surge voltage suppressor

Nil	Yes
E	None

Coil voltage

1	100 VAC (50/60 Hz)
3	110 VAC (50/60 Hz)
5	24 VDC
6	12 VDC

Function

Symbol	Specifications	DC	AC
Nil	Standard type	(1.0 W) ○	(Note) ○
H	High pressure type	(1.5 W) ○	—
Y	Low wattage type	(0.5 W) ○	—

Seal

0	Metal seal
1	Rubber seal

Note) For external pilot and negative COM specifications, refer to "Option" on pages 2-4-178 to 2-4-179.


Note) For power consumption of AC type, refer to page 2-4-129.

How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.


<Example>
 Flat ribbon cable kit with 3 m cable
 VV5Q11-09C6PU2 ...1 set—Manifold base no.
 *VQ1100-52 sets—Valve part no. (Stations 1 to 2)
 *VQ1200-54 sets—Valve part no. (Stations 3 to 6)
 *VQ1300-52 sets—Valve part no. (Stations 7 to 8)
 *VVQ1000-10A-11 set—Blanking plate no. (Station 9)

Prefix the asterisk to the part nos. of the solenoid valve, etc. Write sequentially from the 1st station on the D side. When part nos. written collectively are complicated, specified by using the manifold specification sheet.

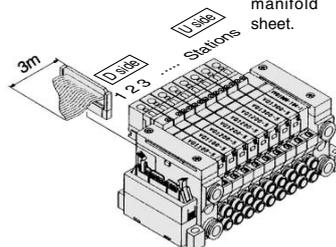


VQ2000

The broken lines indicate the DIN rail mounting style [-D] and the side entry connection [-PS].

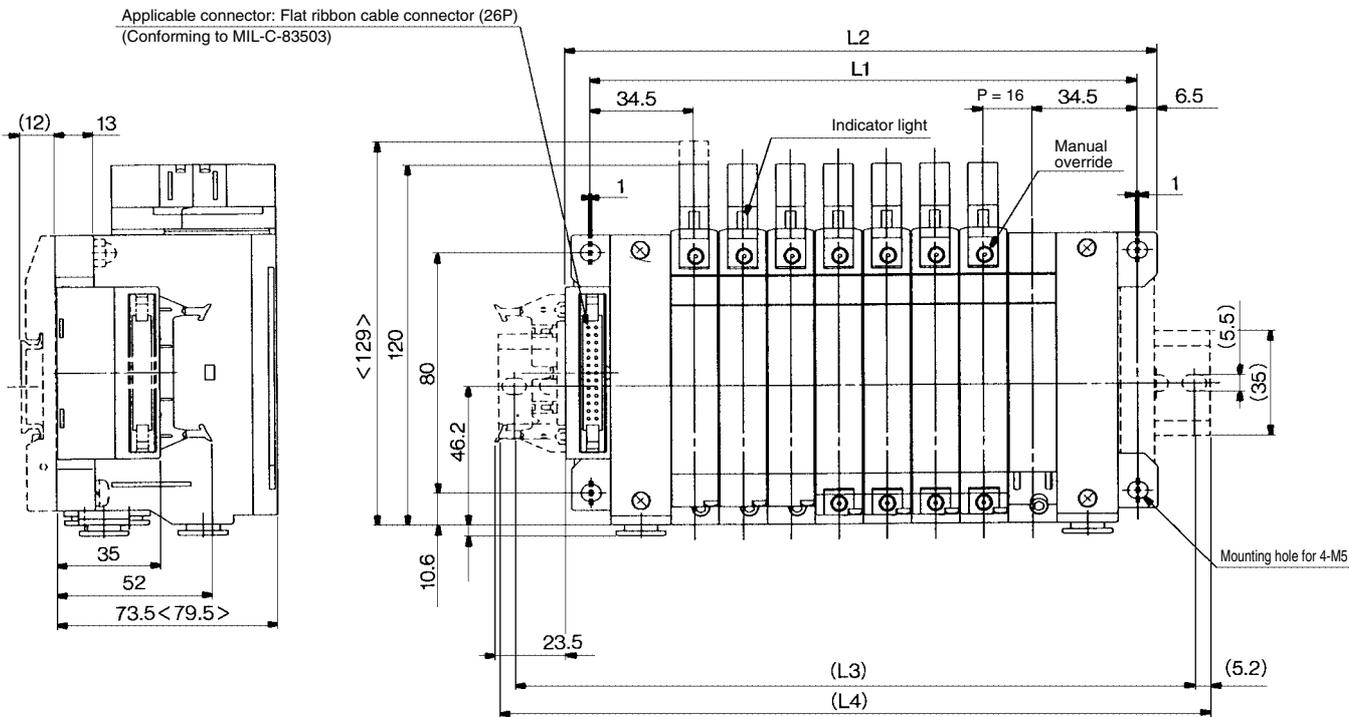

- VQC
- SQ
- VQ0**
- VQ4
- VQ5
- VQZ
- VQD

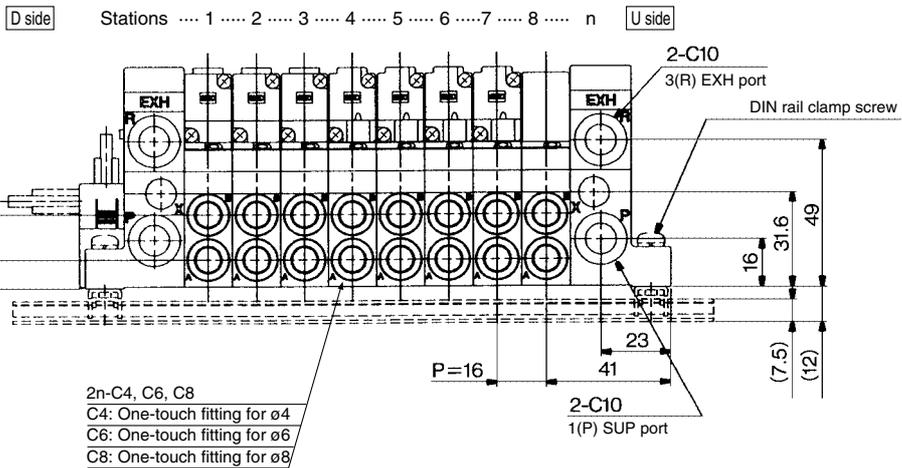


< >: AC

Dimensions

Formula L1 = 16n + 53, L2 = 16n + 68 n: Station (Maximum 24 stations)

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	85	101	117	133	149	165	181	197	213	229	245	261	277	293	309	325	341	357	373	389	405	421	437
L2	100	116	132	148	164	180	196	212	228	244	260	276	292	308	324	340	356	372	388	404	420	436	452
(L3)	125	150	162.5	175	187.5	212.5	225	237.5	262.5	275	287.5	300	312.5	337.5	350	362.5	387.5	400	412.5	425	450	462.5	475
(L4)	135.5	160.5	173	185.5	198	223	235.5	248	273	285.5	298	310.5	323	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5

J VQ1000/2000 Kit (Flat ribbon cable connector)

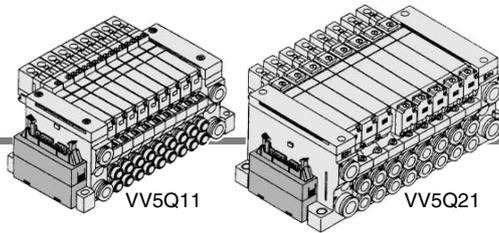

- MIL flat ribbon cable connector reduces installation labor for electrical connection.
- The use of flat ribbon cable connectors (20P) conforming to MIL standards provides a wide range of compatibility with conventional connectors.
- Top or side receptacle position can be selected in accordance with the available mounting space.
- Maximum stations are 16.

Manifold Specifications

Series	Porting specifications		Applicable stations
	Port location	Port size	
VQ1000	Side	1(P), 3(R) 4(A), 2(B)	Max. 16 stations
VQ2000	Side	C8 C4, C6, C8	Max. 16 stations

Flat Ribbon Cable (26 pins)

AXT100-FC20- $\frac{1}{3}$
 (Flat ribbon cable connector assembly can be ordered individually or included in a specific manifold model no. Refer to How to Order Manifold.)


Flat Ribbon Cable Connector Assembly (Option)

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-FC20-1	Cable 20 core x 28AWG
3 m	AXT100-FC20-2	
5 m	AXT100-FC20-3	

* For other commercial connectors, use a 20 pins with strain relief conforming to MIL-C-83503.

Connector manufacturers' example

- Hirose Electric Co., Ltd.
- Sumitomo 3M Limited
- Fujitsu Limited
- Japan Aviation Electronics Industry, Ltd.
- J.S.T. Mfg. Co., Ltd.
- Oki Electric Cable Co., Ltd.

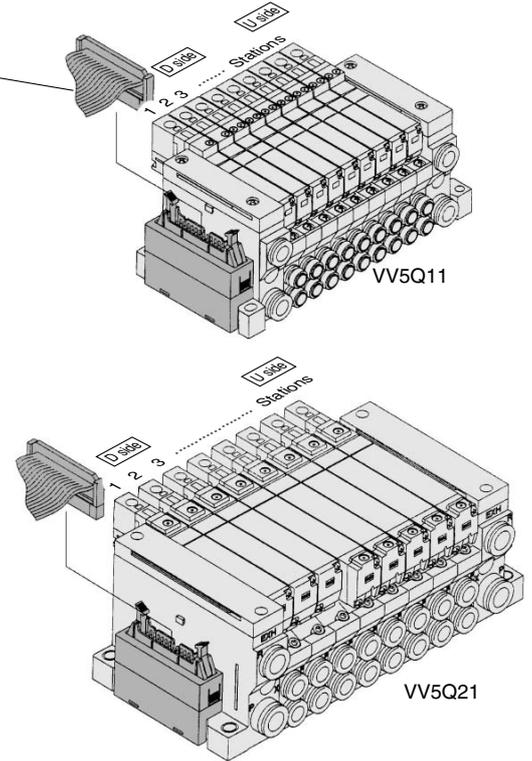

The total number of stations is tabulated starting from one on the D side.

How to Order Manifold

VV5Q 1 1-08 C6 J U 1-N

Series

1	VQ1000
2	VQ2000

Manifold

1	Plug-in unit
---	--------------

Stations

02	2 stations
...	...
16	16 stations

Connector entry direction

U	Top entry
S	Side entry

Cable (Length)

0	Without cable
1	With cable (1.5 m)
2	With cable (3 m)
3	With cable (5 m)

Cylinder port

Symbol	Port size	VQ1000	VQ2000
C3	With One-touch fitting for ø3.2	●	
C4	With One-touch fitting for ø4	●	●
C6	With One-touch fitting for ø6	●	●
C8	With One-touch fitting for ø8		●
M5	M5 thread	●	
CM	With mixed size/with port plug	●	● ⁽³⁾

Option

Symbol	Option	VQ1000	VQ2000	Note
Nil	None	●	●	
B	Back pressure check valve	●	●	(2)
D	DIN rail mounting style	●	●	
G1	1 set of regulator unit			(3)
G2	2 sets of regulator unit	●		
G3	3 sets of regulator unit			
J	With vacuum ejector unit	●		(4)
K	Special Wiring Specifications (Not double wiring)	●	●	(5)
N	With name plate	●	●	
R	External pilot	●	●	(6)
S	Built-in silencer, direct exhaust	●	●	

Note) For details, refer to page 2-4-178.

- Note 1) Insert "L" (top piping) or "B" (bottom piping) for elbow type. Example) B6 (Elbow One-touch fittings for ø6, bottom piping.)
- Note 2) Indicate "LM" for models with elbow fittings and mixed cylinder port sizes.
- Note 3) Specify "Mixed size/with port plug" in the manifold specification sheet.
- Note 4) Inch-size One-touch fittings are available. For details, refer to page 2-4-179.

- Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BRS
- Note 2) Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. If not all stations need this check valve, specify the stations where check valves are installed by using the manifold specification sheet.
- Note 3) Specify the mounting position in the manifold specification sheet.
- Note 4) Refer to page 2-4-170 for the details of ejector mounted styles. A combination of "J" and "N" is unavailable.
- Note 5) Specify the wiring specifications in the manifold specification sheet.
- Note 6) Indicate "R" for the valve with external pilot.

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

• Electrical wiring specifications

Flat ribbon cable connector

	Terminal no.	Polarity	
1 station	SOLA	(-)	(+)
	SOLB	(-)	(+)
2 stations	SOLA	(-)	(+)
	SOLB	(-)	(+)
3 stations	SOLA	(-)	(+)
	SOLB	(-)	(+)
4 stations	SOLA	(-)	(+)
	SOLB	(-)	(+)
5 stations	SOLA	(-)	(+)
	SOLB	(-)	(+)
6 stations	SOLA	(-)	(+)
	SOLB	(-)	(+)
7 stations	SOLA	(-)	(+)
	SOLB	(-)	(+)
8 stations	SOLA	(-)	(+)
	SOLB	(-)	(+)
	4		
	3		
	COM	(+)	(-)
	COM	(+)	(-)

Positive common specifications Negative common specifications ^{Note)}

As the standard electrical wiring specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 12 stations or less, regardless of valve and option types. Mixed single and double wiring is available as an option. For details, refer to page 2-4-178.

Note) When using the negative common specifications, use valves for negative common. (Refer to page 2-4-178.) For details, refer to "Option" on page 2-4-178.

How to Order Valves

VQ 1 1 0 0 Y 5

Series

1	VQ1000
2	VQ2000

Type of actuation

1	2 position single
2	2 position double
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center

Seal

0	Metal seal
1	Rubber seal

Function

Symbol	Specifications	DC
Nil	Standard type	(1.0 W) ○
H	High pressure type	(1.5 W) ○
Y	Low wattage type	(0.5 W) ○

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)

Light/Surge voltage suppressor

Nil	Yes
E	None

Coil voltage

5	24 VDC
---	--------


Note) For external pilot and negative COM specifications, refer to "Option" on pages 2-4-178 to 2-4-179.

How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>
 Flat ribbon cable kit with 3 m cable
 VV5Q11-09C6PU2 ... 1 set—Manifold base no.
 *VQ1100-5 2 sets—Valve part no. (Stations 1 to 2)
 *VQ1200-5 4 sets—Valve part no. (Stations 3 to 6)
 *VQ1300-5 2 sets—Valve part no. (Stations 7 to 8)
 *VVQ1000-10A-1 1 set—Blanking plate part no. (Station 9)


Prefix the asterisk to the part nos. of the solenoid valve, etc. When ordering, specify the part nos. in order from the 1st. station in the D side. When part nos. written collectively are complicated, specify by using the manifold specification sheet.

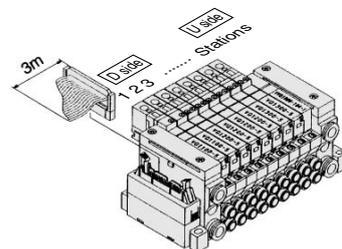

J VQ1000/2000 Kit (Flat ribbon cable connector)

VQ1000

The broken lines indicate the DIN rail mounting style [-D] and the side entry connection [-PS].

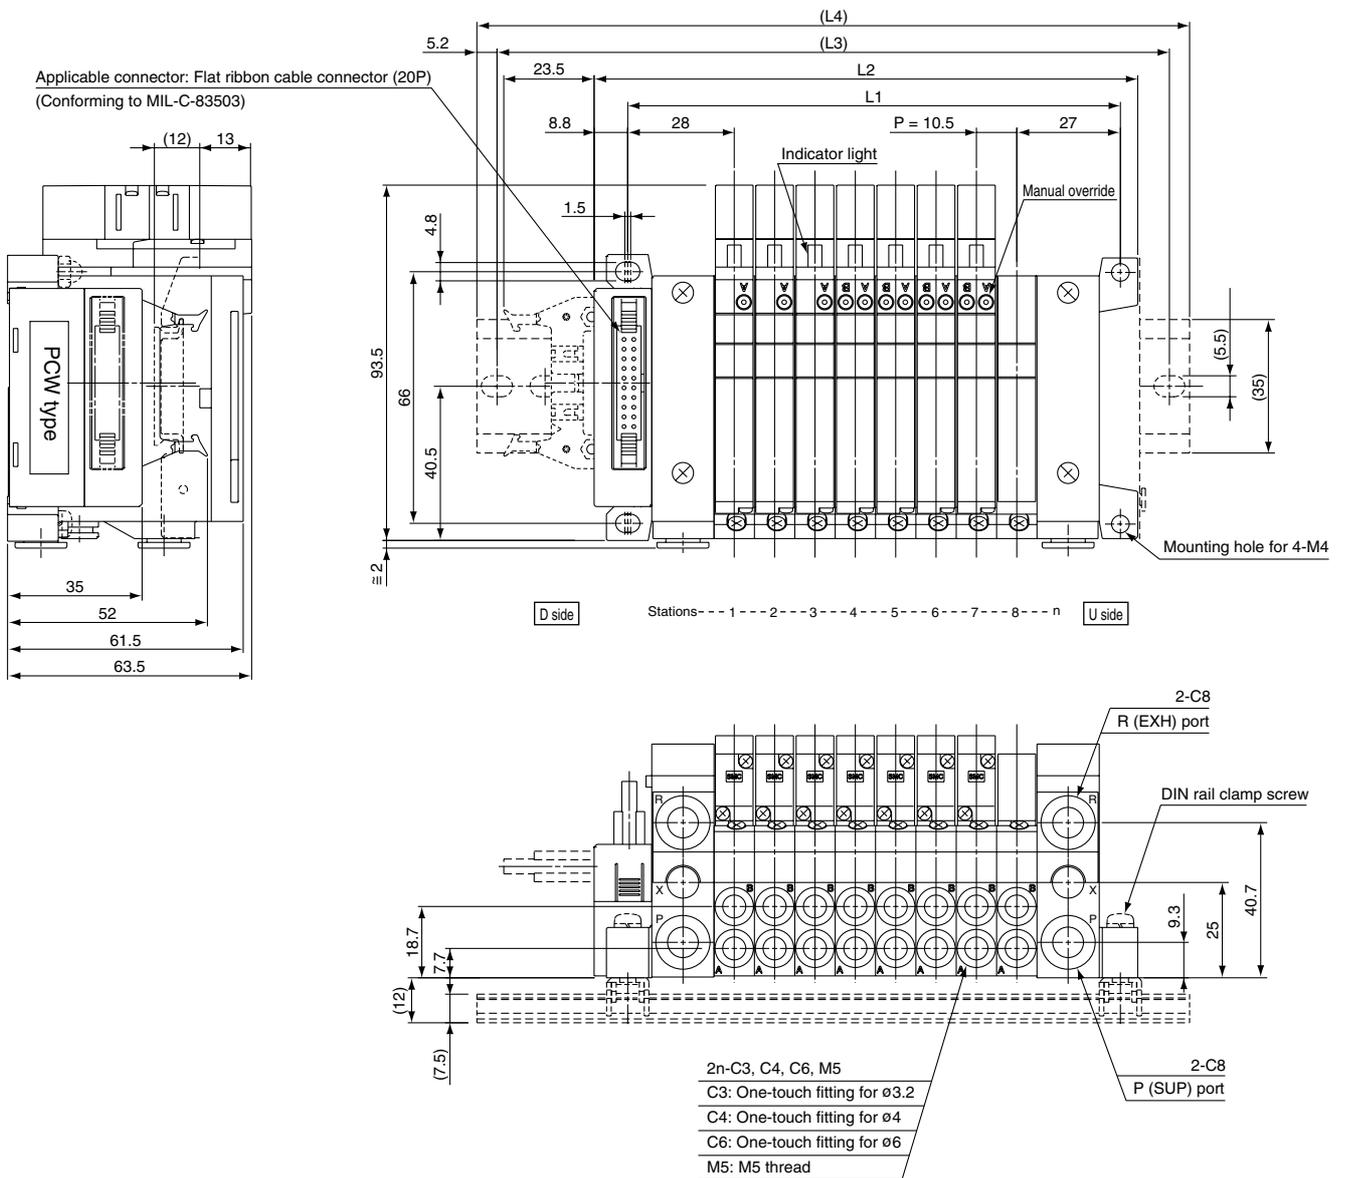


Dimensions

Formula $L1 = 10.5n + 44.5$, $L2 = 10.5n + 57.5$ n: Station (Maximum 16 stations)


L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1		65.5	76	86.5	97	107.5	118	128.5	139	149.5	160	170.5	181	191.5	202	212.5
L2		78.5	89	99.5	110	120.5	131	141.5	152	162.5	173	183.5	194	204.5	215	225.5
(L3)		112.5	125	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	225	237.5	250
(L4)		123	135.5	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	235.5	248	260.5

VQ2000

The broken lines indicate the DIN rail mounting style [-D] and the side entry connection [-PS].

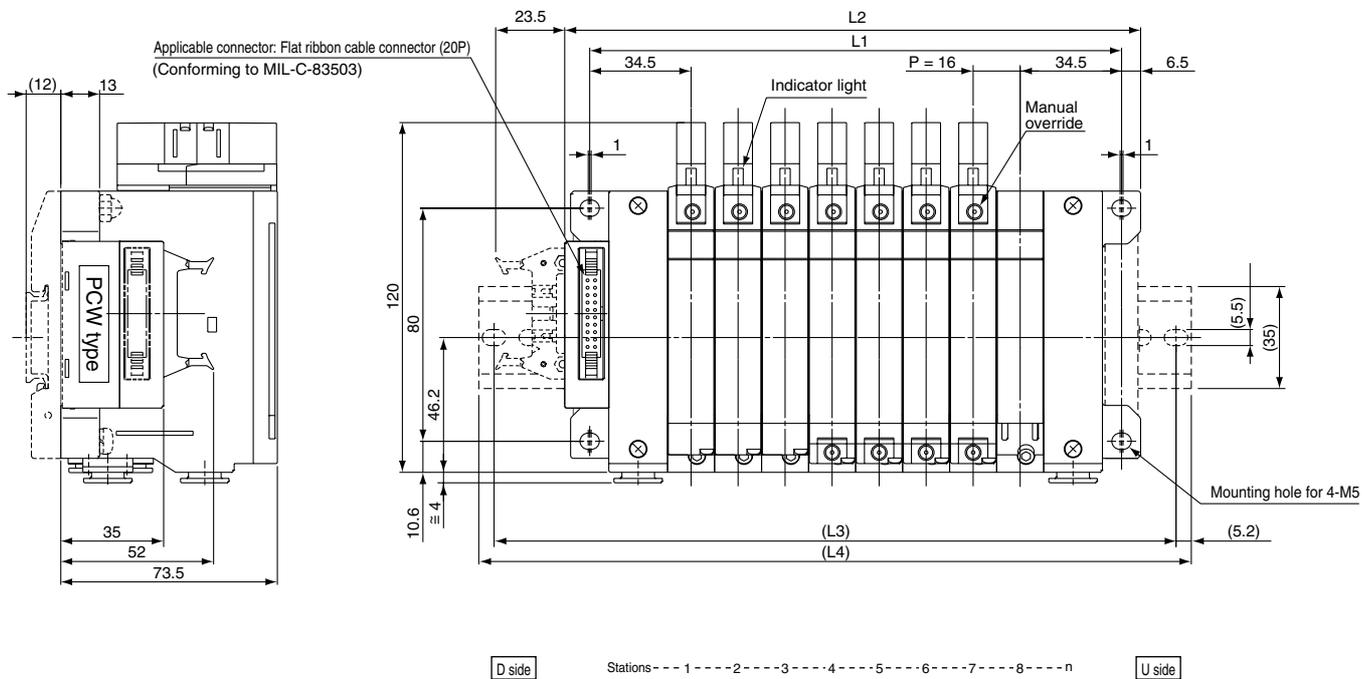

- VQC
- SQ
- VQ0**
- VQ4
- VQ5
- VQZ
- VQD

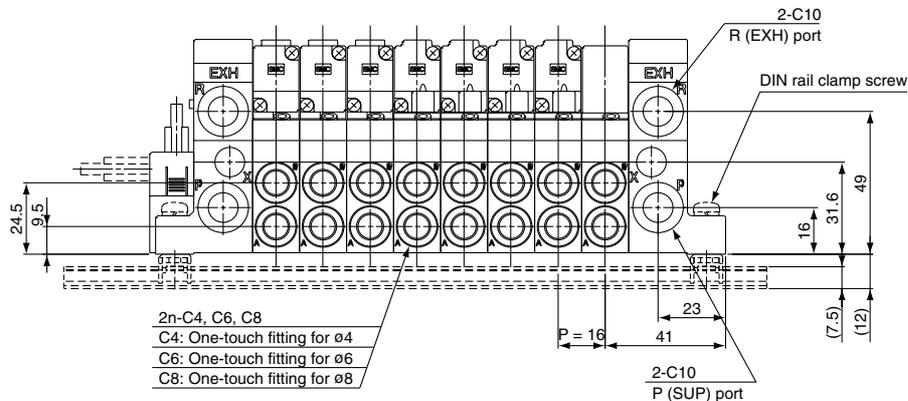


Dimensions

Formula L1 = 16n + 53, L2 = 16n + 68 n: Station (Maximum 16 stations)

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	85	101	117	133	149	165	181	197	213	229	245	261	277	293	309
L2	100	116	132	148	164	180	196	212	228	244	260	276	292	308	324
(L3)	125	150	162.5	175	187.5	212.5	225	237.5	262.5	275	287.5	300	312.5	337.5	350
(L4)	135.5	160.5	173	185.5	198	223	235.5	248	273	285.5	298	310.5	323	348	360.5



VQ1000/2000 Kit (Flat ribbon cable connector with terminal block)

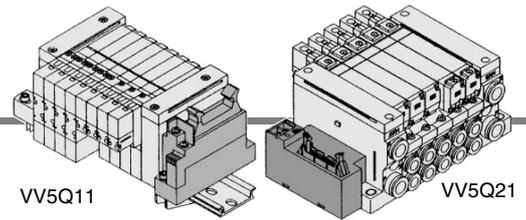

- Terminal block for power supply equipped with a 20 pins flat cable connection for rationalized connection of valves.
- Solenoid valves and power supply can be connected by the same cable to a specific output unit that requires power supply from the output section to the internal circuit. (SI unit)
- Maximum stations are 16.

Manifold Specifications

Series	Porting specifications		Applicable stations
	Port location	Port size	
VQ1000	Side	1(P), 3(R) 4(A), 2(B)	Max. 16 stations
VQ2000	Side	C8 C4, C6, C8	Max. 16 stations

Flat Ribbon Cable (20 pins)

Cable assembly

AXT100-FC20- $\frac{1}{3}$
 (Flat ribbon cable connector assembly can be ordered individually or included in a specific manifold model no. Refer to How to Order Manifold.)


Flat Ribbon Cable Connector Assembly (Option)

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-FC20-1	Cable 20 core x 28AWG
3 m	AXT100-FC20-2	
5 m	AXT100-FC20-3	

* For other commercial connectors, use a 20 pins with strain relief conforming to MIL-C-83503.

Connector manufacturers' example

- Hirose Electric Co., Ltd.
- Japan Aviation Electronics Industry, Ltd.
- Oki Electric Cable Co. Ltd.
- Sumitomo 3M Limited
- J.S.T. Mfg. Co., Ltd.
- Fujitsu Limited

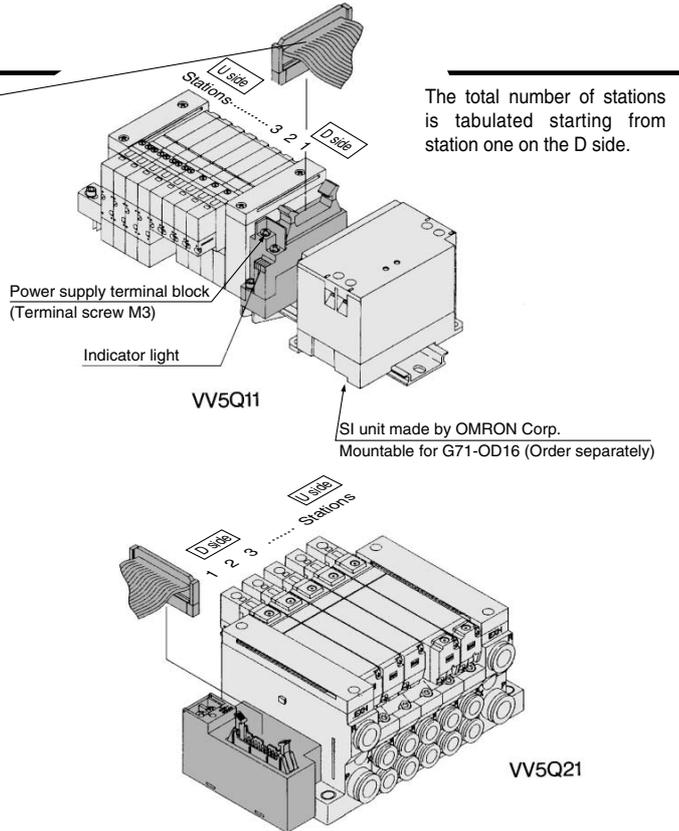

How to Order Manifold

VV5Q 1 1-08 C6 G N

Series

1	VQ1000
2	VQ2000

Manifold

1	Plug-in unit
---	--------------

Stations

02	2 stations
...	...
16 ^(Note)	16 stations

Cable (Length)

0	Without cable
1	Cable length 1.5 m
2	Cable length 3 m
3	Cable length 5 m

Connector entry direction, Top entry

Nil	For VQ1000
U	For VQ2000

Cylinder port

Symbol	Port size	VQ1000	VQ2000
C3	With One-touch fitting for ø3.2	●	
C4	With One-touch fitting for ø4	●	●
C6	With One-touch fitting for ø6	●	●
C8	With One-touch fitting for ø8		●
M5	M5 thread	●	
CM	With mixed size/with port plug	●	●

Option

Symbol	Option	VQ1000	VQ2000	Note
Nil	None	●	●	
B	Back pressure check valve	●	●	(2)
D	DIN rail mounting style	●	●	
G1	1 set of regulator unit			
G2	2 sets of regulator unit	●		(3)
G3	3 sets of regulator unit			
J	With vacuum ejector unit	●		(4)
K	Special Wiring Specifications (Not double wiring)	●	●	(5)
N	With name plate	●	●	
R	External pilot	●	●	(6)
S	Built-in silencer, direct exhaust	●	●	

- Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BRS
- Note 2) Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. If not all stations need this check valve, specify the stations where check valves are installed by using the manifold specification sheet.
- Note 3) Specify the mounting position in the manifold specification sheet.
- Note 4) Refer to page 2-4-170 for the details of ejector mounted styles. A combination of "J" and "N" is unavailable.
- Note 5) Specify the wiring specifications in the manifold specification sheet.
- Note 6) Indicate "R" for the valve with external pilot.

VQC

SQ

VQ0


VQ4

VQ5


VQZ

VQD

● Connector assembly

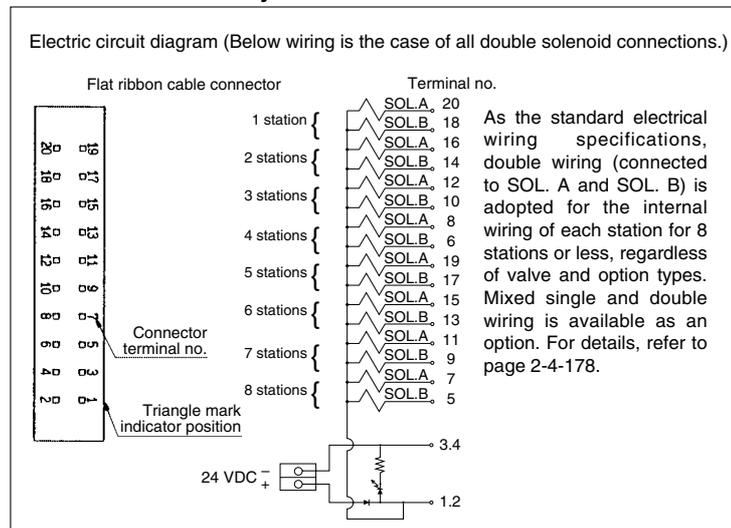

How to Order Valves

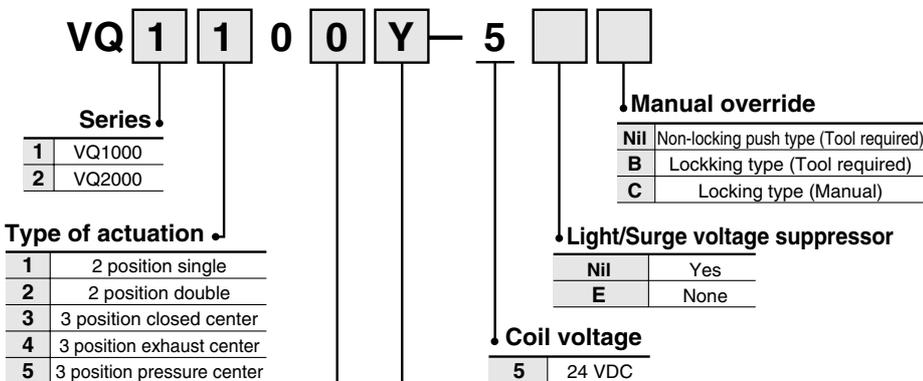

Note) For external pilot specifications, refer to "Option" on page 2-4-179.

How to Order Manifold Assembly


Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>

Flat ribbon cable with power supply terminal block and 3 m cable

- VV5Q11-08C6G2 ... 1 set—Manifold base no.
- *VQ1100-5 4 sets—Valve part no. (Stations 1 to 4)
- *VQ1200-5 1 set—Valve part no. (Station 5)
- *VQ1300-5 3 sets—Valve part no. (Stations 6 to 8)



Prefix the asterisk to the part nos. of the solenoid valve, etc. Write sequentially from the 1st station on the D side. When part nos. written collectively are complicated, specify by using the manifold specification sheet.

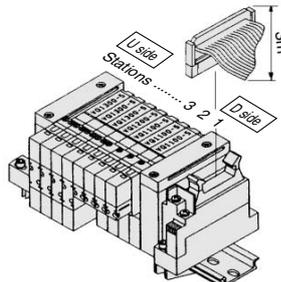

G VQ1000/2000 Kit (Flat ribbon cable connector with terminal block)

VQ1000

The broken lines and dimensions in parentheses indicate DIN rail mounting style [-D].

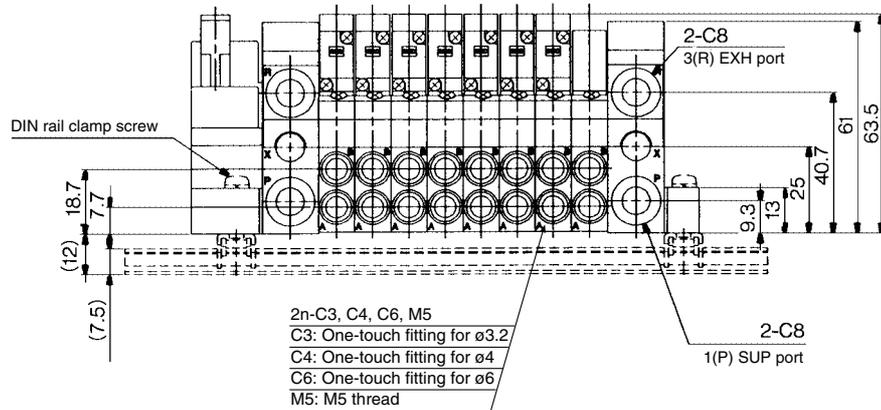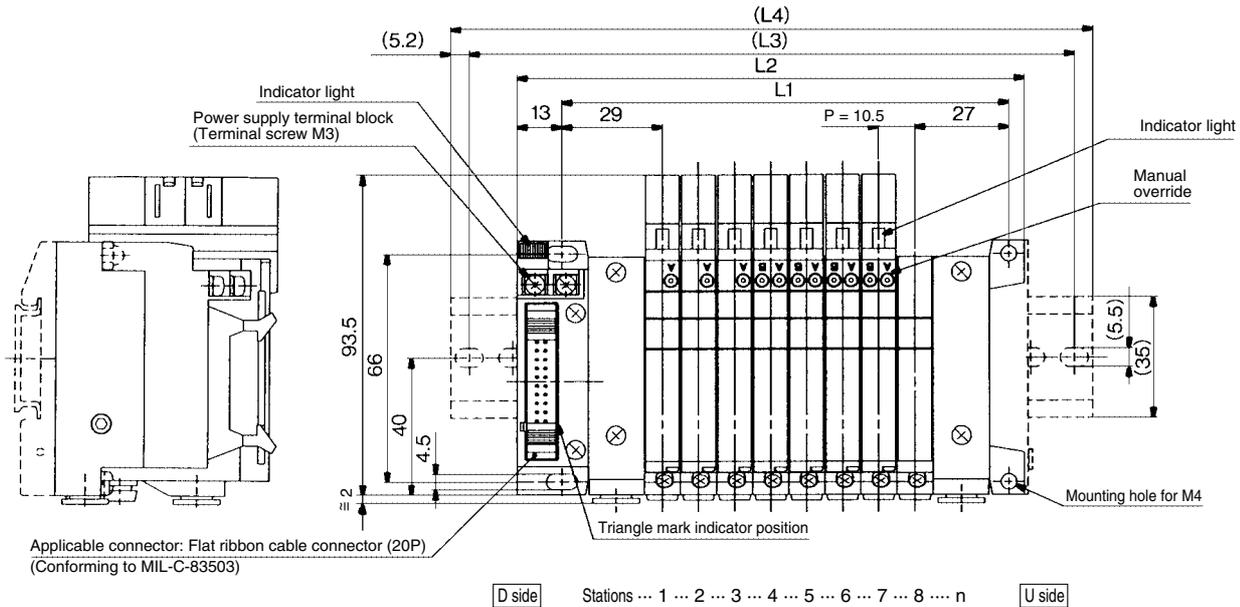

Dimensions

Formula L1 = 10.5n + 45.5, L2 = 10.5n + 63 n: Station (Maximum 16 stations)

L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1		66.5	77	87.5	98	108.5	119	129.5	140	150.5	161	171.5	182	192.5	203	213.5
L2		84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231
(L3)		112.5	125	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	262.5
(L4)		123	135.5	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	273


Vacuum ejector unit style: Formula L1 = 10.5n + 29.7 + (Number of ejector units x 26.7)

L2 = 10.5n + 46.8 + (Number of ejector units x 26.7)


L4 is L2 plus about 30.

VQ2000

The broken lines indicate the DIN rail mounting style [-D].

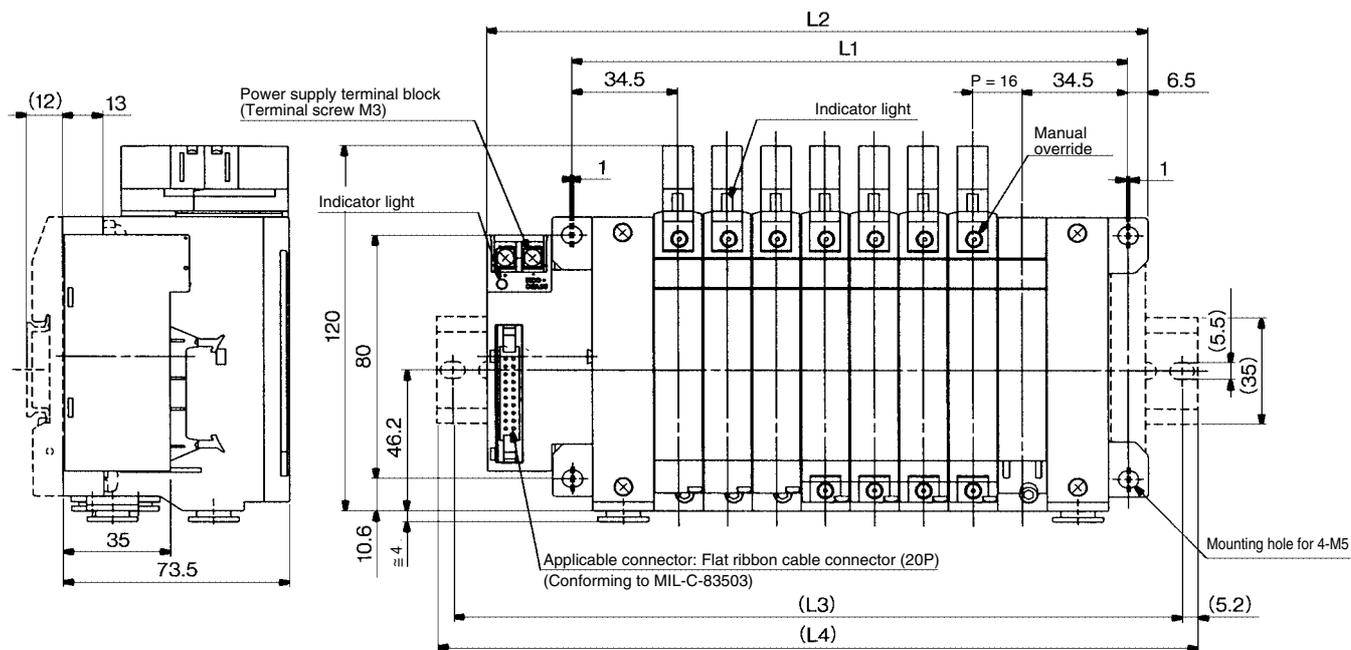

Flat ribbon cable connector assembly (20P)
 AXT100-FC20-1: 1.5 m
 AXT100-FC20-2: 3 m
 AXT100-FC20-3: 5 m

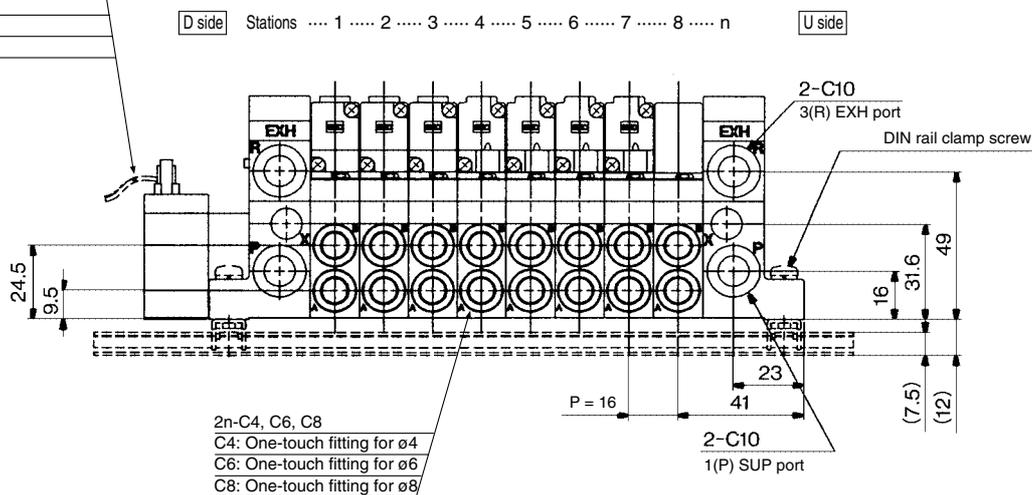

Dimensions

Formula L1 = 16n + 53, L2 = 16n + 87 n: Station (Maximum 16 stations)

L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1		85	101	117	133	149	165	181	197	213	229	245	261	277	293	309
L2		119	135	151	167	183	199	215	231	247	263	279	295	311	327	343
(L3)		150	162.5	175	187.5	212.5	225	237.5	262.5	275	287.5	300	325	337.5	350	362.5
(L4)		160.5	173	185.5	198	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	373

Vacuum ejector unit style: Formula L1 = 10.5n + 29.7 + (Number of ejector units x 26.7)
 L2 = 10.5n + 46.8 + (Number of ejector units x 26.7)
 L4 is L2 plus about 30.

- VQC
- SQ
- VQ0**
- VQ4
- VQ5
- VQZ
- VQD



T VQ1000/2000 Kit (Terminal block box kit)

IP65 compliant

- This kit has a small terminal box inside a junction box. The electrical entry port {VQ1000: G 1/2, VQ2000: G 3/4} permits connection of conduit fittings.
- Maximum stations are 24.
- Enclosure: Dusttight/Low jetproof type (IP65) compliant (Series VQ2000)

Manifold Specifications

Series	Porting specifications			Applicable stations
	Port location	Port size		
VQ1000	Side	1(P), 3(R)	4(A), 2(B)	Max. 24 stations
VQ2000	Side	C8	C3, C4, C6, M5	Max. 20 stations

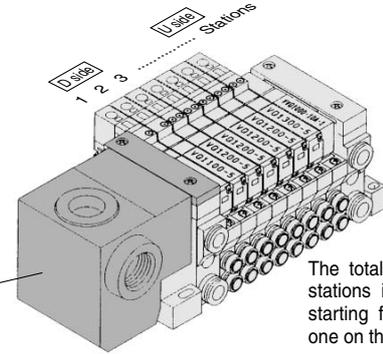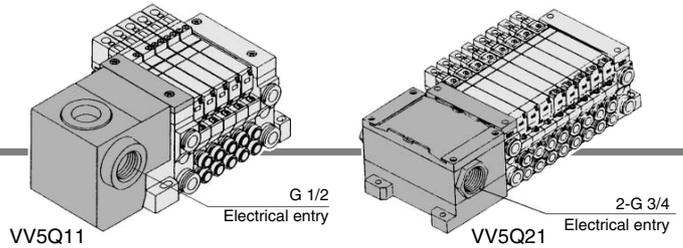


The total number of stations is tabulated starting from station one on the D side.

Terminal block connection

Open the terminal block cover to connect the wires to the terminal block.


Step 1. How to remove terminal block cover

Loosen the screws on the terminal block cover and open it in the direction shown by the arrow. The cover can then be removed from the terminal block.

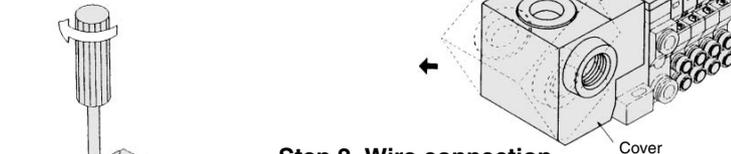


Step 2. Wire connection

The diagram on the left shows the terminal block wiring schematic. All stations are provided with double solenoid wiring. Insert each lead wire into the terminal opening and tighten the screw directly above. How to connect is inserting the lead wire into the terminal window, then tighten the screw on the top.

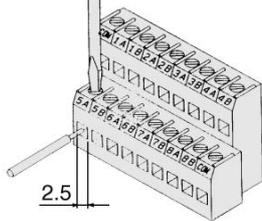

Step 3. How to replace terminal block cover

Hook groove (a) on shaft (b) and close the cover. Then tighten the screws.

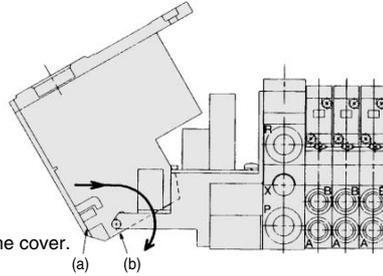

Electrical wiring specifications: VQ1000

Terminal no.	Polarity	
	COM (+)	COM (-)
1 station	SOL.A. 1A (-)	SOL.B. 1B (+)
2 stations	SOL.A. 2A (-)	SOL.B. 2B (+)
3 stations	SOL.A. 3A (-)	SOL.B. 3B (+)
4 stations	SOL.A. 4A (-)	SOL.B. 4B (+)
5 stations	SOL.A. 5A (-)	SOL.B. 5B (+)
6 stations	SOL.A. 6A (-)	SOL.B. 6B (+)
7 stations	SOL.A. 7A (-)	SOL.B. 7B (+)
8 stations	SOL.A. 8A (-)	SOL.B. 8B (+)
9 stations	SOL.A. 9A (-)	SOL.B. 9B (+)
10 stations	SOL.A. 10A (-)	SOL.B. 10B (+)
11 stations	SOL.A. 11A (-)	SOL.B. 11B (+)
12 stations	SOL.A. 12A1 (-)	SOL.B. 12B (+)
	COM. COM (+)	COM. COM (-)

Note) When using the negative common specifications, use valves for negative common. For details, refer to "Option" on page 2-4-178.

How to Order Manifold

VV5Q 1 1-08 C6 T 0-N

Series	Manifold	Stations	Cylinder port
1 VQ1000	1 Plug-in unit	02 2 stations	C3 With One-touch fitting for ø3.2
2 VQ2000		24 (Note) 24 stations	C4 With One-touch fitting for ø4
			C6 With One-touch fitting for ø6
			C8 With One-touch fitting for ø8
			M5 M5 thread
			CM With mixed size/with port plug

Option


Symbol	Option	VQ1000	VQ2000	Note
Nil	None	●	●	
B	With back pressure check valve	●	●	(2)
D	DIN rail mounting style	●	●	
G1	1 set of regulator unit			
G2	2 sets of regulator unit	●		(3)
G3	3 sets of regulator unit			
J□	With vacuum ejector unit	●		(4)
K	Special wiring specifications (Not double wiring)	●	●	(5)
N	With name plate	●	●	
R	External pilot	●	●	(6)
S	Built-in silencer, direct exhaust	●	●	
W	Enclosure: Dusttight/Low jetproof type (IP65)		●	

- Note 1) Insert "L" (top piping) or "B" (bottom piping) for elbow type. Example) B6 (Elbow One-touch fittings for ø6, bottom piping.)
- Note 2) Indicate "LM" for models with elbow fittings and mixed cylinder port sizes.
- Note 3) Specify "Mixed size/with port plug" in the manifold specification sheet.
- Note 4) For One-touch fittings in inch size, refer to "Option" on page 2-4-179.

For negative common specifications, refer to "Option" on page 2-4-178.

- Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BRS
- Note 2) Models with a suffix "B" have check valves for prevention of back pressure at all manifold stations. If not all stations need this check valve, specify the stations where check valves are installed by using the manifold specification sheet.
- Note 3) Specify the mounting position in the manifold specification sheet.
- Note 4) Refer to page 2-4-170 for the details of ejector mounted styles. A combination of "J" and "N" is unavailable.
- Note 5) Specify the wiring specifications in the manifold specification sheet.
- Note 6) Indicate "R" for the valve with external pilot.


● Special wiring specifications: VQ2000

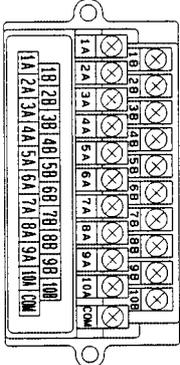


Station	Terminal no.	Polarity
1 station	SOL.A ₁ 1A	(-) (+)
	SOL.B ₁ 1B	(-) (+)
2 stations	SOL.A ₂ 2A	(-) (+)
	SOL.B ₂ 2B	(-) (+)
3 stations	SOL.A ₃ 3A	(-) (+)
	SOL.B ₃ 3B	(-) (+)
4 stations	SOL.A ₄ 4A	(-) (+)
	SOL.B ₄ 4B	(-) (+)
5 stations	SOL.A ₅ 5A	(-) (+)
	SOL.B ₅ 5B	(-) (+)
6 stations	SOL.A ₆ 6A	(-) (+)
	SOL.B ₆ 6B	(-) (+)
7 stations	SOL.A ₇ 7A	(-) (+)
	SOL.B ₇ 7B	(-) (+)
8 stations	SOL.A ₈ 8A	(-) (+)
	SOL.B ₈ 8B	(-) (+)
9 stations	SOL.A ₉ 9A	(-) (+)
	SOL.B ₉ 9B	(-) (+)
10 stations	SOL.A ₁₀ 10A	(-) (+)
	SOL.B ₁₀ 10B	(-) (+)
	COM.	(+) (-)

Note) When using the negative common specifications, use valves for negative common. For details, refer to "Option" on page 2-4-178.

Note) Positive common specifications Negative common specifications

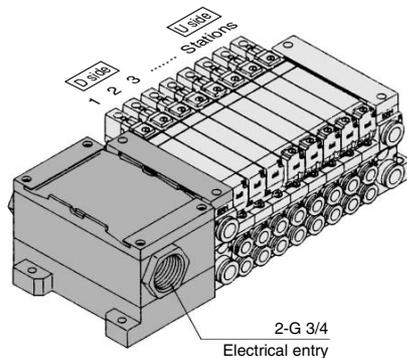

The total number of stations is tabulated starting from station one on the D side.

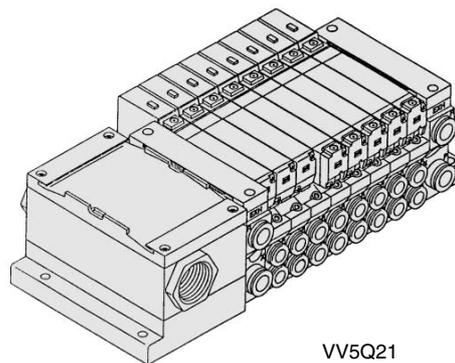

VV5Q21
Dust tight/Low jetproof type

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

How to Order Valves

VQ 1 1 0 0 Y 5

Series

1	VQ1000
2	VQ2000

Type of actuation

1	2 position single
2	2 position double
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center

Seal

0	Metal seal
1	Rubber seal

Function

Symbol	Specifications	DC	AC
Nil	Standard type	(1.0 W) ○	Note) ○
H	High pressure type	(1.5 W) ○	—
Y	Low wattage type	(0.5 W) ○	—

Enclosure

Nil	Dust-protected
W	Dusttight/Low jetproof type (IP65) Note) VQ2000 only.

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)

Light/Surge voltage suppressor

Nil	Yes
E	None

Coil voltage

1	100 VAC (50/60 Hz)
3	100 VAC (50/60 Hz)
5	24 VDC
6	12 VDC


Note) For power consumption of AC type, refer to page 2-4-179.

How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>
Terminal block box kit
VV5Q11-08C6T0 ... 1 set—Manifold base no.
*VQ1100-5 2 sets—Valve part no. (Stations 1 to 2)
*VQ1200-5 4 sets—Valve part no. (Stations 3 to 6)
*VQ1300-5 1 set—Valve part no. (Station 7)
*VVQ1000-10A-1 ... 1 set—Blanking plate part no. (Station 8)

Prefix the asterisk to the part nos. of the solenoid valve, etc.
Write sequentially from the 1st station on the D side. When part nos. written collectively are complicated, specify by using the manifold specification sheet.

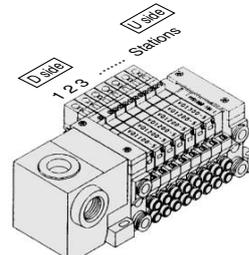




**VQ1000/2000
Kit (Terminal block box kit)**

VQ1000

The broken lines and dimensions in parentheses indicate DIN rail mounting style [-D].

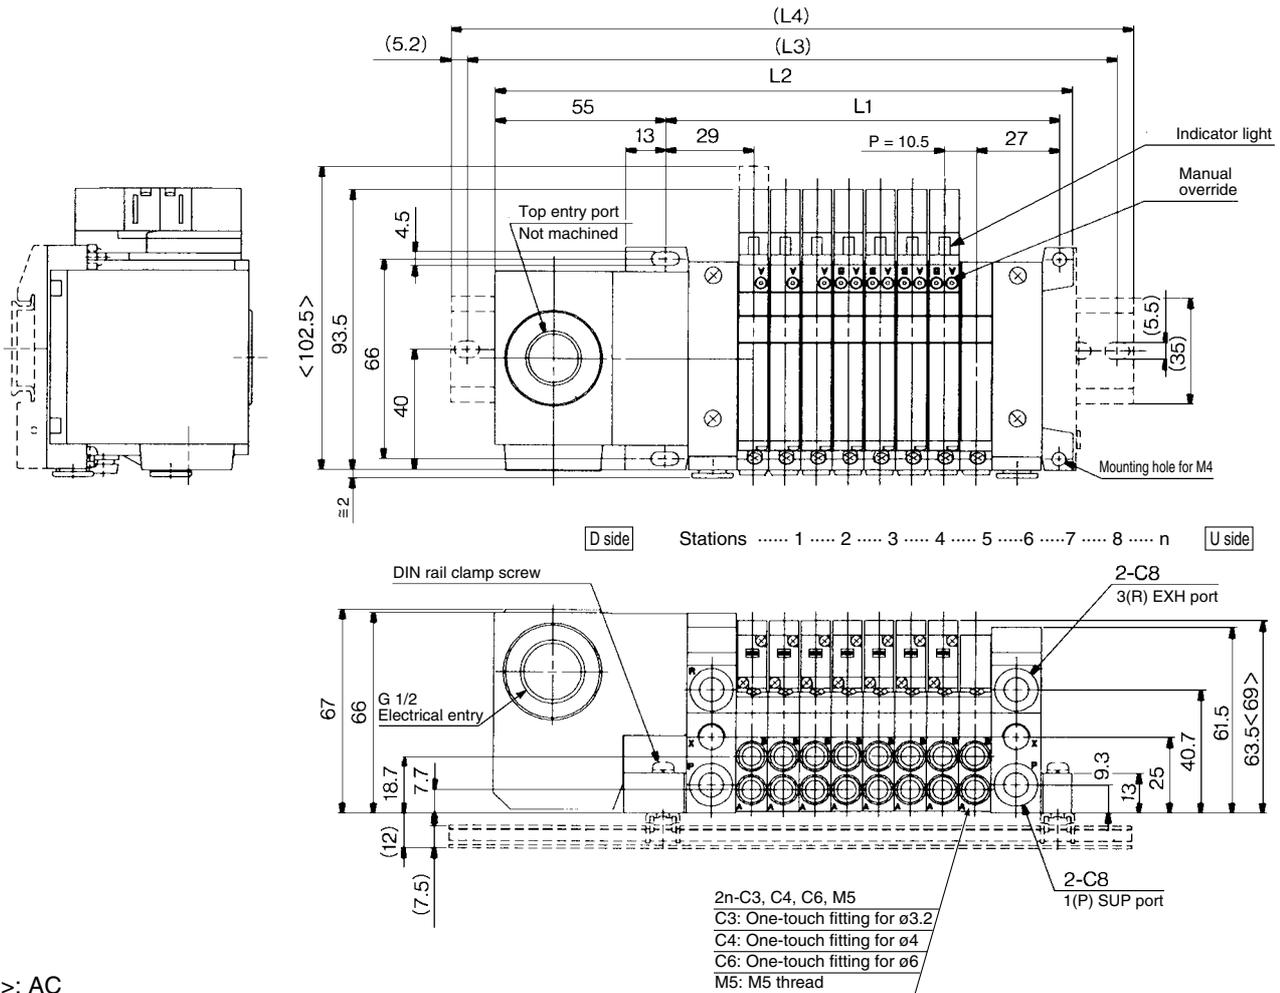

< >: AC

Dimensions

Formula L1 = 10.5n + 45.5, L2 = 10.5n + 105 n: Station (Maximum 24 stations)


L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1		66.5	77	87.5	98	108.5	119	129.5	140	150.5	161	171.5	182	192.5	203	213.5	224	234.5	245	255.5	266	276.5	287	297.5
L2		126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294	304.5	315	325.5	336	346.5	357
(L3)		150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5	375	387.5
(L4)		160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373	385.5	398

Vacuum ejector unit style: Formula L1 = 10.5n + 29.7 + (Number of ejector units x 26.7)
 L2 = 10.5n + 88.8 + (Number of ejector units x 26.7)
 L4 is L2 plus about 30.

VQ2000

The broken lines and dimensions in parentheses indicate DIN rail mounting style [-D].

- VQC
- SQ
- VQ0**
- VQ4
- VQ5
- VQZ
- VQD

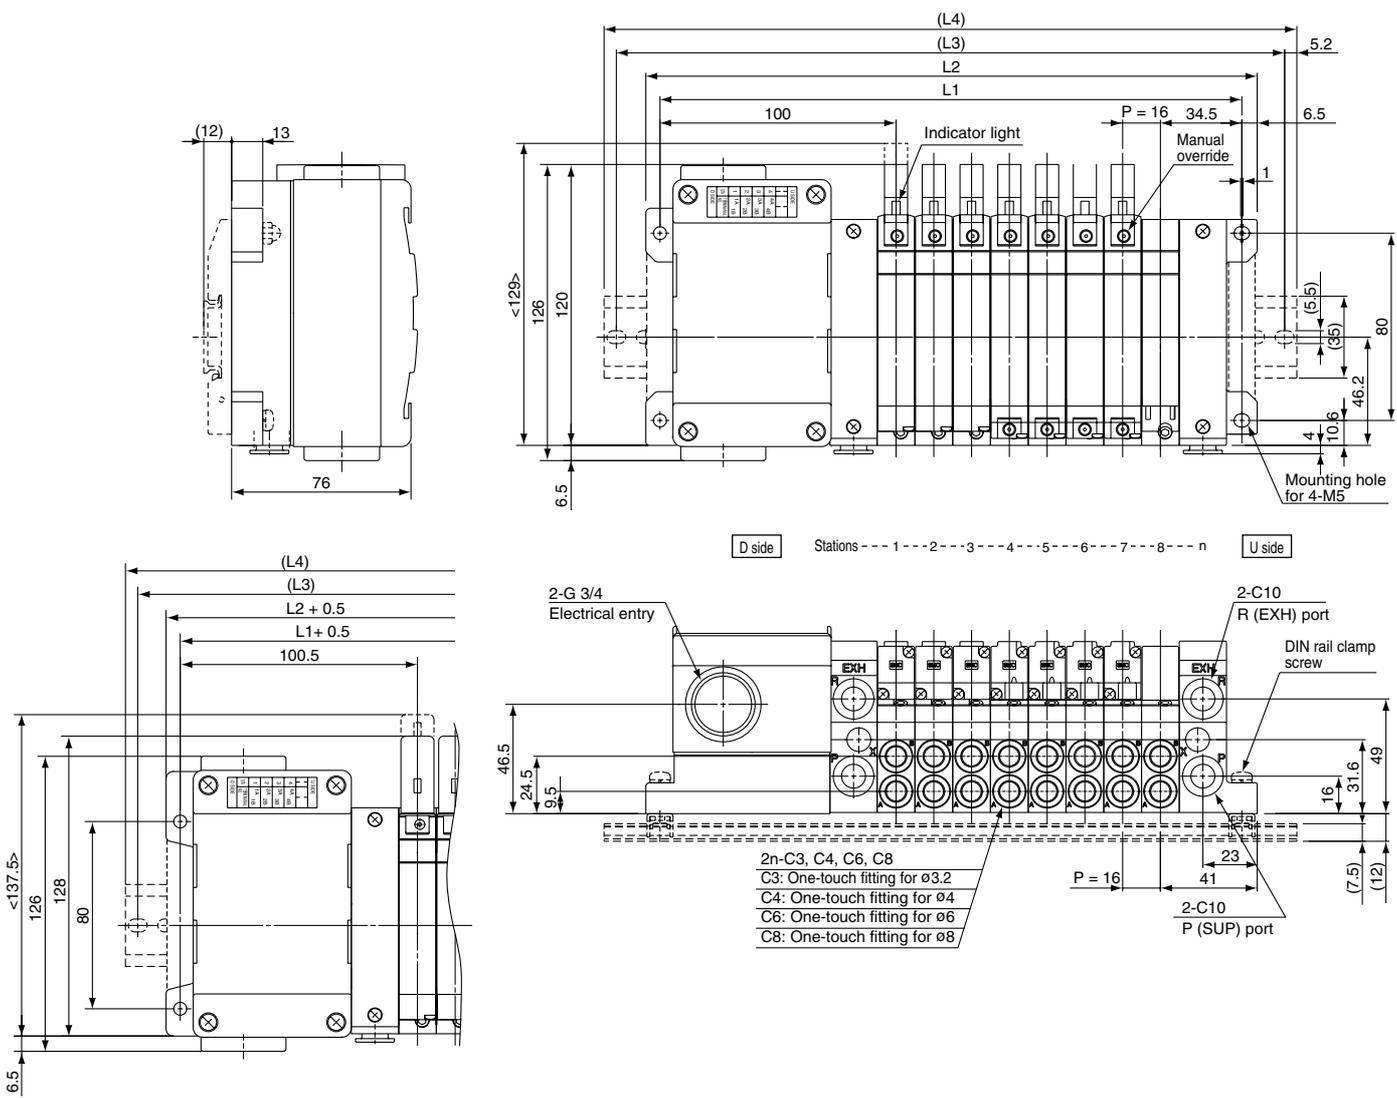

< >: AC

Dimensions


Formula L1 = 16n + 118.5, L2 = 16n + 131 n: Station (Maximum 10 stations)

n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	150.5	166.5	182.5	198.5	214.5	230.5	246.5	262.5	278.5	294.5	310.5	326.5	342.5	358.5	374.5	390.5	406.5	422.5	438.5
L2	163	179	195	211	227	243	259	275	291	307	323	339	355	371	387	403	419	435	451
(L3)	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5	375	400	412.5	425	450	462.5	475
(L4)	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373	385.5	410.5	423	435.5	460.5	473	485.5

VQ1000/2000 Kit (Lead wire cable)

IP65 compliant

- Direct electrical entry. Models with one or more stations are available.
- (SUP) and R (EXH) ports are provided on one side for further space savings.
- Maximum stations are 8.
- Enclosure: Dusttight/Low jetproof type (IP65) compliant (Series VQ2000)

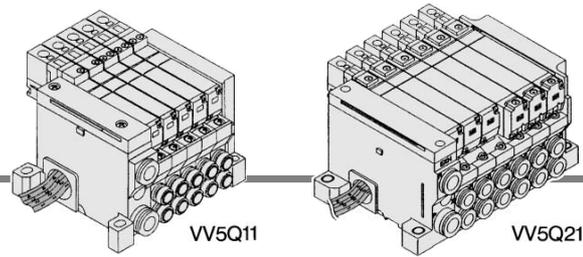


Manifold Specifications

Series	Port location	Porting specifications		Applicable stations
		1(P), 3(R)	4(A), 2(B)	
VQ1000	Side	C8	C3, C4, C6, M5	Max. 8 stations
VQ2000	Side	C10	C6, C8	Max. 8 stations

Wiring specifications: Positive COM ●

Three lead wires are attached to each station regardless of the type of valve which is mounted. The red wire is for COM connection.

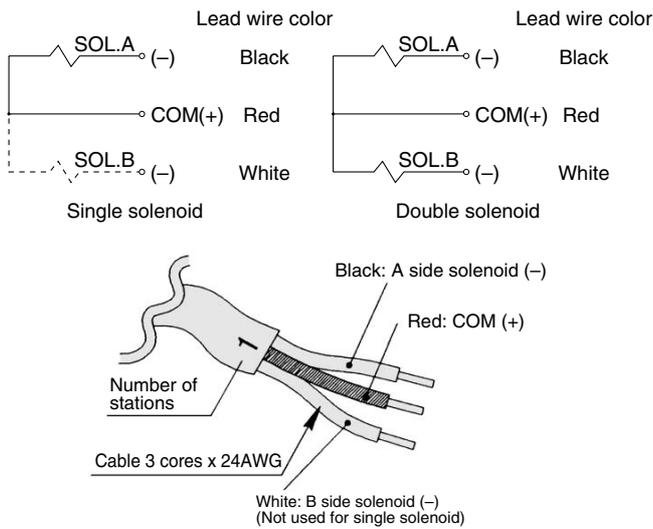


Use any of the following cable lead wire assembly to change the lead wire length:

Lead Wire Assembly with Connector


Lead wire length	Part no.
0.6 m	VVQ1000-84A-6-*
1.5 m	VVQ1000-84A-15-*
3 m	VVQ1000-84A-30-*

* No. of stations 1 to 8

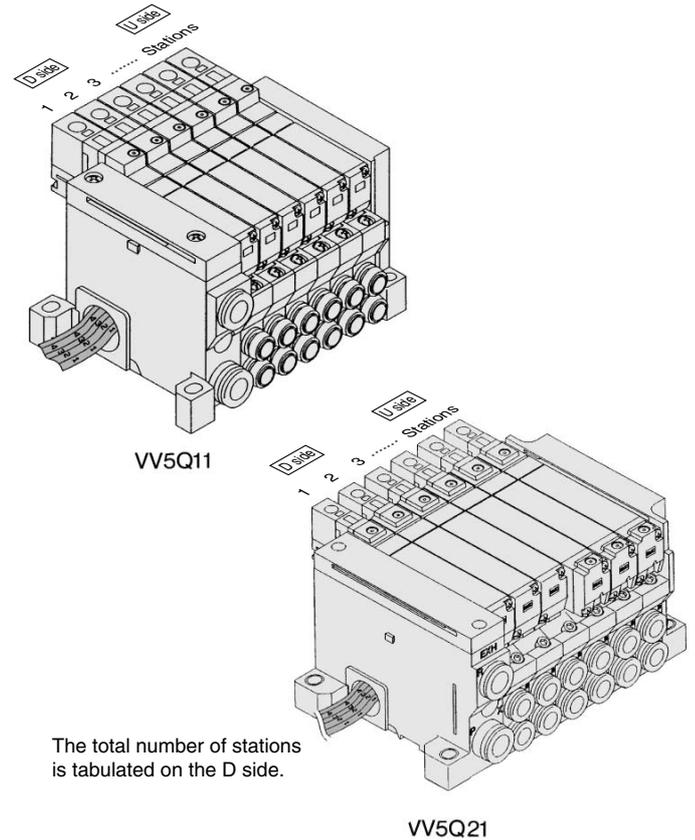

The total number of stations is tabulated on the D side.

How to Order Manifold

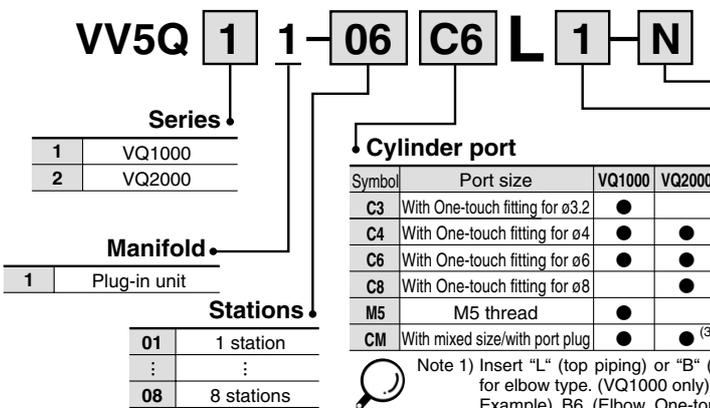

Note) For negative common specifications, refer to "Option" on page 2-4-178.

Symbol	Port size	VQ1000	VQ2000
C3	With One-touch fitting for ø3.2	●	
C4	With One-touch fitting for ø4	●	●
C6	With One-touch fitting for ø6	●	●
C8	With One-touch fitting for ø8		●
M5	M5 thread	●	
CM	With mixed size/with port plug	●	● ⁽³⁾

Note 1) Insert "L" (top piping) or "B" (bottom piping) for elbow type. (VQ1000 only)
Example) B6 (Elbow One-touch fittings for ø6, bottom piping.)

Note 2) Indicate "LM" for models with elbow fittings and mixed cylinder port sizes.

Note 3) Specify "Mixed size/with port plug" in the manifold specification sheet.

Note 4) Inch-size One-touch fittings are available. For details, refer to page 2-4-179.

Option

Symbol	Option	VQ1000	VQ2000	Note
Nil	None	●	●	
B	With back pressure check valve	●	●	(2)
D	DIN rail mounting style	●	●	
G1	1 set of regulator unit	●		(3)
G2	2 sets of regulator units	●		(3)
G3	3 sets of regulator units	●		(3)
J□	With vacuum ejector unit	●		(4)
N	With name plate	●	●	
R	External pilot	●	●	(5)
S	Built-in silencer, direct exhaust	●	●	
W	Enclosure: Dusttight/Low jetproof type (IP65)		●	


Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BRS

Note 2) Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. If not all stations need this check valve, specify the stations where check valves are installed by the manifold specification sheet.

Note 3) Specify the mounting position in the manifold specification sheet.



Note 4) Refer to page 2-4-170 for the details of ejector mounted styles. A combination of "J" and "N" is unavailable.

Note 5) Indicate "R" for the valve with external pilot.

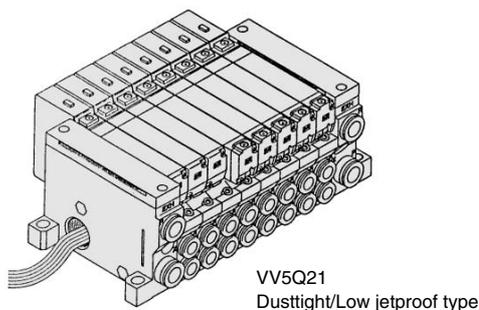

● Wiring specifications: Negative COM (Option)

Three lead wires are attached to each station regardless of the type of valve which is mounted. The black wire is for COM connection.

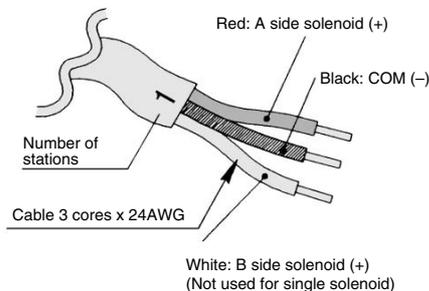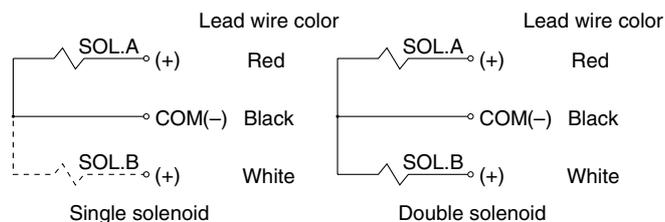

Lead Wire Assembly with Connector

Lead wire length	Part no.
0.6 m	VVQ1000-84AN-6-*
1.5 m	VVQ1000-84AN-15-*
3 m	VVQ1000-84AN-30-*

* No. of stations 1 to 8



Note) When using the negative common specifications, use valves for negative common. For negative common specifications, refer to "Option" on page 2-4-178.

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

How to Order Valves

VQ 1 1 0 0 Y 5

Series

1	VQ1000
2	VQ2000

Type of actuation

1	2 position single
2	2 position double
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center

Seal

0	Metal seal
1	Rubber seal

Function

Nil	Standard type	(1.0 W)	○	○ (Note)
H	High pressure type	(1.5 W)	○	—
Y	Low wattage type	(0.5 W)	○	—

Enclosure

Nil	Dusttight
W	Dusttight/Low jetproof (Note) type (IP65)

Note) VQ2000 only.

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)

Light/Surge voltage suppressor

Nil	Yes
E	None

Coil voltage

1	100 VAC (50/60 Hz)
2	200 VAC (50/60 Hz)
3	110 VAC (50/60 Hz)
4	220 VAC (50/60 Hz)
5	24 VDC
6	12 VDC

Note) For external pilot and negative COM specifications, refer to "Option" on 2-4-178 to 2-4-179.

How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.


<Example>

Lead wire kit with cable (3 m)

- VV5Q11-06C6L2 1 set—Manifold base no.
- *VQ1100-5 2 sets—Valve part no. (Stations 1 to 2)
- *VQ1200-5 2 sets—Valve part no. (Stations 3 to 4)
- *VQ1300-5 1 set—Valve part no. (Station 5)
- *VVQ1000-10A-1 1 set—Blanking plate part no. (Station 6)

Prefix the asterisk to the part nos. of the solenoid valve, etc.

Write sequentially from the 1st station on the D side. When part nos. written collectively are complicated, specify by using the manifold specification sheet.

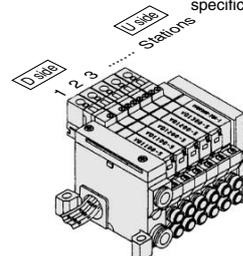



Note) For power consumption of AC type, refer to page 2-4-129.



VQ0000/1000/2000
Kit (Lead wire cable)

VQ1000

The broken lines indicate DIN rail mounting style [-D].

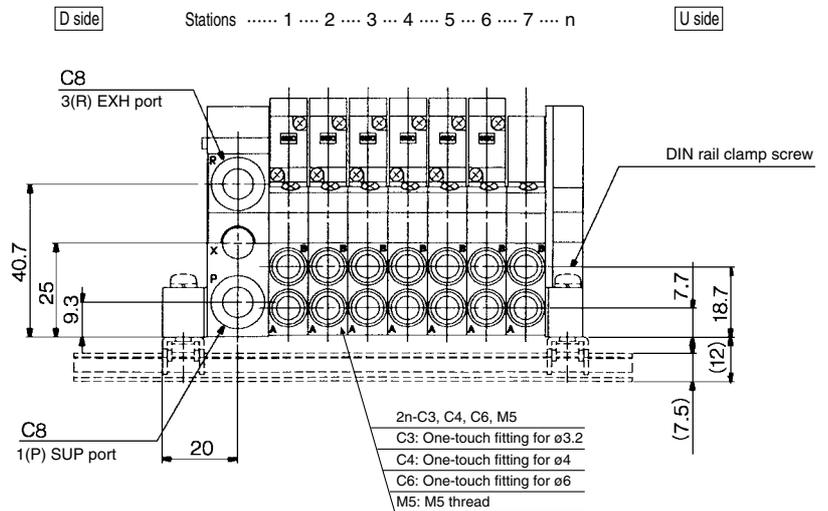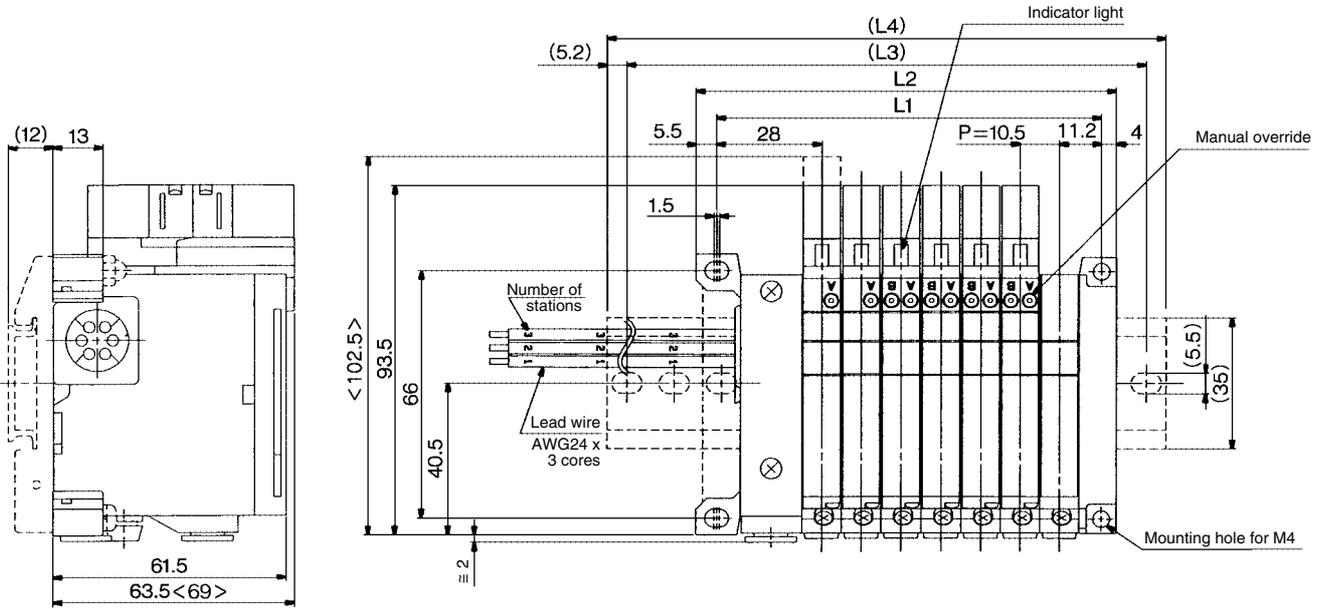

< >: AC

Dimensions

Formula L1 = 16n + 35, L2 = 16n + 47 n: Station (Maximum 8 stations)

L	n	1	2	3	4	5	6	7	8
L1		39	49.5	60	70.5	81	91.5	102	112.5
L2		48.5	59	69.5	80	90.5	101	111.5	122
(L3)		75	87.5	87.5	100	112.5	125	137.5	150
(L4)		85.5	98	98	110.5	123	135.5	148	160.5


Vacuum ejector unit style: Formula L1 = 10.5n + 28.5 + (Number of ejector units x 26.7)

L2 = 10.5n + 38 + (Number of ejector units x 26.7)


L4 is L2 plus about 30.

VQ2000

The broken lines indicate the DIN rail mounting style [-D].

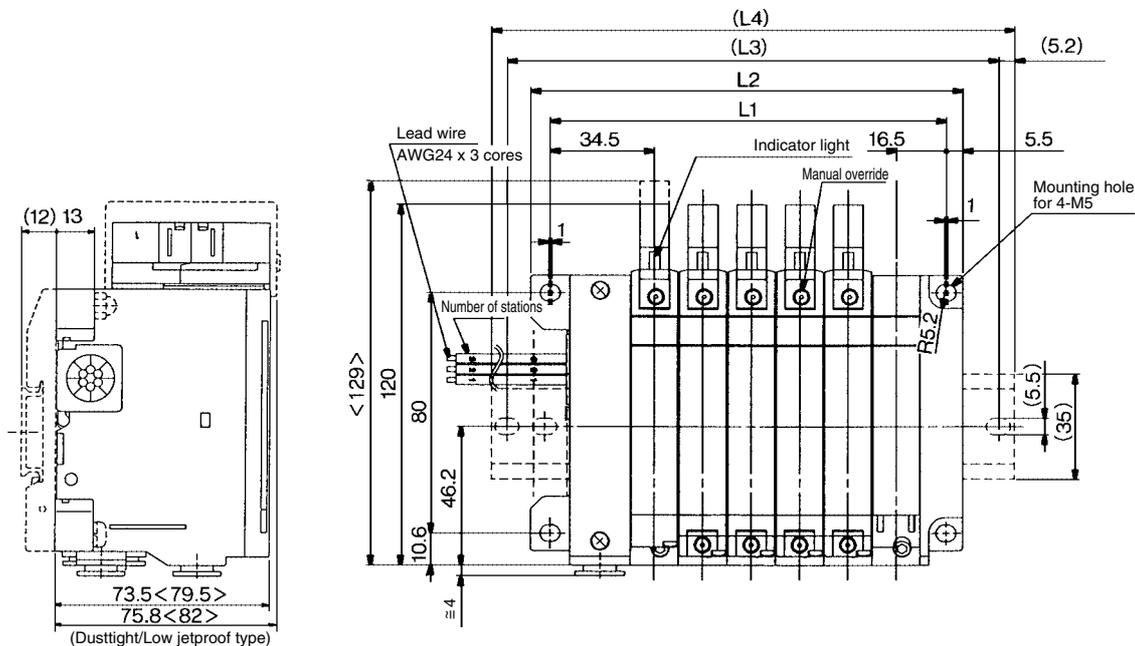

- VQC
- SQ
- VQ0**
- VQ4
- VQ5
- VQZ
- VQD

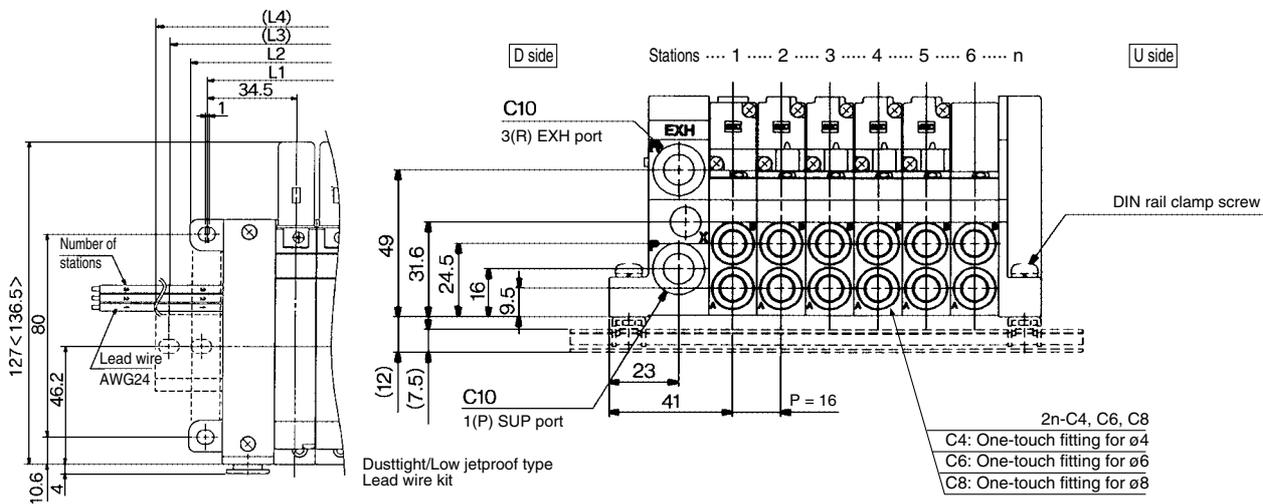


< >: AC

Dimensions

Formula $L1 = 16n + 35$, $L2 = 16n + 47$ n: Station (Maximum 8 stations)

L \ n	1	2	3	4	5	6	7	8
L1	51	67	83	99	115	131	147	163
L2	63	79	95	111	127	143	159	175
(L3)	87.5	100	125	137.5	150	162.5	184.5	200
(L4)	98	110.5	135.5	148	160.5	173	198	210.5

S VQ1000/2000 Kit (Serial transmission unit)

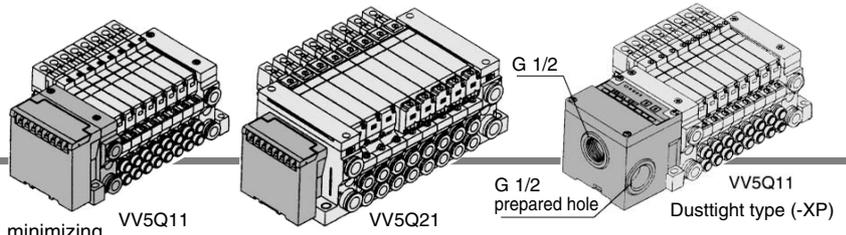


IP65 compliant


- The serial transmission system reduces wiring work, while minimizing wiring and saving space.
- The system comes in type SA (generic for small scale systems) for equipment with a small number of I/O points, or 32 points max., type SB (applicable to Mitsubishi Electric models) for controlling 512 I/O points max., type SC (applicable to OMRON models), type SD (applicable to SHARP models: 504 points max.), type SF (applicable to NKE models: 128 points max.), type SJ (applicable to SUNX models), type SK (applicable to Fuji Electric models), type SQ (applicable to OMRON's Compo Bus/D), and type SR (applicable to OMRON's Compo Bus/S).
- Max. 16 stations. (Specify a model with 9 to 16 stations by using the manifold specification sheet.)
- Enclosure: Dusttight, Low jetproof type (IP65) compliant (Series VQ2000)

Manifold Specifications

Series	Porting specifications			Applicable stations
	Port location	Port size		
VQ1000	Side	1(P), 3(R)	4(A), 2(B)	Max. 16 stations
VQ2000	Side	C10	C4, C6, C8	Max. 16 stations

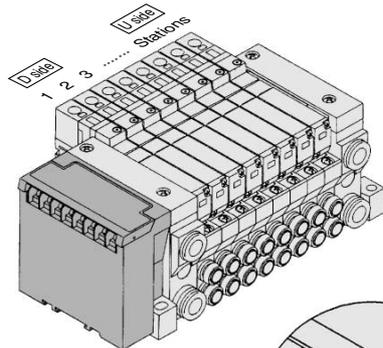

- Stations are counted from station 1 on the D side.
- Double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station, regardless of valve and option types. The optional specification permits the mixture of single and double wiring. For details, refer to page 2-4-178.

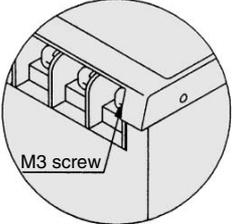


Name of terminal block (LED)	Type SA With general type SI unit (Series EX300)	Type SB Mitsubishi Electric Corporation MELSECNET/mini-S3 Data Link System																	
	<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>TRD</td> <td>Lighting during data reception</td> </tr> <tr> <td>RUN/ERR</td> <td>Blinking when received data is normal; Lighting when data reception</td> </tr> </tbody> </table>	LED	Description	TRD	Lighting during data reception	RUN/ERR	Blinking when received data is normal; Lighting when data reception	<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>POWER</td> <td>Lighting when power is turned ON</td> </tr> <tr> <td>RUN</td> <td>Lighting when data transmission with the master station is normal</td> </tr> <tr> <td>RD</td> <td>Lighting during data reception</td> </tr> <tr> <td>SD</td> <td>Lighting during data transmission</td> </tr> <tr> <td>ERR.</td> <td>Lighting when reception data error occurs. Light turns off when the error is corrected.</td> </tr> </tbody> </table>	LED	Description	POWER	Lighting when power is turned ON	RUN	Lighting when data transmission with the master station is normal	RD	Lighting during data reception	SD	Lighting during data transmission	ERR.
LED	Description																		
TRD	Lighting during data reception																		
RUN/ERR	Blinking when received data is normal; Lighting when data reception																		
LED	Description																		
POWER	Lighting when power is turned ON																		
RUN	Lighting when data transmission with the master station is normal																		
RD	Lighting during data reception																		
SD	Lighting during data transmission																		
ERR.	Lighting when reception data error occurs. Light turns off when the error is corrected.																		
Note	<ul style="list-style-type: none"> ● T unit Can be connected with PLC I/O card for serial transmission. EX300-TMB1...For models of Mitsubishi Electric Corporation EX300-TTA1...For models of OMRON Corporation EX300-TFU1...For models of Fuji Electric Co., Ltd. EX300-TOO1... For general models * Up to 32 points per unit. ● No. of output points, 16 points 	<ul style="list-style-type: none"> ● Master station: PLC made by Mitsubishi Electric Corporation Series MELSEC-A AJ71PT32-S3, AJ71T32-S3 A1SJ71PT32-S3 * Max. 64 stations, connected to remote I/O stations (Max. 512 points). ● No. of output points, 16 points. No. of sta. occupied, 2 stations 																	

* For details on specifications and handling, refer to the separate technical instruction manual.

Item	Specifications
External power supply	24 VDC +10%, -5%
Current consumption (Internal unit)	SA, SB, SBB, SD, SE, SF1, SH, SG, SJ, SK, SQ, SR, SU, SV: 0.1A SC: 0.3A

How to Order Manifold

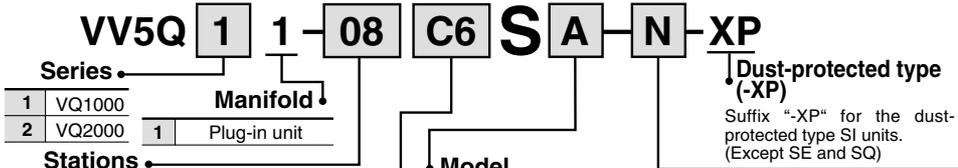

Cylinder port

Symbol	Port size	VQ1000	VQ2000
C3	With One-touch fitting for ø3.2	●	
C4	With One-touch fitting for ø4	●	●
C6	With One-touch fitting for ø6	●	●
C8	With One-touch fitting for ø8		●
M5	M5 thread	●	
CM	With mixed size/with port plug	●	● ⁽³⁾

- Note 1) Insert "L" (top piping) or "B" (bottom piping) for elbow type. (VQ1000 only). Example) B6 (Elbow One-touch fittings for ø6, bottom piping.)
- Note 2) Specify as "LM" for models with elbow fittings and mixed cylinder port sizes.
- Note 3) Specify "Mixed size/with port plug" in the manifold specification sheet.
- Note 4) For inch-size One-touch fittings, refer to "Option" on page 2-4-179.

Model

Model	Max. stations
O Without SI unit	
A With general type SI unit (Series EX300)	
B Mitsubishi Electric Corp.: MELSECNET/mini-S3 Data Link System	
BB Mitsubishi Electric Corp.: MELSECNET/mini-S3 Data Link System (2 power supply lines)	Max. 16 stations
C OMRON Corp.: SYSBUS Wire System	
D SHARP Corp.: Satellite I/O Link System	
E Matsushita Electric Works: MEWNET-F System	
F1 NKE Corp.: Uni-wire System (16 output points)	
G Rockwell Automation: Allen Bradley Remote I/O (RIO) System	
H NKE Corp.: Uni-wire H System	
J1 SUNX Corp.: S-LINK System (16 output points)	Max. 8 stations
J2 SUNX Corp.: S-LINK System (8 output points)	Max. 8 stations
K Fuji Electric Co.: T-LINK Mini System	Max. 16 stations
Q DeviceNet, CompoBus/D (OMRON Corp.)	Max. 16 stations
R1 OMRON Corp.: CompoBus/S System (16 output points)	Max. 8 stations
R2 OMRON Corp.: CompoBus/S System (8 output points)	Max. 16 stations
U JEMANET (JPCN-1)	Max. 16 stations
V Mitsubishi Electric Corp.: CC-LINK System	Max. 16 stations


- Note 1) The general type requires a transmission unit on CPU side.
- Note 2) SBB kit is usable only for VQ2000 dusttight/low jetproof type (IP65).

Option

Symbol	Option	VQ1000	VQ2000	Note
Nil	None	●	●	
B	With back pressure check valve	●	●	(2)
D	DIN rail mounting style	●	●	
G1	1 set of regulator unit			(3)
G2	2 sets of regulator unit	●		
G3	3 sets of regulator unit			
J	With vacuum ejector unit	●		(4)
K	Special wiring specifications (Not double wiring)	●	●	(5)
N	With name plate	●	●	
R	with external pilot	●	●	(6)
S	Built-in silencer, direct exhaust	●	●	
W	Enclosure: Dust tight/Low jetproof type (IP65) (Except SE)		●	(8)

- Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BRS.
- Note 2) Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. If not all stations need this check valve, specify the stations where check valves are installed by manifold specification sheet.
- Note 3) Specify the mounting position in the manifold specification sheet.
- Note 4) Refer to page 2-4-170 for the details of ejector mounted styles. A combination of "J" and "N" is unavailable.
- Note 5) Specify the wiring specifications in the manifold specification sheet.
- Note 6) Indicate "R" for the valve with external pilot.
- Note 7) A combination of "W" and "XP" is unavailable.
- Note 8) Refer to "Dimensions" on page 2-4-157 for SI unit and valve, in case of W (dusttight/low jetproof type).



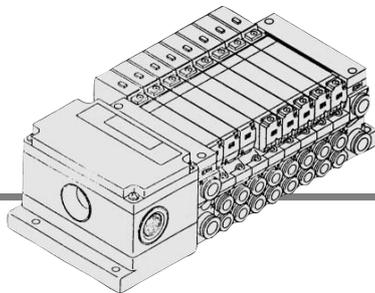

VV5Q21
Dust tight Low jetproof type (-W)

Mixed wiring is available as an option.
Use the manifold specification sheet to specify.

● SI unit output and coil numbering

<Wiring example 1>

SI unit	0	1	2	3	4	5	6	7	8	9
output no.										
		A B	A B	A	Un-used	A	Un-used	A B		
SI unit	Double	Double	Double	Single	Single	Single	Single	Single		
Stations	1	2	3	4	5					

Double wiring (Standard)

<Wiring example 2>

SI unit	0	1	2	3	4	5	6	7
output no.								
		A B	A B	A	A	A B		
SI unit	Double	Double	Single	Single	Single	Single		
Stations	1	2	3	4	5			

Single/Double mixed wiring (Option)

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

	Type SC OMRON Corporation SYSBUS Wire System	Type SD SHARP Corporation Satellite I/O Link System															
Name of terminal block (LED)																	
	<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>RUN</td> <td>Lights when transmission is normal and PLC is in operation mode</td> </tr> <tr> <td>T/R ERR</td> <td>Blinks during data transmission/reception ON when transmission is abnormal.</td> </tr> </tbody> </table>	LED	Description	RUN	Lights when transmission is normal and PLC is in operation mode	T/R ERR	Blinks during data transmission/reception ON when transmission is abnormal.	<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>POWER</td> <td>ON when power supply is ON</td> </tr> <tr> <td>RUN</td> <td>Lights when power is ON and slave stations are operating normally</td> </tr> <tr> <td>ERROR</td> <td>Lights when slave station switch setting is abnormal, communication is abnormal, PLC stopped and defective slave unit</td> </tr> <tr> <td>R.SET HOLD</td> <td>ON for master unit control input</td> </tr> </tbody> </table>	LED	Description	POWER	ON when power supply is ON	RUN	Lights when power is ON and slave stations are operating normally	ERROR	Lights when slave station switch setting is abnormal, communication is abnormal, PLC stopped and defective slave unit	R.SET HOLD
LED	Description																
RUN	Lights when transmission is normal and PLC is in operation mode																
T/R ERR	Blinks during data transmission/reception ON when transmission is abnormal.																
LED	Description																
POWER	ON when power supply is ON																
RUN	Lights when power is ON and slave stations are operating normally																
ERROR	Lights when slave station switch setting is abnormal, communication is abnormal, PLC stopped and defective slave unit																
R.SET HOLD	ON for master unit control input																
Note	<ul style="list-style-type: none"> Master station unit: OMRON PLC SYSMAC C (CV) series Types C500-RM201 and C200H-RM201 * 32 units max., transmission terminal connection (512 points max.) No. of output points, 16 points 	<ul style="list-style-type: none"> Master station unit: SHARP's PLC New Satellite Series W ZW-31LM New Satellite Series JW JW-23LM, JW 31LM * Max. 31 units, I/O slave stations connected (504 points max.) No. of output points, 16 points 															

How to Order Valves

VQ 1 1 0 0 Y - 5

Series

1	VQ1000
2	VQ2000

Type of actuation

1	2 position single
2	2 position double
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center

Seal

0	Metal seal
1	Rubber seal

Enclosure

Nil	Dust-protected
W	Dust tight/Low jetproof (Note) type (IP65)

(Note) VQ2000 only.

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)

Coil voltage

5	24 VDC; With indicator light/surge voltage suppressor
---	---

Function

Symbol	Specifications	DC
Nil	Standard type	(1.0 W) ○
H	High pressure type	(1.5 W) ○
Y	Low wattage type	(0.5 W) ○

Note) For external pilot and negative COM specifications, refer to "Option" on pages 2-4-178 to 2-4-179.


How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>



Serial transmission kit
VV5Q11-08C6SA ... 1 set—Manifold base no.
*VQ1100-5 2 sets—Valve part no. (Stations 1 to 2)
*VQ1200-5 4 sets—Valve part no. (Stations 3 to 6)
*VQ1300-5 1 set—Valve part no. (Station 7)
*VVQ1000-10A-1 ... 1 set—Blanking plate part no. (Station 8)

Prefix the asterisk to the part nos. of the solenoid valve, etc.
Write sequentially from the 1st station on the D side. When part nos. written collectively are complicated, specify by using the manifold specification sheet.

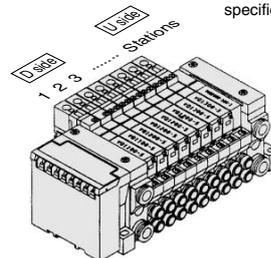


S VQ1000/2000 Kit (Serial transmission unit)

VQ1000

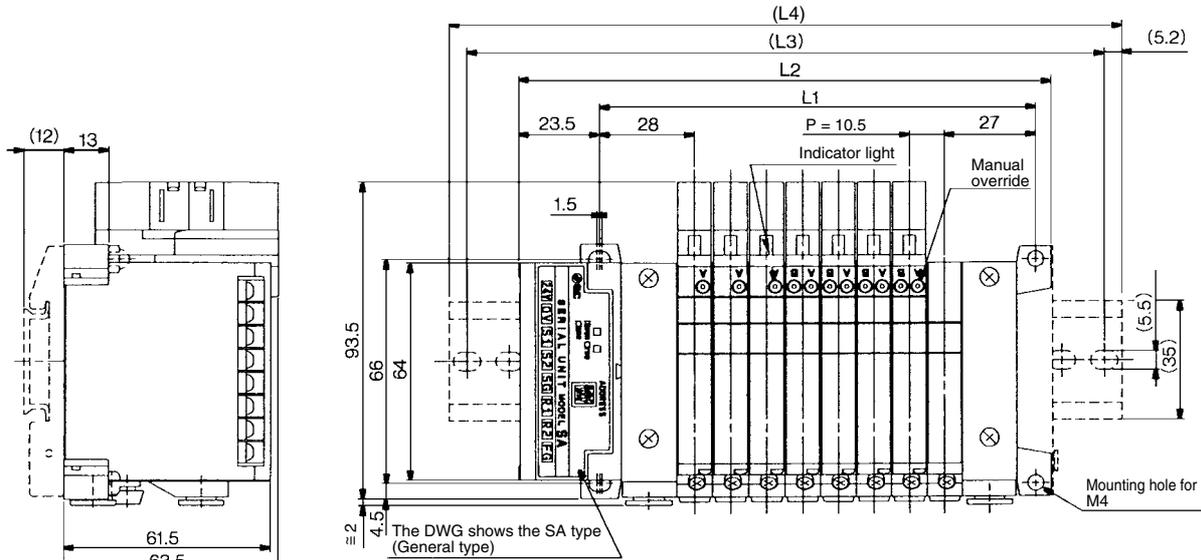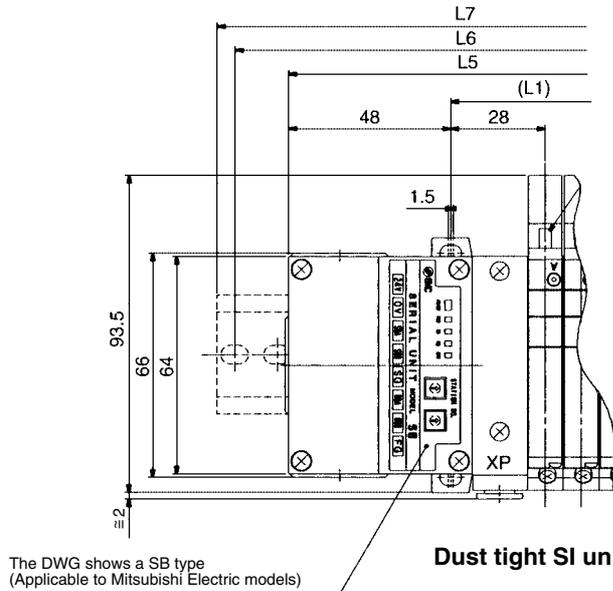

[D side] Stations 1... 2... 3... 4... 5... 6... 7... 8... n [U side]

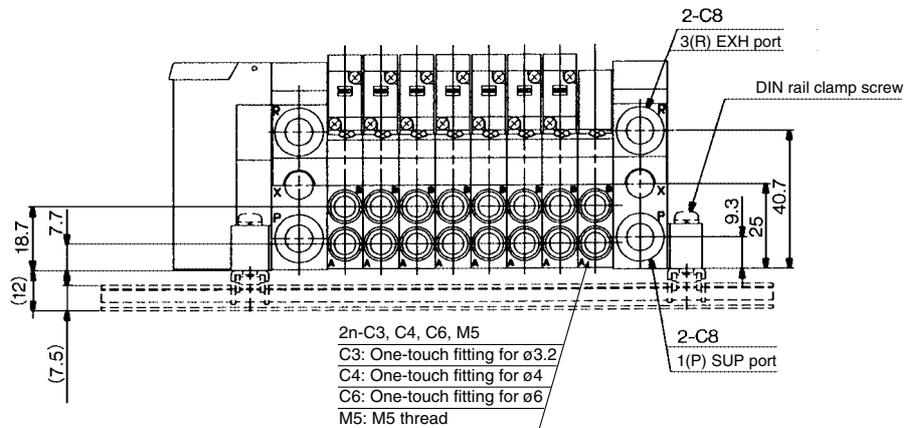

Vacuum ejector unit style: Formula
 $L1 = 10.5n + 28.7 + (\text{Number of ejector units} \times 26.7)$
 $L2 = 10.5n + 56.3 + (\text{Number of ejector units} \times 26.7)$
 $L4$ is $L2$ plus about 30.


Note) Manifolds with SI unit for Matsushita Electric Works' MEWNET FP and Rockwell Automation's model are the same with $L5$, $L6$ and $L7$ dimensions of dustproof SI unit.

Dimensions

Dust-protected type SI unit: $L5 = 10.5n + 97$, $L6 = L3 + 25$, $L7 = L4 + 25$
 Formula $L1 = 10.5n + 44.5$, $L2 = 10.5n + 72.5$ n: Station (Maximum 16 stations)


L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	65.5	76	86.5	97	107.5	118	128.5	139	149.5	160	170.5	181	191.5	202	212.5
L2	93.5	104	114.5	125	135.5	146	156.5	167	177.5	188	198.5	209	219.5	230	240.5
(L3)	125	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5
(L4)	135.5	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273

VQ2000

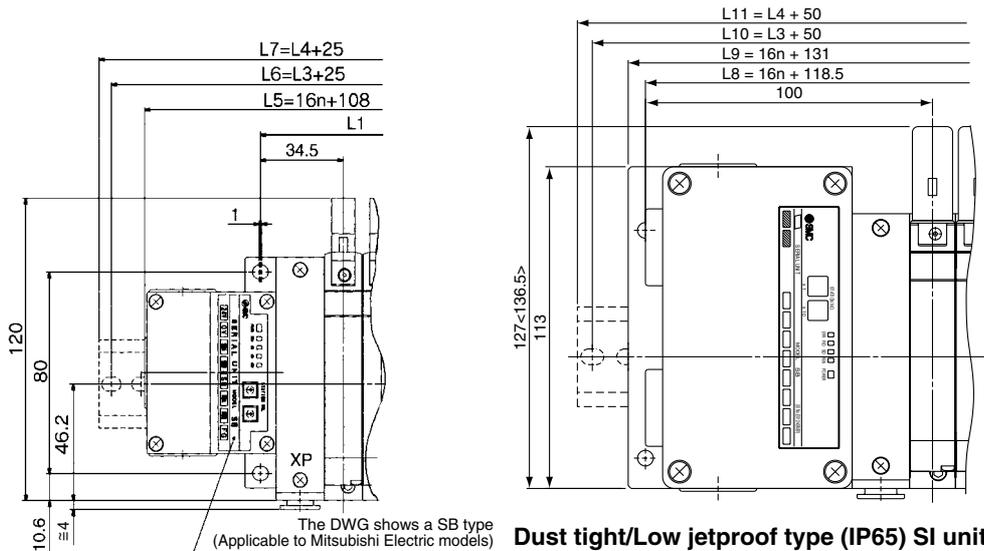


Dusttight SI unit

- VQC
- SQ
- VQ0**
- VQ4
- VQ5
- VQZ
- VQD

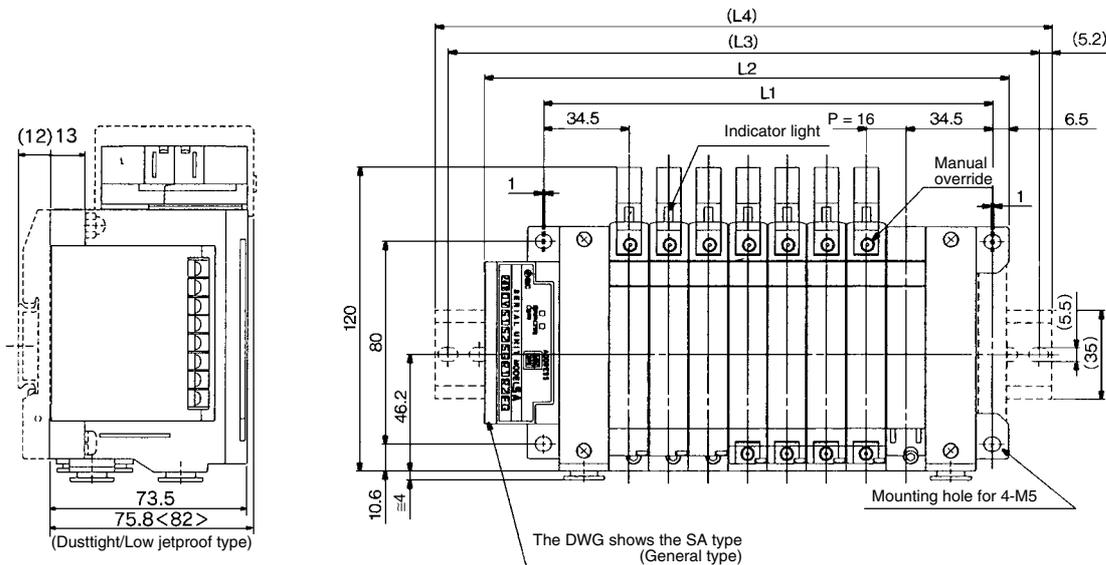

The DWG shows the SA type (General type)

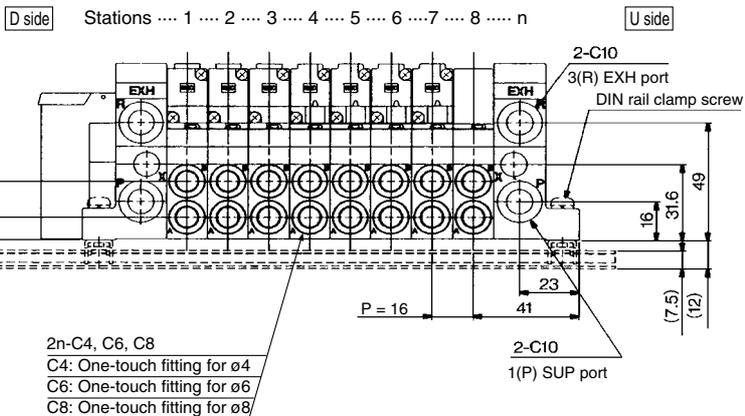

< >: AC

Dust-protected type SI unit: L5 = 16 + 108, L6 = L3 + 25, L7 = L4 + 25
 Dusttight/Low jetproof SI unit: L8 = 16n + 118.5, L9 = 16n + 131
 L10 = L3 + 50, L11 = L4 + 50

Formula : L1 = 16n + 53, L2 = 16n + 83 n: Stations (Maximum 16 stations)


Dimensions

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	85	101	117	133	149	165	181	197	213	229	245	261	277	293	309
L2	115	131	147	163	179	195	211	227	243	259	275	291	307	323	339
(L3)	137.5	162.5	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5
(L4)	148	173	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373

Note) Manifolds with SI unit for Matsushita Electric Works' MEWNET FP and Rockwell Automation's model are the same with L5, L6 and L7 dimensions of dustproof SI unit.

M VQ2000 Kit (Flat ribbon cable connector)

- MIL flat cable connector reduces installation labor for electrical connection.
- Manifold and connectors, both compliant with the IP65 rating (dusttight, low jetproof), provide a high degree of protection for the electrical parts.
- Maximum stations are 24.

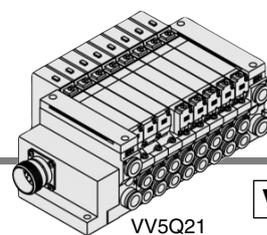

VQ2000 only

Manifold Specifications

Series	Porting specifications		Applicable stations
	Port location	Port size	
VQ2000	Side	1(P), 3(R) 4(A), 2(B)	Max. 24 stations

Circular Connector (26 pins)

Cable assembly ●

AXT100-MC26-015
030
050
(Circular connector assembly included in a specific manifold model no.)
(specific manifold model no. Refer to How to Order Manifold.)

Circular Connector Cable Assembly (Option)

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-MC26-015	Cable 25 core x 24AWG
3 m	AXT100-MC26-030	
5 m	AXT100-MC26-050	

Electric Characteristics

Item	Characteristics
Conductor resistance Ω/km, 20°C	65 or less
Voltage limit V, 1 min, AC	1000
Insulation resistance MΩkm, 20°C	5 or more

Note) The minimum bending radius of circular connector cable is 20 mm.

Circular Connector Cable Assembly Terminal No.

Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Gray	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Gray	Red
24	Black	White
25	White	None
26	White	None

How to Order Manifold

VV5Q 2 1-08 C6 M 1-N W

Series
2 VQ2000

Manifold
1 Plug-in unit

Stations
02 2 stations
: :
24 24 stations
Note) For details, refer to page 2-4-178.

Cable (Length)
0 Without cable
1 With cable (1.5 m)
2 With cable (3 m)
3 With cable (5 m)

Cylinder port

Symbol	Port size
C4	With One-touch fitting for ø4
C6	With One-touch fitting for ø6
C8	With One-touch fitting for ø8
CM	With mixed size/with port plug


Note 1) Insert "L" (top piping) or "B" (bottom piping) for elbow type. Example) B6 (Elbow One-touch fittings for ø6, bottom piping.)
Note 2) Indicate "LM" for models with elbow fittings and mixed cylinder port sizes.
Note 3) Specify "Mixed size/with port plug" in the manifold specification sheet.
Note 4) Inch-size One-touch fittings are available. For details, refer to page 2-7-179.

Enclosure
IP65 (Dust tight/Low jetproof type)


Option

Symbol	Option	Note
Nil	None	
B	With back pressure check valve	(2)
D	DIN rail mounting	
K	Special wiring specifications (Not double wiring)	(3)
N	With name plate	
R	External pilot	(4)

Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BKR
Note 2) Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations.
Note 3) If not all stations need this check valve, specify the stations where check valves are installed by using the manifold specification sheet.
Note 4) Specify the wiring by using of the manifold specification sheet. Indicate "R" for the valve with external pilot.

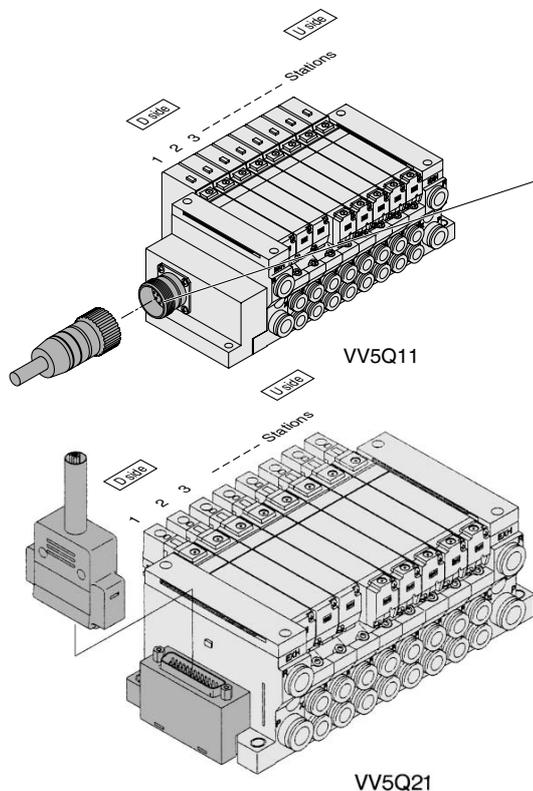

Electrical wiring specifications

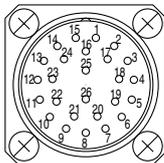

As the standard electrical wiring specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 12 stations or less, regardless of valve and option types. Mixed single and double wiring is available as an option. For details, refer to page 2-7-178.

The total number of stations is tabulated starting from station one on the D side.

Circular connector cable assembly

AXT100-MC26-015
030 Wire Color
050

Terminal no.	Polarity	Lead wire color	Dot marking
SOL.A 1	(-)	(+) Black	None
SOL.B 2	(-)	(+) Brown	None
SOL.A 3	(-)	(+) Red	None
SOL.B 4	(-)	(+) Orange	None
SOL.A 5	(-)	(+) Yellow	None
SOL.B 6	(-)	(+) Pink	None
SOL.A 7	(-)	(+) Blue	None
SOL.B 8	(-)	(+) Purple	White
SOL.A 9	(-)	(+) Gray	Black
SOL.B 10	(-)	(+) White	Black
SOL.A 11	(-)	(+) White	Red
SOL.B 12	(-)	(+) Yellow	Red
SOL.A 13	(-)	(+) Orange	Red
SOL.B 14	(-)	(+) Yellow	Black
SOL.A 15	(-)	(+) Pink	Black
SOL.B 16	(-)	(+) Blue	White
SOL.A 17	(-)	(+) Purple	None
SOL.B 18	(-)	(+) Gray	None
SOL.A 19	(-)	(+) Orange	Black
SOL.B 20	(-)	(+) Red	White
SOL.A 21	(-)	(+) Brown	White
SOL.B 22	(-)	(+) Pink	Red
SOL.A 23	(-)	(+) Gray	Red
SOL.B 24	(-)	(+) Black	White
COM. 25	(+)	(-) White	None
COM. 26	(+)	(-) White	None



Note) When using the negative common specifications, use valves for negative common. (Refer to page 2-4-178.) For details, refer to "Option" on page 2-4-178.

Positive common specifications
Negative common specifications

VQC

SQ

VQ0


VQ4

VQ5

VQZ

VQD

How to Order Valves

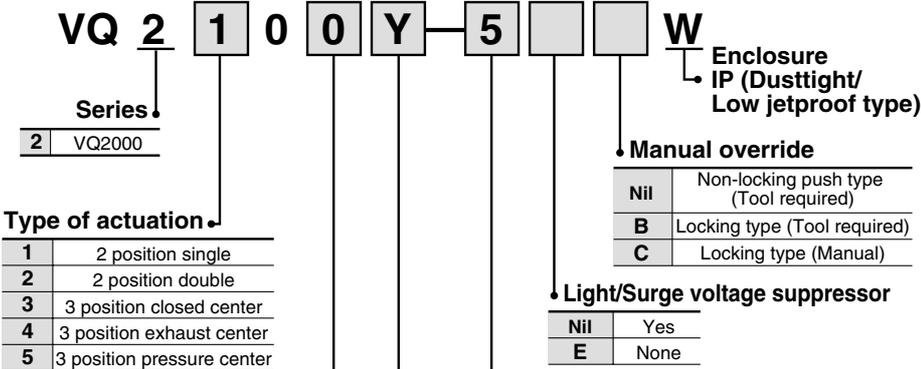

How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.


<Example>

Flat ribbon cable kit with 3 m cable

- VV5Q21-09C6M2-W... 1 set—Manifold base no.
- *VQ2100-5w 2 sets—Valve part no. (Stations 1 to 2)
- *VQ2200-5w 4 sets—Valve part no. (Stations 3 to 6)
- *VQ2300-5w 2 sets—Valve part no. (Stations 7 to 8)
- *VVQ2000-10A-1 1 set—Blanking plate part no. (Station 9)

Prefix the asterisk to the part nos. of the solenoid valve, etc.

When ordering, specify the part nos. in order from the 1st station in the D side. When part nos. written collectively are complicated, specify by using the manifold specification sheet.

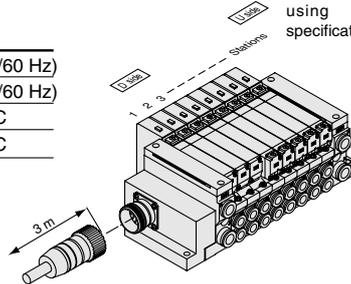

Note) For external pilot and negative COM specifications, refer to "Option" on 2-4-178 to 2-4-179.




Note) For power consumption of AC type, refer to page 2-4-129.


M VQ2000 Kit (Flat ribbon cable connector)

VQ2000

The broken lines indicate the DIN rail mounting style [-D] and the side entry connection [-FS].

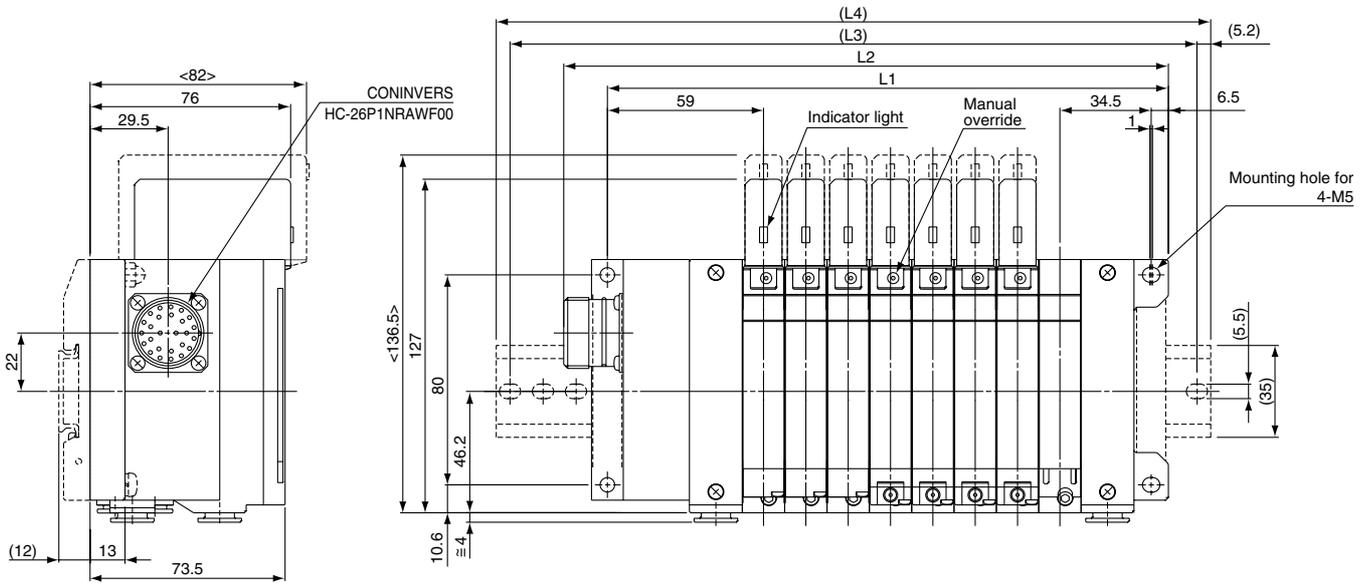

D side Stations 1 2 3 4 5 6 7 8 n U side

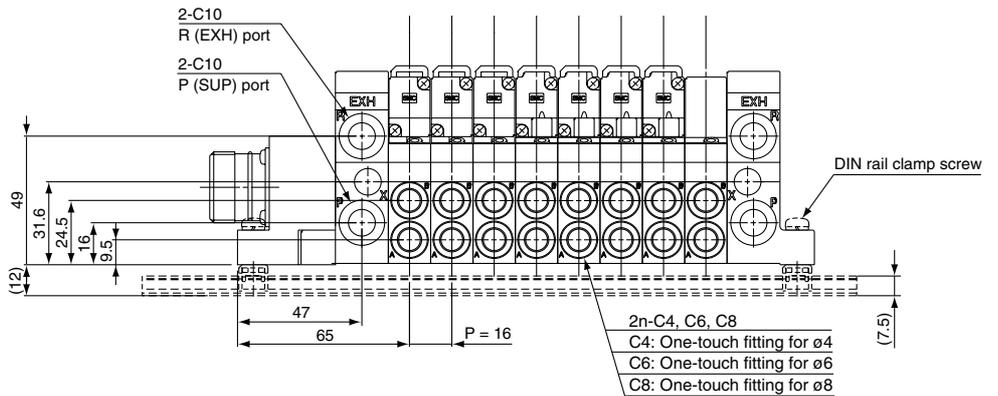

< >: AC

Dimensions

Formula $L1 = 16n + 77.5$, $L2 = 16n + 100.5$ n: Station (Maximum 12 stations)

L	n	2	3	4	5	6	7	8	9	10	11	12
L1		109.5	125.5	141.5	157.5	173.5	189.5	205.5	221.5	237.5	253.5	269.5
L2		132.5	148.5	164.5	180.5	196.5	212.5	228.5	244.5	260.5	276.5	292.5
(L3)		162.5	175	187.5	200	225	237.5	250	275	287.5	300	312.5
(L4)		173	185.5	198	210.5	235.5	248	260.5	285.5	298	310.5	323

VQC

SQ

VQ0


VQ4

VQ5

VQZ

VQD

S VQ2000 Kit (Serial transmission kit) for I/O IP65 compliant

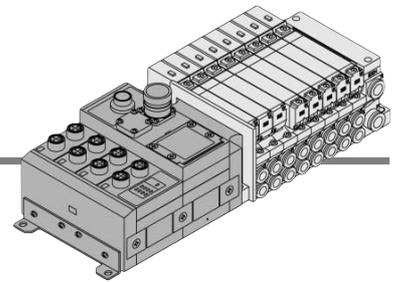

VQ2000 only

Applicable network **DeviceNet/PROFIBUS-DP**


- The serial transmission system reduces wiring work, while minimizing wiring and saving space.

SI unit for DeviceNet/PROFIBUS

As a slave for DeviceNet/PROFIBUS, it is possible to control ON/OFF of a solenoid valve with the maximum of 32 points. Furthermore, by connecting a discrete input block, it is possible to input the sensor signal for 32 points at the maximum.

Input block

Meaning of an expansion block, connecting with SI unit, for sensor-inputting for auto switches, etc. Sensor-input is available up to 8 per one input block. By the NPN/PNP switch, it is able to adjust COM to sensor.

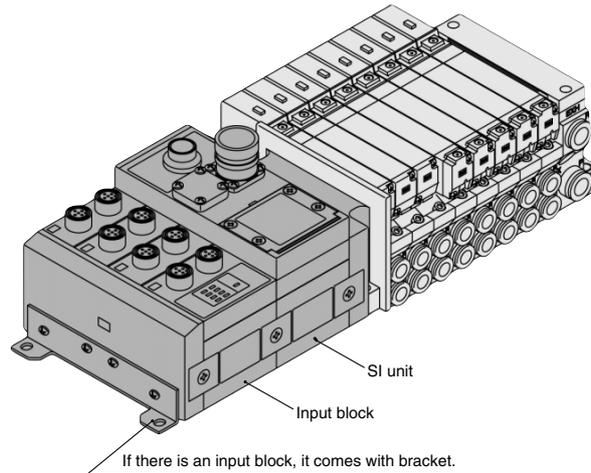

VQ2000 IP65, Applicable to Input/Output, Serial Transmission Type

How to Order Manifold

VV5Q21 — **08** **C6** **S** **D** **QW** **1** **N** **W**

VQ2000 Plug-in series

Stations

01	1 station
⋮	⋮
16	16 stations

Cylinder port

Symbol	Port size
C4	With One-touch fitting for ø4
C6	With One-touch fitting for ø6
C8	With One-touch fitting for ø8
CM	With mixed size/with port plug

SI unit mounting
D: D side mounting

Option

Symbol	Option
Nil	None
B	With back pressure check valve
D	DIN rail mounting style
K	Special wiring specifications (Not double wiring)
N	With name plate
R	External pilot

Note) When two or more symbols are specified, indicate them alphabetically.
Example: -DNR

Input block COM

Symbol	Option
Nil	PNP(+) or SI/Input block: None
N	NPN (-)

Input block

Symbol	Option
Nil	SI unit/Input block: None
0	Input block: None
1	Input block 1 pc.
2	Input block 2 pcs.
3	Input block 3 pcs.
4	Input block 4 pcs.

Enclosure IP65 (Dust tight/Low jetproof type)


Model

Symbol	Option
0W	Without SI unit
QW	DeviceNet +COM
NWN	PROFIBUS-DP -COM

Note) Only +COM is available for DeviceNet. Order a mounting valve with +COM.
Since PROFIBUS is -COM only, order -COM for valves to be mounted.


Details in Connector

Input block

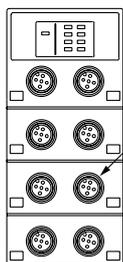


Input connector

SI Unit (DeviceNet)

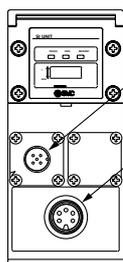

Communication connector
Power source connector

SI Unit (PROFIBUS-DP)

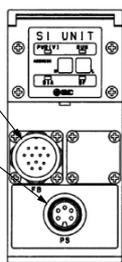


● **Communication connector (PROFIBUS-DP):** Made by CONINVERS GmbH RC-2RS1N12 12 pins
Cable side connector example: Made by Siemens AG 6ES5 760-2CB11

Number	Description	Function
1	M5V	GND Terminal
2	A	Signal-N
4	B	Signal-P
6	+5V	Terminal +5 V
9	SHIELD	Shield ground
12	RTS	Optical fiber (Reserve)

Pin no. 3, 5, 7, 8, 10 and 11 marked with ● are open.


* Connector's shape and pin assignment is interchangeable with ET200C made by Siemens AG.

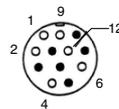


● **Input connector: M12 5 pins (XS2F compatible made by OMRON Corp.) x 8 pcs.**

Cable side connector example: XS2G made by OMRON Corp.

Number	Description	Function
1	SW+	Sensor power supply +
2	N.C.	Open *
3	SW-	Sensor power supply -
4	SIGNAL	Sensor input signal
5	PE	Protective sensor ground

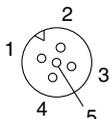

* No. 2 pin of the input no. 0, 2, 4, 6 connector (connectors aligned in the right side on the input block) is connected internally with no. 4 pin (sensor input no.) of the input no. 1, 3, 5, 7 respectively. Thereby, it is possible to directly input 2 points which is bundled into 1 cable by the cluster connector, etc.

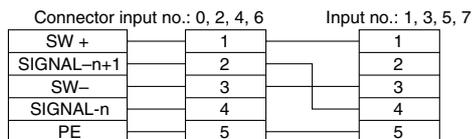


● **Power source connector: Series 723 (made by Franz Binder GmbH) 5 pins (72309-0115-80-05)**

Cable side connector example: Franz Binder GmbH 72309-0114-70-15, etc.

* Din type 5 pins.


Number	Description	Function
1	SV24V	For solenoid valve +24 V
2	SV0V	For solenoid valve 0 V
3	PE	Protective ground
4	SW24V	<DeviceNet> For input block +24 V, <Profibus or Interbus> For input unit and SI unit +24 V
5	SW0V	<DeviceNet> For input block 0 V, <Profibus or Interbus> For input unit and SI unit 0 V

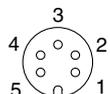

● **Communication connector (DeviceNet): M12 5 pins (for DeviceNet compliant)**

Example of corresponding cable assemblies with connector: OMRON Corporation: DCA1-5CN05F1 Karl Lumberg GmbH & Co. KG: RKT5-56

Number	Description	Function
1	Drain	Drain/Shield
2	V+	Circuit power supply +
3	V-	Circuit power supply -
4	CAN_H	Signal H
5	CAN_L	Signal L

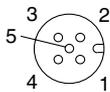


Item conforming to Micro Style connector in DeviceNet specifications.

Caution


When an enclosure equivalent to IP65 is required, place a waterproof cover on the unused input connector. As for waterproof cover, order it separately. Example: OMRON Corp. XS2Z-12

Indicator Unit (LED) Descriptions and Functions

SI Unit (DeviceNet)

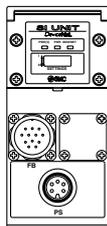

SI Unit (PROFIBUS-DP)

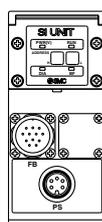

Input block




Description	Function
PWR(V)	ON when solenoid valve power supply is turned ON
PWR	ON when DeviceNet circuit power supply input is turned ON
MOD/NET	OFF: Power supply off, off line, or when checking duplication of MAC_ID
	Green blinking: Waiting for connection (On line)
	Green ON: Connection established (On line)
	Red blinking: Connection time out (Minor communication abnormality occurs)
	Red ON: MAC_ID duplication error, or BUSOFF error (Major communication abnormality occurs)

Description	Function
PWR	ON when solenoid valve power supply is turned ON OFF when the power supply voltage is less than 19 V
RUN	ON when operating (SI unit power supply is ON)
DIA	ON when self-diagnosis device detects abnormality
BF	ON for BUS abnormality

Description	Function
PWR	ON when sensor power is turned ON OFF when short circuit protection is working
0 to 7	ON when each sensor input goes ON

S VQ2000 Kit (Serial transmission kit) for I/O IP65 compliant

VV5Q21S kit
(Serial transmission kit: EX240)

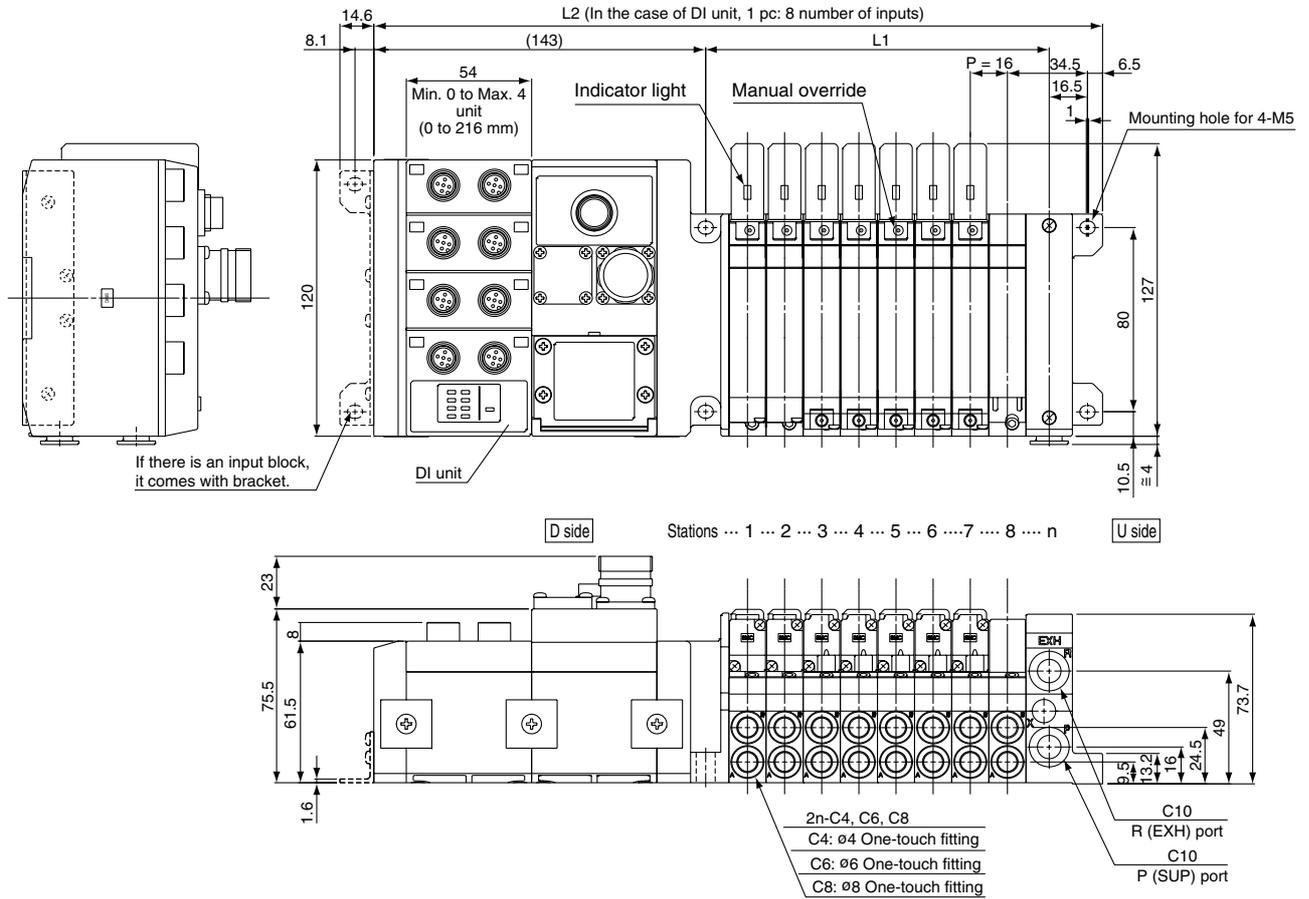


Dimensions Formula $L1 = 16n + 36.5$, $L2 = 16n + 186$ (In the case of 1 pc. DI unit, 54 mm will be added for increasing every 1 pcs.) n: Station

L \ n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	68.5	84.5	100.5	116.5	132.5	148.5	164.5	180.5	196.5	212.5	228.5	244.5	260.5	276.5	292.5
L2	218	234	250	266	282	298	314	330	346	362	378	394	410	426	442



Series VQ1000

Manifold Option Parts for VQ1000

Blanking plate assembly VVQ1000-10A-1

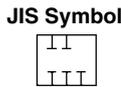

It is used by attaching on the manifold block for being prepared for removing a valve for maintenance reasons or planning to mount a spare valve, etc.

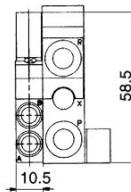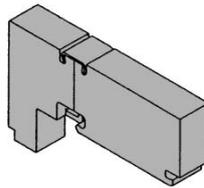

Individual SUP spacer VVQ1000-P-1-C6



When the same manifold is to be used for different pressures, individual SUP spacers are used as SUP ports for different pressures. (One station space is occupied.)

Block both sides of the station, for which the supply pressure from the individual SUP spacer is used, with SUP block plates. (Refer to the application ex.)

* Specify the spacer mounting position and SUP block plate position on the manifold specification sheet.

The block plate are used in two places for one set. (Two SUP block plates for blocking SUP station are attached to the individual SUP spacer.)

* Electric wiring is connected to the position of the manifold station where the individual SUP spacer is mounted.

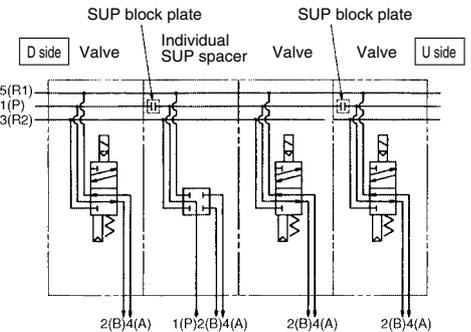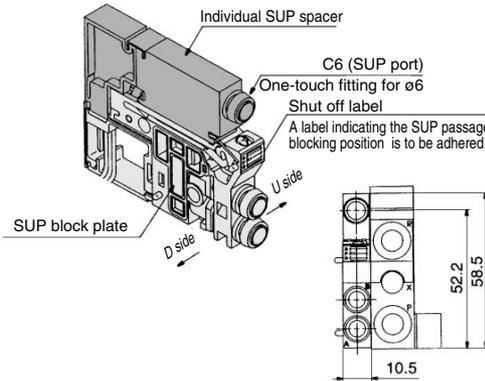

Individual EXH spacer VVQ1000-R-1-C6

When valve exhaust affects other stations due to the circuit configuration, this spacer is used for individual valve exhaust. (One station space is occupied.)


Block both sides of the individual valve EXH station. (See example)

* Specify the mounting position, as well as the EXH block base or EXH block plate position on the manifold specification sheet. The block plate are used in two places for one set. (Two EXH block plates for blocking EXH station are attached to the individual EXH spacer.)


* An EXH block base assembly is used in the blocking position when ordering an EXH spacer incorporated with a manifold no. However, do not order an EXH block base assembly because it is attached to the spacer.

When separately ordering an individual EXH spacer, separately order an EXH block base assembly because it is not attached to the spacer.

* Electric wiring is connected to the position of the manifold station where the individual EXH spacer is mounted.

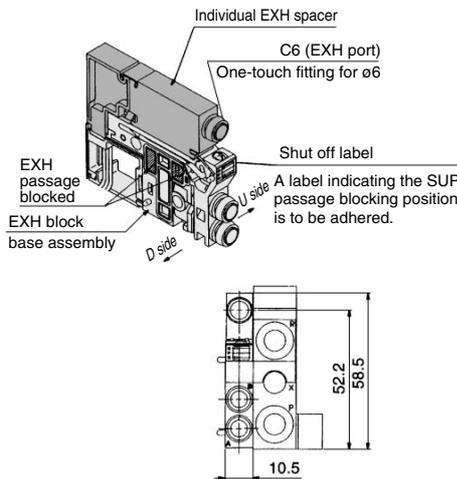

Description/Model		Stations						
		1	2	3	4	5	6	7
Valve	Single	●	●	●				
Option	Individual EXH spacer VVQ1000-R-1-C6		●					
	EXH shut off position: Specify 2 places.	●		●				

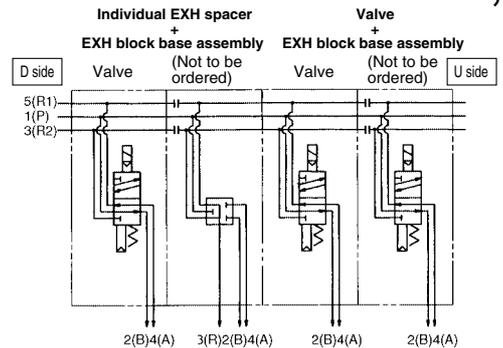

SUP block plate VVQ1000-16A




When different pressures, high and low, are supplied to one manifold, a SUP block plate is inserted between the stations under different pressures.

* Specify the number of stations on the manifold specification sheet.


<Shut off label>

When using block plates for SUP passage, indication label for confirmation of the blocking position from outside is attached. (One label of each)

* When ordering a block plate incorporated with the manifold no., a block indication label is attached to the manifold.

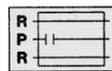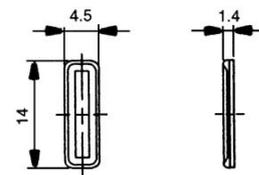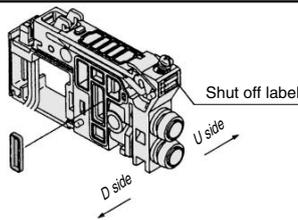

SUP passage block

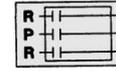

SUP/EXH passage blocked

Blanking plate with connector VVQ1000-1C-




Style of manifold	Connector	Lead wire length (mm)			
		Nil	300	20	2000
1	VV5Q11	6	600	25	2500
		10	1000	30	3000
		15	1500		

Blanking plate with a connector for individually outputting electricity to drive a single valve or equipment that are not on the manifold base.

* When "N" is suffixed to the nameplate, the plate will be different from a standard shape.


Note) Electric current should be 1A or less. (Including the mounted valves.)

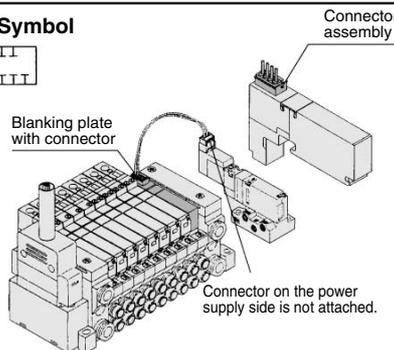

Connector assembly part no. AXT661-43 A-6

Lead wire length: L	Lead wire length: L			
	Nil	300 mm	6	600 mm
	6	600 mm	10	1000 mm
	20	2000 mm	30	3000 mm

Lead wire color: Black
Lead wire color: Red
Lead wire color: White

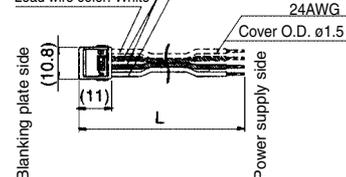


EXH block base assembly
VVQ1000-19A-□ (C3, C4, C6, M5)

Manifold block assembly
Electrical entry

F1	For F kit (2 to 12 stations)/Double wiring
F2	For F kit (13 to 24 stations)/Double wiring
F3	For F kit (2 to 24 stations)/Single wiring
P1	For P, G, T, S kit (2 to 12 stations)/Double wiring
P2	For P, G, T, S kit (13 to 24 stations)/Double wiring
P3	For P, G, T, S kit (2 to 24 stations)/Single wiring
L0*	L0 kit
L1*	L1 kit
L2*	L2 kit

* 1 to 8 stations

The manifold block assembly is used between stations for which exhaust is desired to be divided when valve exhaust affects other stations due to the circuit configuration. The EXH passage on the D-side is blocked in the EXH block base assembly. It is also used in combination with an individual EXH spacer for individual exhaust.

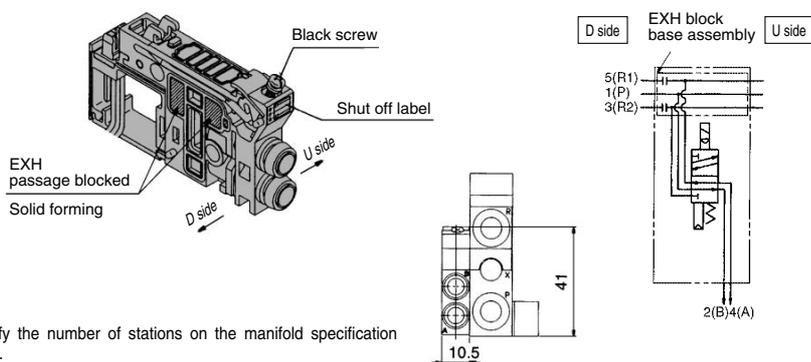


- * Specify the number of stations on the manifold specification sheet.
- * When ordering by using the manifold specification form, specify the EXH block base assembly no. by adding suffix "*" below the manifold no.


<Blocking indication label>

When blocking the EXH passage with an EXH block base assembly, indication label for confirmation of the blocking position from outside is attached. (One label for each)

- * When ordering a EXH block base incorporated with the manifold no., a block indication label is attached to the manifold.

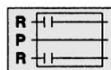

EXH passage blocked

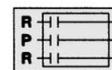


SUP/EXH passage blocked

Back pressure check valve assembly [-B]
VVQ1000-18A

It prevents cylinder malfunction caused by other valve exhaust. Insert it into R (EXH) port on the manifold side of a valve which is affected. It is effective when a single action cylinder is used or an exhaust center type solenoid valve is used.

Note) When a check valve for back pressure prevention is desired, and is to be installed only in certain manifold stations, write clearly the part no. and specify the number of stations by using the manifold specification sheet.

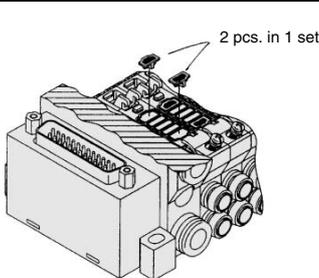

- * When ordering assemblies incorporated with a manifold, add suffix "-B" to the manifold no.

(Precautions)


1. The back pressure check valve assembly parts with a check valve structure. However, as slight air leakage is allowed for the back pressure, take care the exhaust air will not be throttled at the exhaust port.
2. When a back pressure check valve is mounted, the effective area of the valve will decrease, by about 20%.

Name plate [-N]
VVQ1000-NC N-Station (1 to Max. stations)


It is a transparent resin plate for placing a label that indicates solenoid valve function, etc. Insert it into the groove on the side of the end plate and bend it as shown in the figure.

- * When the blanking plate with connector is mounted, it automatically will be "VVQ1000-NC-n" with an option symbol [-N]

N: Standard
 NC: For mounting blanking plate with connector

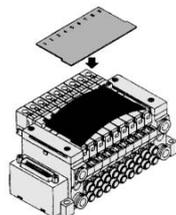



- * When ordering assemblies incorporated with a manifold, add suffix "-N" to the manifold no.

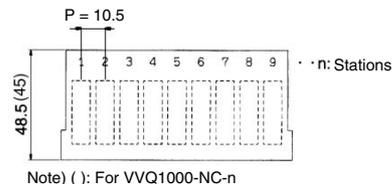

Blanking plug (For One-touch fittings)

KQ2P-²³/₀₄/₀₆/₀₈

It is inserted into an unused cylinder port and SUP/EXH ports. Purchasing order is available in units of 10 pieces.

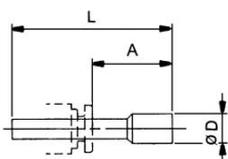
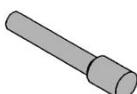


Dimensions

Applicable fittings size od	Model	A	L	D
3.2	KQ2P-23	16	31.5	3.2
4	KQ2P-04	16	32	6
6	KQ2P-06	18	35	8
8	KQ2P-08	20.5	39	10

Port plug
VVQ0000-58A

The plug is used to block the cylinder port when using a 4 port valve as a 3 port valve.

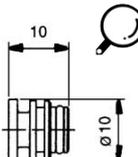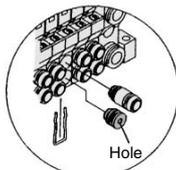



- * When ordering a plug incorporated with a manifold, indicate "CM" for the port size in the manifold no., as well as, the mounting position and number of stations and cylinder port mounting positions, A and B, on the manifold specification sheet.
- * Lightly screw an M3 screw in the port plug hole and pull it for removal.

Elbow fitting assembly
VVQ1000-F-L (C3, C4, C6, M5)


It is used for piping that extends upward or downward from the manifold.

When installing it in part of the manifold stations, specify the assembly no. and the mounting position and number of stations by means of the manifold specification sheet.

- * When mounting elbow fittings assembly on the edge of manifold station and a silencer on EXH port, select a silencer, AN203-KM8. Silencer (AN200-KB8) is interfered with fittings.

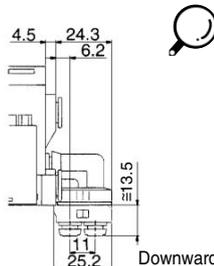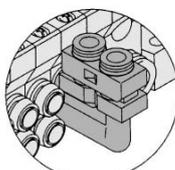

- * When ordering assemblies incorporated with a manifold, indicate "L□" or "B□" for the manifold port size. (When installed in all stations.)

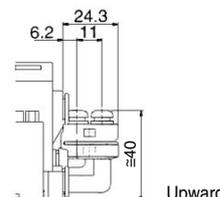

Series VQ1000


Manifold Option Parts for VQ1000

DIN rail mounting bracket


VVQ1000-57A

It is used for mounting a manifold on a DIN rail. The DIN rail mounted bracket is fixed to the manifold end plate. (The specification is the same as that for the option "-D".)

1 set of DIN rail mounting bracket is used for 1 manifold (2 DIN rail mounting brackets).

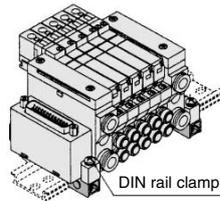

* When ordering assemblies incorporated with a manifold, add suffix "D" to the manifold no.

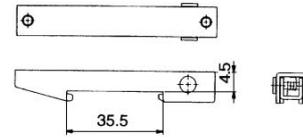


Mounting screws are attached

Built-in silencer, Direct exhaust [-S]

This is a type with an exhaust port a top the manifold end plate. The built-in silencer exhibits an excellent noise suppression effect. (Silencing effect: 30 dB)



Note) A large quantity of drainage generated in the air source results in exhaust of air together with drainage. For maintenance, refer to page 2-4-176.

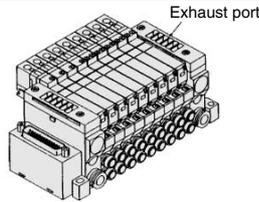

* When ordering assemblies incorporated with a manifold, add suffix "S" to the manifold no.

2 stations matching fitting assembly



VVQ1000-52A-C8

For driving a cylinder with a large bore, valves for two stations are operated to double the flow rate. This assembly for the cylinder port is used in that case. The assembly is equipped with One-touch fittings for a ø8 bore.

* The bore for the manifold no. is "CM".

Clearly indicate the 2 station matching fitting assembly no., and specify the number of stations and positions by means of the manifold specifications.

* In 2 station matching fitting assembly, a special clip which is combined in one-piece of 2 stations is attached as a holding clip.

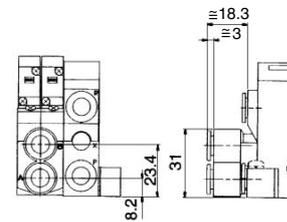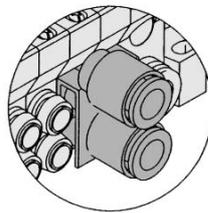


Silencer (For EXH port)

This silencer is to be inserted into the EXH port (One-touch fittings) of the common exhaust type

* When mounting elbow fittings assembly (VVQ1000-F-L□) on the edge of manifold station, select a silencer, AN203-KM8.

Silencer (AN200-KM8) is interfered with fittings.

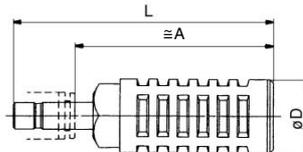

Dimensions

Series	Applicable fittings size ød	Model	A	L	D	Effective area (mm ²)	Noise reduction (dB)
VQ1000	8	AN200-KM8	59	78	22	20	30
		AN203-KM8	32	51	16	14	25*

Regulator unit

VVQ1000-AR-1


The regulator controls the SUP air pressure in a manifold. Supply air from D side SUP port is regulated. SUP port on U side is plugged.

Specifications

Maximum operating pressure	0.8 MPa
Set pressure range	0.05 to 0.7 MPa
Ambient and fluid temp.	5 to 50°C
Fluid	Air
Cracking pressure	0.02 MPa
Structure	Relieving type

Pressure gauge G27-10-01

Pressure control screw

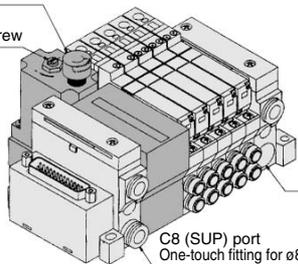




• How to Order

Indicate an option symbol "-G*" for the manifold no. and be sure to specify the mounting position and number of stations by means of the manifold specification form. One unit is counted as one station and occupies a space for three stations, therefore, pay attention to the manifold size.

The regulator valve unit, to which no wire is connected, valves can be mounted up to the standard max. number of stations of each kit.


How to order manifold

VV5Q11-14C6FUO-DG2

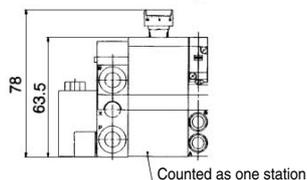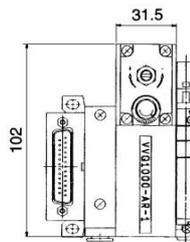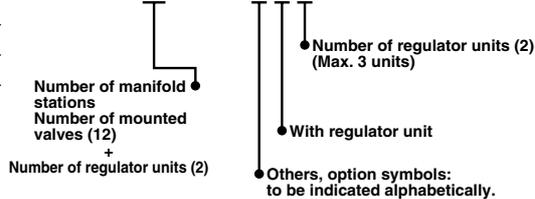


Flow Characteristics

Conditions: Inlet pressure 0.7 MPa

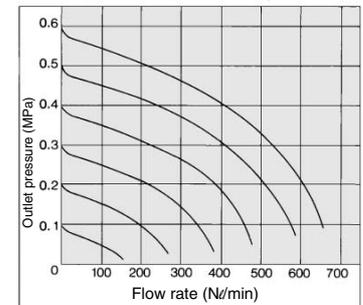

Pressure characteristics

Conditions (Initial setting) Inlet pressure 0.7 MPa, Outlet pressure 0.2 MPa

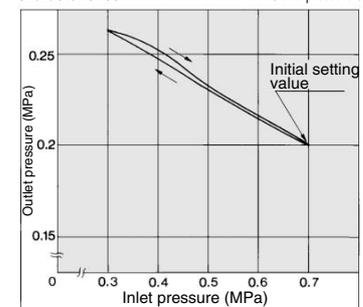

⚠ Caution

• Pressure setting

Check the supply pressure and then turn the pressure control screw to set the secondary pressure. Turning the screw clockwise will increase the secondary pressure while turning it counterclockwise decrease the pressure. (Set the pressure by turning the screw in the increase direction.)

• Installation

Since some level of the actuator's operational frequency may lead to a sharp pressure change, pay attention to the pressure gauge durability.

Double check block (Separated type): For VQ1000
VQ1000-FPG-□□


It is used on the outlet side piping to keep the cylinder in the intermediate position for a long time. Combining the double check block with a built-in pilot type double check valve and a 3 position exhaust center solenoid valve will enable the cylinder to stop in the middle or maintain its position for a long time.

The combination with a 2 position single/double solenoid valve will permit this block to be used for preventing the dropping at the cylinder stroke end when the SUP residual pressure is released.


Specifications

Max. operating pressure	0.8 MPa
Min. operating pressure	0.15 MPa
Ambient and fluid temp.	-5 to 50°C
Flow characteristics: C	0.60 dm ³ /(s·bar)
Max. operating frequency	180 CPM

Note) Based on JIS B 8375-1981
 (Supply pressure: 0.5 MPa)

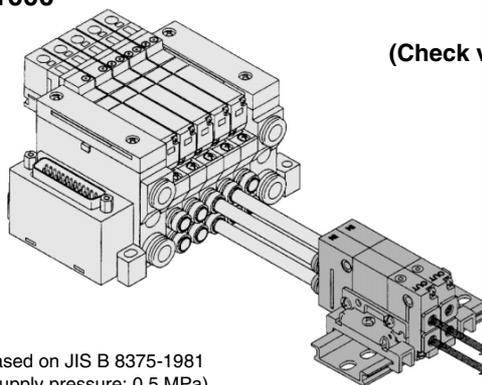

(Check valve operation principle)

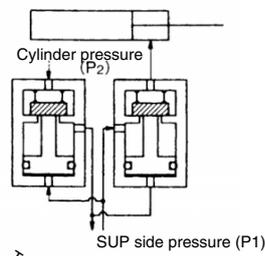


VVQ1000-FPG-02 1 set
 * VQ1000-FPG-C6M5-D 2 pcs.



- VQC
- SQ
- VQ0
- VQ4
- VQ5
- QZ
- QD

Dimensions

Single unit

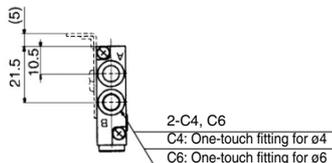


Manifold

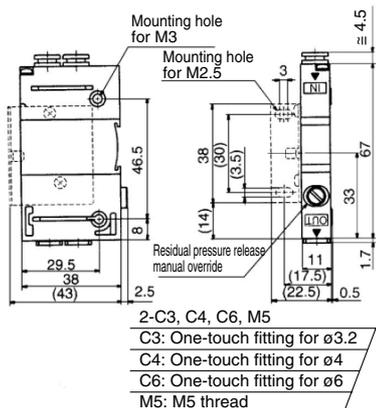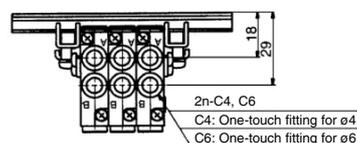

Dimensions Formula L1 = 11n + 20 n: Station (Maximum 24)

L _n	1	2	3	4	5	6	7	8	9	10	11	12
L1	31	42	53	64	75	86	97	108	119	130	141	152
L2	50	62.5	75	87.5	100	112.5	125	137.5	150	162.5	175	
L3	60.5	73	85.5	98	110.5	123	135.5	148	160.5	173	185.5	

L _n	13	14	15	16	17	18	19	20	21	22	23	24
L1	163	174	185	196	207	218	229	240	251	262	273	284
L2	187.5	187.5	200	212.5	225	237.5	250	262.5	275	287.5	300	
L3	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5

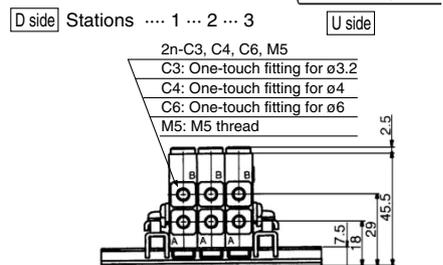

How to Order

Double check block

VQ1000-FPG-**C4** **M5** - **F**

IN side port size

C4	With One-touch fitting for ø4
C6	With One-touch fitting for ø6

OUT side port size

M5	M5 thread
C3	One-touch fitting for ø3.2
C4	One-touch fitting for ø4
C6	One-touch fitting for ø6

Option

Nil	None
F	With bracket
D	DIN rail mounting style (For manifold)
N	Name plate

Note) When two or more symbols are specified, indicate them alphabetically. Example) -DN

Manifold

VVQ1000-FPG-**06**

Stations

01	1 station
⋮	⋮
16	16 stations

<Example>


VVQ1000-FPG-06-6 types of manifold
 *VQ1000-FPG-C4M5-D, 3 sets } Double Check block
 *VQ1000-FPG-C6M5-D, 3 sets }

Bracket Assembly

Part no.	Tightening torque
VQ1000-FPG-FB	0.22 to 0.25 N·m


Caution

- Air leakage from the pipe between the valve and cylinder or from the fittings will prevent the cylinder from stopping for a long time. Check the leakage using neutral household detergent, such as dish washing soap. Also check the cylinder's tube gasket, piston packing and rod packing for air leakage.
- Since One-touch fittings allow slight air leakage, screw piping (with M5 thread) is recommended when stopping the cylinder in the middle for a long time.
- Combining double check block with 3 position closed center or pressure center solenoid valve will not work.
- M5 fitting assembly is attached, not incorporated into the double check block. After screwing in the M5 fittings, mount the assembly on the double check block. (Tightening torque: 0.8 to 1.2 N·m)
- If the exhaust of the double check block is throttled too much, the cylinder may not operate properly and may not stop intermediately.
- Set the cylinder load so that the cylinder pressure will be within two times that of the supply pressure.

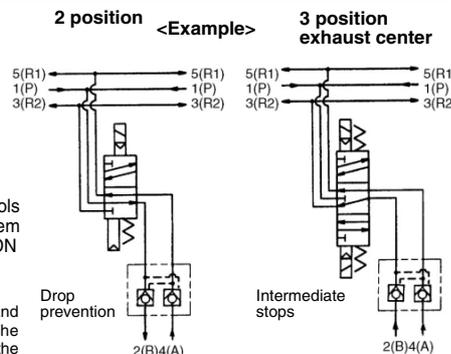

Manifold Option/Vacuum Ejector Unit: VQ1000

A vacuum ejector unit can be mounted on the manifold base for a solenoid valve. Instead of mounting the valve and vacuum ejector unit separately, this option reduces piping, wiring and creates additional space savings.

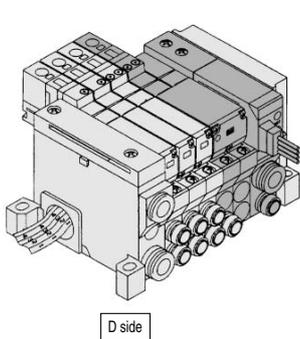

- Note 1) SUP and EXH ports on the vacuum ejector unit manifold base are arranged on D side alone. The end plate on the U side is the same as that used in the L kit.
- Note 2) Individual piping is provided for the supply and exhaust ports of the vacuum ejector unit.
- Note 3) The manifold with an vacuum ejector unit type is mounted from the U side.
- Note 4) One vacuum ejector unit corresponds to one station.
* Specify the position of stations on the manifold specification sheet.

Specifications

Unit no.	VVQ1000-J□-□□□-A	VVQ1000-J□-□□□-B
Nozzle diameter (mm)	0.7	1.0
Max. suction flow rate N (ℓ/min)	11	20
Max. vacuum pressure	-630 mmHg	
Max. operating pressure	0.8 MPa	
Standard supply pressure	0.5 MPa	
Operating temperature	5 to 50°C	


Maximum Number of Ejector Units

(Max. number of ejector units is subject to the number of valve stations.)

Max. number of ejector units	Max. number of mounted valves		
	F, P, T kit	S, G, J kit	L kit
1	11(20)	7(14)	7
2	10(16)	6(12)	6
3	9(12)	5(10)	5
4	8(8)	4(8)	—
5	4(4)	3(4)	—

Note) The max. number of mounted valves applies to double wiring. Parenthesized numbers apply to single wiring. Please contact SMC for conditions other than the above or mixed wiring.

Dimensions

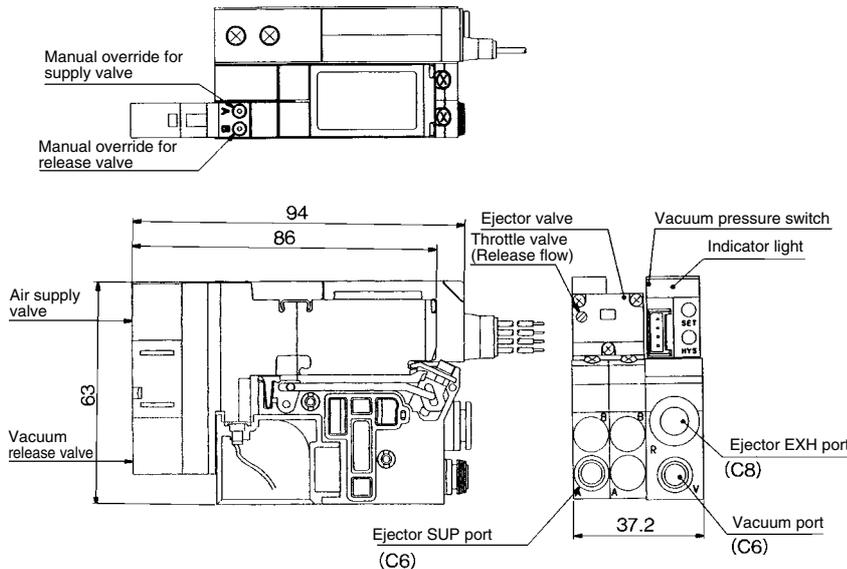

How to Order

VV5Q11-05C6FUO-J **P** **1** **S**

Vacuum switch	
Nil	None
P	With

Others, option symbols: to be indicated alphabetically.


Ejection unit
1 to 5

Example) VV5Q11-05C6FUO-JP1...1 set—Manifold part no.

- *VQ1100-5 2 sets—Valve part no. (Stations 1 to 2)
- *VQ1200-5 2 sets—Valve part no. (Stations 3 to 4)
- *VVQ1000-J1-5-A ... 1 set—Ejector valve part no.
- *ZSE1-00-15-CL 1 set—Vacuum switch part no.

- Note 1) Count one ejector unit as one manifold station.
- Note 2) The ejector unit is mounted next to the U-side end plate.
- Note 3) The U-side end plate is used exclusively for ejector units. (Without P and R port)
- Note 4) The dimension of manifold with an ejector unit is different from the standard dimension. See the formula for calculating the dimensions for each kit.

How to Order Vacuum Ejector Valves

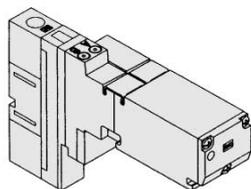

VVQ1000 – J 1 – 5 H C – A

Manifold
1 Plug-in unit

Coil voltage

1	100 VAC (50/60 Hz)	5	24 VDC
2	200 VAC (50/60 Hz)	6	12 VDC
3	110 VAC (50/60 Hz)	9	Others
4	220 VAC (50/60 Hz)		

Specifications

Symbol	Nozzle diameter	Vacuum release valve
A	ø0.7	With
B	ø1.0	

Manual override

Symbol	Specifications
Nil	Non-locking push type
B	Locking type (Tool required)
C	Locking type (Manual)

Function

Symbol	Specifications	DC	AC
Nil	Standard type	(1.0W) ○	○ ⁽¹⁾
H	High pressure type	(1.5 W) ○	—
Y	Low wattage type	(0.5W) ○	—
N	Negative COM	○	—



Note 1) For power consumption of AC type, refer to page 2-4-129.
Note 2) When two or more symbols are specified, indicate them alphabetically.

VQC

SQ

VQ0


VQ4

VQ5

VQZ

VQD

How to Order Vacuum Pressure Switches

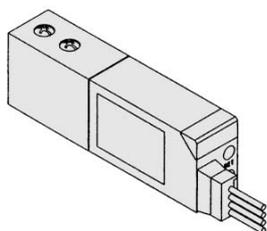

ZSE1 – 00 – 15 – CL

Switch/Voltage (Solid state: 12 to 24 VDC)

14	NPN/1 setting, 3 revolution adjustment
15	NPN/1 setting, 200° adjustment
16	NPN/2 setting, 3 revolution adjustment
17	NPN/2 setting, 200° adjustment
18	NPN/1 setting, 3 revolution adjustment, analog
19	NPN/1 setting, 200° adjustment, analog

Wiring specifications

Nil	Grommet type, Lead wire length 0.6 m
L	Grommet type, Lead wire length 3 m
C	Connector type, Lead wire length 0.6 m
CL	Connector type, Lead wire length 3 m
CN	Without connector ^{Note)}

Note) When ordering the switch with 5 m lead wire length, order separately the switch without connector and the connector. (Refer to below.) Besides, as for details, refer to the Vacuum Equipment catalog.

How to order connectors

- Without lead wire (Connector 1 pc., Socket 4 pcs.) ZS-20-A
- With lead wire ZS-20-5A-50


Lead wire length

Nil	0.6 m
30	3 m
50	5 m


(The flow characteristics are for the supply pressure of 0.5 MPa.)

Flow/Exhaust Characteristics of Ejector Unit


Nozzle Diameter ø0.7
Exhaust Characteristics

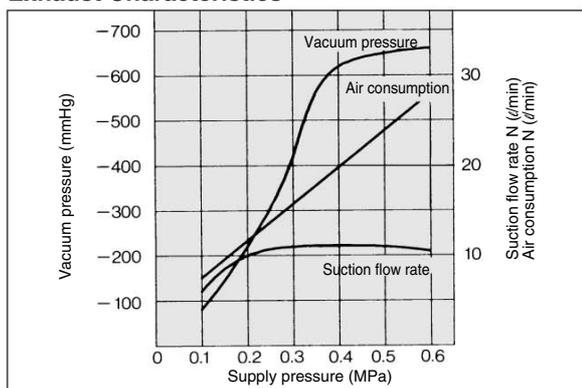


Flow Characteristics

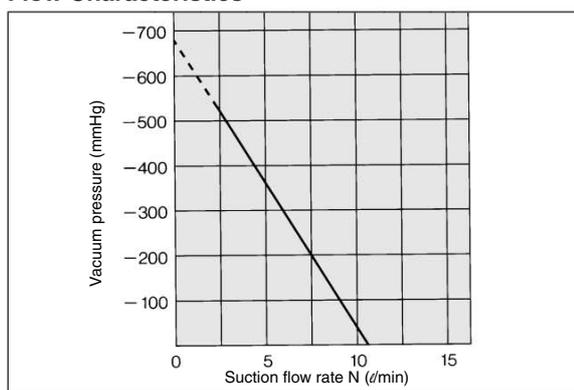

Nozzle Diameter ø1.0

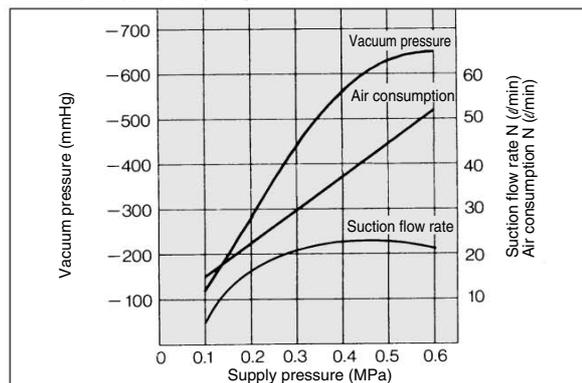

Flow Characteristics

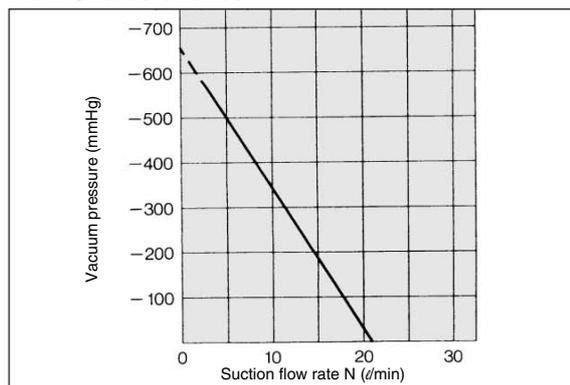



Series VQ2000

Manifold Option Parts for VQ2000

Blanking plate assembly VVQ2000-10A-1

It is used by attaching on the manifold block for being prepared for removing a valve for maintenance reasons or planning to mount a spare valve, etc.

JIS Symbol

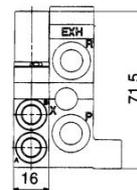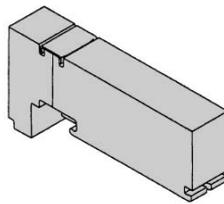



Individual SUP spacer VVQ2000-P-1-C8

When the same manifold is to be used for different pressures, individual SUP spacers are used as SUP ports for different pressures. (One station space is occupied.)

Block both sides of the station, for which the supply pressure from the individual SUP spacer is used, with SUP block plates. (Refer to the application ex.)

* Specify the spacer mounting position and SUP block plate position on the manifold specification sheet. The block plate are used in two places for one set. (Two SUP block plates for blocking SUP station are attached to the individual SUP spacer.)

* Electric wiring is connected to the position of the manifold station where the individual SUP spacer is mounted.

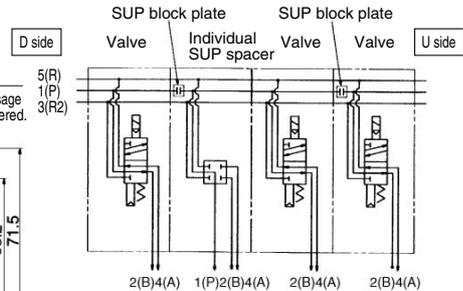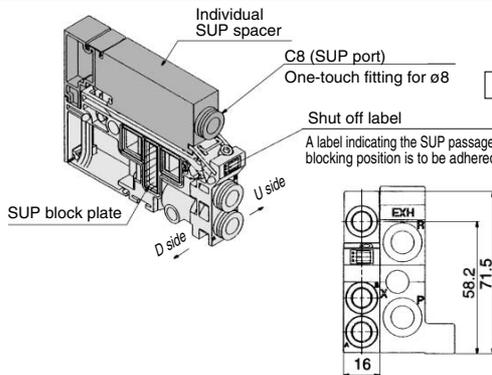



Individual EXH spacer VVQ2000-R-1-C8

When valve exhaust affects other stations due to the circuit configuration, this spacer is used for individual valve exhaust. (One station space is occupied.)

Block both sides of the individual valve EXH station. (See example)

* Specify the mounting position, as well as the EXH block base or EXH block plate position on the manifold specification sheet. The block plates are used in two places for one set. (Two EXH block plates for blocking EXH station are attached to the individual EXH spacer.)

* Electric wiring is connected to the position of the manifold station where the individual EXH spacer is mounted.

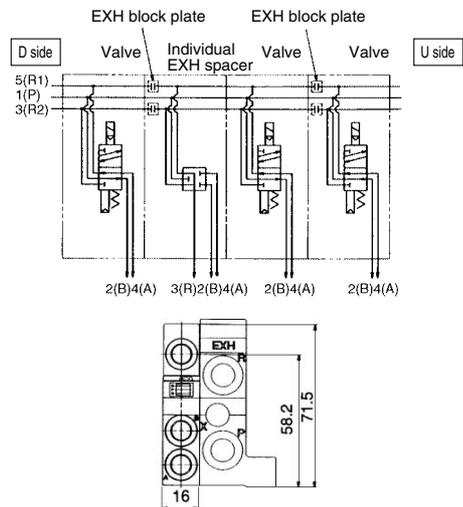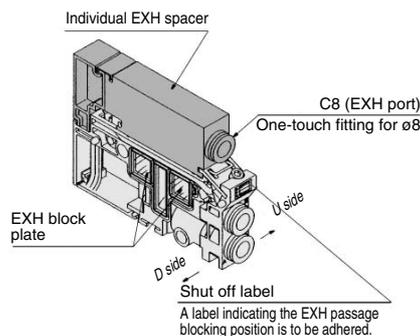




SUP block plate VVQ2000-16A

When different pressures, high and low, are supplied to one manifold, a SUP block plate is inserted between the stations under different pressures.

* Specify the number of stations on the manifold specification sheet.

<Blocking indication label>

When using block plates for SUP passage, indication label for confirmation of the blocking position from outside is attached. (One label of each)

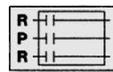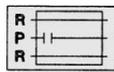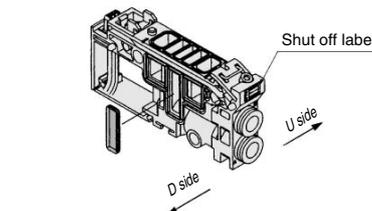

SUP passage blocked

SUP/EXH passage blocked



* When ordering a block plate incorporated with the manifold no., a block indication label is attached to the manifold.




EXH block plate VVQ2000-19A

The EXH block plate is used between stations for which exhaust is desired to be divided when valve exhaust affects other stations due to the circuit configuration. It is also used in combination with an individual EXH spacer for individual exhaust.

* Specify the number of stations on the manifold specification sheet.

<Blocking indication label>

When blocking the EXH passage with an EXH block plate, an indication label for confirmation of the blocking position from outside is attached. (One label for each)

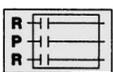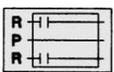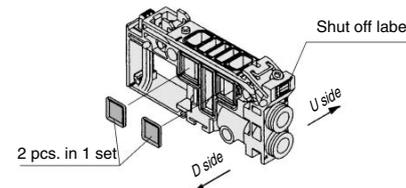

EXH passage blocked

SUP/EXH passage blocked





* When ordering a block plate incorporated with the manifold no., a block indication label is attached to the manifold.

**Back pressure check valve assembly [-B]
VVQ2000-18A**

It prevents cylinder malfunction caused by other valve exhaust. Insert it into R (EXH) port on the manifold side of a valve which is affected. It is effective when a single action cylinder is used or an exhaust center type solenoid valve is used.

Note) When a check valve for back pressure prevention is desired, and is to be installed only in certain manifold stations, write clearly the part no. and specify the number of stations by using the manifold specification sheet.

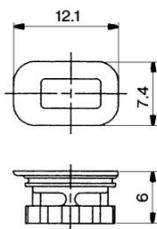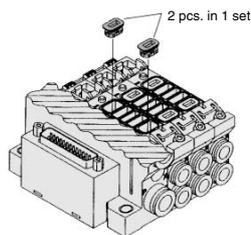



* When ordering assemblies incorporated with a manifold, add suffix "-B" to the manifold no.

- (Precautions)
1. The back pressure check valve assembly parts with a check valve structure. However, as slight air leakage is allowed for the back pressure, take care the exhaust air will not be throttled at the exhaust port.
 2. When a back pressure check valve is mounted, the effective area of the valve will decrease, by about 20%.

**Name plate [-N]
VVQ2000-N-Station (1 to Max. stations)**

It is a transparent resin plate for placing a label that indicates solenoid valve function, etc. Insert it into the groove on the side of the end plate and bend it as shown in the figure.

• Suffix "N" to the manifold part no.

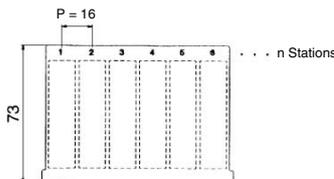
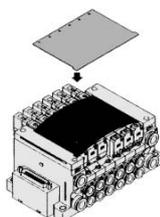


* When ordering assemblies incorporated with a manifold, add suffix "-N" to the manifold no.

Blanking plug (For One-touch fittings)

**KQ2P-04
KQ2P-06
KQ2P-08**

It is inserted into an unused cylinder port and SUP/EXH ports. Purchasing order is available in units of 10 pieces.

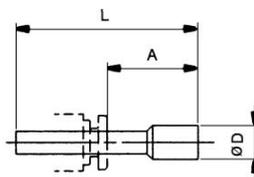
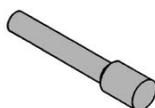


Dimensions

Applicable fittings size ϕ d	Model	A	L	D
4	KQ2P-04	16	32	6
6	KQ2P-06	18	35	8
8	KQ2P-08	20.5	39	10

**Port plug
VVQ1000-58A**


The plug is used to block the cylinder port when using a 4 port valve as a 3 port valve.

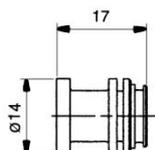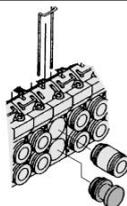


* When ordering a plug incorporated with a manifold, indicate "CM" for the port size in the manifold no., as well as, the mounting position and number of stations and cylinder port mounting positions, A and B, in the manifold specification sheet.

**DIN rail mounting bracket
VVQ2000-57A**

It is used for mounting a manifold on a DIN rail. The DIN rail mounted bracket is fixed to the manifold end plate. (The specification is the same as that for the option "-D".) 1 set of DIN rail mounting bracket is used for 1 manifold (2 DIN rail mounting brackets).

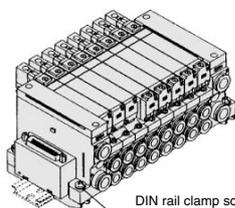

DIN rail clamp screw

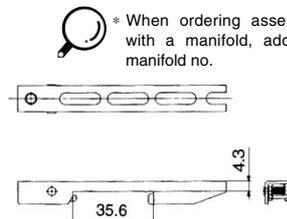


* When ordering assemblies incorporated with a manifold, add suffix "-D" to the manifold no.

Built-in silencer, Direct exhaust [-S]

This is a type with an exhaust port atop the manifold end plate. The built-in silencer exhibits an excellent noise suppression effect. (Silencing effect: 30 dB)



Note) A large quantity of drainage generated in the air source results in exhaust of air together with drainage.
● For maintenance, refer to page 2-4-176.

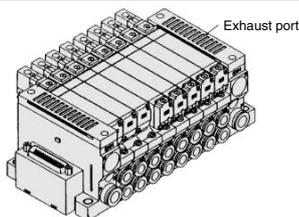


Exhaust port

* When ordering assemblies incorporated with a manifold, add suffix "-S" to the manifold no.

Silencer (For EXH port)

This silencer is to be inserted into the EXH port (One-touch fittings) of the common exhaust type.

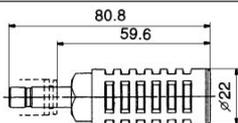


Dimensions

Series	Applicable fittings size ϕ d	Model	A	L	D	Effective area (mm ²) (Cv factor)	Noise reduction (dB)
VQ2000	10	AN200-KM10	59.6	80.8	22	26 (1.4)	30

**Elbow fitting assembly
VVQ2000-F-L (C4, C6, C8)**

It is used for piping that extends upward or downward from the manifold.


When installing it in part of the manifold stations, specify the assembly no. and the mounting position and number of stations by using the manifold specification sheet.

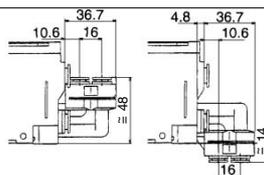


**2 stations matching fitting assembly
VVQ2000-52A-C10**

For driving a cylinder with a large bore, valves for two stations are operated to double the flow rate. This assembly for the cylinder port is used in that case.

This assembly for the cylinder port is used in that case.

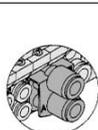

* The bore for the manifold no. is "CM". Clearly indicate the 2 station matching fitting assembly no., and specify the number of stations and positions in the manifold specification sheet.

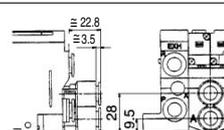

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

Series VQ2000

Manifold Option

Double check block (Separated type)


VQ2000-FPG-□□□□

It is used on the outlet side piping to keep the cylinder in the intermediate position for a long time. Combining the double check block with a built-in pilot type double check valve and a 3 position exhaust center solenoid valve will enable the cylinder to stop in the middle or maintain its position for a long time.

The combination with a 2 position single/double solenoid valve will prevent the dropping at the cylinder stroke end when the SUP residual pressure is released.

Specifications


Max. operating pressure	0.8 MPa
Min. operating pressure	0.15 MPa
Ambient and fluid temp.	-5 to 50°C
Flow characteristics: C	-3.0 dm ³ /(s·bar)
Max. operating frequency	180 c.p.m

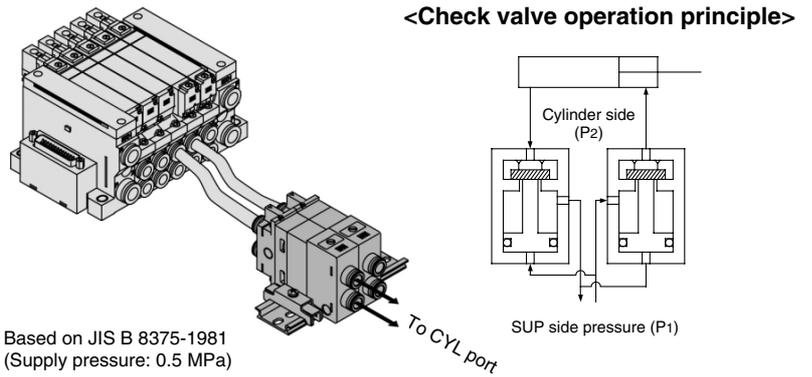


Note) Based on JIS B 8375-1981 (Supply pressure: 0.5 MPa)

Dimensions

Single unit

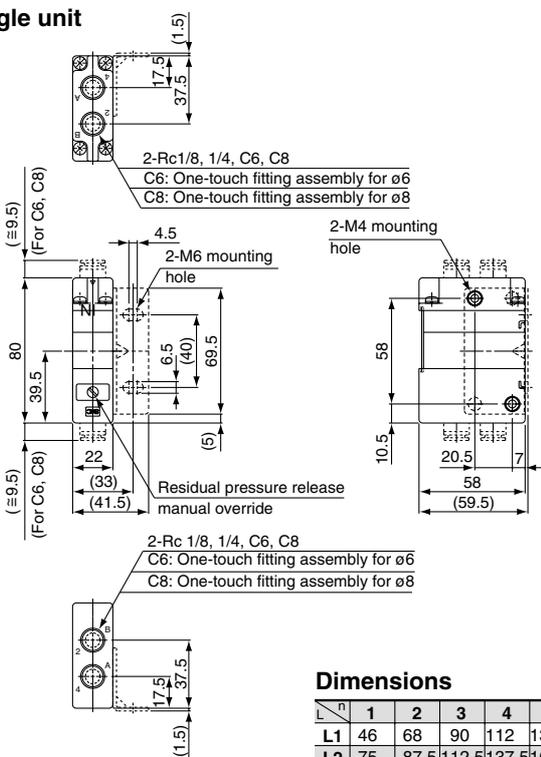

Manifold

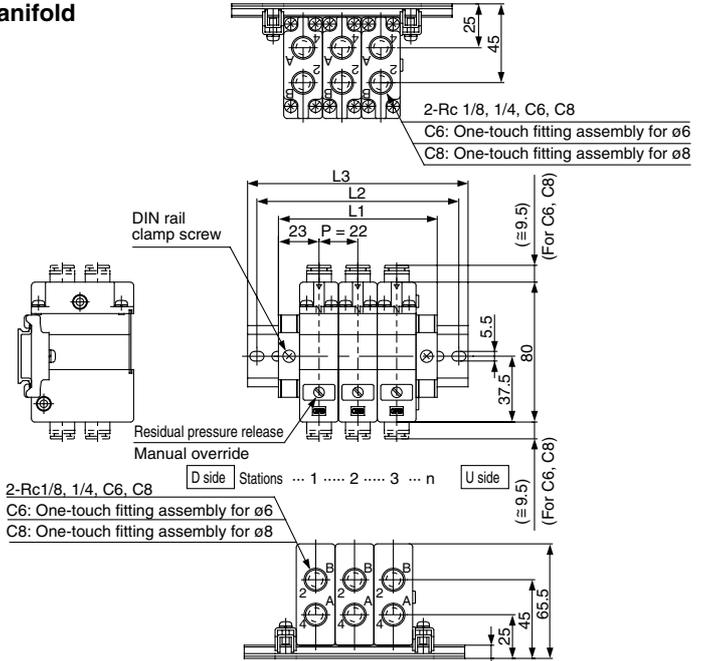

Dimensions

Formula L1 = 22n + 24 n: Station

L n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	46	68	90	112	134	156	178	200	222	244	266	288	310	332	354	376
L2	75	87.5	112.5	137.5	162.5	175	200	225	250	262.5	287.5	312.5	337.5	362.5	375	400
L3	85.5	98	123	148	173	185.5	210.5	235.5	260.5	273	298	323	348	373	385.5	410.5

How to Order

Double check block

VQ2000-FPG-01 01 F

IN side port size

01	Rc 1/8
02	Rc 1/4
C6	One-touch fitting for ø6
C8	One-touch fitting for ø8

OUT side port size

01	Rc 1/8
02	Rc 1/4
C6	One-touch fitting for ø6
C8	One-touch fitting for ø8

Option

Nil	None
D	DIN rail mounting style (For manifold)
F	With bracket
N	Name plate

Note) When two or more symbols are specified, indicate them alphabetically.

Manifold

VVQ2000-FPG-06

Stations

01	1 station
⋮	⋮
16	16 stations


<Ordering Example>

VVQ2000-FPG-06...6 stations manifold
*VQ2000-FPG-C6C6-D: 3 sets } Double check block
*VQ2000-FPG-C8C8-D: 3 sets }

Bracket Assembly

Part no.	Tightening torque
VQ2000-FPG-FB	0.8 to 1.0 N·m

<Example>

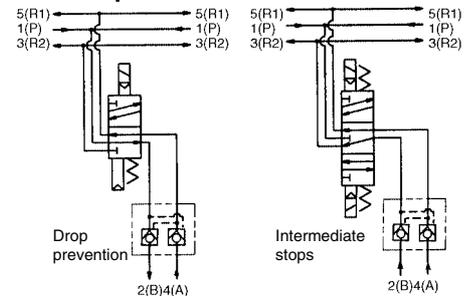

Caution

- Air leakage from the pipe between the valve and cylinder or from the fittings will prevent the cylinder from stopping for a long time. Check the leakage using neutral household detergent, such as dish washing soap. Also check the cylinder's tube gasket, piston packing and rod packing for air leakage.
- Since One-touch fittings allow slight air leakage, screw piping (with M5 thread) is recommended when stopping the cylinder in the middle for a long time.
- Combining double check block with 3 position closed center or pressure center solenoid valve will not work.

- M5 fitting assembly is attached, not incorporated into the double check block. After screwing in the M5 fittings, mount the assembly on the double check block. [Tightening torque: 0.8 to 1.2 N·m]

Connection threads	Proper tightening torque (N·m)
Rc 1/8	7 to 9
Rc 1/4	12 to 14

- If the exhaust of the double check block is throttled too much, the cylinder may not operate properly and may not stop intermediately.
- Set the cylinder load so that the cylinder pressure will be within two times that of the supply pressure.


⚠ Precautions 1

Be sure to read before handling. For Safety Instructions and Solenoid Valve Precautions, refer to page 2-9-2.


Light/Surge Voltage Suppressor

⚠ Caution

The lighting positions are concentrated on one side for both single solenoid type and double solenoid type. In the double solenoid type, A side and B side energization are indicated by two colors which match the colors of the manual overrides.

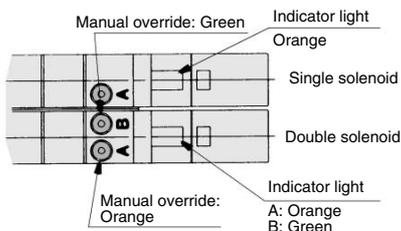

(DWG shows a VQ1000 case.)

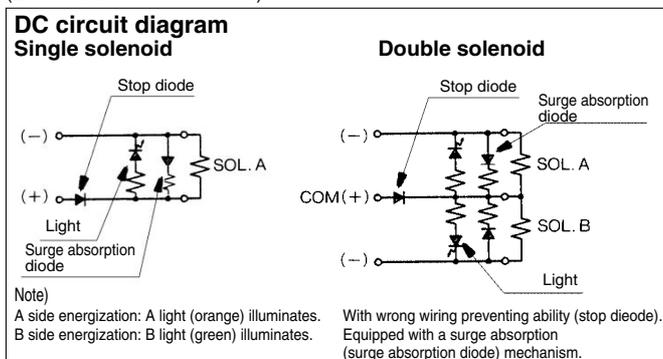

Manual Override


⚠ Warning

Without an electric signal for the solenoid valve the manual override is used for switching the main valve.

Push type is standard. (Tool required)


Option: Locking type (Tool required/Manual)

■ Push type (Tool required)

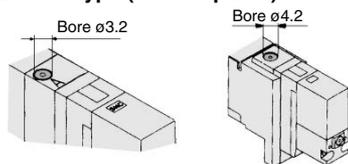


Push down on the manual override button with a small screwdriver until it stops. Release the screwdriver and the manual override will return.

■ Locking type (Tool required) <Option>

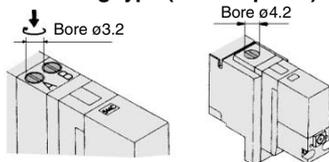

Push down on the manual override button with a small screwdriver or with your fingers until it stops. Turn clockwise by 90° to lock it. Turn it counterclockwise to release it.

■ Locking type (Manual) <Option>

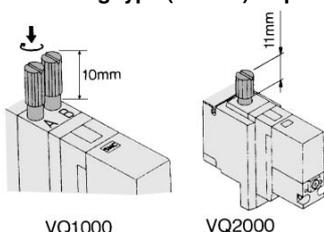


Push down on the manual override button with a small screwdriver or with your fingers until it stops. Turn clockwise by 90° to lock it. Turn it counterclockwise to release it.

⚠ Caution

Do not apply excessive torque when turning the locking type manual override. (0.1 N·m or less)

How to Mount/Remove Solenoid Valve

⚠ Caution

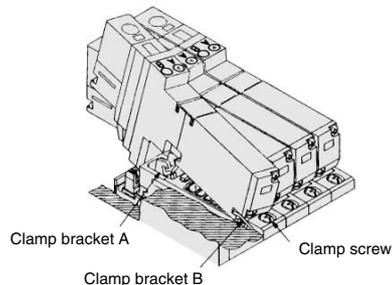

Removing

1. Loosen the clamp screw until it turns freely. (The screw is captive.)
2. Lift the coil side of the valve body while pressing down slightly on the screw head and remove it from the clamp bracket B. When the screw head cannot be pressed easily, gently press the area near the manual override of the valve.

Mounting

1. Press down on the clamp screw. → Clamp bracket A opens. Diagonally insert the hook on the valve end plate side into clamp B.
2. Press the valve body downward. (When the screw is released, it will be locked by clamp bracket A.)
3. Tighten the clamp screw. (Proper tightening torque: VQ1000, 0.25 to 0.35 N·m; VQ2000, 0.5 to 0.7 N·m.)

⚠ Caution


Dust on the sealing surface of the gasket or solenoid valve can cause air leakage.

Replacement of Cylinder Port Fittings

⚠ Caution

The cylinder port fittings are a cassette for easy replacement. The fittings are blocked by a clip inserted from the top of manifold. Remove the clip with a screwdriver to remove fittings.

For replacement, insert the fitting assembly until it strikes against the inside wall and then reinsert the clip to the specified position.

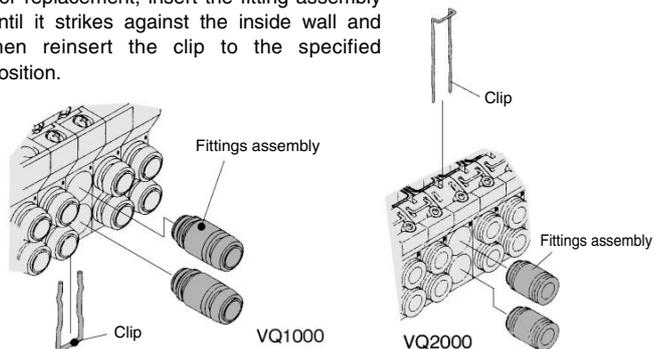

Applicable tubing O.D.	Fitting assembly part no.	
	VQ1000	VQ2000
Applicable tubing ø3.2	VVQ1000-50A-C3	—
Applicable tubing ø4	VVQ1000-50A-C4	VVQ1000-51A-C4
Applicable tubing ø6	VVQ1000-50A-C6	VVQ1000-51A-C6
Applicable tubing ø8	—	VVQ1000-51A-C8
M5	VVQ1000-50A-M5	—

* Refer to "Option" on pages 2-4-172 to 2-4-173 for other types of fittings.

⚠ Caution

1. Use caution that O-rings must be free from scratches and dust. Otherwise, air leakage may result.
2. After screwing in the fittings, mount the M5 fitting assembly on the manifold base. (Tightening torque: 0.8 to 1.2 N·m)
3. Purchasing order is available in units of 10 pieces.

⚠️ Precautions 2


Be sure to read before handling. For Safety Instructions and Solenoid Valve Precautions, refer to page 2-9-2.

Mounting/Removing from the DIN Rail

⚠️ Caution


Removing

- Loosen the clamp screw on side (a) of the end plate on both sides.
- Lift side (a) of the manifold base and slide the end plate in the direction of (2) shown in the figure to remove.

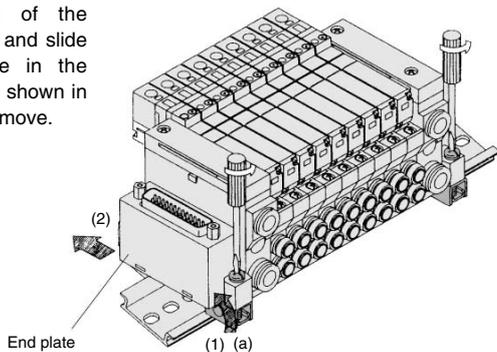

Mounting

- Hook side (b) of the manifold base on the DIN rail.
- Press down side (a) and mount the end plate on the DIN rail. Tighten the clamp screw on side (a) of the end plate. The proper tightening torque for screws is 0.4 to 0.6 N·m.

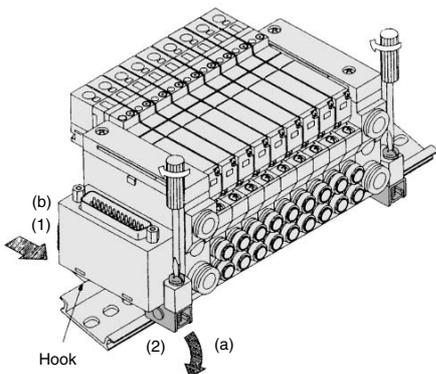

Enclosure IP65

⚠️ Caution

Wires, cables, connectors, etc. used for models conforming to IP65 should also have enclosures equivalent to or of stricter than IP65.

Built-in Silencer Replacement Element

⚠️ Caution


A silencer element is incorporated in the end plate on both sides of the A dirty and choked element may reduce cylinder speed or cause malfunction. Clean or replace the dirty element.

Element Part No.

Type	Element part no.	
	VQ1000	VQ2000
Built-in silencer, direct exhaust	VVQ1000-82A-1	VVQ2000-82A-1

* The minimum order quantity is 10 pcs.

Remove the cover from the top of the end plate and remove the old element with a screwdriver, etc.

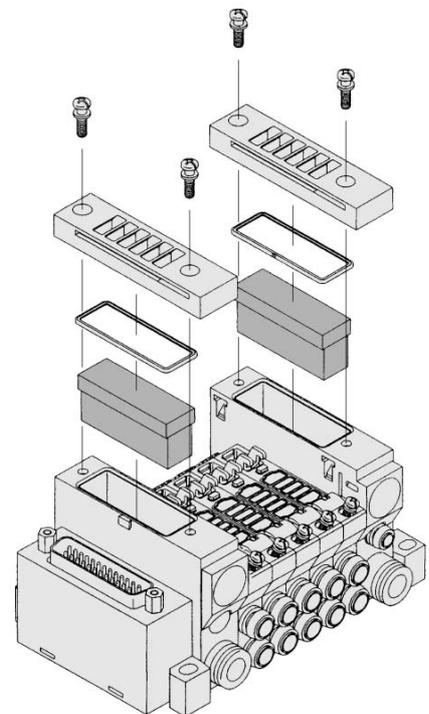

How to Calculate the Flow Rate


For obtaining the flow rate, refer to pages 2-1-8 to 2-1-11.

Option


Different Number of Connector Pins

F and P kits with the following number of pins are available besides the standard number (F = 25; P = 26). Select the desired number of pins and cable length from the cable assembly list. Place an order for the cable assembly separately.

F kit (D-sub connector) 15 pins

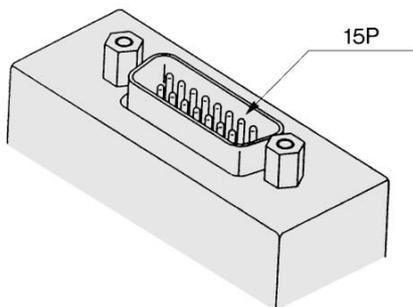

How to order manifold

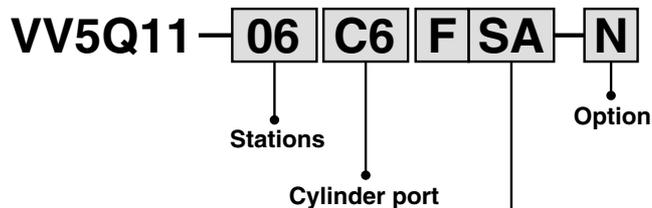


How to Order
D-sub connector, 15 pins
Connector location—Side (horizontal)
Without cable

Kit/Electrical entry

Pins	Location	Top entry		Side entry	
15P (Max. 7 stations)		Kit F	UA	Kit F	SA

Wiring Specifications

* In the same way as the 25-pin models (standard), the terminal no. 1 is for SOL.A at the 1st station, the terminal no. 9 for SOL.B at the 1st station, and the terminal no. 8 for COM.

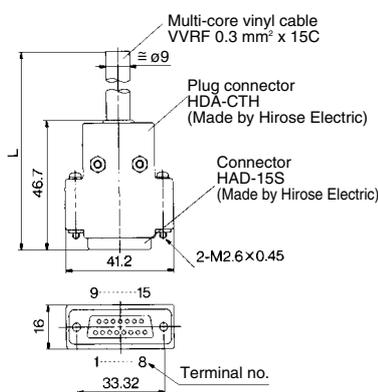

Wire Color Table by Terminal No. of D-sub Connector Cable Assembly


Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black

D-sub Connector Cable Assembly


Cable length (L)	Pins	15P
1.5 m		AXT100-DS15-1
3 m		AXT100-DS15-2
5 m		AXT100-DS15-3

* For other commercial connectors, use a type conforming to MIL-C-24308.

P kit (Flat ribbon cable connector) 10 pins, 16 pins, 20 pins

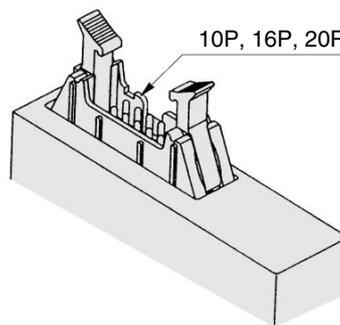

How to order manifold

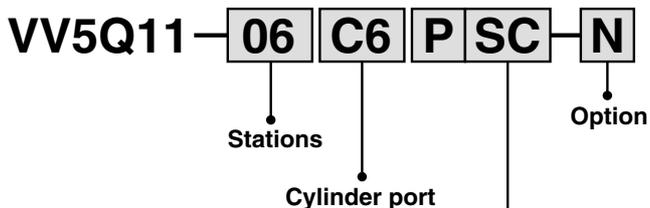


How to Order
Flat ribbon cable, 20 pins
Connector location—Side (Horizontal)
Without cable

Kit/Electrical entry

Pins	Location	Top entry		Side entry	
10P (Max. 4 stations)		Kit P	UA	Kit P	SA
16P (Max. 7 stations)			UB		SB
20P (Max. 9 stations)			UC		SC

Wiring Specifications

* In the same way as the 26-pin models (standard), the terminal no. 1 is for SOL.A at the 1st station, the terminal no. 2 for SOL.B at the 1st station, and two pins from the max. terminal numbers are for COM.

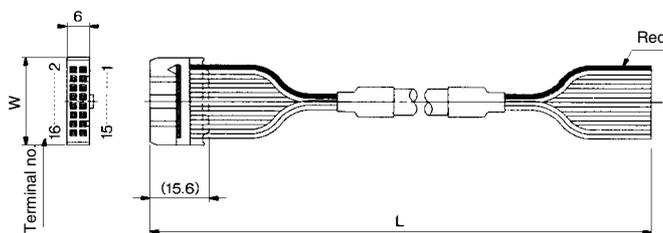

Flat Ribbon Cable Assembly

Cable length (L)	Pins	10P	16P	20P
1.5 m		AXT100-FC10-1	AXT100-FC16-1	AXT100-FC20-1
3 m		AXT100-FC10-2	AXT100-FC16-2	AXT100-FC20-2
5 m		AXT100-FC10-3	AXT100-FC16-3	AXT100-FC20-3
Connector width (W)		17.2	24.8	30

* For other commercial connectors, use a type with strain relief conforming to MIL-C-83503.

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

Option


Special Wiring Specifications

In the internal wiring of F kit, P kit, J kit, G kit, T kit and S kit, double wiring (connected to SOL. A and SOL. B) is adopted for each station regardless of the valve and option types. Mixed single and double wiring is available as an option.

1. How to Order


Indicate an option symbol “-K”, for the manifold no. and be sure to specify the mounting position and number of stations of the single and double wiring by means of the manifold specification sheet.

Example) **VV5Q11-08C6FU1-D K S**

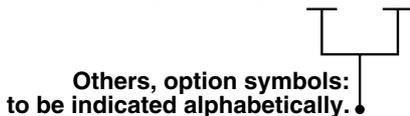

2. Wiring specifications

With the A side solenoid of the 1st station as no.1 (meaning, to be connected to no.1 terminal), without making any terminals vacant.

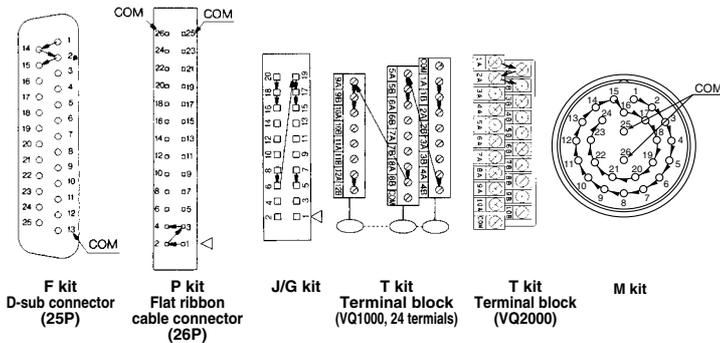

3. Max. number of stations

The maximum number of stations depends upon the number of solenoids. Assuming one for a single and two for a double, determine the number of stations so that the total number is not more than the max. number given in the following table.

Kit	F kit (D-sub connector)		P kit (Flat ribbon cable connector)				J kit (Flat ribbon cable connector)	G kit (Flat ribbon cable with terminal block)
Type	F _S ^U □ 25P	F _S ^U A 15P	P _S ^U □ 26P	P _S ^U C 20P	P _S ^U B 16P	P _S ^U A 10P	J _S ^U □ 20P	G
Max. points	24	14	24	18	14	8	16	16
Kit	T kit (Terminal block)				S kit (Serial transmission)		M kit (Circular connector)	
Type	2 rows of terminal blocks		3 rows of terminal blocks		S□		M□	
	16		24					
Max. points	20				16		24	

Negative Common Specifications

Specify the valve model no. as shown below for negative COM specification. The manifold no. shown below is for the T and L kits. For other kits the standard manifold can be used. For negative COM S or G kit, please contact SMC.


VQ1100 N - 5

• Negative common specifications

How to order negative COM manifold


T kit:

VV5Q11-06 C6 T N - N

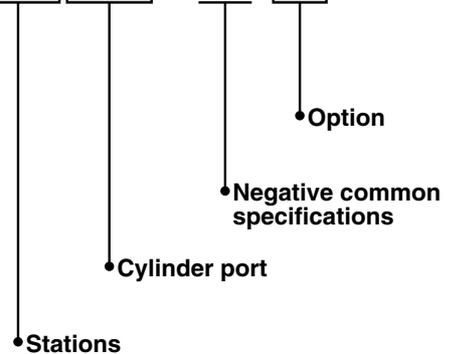

L kit:

VV5Q11-06 C6 L N 1 - N

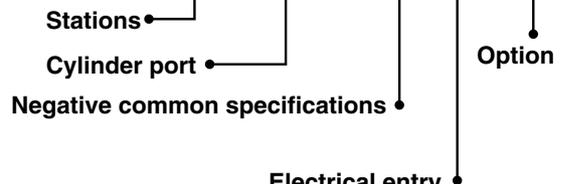

Electrical entry Cable length

0	With cable (0.6 m)
1	With cable (1.5 m)
2	With cable (3 m)

External Pilot Specifications

When the supply air pressure is lower than the required minimum operating pressure (0.1 to 0.2 MPa) for the solenoid valve (or when the valve is used for vacuum), specify an external pilot model. Order a manifold or valve by suffixing the external pilot specification, "R".

The X-port of the manifold base is equipped with One-touch fittings for external pilot.

VQ1000: C4 (One-touch fitting for ø4)

VQ2000: C6 (One-touch fitting for ø6)

How to order manifold

VV5Q11-08C6FU1-R S

Others, option symbols:
to be indicated alphabetically.

How to order valves

VQ1100 R - 5


External pilot specifications

Note 1) When low wattage type is also desired, specify as "RY".

Note 2) In this valve pilot exhaust is connected to the EA passage of the manifold. Therefore, it is not possible to supply air from EXH port, nor vacuum from ports other than SUP port.

Inch-size One-touch Fittings

The valve with inch-size One-touch fittings is shown below.

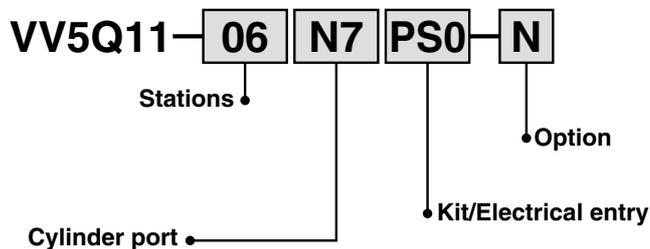

Symbol	N1	N3	N7	N9	M5T	NM
Applicable tubing O.D. (Inch)	ø 1/8"	ø 5/32"	ø 1/4"	ø 5/16"	10-32UNF (M5 thread)	Mixed
4(A), 2(B) port	VQ1000	●	●	—	●	●
	VQ2000	—	●	●	—	●

Note) When inch-size fittings are selected for the cylinder port, use inch size fittings for both P and R port.

1(P), 3(R) port size
 VQ1000 ø5/16" (N9)
 VQ2000 ø3/8" (N11)

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

Series VQ1000/2000

Option

DIN Rail Mounting

Each manifold can be mounted on a DIN rail. Order it by indicating a DIN rail mounting option symbol, "-D". In this case, a DIN rail which is approx. 30 mm longer than the manifold with the specified number of stations is attached.

- **When DIN rail is unnecessary**
(DIN rail mounting brackets only are attached.)
Indicate the option symbol, -DO, for the manifold no.

Example)

VV5Q11-08C6FU1-D0S

Others, option symbols:
to be indicated alphabetically.

- **When using DIN rail longer than the manifold with specified number of stations**
Clearly indicate the necessary number of stations next to the option symbol "-D" for the manifold no.

Example)

VV5Q11-08C6FU1-D09S

DIN rail for 9 stations


Others, option symbols:
to be indicated alphabetically.

- **When changing the manifold style into a DIN rail mounting style.**
Order brackets for mounting a DIN rail. (Refer to "Option" on pages 2-4-168 and 2-4-173.)

No. VVQ1000-57A (For VQ1000)
VVQ2000-57A (For VQ2000)
2 pcs. per one set.

- **When ordering DIN rail only**
DIN rail no.: AXT100-DR-□

As for □, specify the number from the DIN rail table.
For L dimension, refer to the dimensions of each kit.

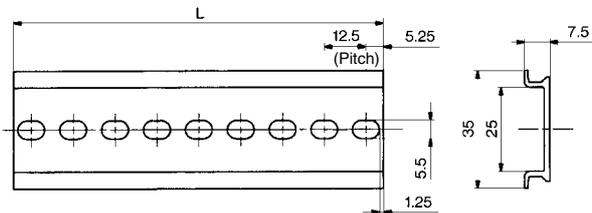

L Dimension

$$L = 12.5 \times n + 10.5$$

No.	1	2	3	4	5	6	7	8	9	10
L dimension	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5
No.	11	12	13	14	15	16	17	18	19	20
L dimension	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5
No.	21	22	23	24	25	26	27	28	29	30
L dimension	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5
No.	31	32	33	34	35	36	37	38	39	40
L dimension	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5

Plug-in Unit Series VQ1000/2000

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

Series VQ0000

Base Mounted

Plug Lead Unit

How to Order Manifold

VV5Q 05 - 08 C4 F U1 - D

Series/Manifold
05 VQ0000

Kit type

Option

Stations

01	1 station
⋮	⋮

The number of max. stations differs from kit to kit. (Refer to the table below.)

Symbol	Port size
C3	With One-touch fitting for ø3.2
C4	With One-touch fitting for ø4
M5	M5 thread
CM	With mixed size/with port plug ^{Note)}

- Note 1) Specify "Mixed size/with port plug" on the manifold specification sheet.
- Note 2) For inch-size One-touch fittings, refer to "Option" on page 2-4-216.
- Note 3) M5 fittings for M5 thread are attached without being incorporated.


Symbol	Option
Nil	None
D	DIN rail mounting style ⁽²⁾
K	Special wiring specifications (Not double wiring) ⁽³⁾
N	With name plate
S	Built-in silencer, direct exhaust

- Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -DNS
- Note 2) F, P, S, and T kits for VQ0000 are all equipped with a DIN rail, so include suffix "-D."
- Note 3) Specify the wiring specifications on the manifold specification sheet. (Except C kit)

Simple specials are available with SMC Simple Specials System. For details about applicable models, please contact SMC.

Kit/Electrical entry: Cable length


F kit
(D-sub connector)

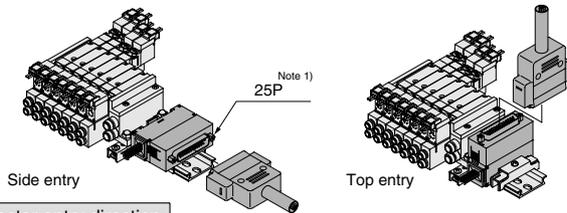

Connector entry direction		Kit		Without cable	With cable (1.5 m)	With cable (3 m)	With cable (5 m)	Max. 16 ⁽²⁾ stations
Top entry	Side entry	U	S					
F	U0	F	S0					
	U1		S1					
	U2		S2					
	U3		S3					

P. 2-4-188


P kit
(Flat ribbon cable connector)

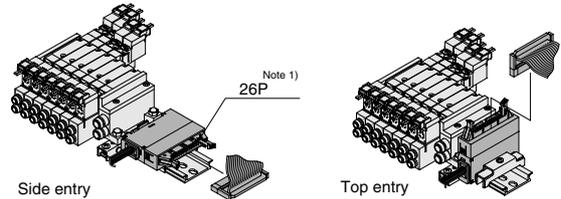

Connector entry direction		Kit		Without cable	With cable (1.5 m)	With cable (3 m)	With cable (5 m)	Max. 16 ⁽²⁾ stations
Top entry	Side entry	U	S					
P	U0	P	S0					
	U1		S1					
	U2		S2					
	U3		S3					

P. 2-4-192


T kit
(Terminal block)

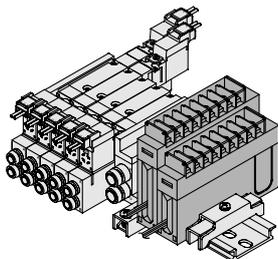

Kit	Number of terminals:	Applicable stations
1	8, 1 row	1 to 8 stations
2	16, 2 rows	5 to 16 stations

P. 2-4-196


C kit
(Connector)

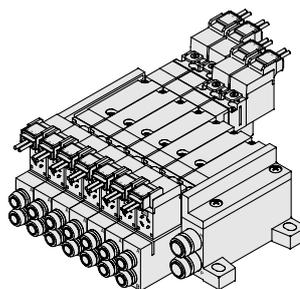

C	Connector kit	Max. 16 stations
---	---------------	------------------

P. 2-4-200

S kit
(Serial transmission unit)

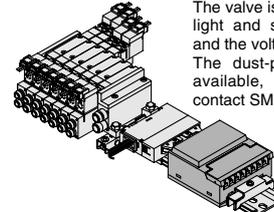

The valve is equipped with an indicator light and surge voltage suppressor, and the voltage is 24 VDC. The dust-protected type SI unit is available, too. For details, please contact SMC.

Kit		Without SI unit	Max. 16 ⁽²⁾ stations
0	A	With general type SI unit (Series EX300)	
3)	B	Mitsubishi Electric Corp.: MELSECNET/mini-S3 Data Link System	
	C	OMRON Corp.: SYSBUS Wire System	
	D	SHARP Corp.: Satellite I/O Link System	
	F1	NKE Corp.: Uni-wire System (16 output points)	
	H	NKE Corp.: Uni-wire H System	

P. 2-4-204

Note 1) Besides the above, F and P kits with different number of pins are available. Refer to page 2-4-215 for details.

Note 2) For details, refer to page 2-4-216.

Note 3) Please consult with SMC for the following serial transmission kits: Matsushita Electric Works, Ltd.; Rockwell Automation, Inc.; SUNX Corporation; Fuji Electric Co., Ltd.; OMRON Corporation.

How to Order Valves

VQ 0 1 5 0 Y 5 LO

Series
0 VQ0000

Type of actuation

1	2 position single (A/B)	
	2 position double (R1/P1/R2)	
2	Metal 2 position double (A/B)	
	Rubber 2 position double (A/B)	
3	3 position closed center (A/B)	
	3 position exhaust center (A/B)	

Body type
5 VQ0000

Seal

0	Metal seal
1	Rubber seal

Manual override

Nil : Non-locking push type (Tool required)	B : Locking type (Tool required)

Electrical entry

G : Grommet (C Kit only Except AC)	L : L plug connector With lead wire With light/surge voltage suppressor	LO : L plug connector Without connector With light/surge voltage suppressor
	M : M plug connector With lead wire With light/surge voltage suppressor	MO : M plug connector Without connector With light/surge voltage suppressor

Note 1) LO or MO type valve is used for F, P, T, and S kits. The plug connector and lead wire are attached to the manifold.
 Note 2) In cases of L and M type the connector direction is based on the pilot valve.

How to Order Valve Manifold Assembly

Example

Closed center (24 VDC) VQ0350-5MO
 Double solenoid (24 VDC) VQ0250-5MO
 Single solenoid (24 VDC) VQ0150-5MO

Stations 1 2 3 4 5 6 7

3 m

VVQ05-07C4FS2-D... 1 set (F kit 7 station manifold base no.)
 * VQ0150-5MO... 3 sets (Single solenoid part no.)
 * VQ0250-5MO... 2 sets (Double solenoid part no.)
 * VQ0350-5MO... 2 sets (3 position solenoid part no.)

The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Specify the part numbers for valves and options together beneath the manifold base part number. Besides, when the arrangement will be complicated, specify them by means of the manifold specification sheet.

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

Note 1) For negative common specifications, refer to "Option" on page 2-4-216.
 Note 2) F, P, T and S kits requires connector assembly when increasing valve stations. Refer to "Option" on page 2-4-216 for parts nos.

Function

Symbol	Specifications	DC	AC
Nil	Standard type	(1.0 W) ○	Note) ○
H	High pressure type	(1.5 W) ○	—
Y	Low wattage type	(0.5 W) ○	—

Coil voltage

Symbol	Specifications
1	100 VAC (50/60 Hz)
2	200 VAC (50/60 Hz)
3	110 VAC (50/60 Hz)
4	220 VAC (50/60 Hz)
5	24 VDC
6	12 VDC


Note) The C kits are applicable to 200/220 VAC. Please contact SMC for other kits.

Note) For power consumption of AC type, refer to page 2-4-186.


Manifold Option

P. 2-4-208


Blanking plate assembly
VVQ0000-10A-5

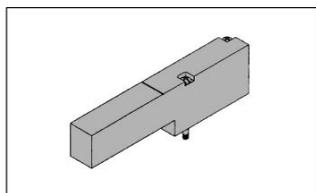


Name plate [-N*]
VVQ0000-N5-Station (1 to Max. stations)

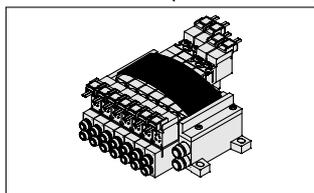


DIN rail mounting bracket [-D]
VVQ0000-57A-5

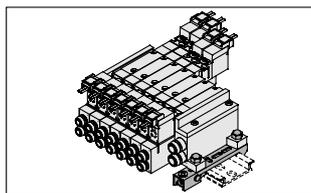


Silencer
AN103-X233

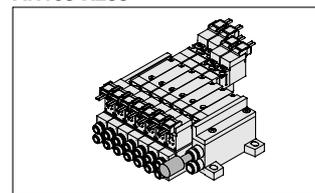


SUP/EXH block plate
VVQ0000-16A-5-^R_{PR}

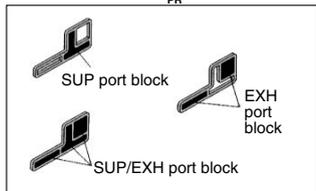


Double check block
VQ1000-FPG-□□

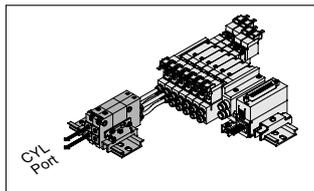

Built-in silencer, direct exhaust [-S]

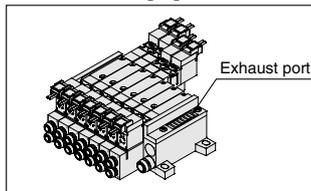


Blanking plug
KQ2P-^R_{BEACH}

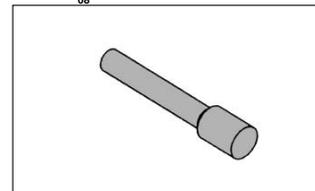


- For cylinder port fittings part no., refer to page 2-4-213.
- For replacement parts, refer to page 2-4-231.

Individual SUP spacer
VVQ0000-P-5-C4

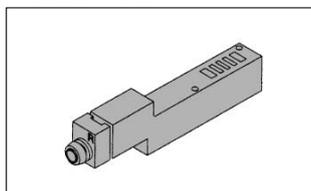

Individual EXH spacer
VVQ0000-R-5-C4

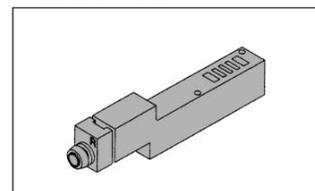

Series VQ1000

Base Mounted

Plug Lead Unit

How to Order Manifold

VV5Q 12 - 08 C6 F U1 - D

Series/Manifold
 12 VQ1000

Stations
 01 1 station
 : :
 The number of max. stations differs from kit to kit. (Refer to the table below.)

Cylinder port

Symbol	Port size
C3	With One-touch fitting for ø3.2
C4	With One-touch fitting for ø4
C6	With One-touch fitting for ø6
M5	M5 thread
CM	With mixed size/with port plug
L3	With elbow One-touch fitting ø3.2 for top piping
L4	With elbow One-touch fitting ø4 for top piping
L6	With elbow One-touch fitting ø6 for top piping
L5	Elbow M5 thread for top piping
B3	With elbow One-touch fitting ø3.2 for bottom piping
B4	With elbow One-touch fitting ø4 for bottom piping
B6	With elbow One-touch fitting ø6 for bottom piping
B5	Elbow M5 thread for bottom piping
LM	Mixed size for elbow piping

Kit type


Option

Symbol	Option
Nil	None
B	With back pressure check valve
D	DIN rail mounting style ⁽³⁾
K	Special wiring specifications (Not double wiring) ⁽⁴⁾
N	With name plate
S	Built-in silencer, direct exhaust

Note 1) Specify "Mixed size/with port plug" in the manifold specification sheet.
Note 2) For One-touch fittings in inch sizes, refer to "Option" on page 2-4-216.
Note 3) M5 fittings for M5 thread are attached without being incorporated.
Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BNS
Note 2) Models with a suffix "-B" have check valves for prevention of back pressure at all manifold stations. If not all stations need this check valve, specify the stations where check valves are installed by using manifold specification sheet.
Note 3) Manifold is a DIN rail mounting style, and so suffix -D should be indicated.
Note 4) Specify the wiring specifications in the manifold specification sheet. (Except C kit)

Kit/Electrical entry/Cable length

F kit (D-sub connector)

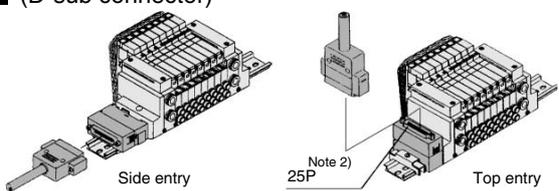


Side entry Top entry

Connector entry direction

Top entry		Side entry		Without cable	With cable (1.5 m)	With cable (3 m)	With cable (5 m)	Max. 16 stations ⁽²⁾
Kit	U0	Kit	S0					
F	U1	F	S1					
	U2		S2					
	U3		S3					

P. 2-4-188

P kit (Flat ribbon cable connector)

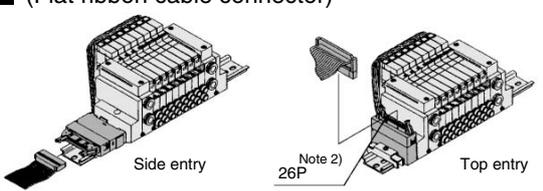


Side entry Top entry

Connector entry direction

Top entry		Side entry		Without cable	With cable (1.5 m)	With cable (3 m)	With cable (5 m)	Max. 16 stations ⁽²⁾
Kit	U0	Kit	S0					
P	U1	P	S1					
	U2		S2					
	U3		S3					

P. 2-4-192


T kit (Terminal block)

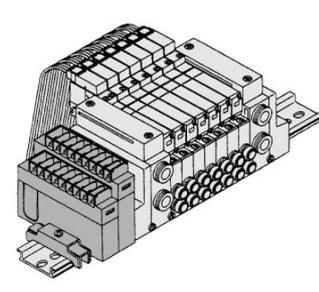

P. 2-4-196

kit	1	Number of terminals: 8, 1 row	Applicable stations 1 to 8 stations
T	2	Number of terminals: 16, 2 rows	Applicable stations ⁽²⁾ 5 to 16 stations


C kit (Connector)

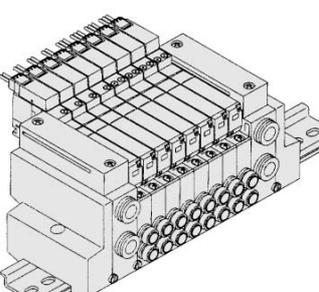

P. 2-4-200

C	Connector kit	Max. 16 stations
---	---------------	------------------

S kit (Serial transmission unit)

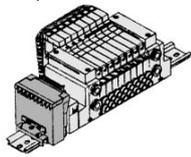

The valve is equipped with an indicator light and surge voltage suppressor, and the voltage is 24 VDC. The dust-protected type SI unit is available, too. For details, please contact SMC.

P. 2-4-204

Kit	S	Without SI unit	Max. stations
	0	With general type SI unit (Series EX300)	
	A	Mitsubishi Electric Corp.: MELSECNET/mini-S3 Data Link System	
	B	OMRON Corp.: SYSBUS Wire System	
	C	SHARP Corp.: Satellite I/O Link System	
	D	Matsushita Electric Works: MEWNET-F System	
	E	NKE Corp.: Uni-wire System (16 output points)	Max. 8 stations
	F1	Rockwell Automation: Allen Bradley Remote I/O (RIO) System	
	G	NKE Corp.: Uni-wire H System	
	H	SUNX Corp.: S-LINK System (16 output points)	Max. 8 stations
	J1	SUNX Corp.: S-LINK System (8 output points)	Max. 8 stations
	J2	Fuji Electric Co.: T-LINK Mini System	Max. 16 stations
	K	DeviceNet, CompoBus/D (OMRON Corp.)	Max. 16 stations
	Q	OMRON Corp.: CompoBus/S System (16 output points)	Max. 8 stations
	R1	OMRON Corp.: CompoBus/S System (8 output points)	Max. 8 stations
	R2	Mitsubishi Electric Corp.: CC-LINK System	Max. 16 stations
	V		

Note 1) Besides the above, F and P kits with different number of pins are available. Refer to page 2-4-215 for details.
Note 2) For details, refer to page 2-4-216.






Simple specials are available with SMC Simple Specials System. For details about applicable models, please contact SMC.

How to Order Valves

VQ 1 1 1 0 Y 5 LO 

Series
0 VQ0000

Type of actuation

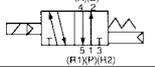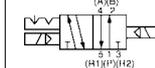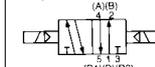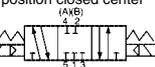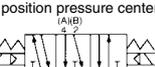
1	2 position single 
2	Metal 2 position double 
	Rubber 2 position double 
3	3 position closed center 
4	3 position pressure center 


Body type
1 VQ1000


Seal

0	Metal seal
1	Rubber seal

Manual override

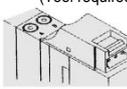Nil: Non-locking push type (Tool required)

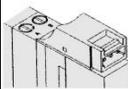
B: Locking type (Tool required)

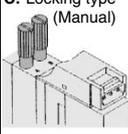
C: Locking type (Manual)


Electrical entry

L: L plug connector With lead wire


LO: L plug connector Without connector


With light/surge voltage suppressor

Function

Symbol	Specifications	DC
Nil	Standard type	(1.0 W) ○
H	High pressure type	(1.5 W) ○
Y	Low wattage type	(0.5 W) ○

Coil voltage

5	24 VDC
6	12 VDC

Note) LO type valve is used for F, P, T, and S kits. The plug connector and lead wire are attached to the manifold.

How to Order Valve Manifold Assembly

Example

Single solenoid (24 VDC)
VQ1110-5LO

Double solenoid (24 VDC)
VQ1210-5LO

3m

D-sub connector cable
VVZS3000-21A-2

F kit (D-sub connector)

Manifold base (9 stations)
VV5Q12-08C6FU2-D

Cylinder ports
C6: With One-touch fitting for ø6

Stations

1 2 3

D-sub connector

VQC
SQ
VQ0
VQ4
VQ5
VQZ
VQD

VV5Q12-08C6FU2-D ... 1 set (F kit 8 station manifold base no.)
 *VQ1110-5LO ... 4 sets (Single solenoid part no.)
 *VQ1210-5LO ... 4 sets (Double solenoid part no.)


The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Specify the part numbers for valves and options together beneath the manifold base part number. Besides, when the arrangement will be complicated, specify them by means of the manifold specification sheet.


Manifold Option

P. 2-4-208


Blanking plate assembly
VVQ1000-10A-1

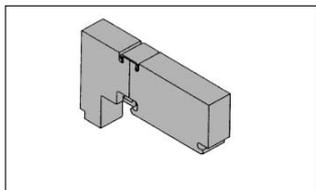


SUP/EXH block plate
VVQ1000-16A-2

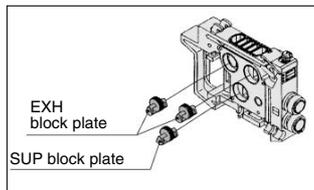


Double check block
VVQ1000-FPG-□□

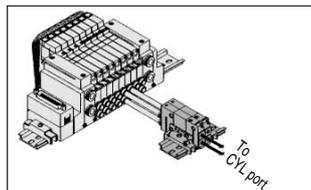


2 stations matching fitting assembly
VVQ1000-52A-C8

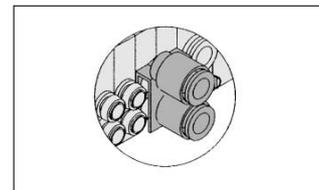


Individual SUP spacer
VVQ1000-P-1-C6

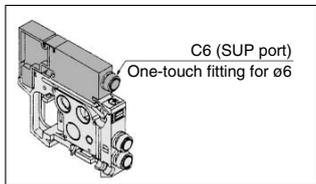


Back pressure check valve assembly [-B]
VVQ1000-18A

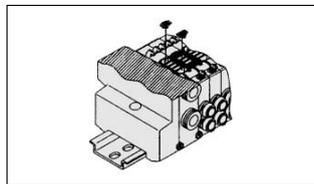


Elbow fitting assembly
VVQ1000-F-L

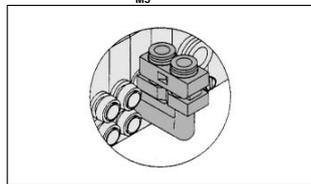


Silencer
AN200-KM8

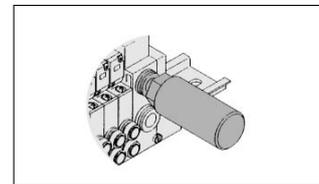


Individual EXH spacer
VVQ1000-R-1-C6

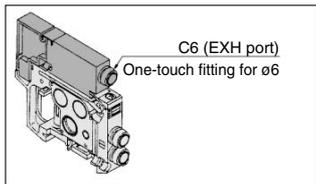


Name plate [-N*]
VVQ1000-N2-Station (1 to Max. stations)

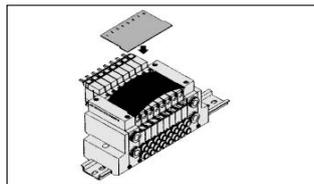

Built-in silencer, direct exhaust [-S]

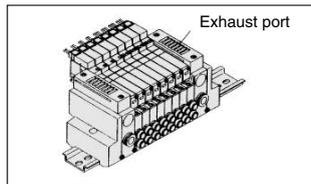


Port plug
VVQ0000-58A

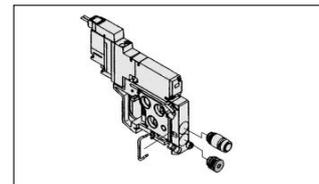

For cylinder port fittings part no., refer to page 2-4-213.
 For replacement parts, refer to page 2-4-231.

Blanking plug
KQ2P-
23
04
06
08

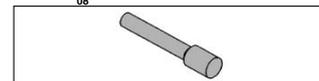

Series VQ0000/1000

Base Mounted Plug Lead Unit




Model

Series	Number of solenoids	Model		Flow characteristic ⁽¹⁾						Response time (ms) ⁽²⁾			Weight (g)		
				1 → 4/2 (P → A/B)			4/2 → 5/3 (A/B → R1/R2)			Standard: 1 W H: 1.5 W	Low wattage: ⁽³⁾ 0.5 W	AC ⁽³⁾			
				C [dm ³ /(s-bar)]	b	Cv	C [dm ³ /(s-bar)]	b	Cv						
VQ0000	2 position	Single	Metal seal	VQ0150	0.41	0.20	0.10	0.44	0.26	0.11	12 or less	15 or less	29 or less	36	
			Rubber seal	VQ0151	0.53	0.20	0.12	0.53	0.22	0.13	15 or less	20 or less	34 or less		
	Double	Metal seal	VQ0250	0.41	0.20	0.10	0.44	0.26	0.11	10 or less	13 or less	13 or less			
		Rubber seal	VQ0251	0.53	0.20	0.12	0.53	0.22	0.13	15 or less	20 or less	20 or less			
	3 position	Closed center	Metal seal	VQ0350	0.32	0.10	0.07	0.32	0.20	0.07	20 or less	26 or less	40 or less		50
			Rubber seal	VQ0351	0.43	0.21	0.10	0.44	0.24	0.11	25 or less	33 or less	47 or less		
Exhaust center	Metal seal	VQ0450	0.32	0.10	0.07	0.44	0.26	0.11	20 or less	26 or less	40 or less				
	Rubber seal	VQ0451	0.43	0.21	0.10	0.53	0.22	0.13	25 or less	33 or less	47 or less				
VQ1000	2 position	Single	Metal seal	VQ1110	0.70	0.15	0.16	0.72	0.25	0.18	12 or less	15 or less	29 or less	64	
			Rubber seal	VQ1111	0.85	0.20	0.21	1.0	0.30	0.25	15 or less	20 or less	34 or less		
	Double	Metal seal	VQ1210	0.70	0.15	0.16	0.72	0.25	0.18	10 or less	13 or less	13 or less			
		Rubber seal	VQ1211	0.85	0.20	0.21	1.0	0.30	0.25	15 or less	20 or less	20 or less			
	3 position	Closed center	Metal seal	VQ1310	0.68	0.15	0.16	0.72	0.25	0.18	20 or less	26 or less	40 or less		78
			Rubber seal	VQ1311	0.70	0.20	0.16	0.65	0.42	0.18	25 or less	33 or less	47 or less		
Exhaust center	Metal seal	VQ1410	0.68	0.15	0.16	0.72	0.25	0.18	20 or less	26 or less	40 or less				
	Rubber seal	VQ1411	0.70	0.20	0.16	1.0	0.30	0.25	25 or less	33 or less	47 or less				
Pressure center	Metal seal	VQ1510	0.70	0.15	0.16	0.72	0.25	0.18	20 or less	26 or less	40 or less				
	Rubber seal	VQ1511	0.85	0.20	0.21	0.65	0.42	0.18	25 or less	33 or less	47 or less				

- Note 1) Cylinder port size C4: (VQ0000), C6: (VQ1000) without check valve option for prevention of back pressure. As per JIS B 8375-1981 (Supply pressure: 0.5 MPa; with indicator light/surge voltage suppressor; clean air)
- Note 2) The response time is subject to the pressure and quality of the air. The values at the time of ON are given for double types.
- Note 3) AC type is only for VQ0000.

JIS Symbol

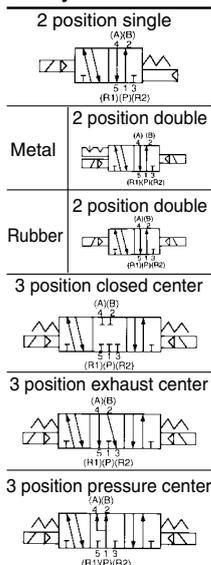

Standard Specifications

Valve specifications	Valve construction		Metal seal	Rubber seal	
	Fluid	Air/Inert gas			
Maximum operating pressure	0.7 MPa (High pressure type: 0.8 MPa)				
Min. operating pressure	Single	0.1 MPa	0.15 MPa		
	Double	0.1 MPa			
3 position	0.1 MPa	0.2 MPa			
Ambient and fluid temperature	-10 to 50°C ⁽¹⁾				
Lubrication	Not required				
Manual override	Non-locking push type/Locking type (Tool required, Manually operated) Option				
Impact/Vibration resistance ⁽²⁾	150/30 m/s ²				
Enclosure	Dust tight				
Solenoid	Coil rated voltage	12, 24 VDC, 100, 110, 200, 220 VAC (50/60 Hz)			
	Allowable voltage fluctuation	±10% of rated voltage			
	Coil insulation type	Equivalent to class B			
	Power consumption (Current)	24 VDC	1 W DC (42 mA), 1.5 W DC (63 mA) ⁽³⁾ , 0.5 W DC (21 mA) ⁽⁴⁾		
		12 VDC	1 W DC (83 mA), 1.5 W DC (125 mA) ⁽³⁾ , 0.5 W DC (42 mA) ⁽⁴⁾		
		100 VAC	VQ0000	Inrush 0.5 VA (5 mA), Holding 0.5 VA (5 mA)	
		110 VAC		Inrush 0.55 VA (5 mA), Holding 0.55 VA (5 mA)	
200 VAC		Inrush 1.0 VA (5 mA), Holding 1.0 VA (5 mA)			
220 VAC	Inrush 1.1 VA (5 mA), Holding 1.1 VA (5 mA)				

- Note 1) Use dry air to prevent condensation when operating at low temperatures.
- Note 2) Impact resistance: No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)
- Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)
- Note 3) Value for high pressure type (1.5 W)
- Note 4) Value for low pressure type (0.5 W)
- Note 5) AC type is available only on VQ0000.

Plug Lead Unit Series VQ0000/1000

Manifold Specifications

Series	Base model	Type of connection	Porting specifications		Applicable stations ⁽²⁾	Applicable solenoid valve	5 station weight (g)	
			Port location	Port size ⁽¹⁾				
				1(P), 3(R)	4(A), 2(B)			
VQ0000	VV5Q05-□□□	<ul style="list-style-type: none"> ■ F kit—D-sub connector ■ P kit—Flat ribbon cable connector ■ T kit—Terminal block ■ C kit—Individual connector ■ S kit—Serial transmission 	Side	C6 (ø6) Option (Built-in silencer, direct exhaust)	C3 (ø3.2) C4 (ø4) M5 (M5 thread)	1 to 16 stations	VQ0□50 VQ0□51	330 (Single) 400 (Double, 3 position)
VQ1000	VV5Q12-□□□	<ul style="list-style-type: none"> ■ F kit—D-sub connector ■ P kit—Flat ribbon cable connector ■ T kit—Terminal block ■ C kit—Individual connector ■ S kit—Serial transmission 	Side	C8 (ø8) Option (Built-in silencer, direct exhaust)	C3 (ø3.2) C4 (ø4)C6 (ø6) M5 (M5 thread)	1 to 16 stations	VQ1□10 VQ1□11	818 (Single) 885 (Double, 3 position)



Note 1) Inch-size One-touch fittings are also available. For details, refer to page 2-4-216.

Note 2) For details, refer to page 2-4-216.

VQC

SQ


VQ0

VQ4

VQ5

VQZ


VQD

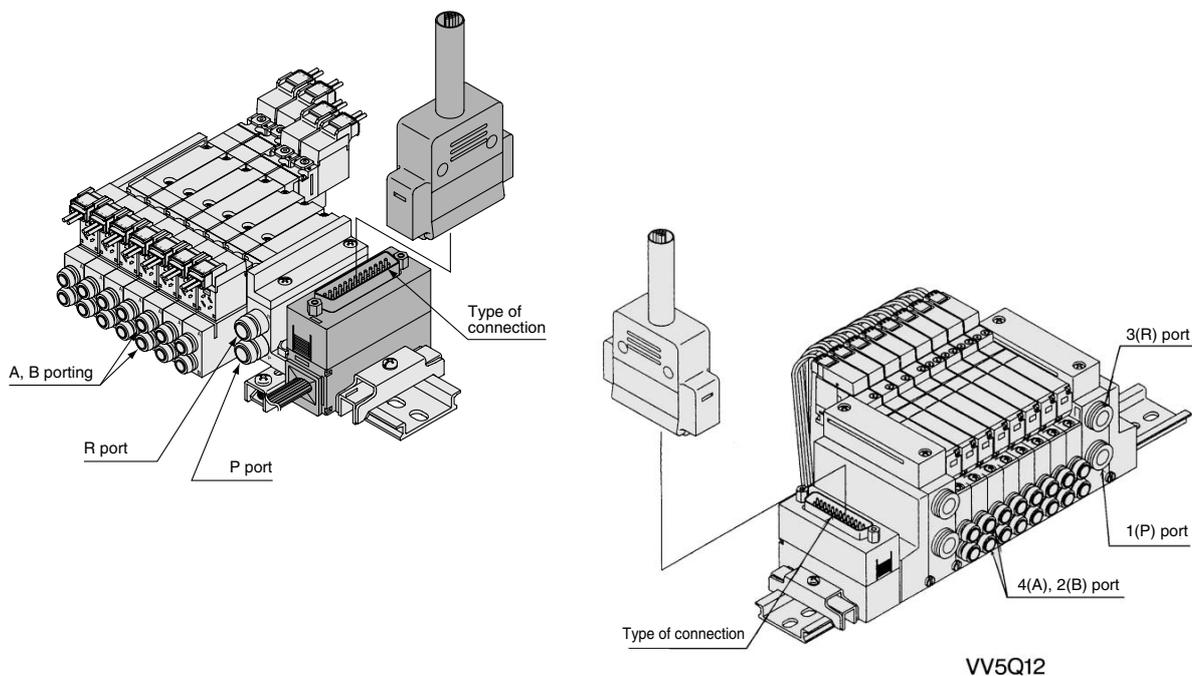

VV5Q12

F VQ0000/1000 Kit (D-sub connector)

- The D-sub connector reduces installation labor for electrical connections.
- Using the D-sub connector (25P), (15P as an option) conforming to MIL standard permits the use of connectors put on the market and gives a wide interchangeability.
Top or side connector receptacle position can be selected in accordance with the available mounting space.
- Maximum stations are 16.

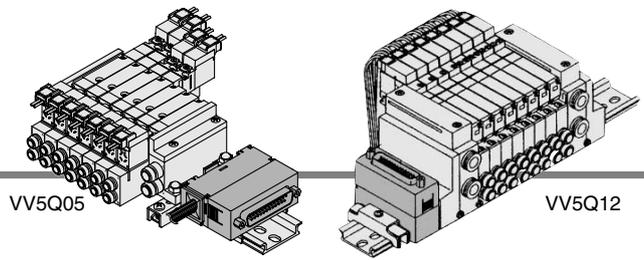

Manifold Specifications

Series	Port location	Porting specifications		Applicable stations
		1(P), 3(R)	4(A), 2(B)	
VQ0000	Side	C6	C3, C4, M5	Max. 16 stations
VQ1000	Side	C8	C3, C4, C6, M5	Max. 16 stations

D-sub Connector (25 pins)

Cable assembly ●

AXT100-DS25-015
030
050

(The D-sub connector cable assembly can be ordered individually or included with manifold. Refer to How to Order Manifold.)

D-sub Connector Cable Assembly (Option)

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-DS25-015	Cable 25-core x 24AWG
3 m	AXT100-DS25-030	
5 m	AXT100-DS25-050	

* For other commercial connectors, use a 25 pins type with female connector conforming to MIL-C-24308.

Connector manufacturers' example

- Fujitsu Limited
- Japan Aviation Electronics Industry, Ltd.
- J.S.T. Mfg. Co., Ltd.
- Hirose Electric Co., Ltd.

Electric Characteristics

Item	Characteristics
Conductor resistance Ω/km , 20°C	65 or less
Insulation resistance V, 1 min, AC	1000
Insulation resistance $\text{M}\Omega$, 20°C	5 or more

Note) The minimum bending radius of D-sub cable assembly is 20 mm.

Wire Color by Terminal No. of D-sub Connector Cable Assembly

Terminal no.	Dot marking	Lead wire color
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Gray	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Gray	Red
24	Black	White
25	White	None

Note) Types with 15 pin are also available. Refer to page 2-4-215 for details.

How to Order Manifold

VV5Q 12-08 C6 F U 1-D

Series/Manifold

Symbol	Series/Manifold	Option
05	VQ0000	Plug lead unit
12	VQ1000	

Stations

Symbol	Stations
01	1 station
:	:
08	8 stations (Note)

Connector entry direction

Symbol	Connector entry direction
U	Top entry
S	Side entry

Cylinder port

Symbol	Port size	VQ0000	VQ1000
C3	With One-touch fitting for $\phi 3.2$	●	●
C4	With One-touch fitting for $\phi 4$	●	●
C6	With One-touch fitting for $\phi 6$	●	●
M5	M5 thread	●	●
CM	With mixed size/with port plug	●	●

Cable (Length)

Symbol	Cable (Length)
0	Without cable
1	With cable (1.5 m)
2	With cable (3 m)
3	With cable (5 m)

Option

Symbol	Option	VQ0000	VQ1000
B	With back pressure check valve		● ⁽²⁾
D	DIN rail mounting style	●	● ⁽³⁾
K	Special wiring specifications (Not double wiring)	●	● ⁽⁴⁾
N	With name plate	●	●
S	Built-in silencer, direct exhaust	●	●

Note) As option, the maximum number of stations can be increased by special wiring specifications. For details, refer to page 2-4-216.

Note 1) Specify "Mixed size/with port plug" on the manifold specification sheet.

Note 2) For inch-size One-touch fittings, refer to "Option" on page 2-4-216.

Note 1) When two or more symbols are specified, indicate them alphabetically.
Example) -BNS

Note 2) Models with a suffix "-B" have the back pressure check valve at all manifold stations. If not all stations need this check valve, specify the stations where check valves are installed by using the manifold specification sheet.

Note 3) F kit of VQ0000 and all of VQ1000 are equipped with a DIN rail, so indicate suffix "D".

Note 4) Specify the wiring specifications on the manifold specification sheet.

VQC

SQ


VQ0

VQ4


VQ5

VQZ

VQD

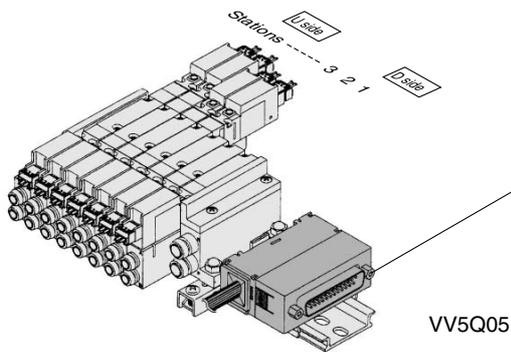

The total number of stations is tabulated starting from station one on the D side.

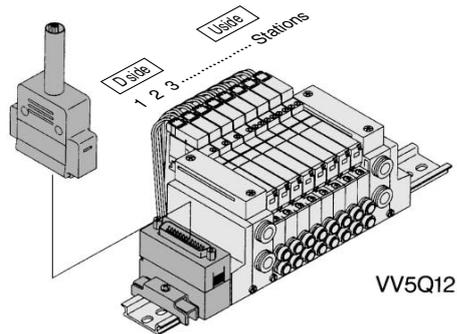

Electrical wiring specifications

D-sub connector assembly
015
AXT100-DS25-030 Wire color
050

D-sub connector	Terminal no.	Polarity	Lead wire color	Dot marking
1 station	SOL.A	1 (-)	(+) Black	None
	SOL.B	14 (-)	(+) Yellow	Black
2 stations	SOL.A	2 (-)	(+) Brown	None
	SOL.B	15 (-)	(+) Pink	Black
3 stations	SOL.A	3 (-)	(+) Red	None
	SOL.B	16 (-)	(+) Blue	White
4 stations	SOL.A	4 (-)	(+) Orange	None
	SOL.B	17 (-)	(+) Purple	None
5 stations	SOL.A	5 (-)	(+) Yellow	None
	SOL.B	18 (-)	(+) Gray	None
6 stations	SOL.A	6 (-)	(+) Pink	None
	SOL.B	19 (-)	(+) Orange	Black
7 stations	SOL.A	7 (-)	(+) Blue	None
	SOL.B	20 (-)	(+) Red	White
8 stations	SOL.A	8 (-)	(+) Purple	White
	SOL.B	21 (-)	(+) Brown	White
	COM.	13 (+)	(-) Orange	Red

Note) Positive common specifications Negative common specifications

As the standard electrical wiring specifications, double wiring (connected to SOL.A and SOL.B) is adopted for the internal wiring of each station for 8 stations or less, regardless of valve and option types. Mixed single and double wiring is available as an option. For details, refer to page 2-4-216.

Note) When using the negative common specifications, use valves for negative common. (Refer to page 2-4-216.)

How to Order Valves

VQ 1 1 1 0 Y 5 LO

Series

0	VQ0000
1	VQ1000

Type of actuation

1	2 position single
2	2 position double
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center (VQ1000 only)

Body type

5	VQ0000	Plug lead unit
1	VQ1000	

Seal

0	Metal seal
1	Rubber seal

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual) ^{Note)}

Note) VQ1000 only.

Electrical entry

	VQ0000	VQ1000
LO	L plug connector without connector	●
MO	M plug terminal without connector	●

Note) Plug connector and lead wire layers are attached to the manifold.

Coil voltage

	VQ0000	VQ1000
1	100 VAC (50/60 Hz)	●
3	110 VAC (50/60 Hz)	●
5	24 VDC	●
6	12 VDC	●

Function

Symbol	Specifications	DC	AC
Nil	Standard type	(1.0 W) ○	Note) ○
H	High pressure type	(1.5 W) ○	—
Y	Low wattage type	(0.5 W) ○	—


How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>

D-sub connector kit with cable (3 m)
VV5Q12-08C6FU2-D ... 1 set—Manifold base no.
*VQ1110-5LO 4 sets—Valve part no. (Stations 1 to 4)
*VQ1210-5LO 4 sets—Valve part no. (Stations 5 to 8)
*VQ1310-5LO 2 sets—Valve part no. (Stations 7 to 8)
*VVQ1000-10A-1..... 1 set—Blanking plate part no. (Station 9)

Prefix the asterisk to the part nos. of the solenoid valve, etc. Write sequentially from the 1st station on the D side. When part nos. written collectively are complicated, specified by using the manifold specification sheet.



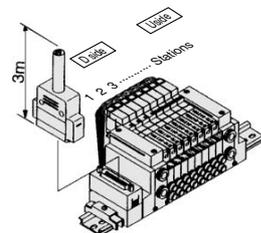


Note 1) For negative common specifications, refer to "Option" on page 2-4-216.
Note 2) Connector assembly will be required when the F kits add a valve. For part nos., refer to "Option" on page 2-4-216.

Note) For power consumption of AC type, refer to page 2-4-186.

F VQ0000/1000 Kit (D-sub connector)

VQ0000

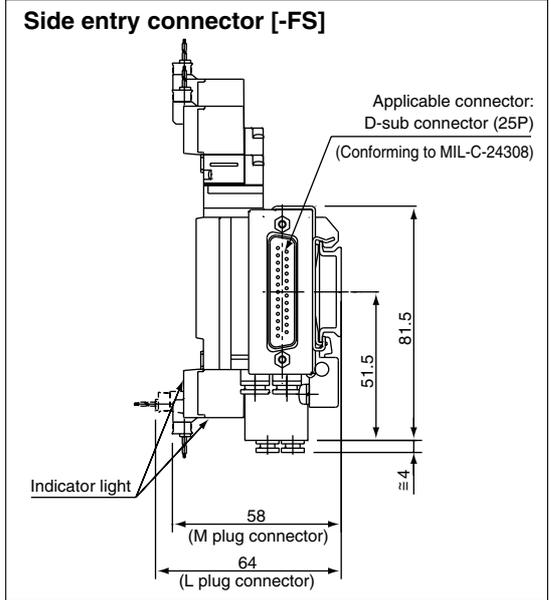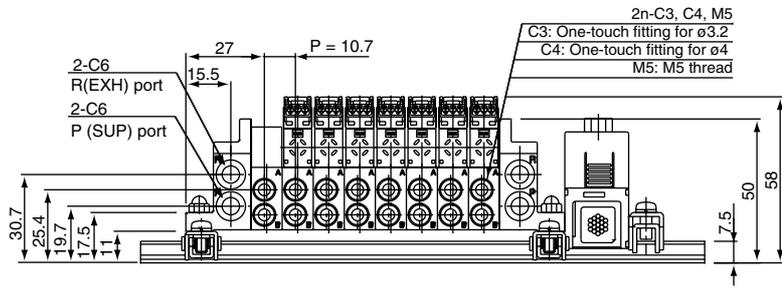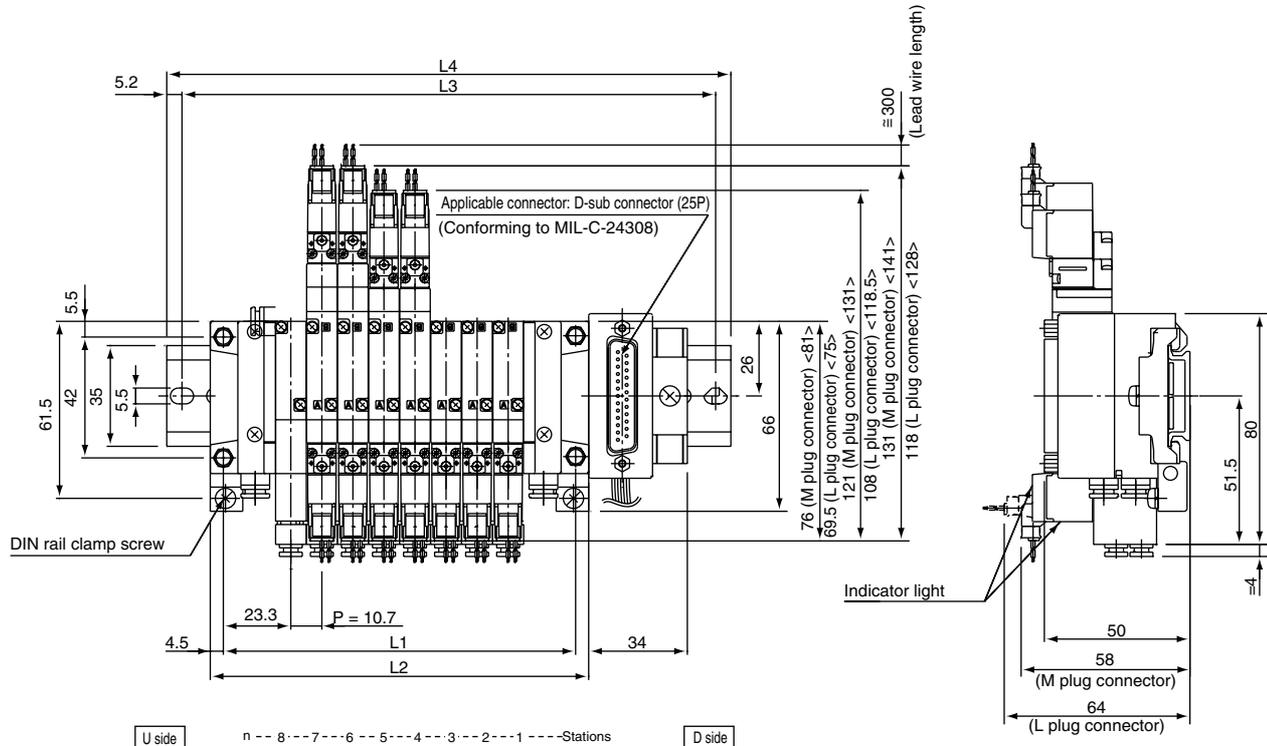

< >: AC

Dimensions: Top Entry Connector [-FU]


Formula $L1 = 10.7n + 36$, $L2 = 10.7n + 45$
n: Station (Maximum 16 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	46.5	57.4	68.1	78.8	89.5	100.2	110.9	121.6	132.3	143	153.7	164.4	175.1	185.8	196.5	207.2
L2	55.7	66.4	77.1	87.8	98.5	109.2	119.9	130.6	141.3	152	162.7	173.4	184.1	194.8	205.5	216.2
L3	112.5	125	137.5	150	162.5	175	175	187.5	200	212.5	225	237.5	250	250	262.5	275
L4	123	135.5	148	160.5	173	185.5	185.5	198	210.5	223	235.5	248	260.5	260.5	273	285.5



Dimensions: Side Entry Connector [-FS]

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L3	137.5	150	150	162.5	175	187.5	200	212.5	225	225	237.5	250	262.5	275	287.5	300
L4	148	160.5	160.5	173	185.5	198	210.5	223	235.5	235.5	248	260.5	273	285.5	298	310.5

VQ1000

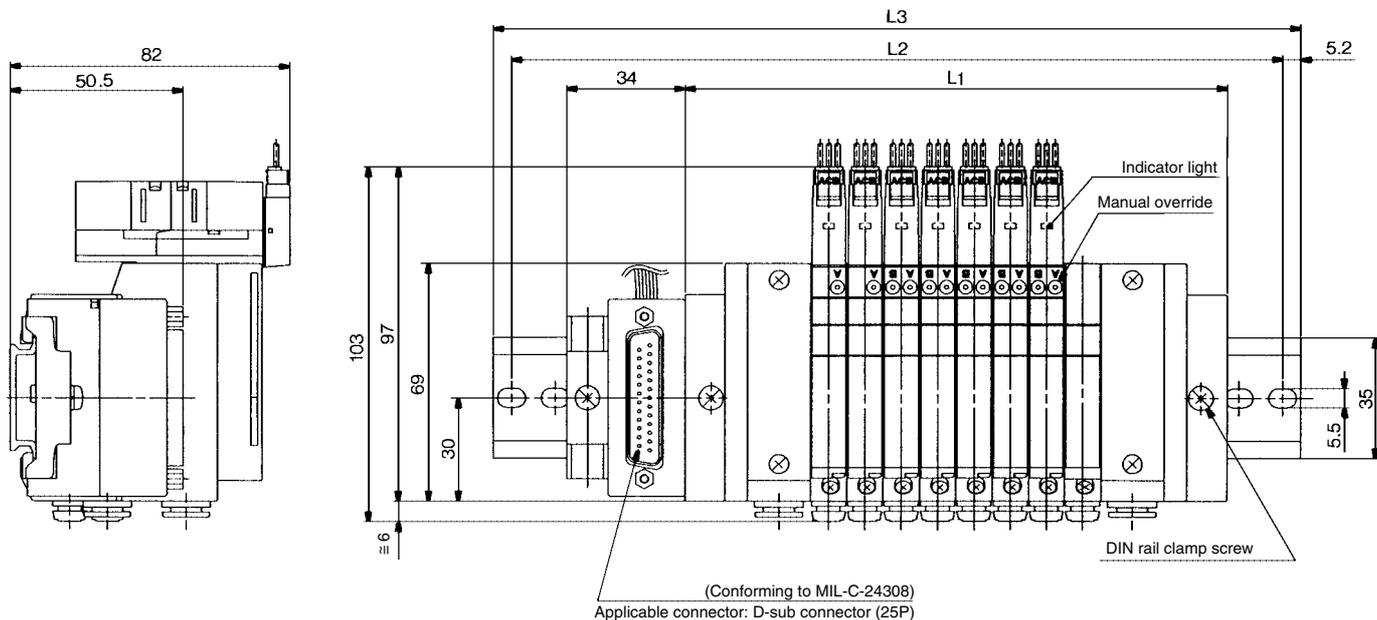

- VQC
- SQ
- VQ0**
- VQ4
- VQ5
- VQZ
- VQD

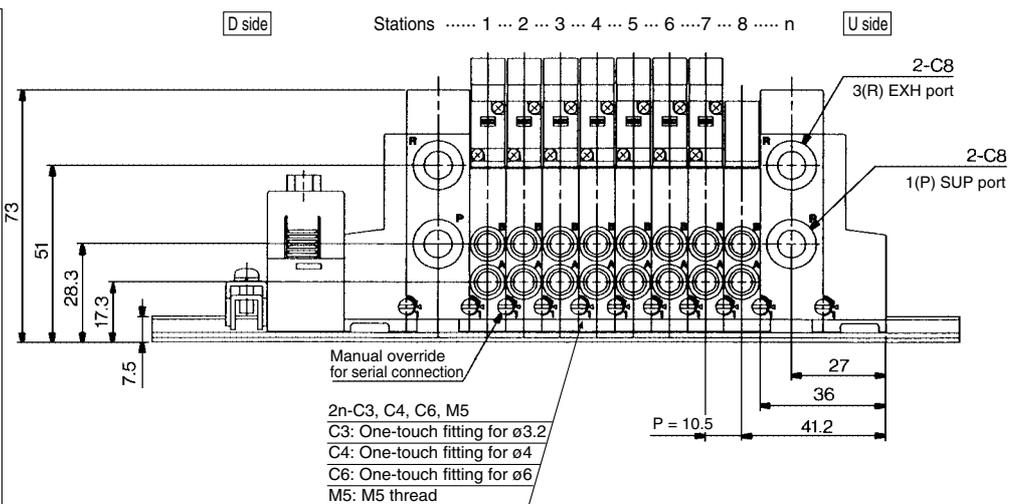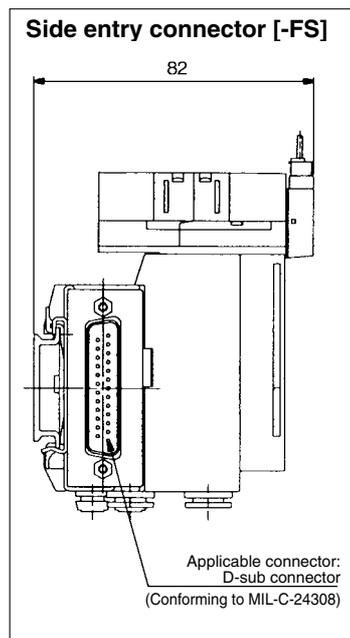

Dimensions: Top Entry Connector [-FU]

Formula L1 = 10.5n + 72 n: Station (Maximum 16 stations)


L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	82.5	93	103.5	114	124.5	135	145.5	156	166.5	177	187.5	198	208.5	219	229.5	240
L2	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300
L3	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5

Dimensions: Side Entry Connector [-FS]

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L2	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5	300	312.5	312.5
L3	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5	323	323

P VQ0000/1000 Kit (Flat ribbon cable connector)

- MIL flat ribbon cable connector reduces installation labor savings for electrical connection.
- Using the connector for flat ribbon cable (26P), (10P, 16P, 20P as an option) conforming to MIL standard permits the use of connectors put on the market and gives a wide interchangeability.
Top or side receptacle position can be selected in accordance with the available mounting space.
- Maximum stations are 16.

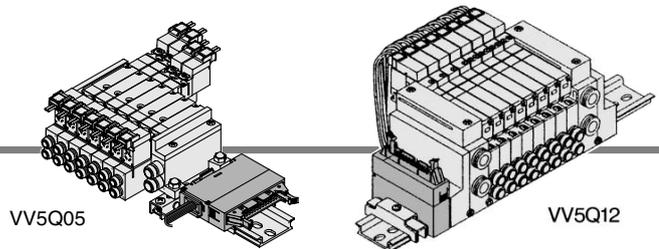

Manifold Specifications

Series	Port location	Porting specifications		Applicable stations
		1(P), 3(R)	4(A), 2(B)	
VQ0000	Side	C6	C3, C4, M5	Max.16 stations
VQ1000	Side	C8	C3, C4, C6, M5	Max.16 stations

Flat Ribbon Cable (26 pins)

AXT100-FC26-¹/₃
 (Flat ribbon cable connector assembly can be ordered individually or included in a specific manifold model no. Refer to "How to Order Manifold".)

Flat Ribbon Cable Connector Assembly (Option)


Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-FC26-1	Cable 26 cores x 28AWG
3 m	AXT100-FC26-2	
5 m	AXT100-FC26-3	

* For other commercial connectors, use a 26 pins type with strain relief conforming to MIL-C-83503.

Connector manufacturers' example

- Hirose Electric Co., Ltd.
- Sumitomo 3M Limited
- Fujitsu Limited
- Japan Aviation Electronics Industry, Ltd.
- J.S.T. Mfg. Co., Ltd.
- Oki Electric Cable Co., Ltd.

Note) Types with 10, 16, or 20 pin are also available. Refer to page 2-4-215 for details.

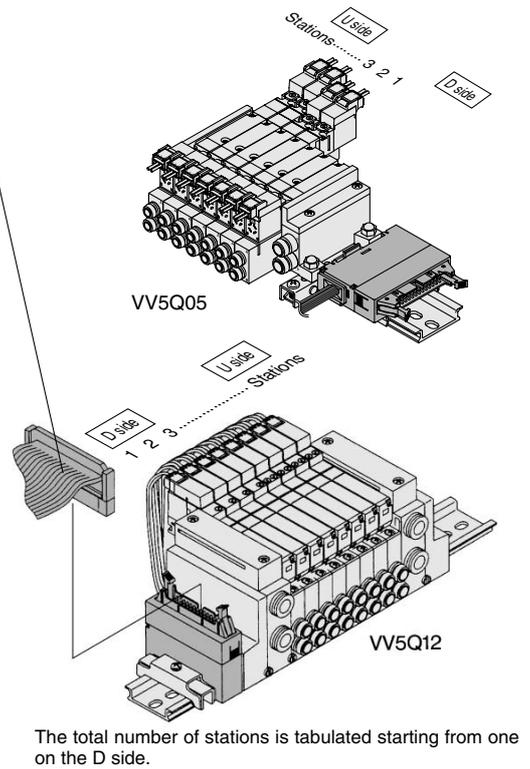

How to Order Manifold

VV5Q 12-08 C6 P U 1-D

Series/Manifold

05	VQ0000	Plug lead unit
12	VQ1000	

Stations

01	1 station
⋮	⋮
16	16 stations ^{Note)}

Connector entry direction

U	Top (Vertical)
S	Side (Horizontal)

Cable (Length)

0	Without cable
1	With cable (1.5 m)
2	With cable (3 m)
3	With cable (5 m)

Cylinder port

Symbol	Port size	VQ0000	VQ1000
C3	With One-touch fitting for ø3.2	●	●
C4	With One-touch fitting for ø4	●	●
C6	With One-touch fitting for ø6	●	●
M5	M5 thread	●	●
CM	With mixed size/with port plug	●	●

Option

Symbol	Option	VQ0000	VQ1000
B	With back pressure check valve	●	● ⁽²⁾
D	DIN rail mounting style	●	● ⁽³⁾
K	Special wiring specification (Not double wiring)	●	● ⁽⁴⁾
N	With name plate	●	●
S	Built-in silencer (Direct exhaust)	●	●

- Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BNS
- Note 2) Models with a suffix "B" have the back pressure check valve at all manifold stations. If not all stations need this check valve, specify the stations where check valves are installed by using the manifold specification sheet.
- Note 3) P kit of VQ0000 and all of VQ1000 are equipped with a DIN rail, so indicate suffix "D".
- Note 4) Specify the wiring specifications on the manifold specification sheet.

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

● Electrical wiring specifications

Flat ribbon cable connector

Terminal no.	Polarity
SOL.A 1	(-) (+)
SOL.B 2	(-) (+)
SOL.A 3	(-) (+)
SOL.B 4	(-) (+)
SOL.A 5	(-) (+)
SOL.B 6	(-) (+)
SOL.A 7	(-) (+)
SOL.B 8	(-) (+)
SOL.A 9	(-) (+)
SOL.B 10	(-) (+)
SOL.A 11	(-) (+)
SOL.B 12	(-) (+)
SOL.A 13	(-) (+)
SOL.B 14	(-) (+)
SOL.A 15	(-) (+)
SOL.B 16	(-) (+)
COM. 25	(+) (-)
COM. 26	(+) (-)

Electrical wiring specifications

Note) Positive common specifications Negative common specifications

Note) When using the negative commons specifications, use valves for negative common. (Refer to page 2-4-216.)

As the standard electrical wiring specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 8 stations or less, regardless of valve and option types. Mixed single and double wiring is available as an option. For details, refer to page 2-4-216.

How to Order Valves

VQ 1 1 1 0 Y 5 LO

Series

0	VQ0000
1	VQ1000

Type of actuation

1	2 position single
2	2 position double
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center (VQ1000 only)

Body type

5	VQ0000	Plug lead unit
1	VQ1000	Plug lead unit

Seal

0	Metal seal
1	Rubber seal

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual) ^{Note)}

Note) VQ1000 only.

Electrical entry

	VQ0000	VQ1000
LO	L plug connector without connector	●
MO	M plug terminal without connector	●

Note) Plug connector and lead wire are attached to the manifold.

Coil voltage

	VQ0000	VQ1000
1	100 VAC (50/60 Hz)	●
3	110 VAC (50/60 Hz)	●
5	24 VDC	●
6	12 VDC	●

Function

Symbol	Specifications	DC	AC
Nil	Standard type	(1.0 W) ○	^{Note)} ○
H	High pressure type	(1.5 W) ○	—
Y	Low wattage type	(0.5 W) ○	—

Note) For power consumption of AC type, refer to page 2-4-186.

Note 1) For negative common specifications, refer to Note 2)

Note 2) Connector assembly will be required when the P kits add a valve. For part nos., refer to "Option" on page 2-4-126.


How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>
Flat ribbon cable kit with 3 m cable
VV5Q12-08C6PU1-D ...1 set—Manifold base no.
*VQ1110-5LO4 sets—Valve part no. (Stations 1 to 4)
*VQ1210-5LO3 sets—Valve part no. (Stations 5 to 8)




Prefix the asterisk to the part nos. of the solenoid valve, etc.

Write sequentially from the 1st station on the D side. When part nos. written collectively are complicated, specify by using the manifold specification sheet.

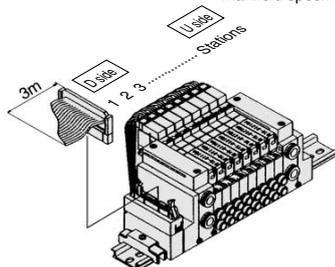


P VQ0000/1000 Kit (Flat ribbon cable connector)

VQ0000

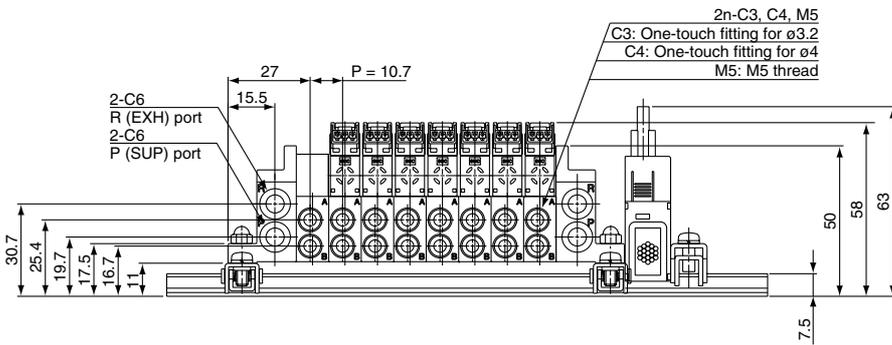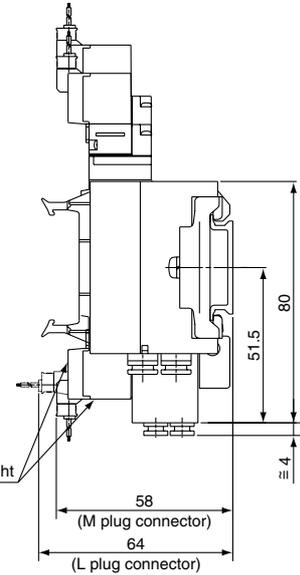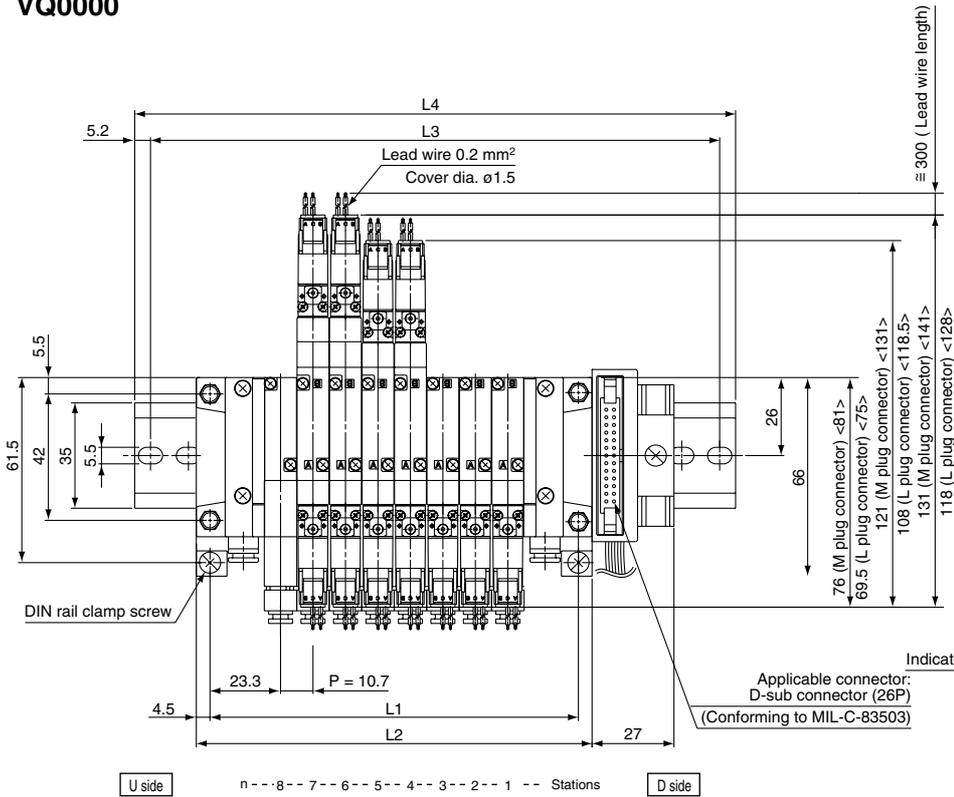

Side entry connector [-PS]

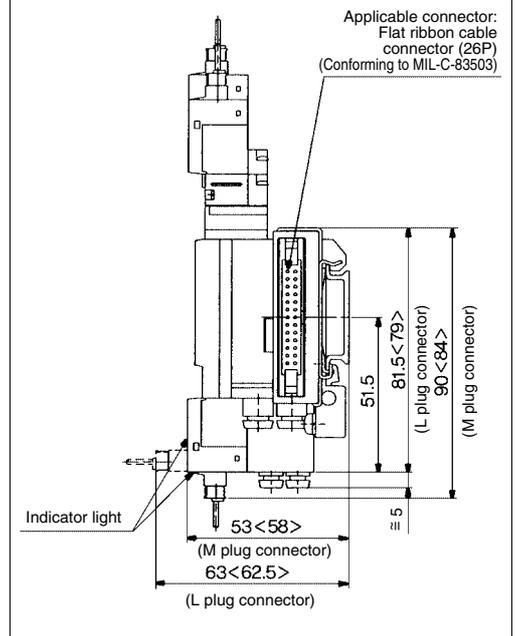

< >: AC

Dimensions: Top Entry Connector [-PU]


L	n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1		46.7	57.4	68.1	78.8	89.5	100.2	110.9	121.6	132.3	143	153.7	164.4	175.1	185.8	196.5	207.2
L2		55.7	66.4	77.1	87.8	98.5	109.2	119.9	130.6	141.3	152	162.7	173.4	184.1	194.8	205.5	216.2
L3		112.5	125	125	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	275
L4		123	135.5	135.5	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	285.5

Dimensions: Side Entry Connector [-PS]

L	n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L3		137.5	150	150	162.5	175	187.5	200	212.5	225	225	237.5	250	262.5	275	287.5	300
L4		148	160.5	160.5	173	185.5	198	210.5	223	235.5	235.5	248	260.5	273	285.5	298	310.5



Formula L1 = 10.7n + 36, L2 = 10.7n + 45
n: Station (Maximum 16 stations)

VQ1000

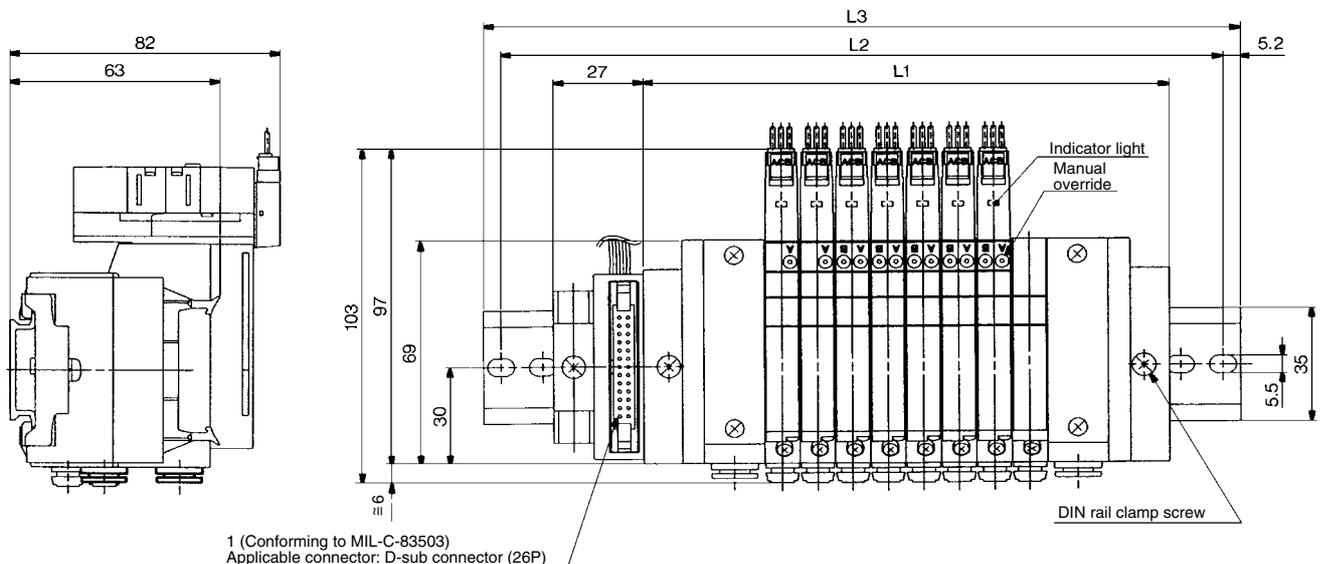

- VQC
- SQ
- VQ0**
- VQ4
- VQ5
- VQZ
- VQD

D side Stations .. 1 ..2 ... 3 .. 4 .. 5 ..6 ...7 ..8 .. n U side

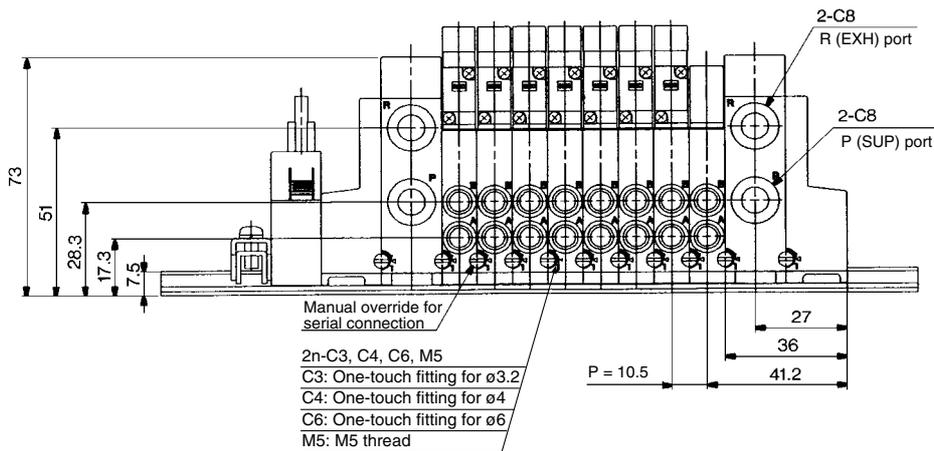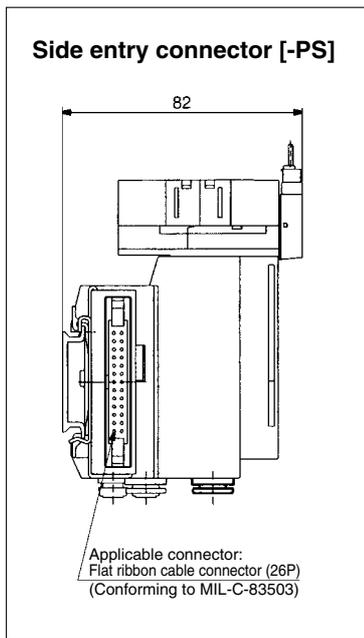

Dimensions: Top Entry Connector [-PU]

Formula L1 = 10.5n + 72 n: Station (Maximum 16 stations)


n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	82.5	93	103.5	114	124.5	135	145.5	156	166.5	177	187.5	198	208.5	219	229.5	240
L2	137.5	150	150	162.5	175	187.5	200	212.5	225	225	237.5	250	262.5	275	287.5	287.5
L3	148	160.5	160.5	173	185.5	198	210.5	223	235.5	235.5	248	260.5	273	285.5	298	298

Dimensions: Side Entry Connector [-PS]

n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L2	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5	300	312.5	312.5
L3	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5	323	323

T VQ0000/1000 Kit (Terminal block)

- It is a standard terminal block type.
- Two quantities of terminals can be selected in accordance with the number of stations. (8 terminals/16 terminals)
- Maximum stations are 8. (16 stations as an option)

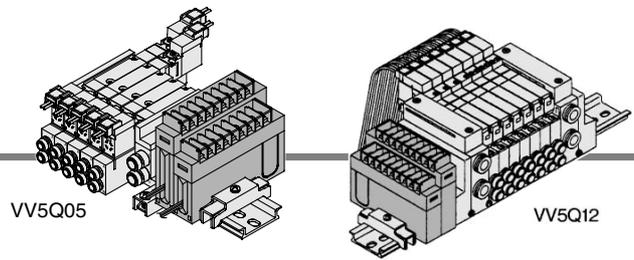

Manifold Specifications

Series	Porting specifications		Applicable stations
	Port location	Port size	
VQ0000	Side	1(P), 3(R), 4(A), 2(B)	Max.16 stations
VQ1000	Side	C6, C3, C4, C6, M5	Max.16 stations

Electrical wiring specifications


In the case of double wiring (standard spec.)
 T1 (Terminal block of 1 row): 1-4 stations
 T2 (Terminal block of 2 rows): 5-8 stations
 T1 and T2 can be optionally chosen by adopting the combinations of single and double wiring (option spec.) etc.

The quantity of terminal blocks used depends on the number of manifold stations


Manifold	Terminal blocks
1 to 4 stations	1 row
5 to 8 stations	2 rows

Note) Wiring other than those above is possible. For details, refer to page 2-4-216.

Double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station, regardless of valve and option types. Mixed single and double wiring is available as an option. For details, refer to page 2-4-216.

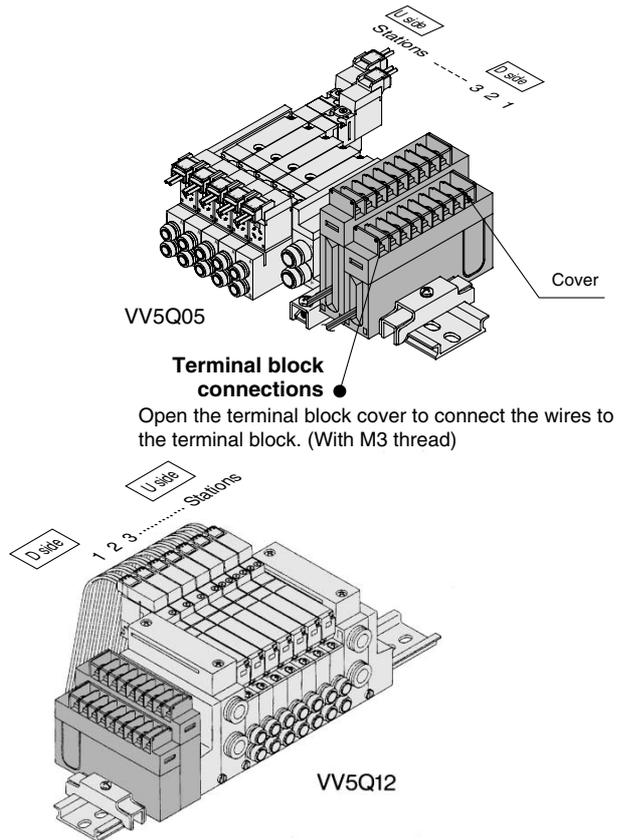

How to Order Manifold

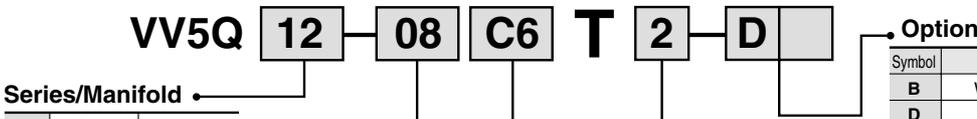

Series/Manifold

05	VQ0000	Plug lead unit
12	VQ1000	Unit

Stations

01	1 station
...	...
16	16 stations ^{Note)}

Note) Refer to page 2-4-216 for details.

Cylinder ports

Symbol	Port size
C3	With One-touch fitting for ø3.2
C4	With One-touch fitting for ø4
C6	With One-touch fitting for ø6
M5	M5 thread
CM	With mixed size/with port plug ^{Note)}

Note 1) Specify "Mixed size/with port plug" on the manifold specification sheet.
 Note 2) For inch-size One-touch fittings, refer to "Option" on page 2-4-216.

Number of terminals

1	8 terminals in 1 row	1 to 4 stations (Double wiring), 8 stations (Single wiring)
2	16 terminals in 2 rows	5 to 8 stations (Double wiring), 16 stations (Single wiring)

Note) The number of terminal blocks can be chosen regardless of station qty. Suffix the option symbol, "K" when the wiring specifications are special.

Option

Symbol	Option	VQ0000	VQ1000
B	With back pressure check valve		● ⁽²⁾
D	DIN rail mounting style	●	● ⁽³⁾
K	Special wiring specifications (Not double wiring)	●	● ⁽⁴⁾
N	With name plate	●	●
S	Built-in silencer, direct exhaust	●	●

Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BNS
 Note 2) Models with a suffix "-B" have the back pressure check valve at all manifold stations. If not all stations need this check valve, specify the stations where check valves are installed by using the manifold specification sheet.
 Note 3) T kit of VQ0000 and all of VQ1000 are equipped with a DIN rail, so indicate suffix "-D".
 Note 4) Specify the wiring specifications on the manifold specification sheet.

VQC

SQ

VQ0


VQ4

VQ5

VQZ

VQD

How to Order Valves

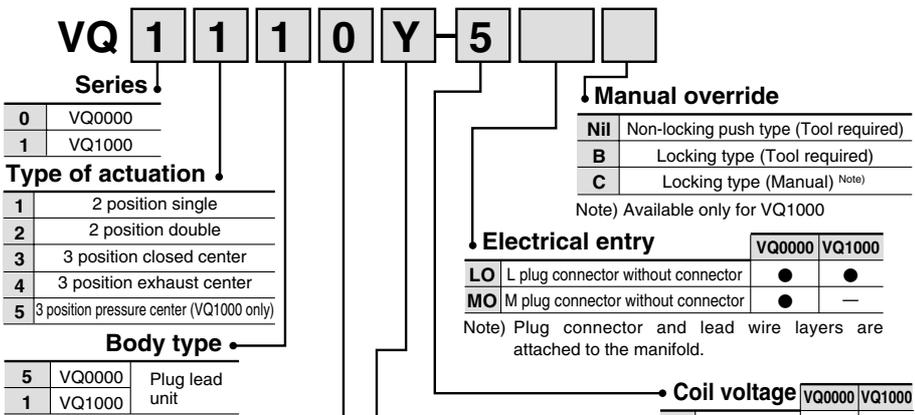

Seal

0	Metal seal
1	Rubber seal

Note 1) For negative common specifications, refer to "Option" on page 2-4-216.

Note 2) Connector assembly will be required when the T kits add a valve. For part nos., refer to "Option" on page 2-4-216.

Function

Symbol	Specifications	DC	AC
Nil	Standard type	(1.0 W) ○	(Note) ○
H	High pressure type	(1.5 W) ○	—
Y	Low wattage type	(0.5 W) ○	—

Note) For power consumption of AC type, refer to page 2-4-186.


How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>
Flat ribbon cable kit with 3 m cable
VV5Q12-07C6T2-D ... 1 set—Manifold base no.
*VQ1110-5LO 4 sets—Valve part no. (Stations 1 to 4)
*VQ1210-5LO 3 sets—Valve part no. (Stations 5 to 8)


Prefix the asterisk to the part nos. of the solenoid valve, etc.

Write sequentially from the 1st station on the D side. When part nos. written collectively are complicated, specify by using the manifold specification sheet.

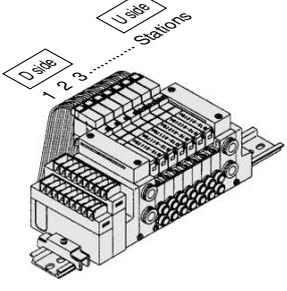

T VQ0000/1000 Kit (Terminal block)

VQ0000

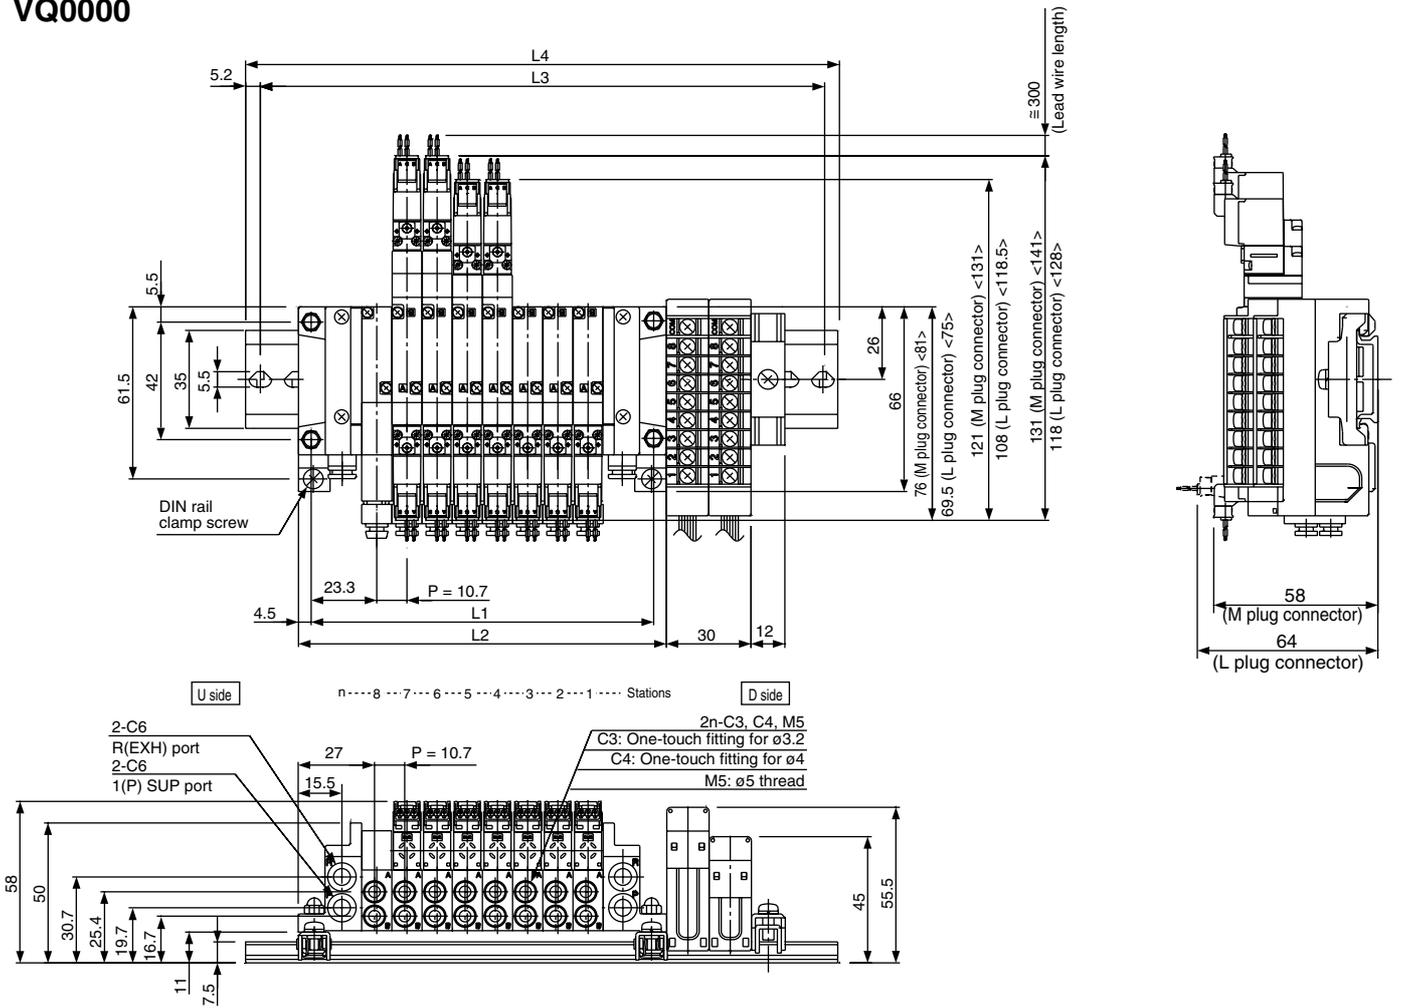

This drawing shows the case of VV5Q05-□□T2-D□.

< >: AC


Dimensions

Formula L1 = 10.7n + 36, L2 = 10.7n + 45 n: Station (Maximum 16 stations)


L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	46.7	57.4	68.1	78.8	89.5	100.2	110.9	121.6	132.3	143	153.7	164.4	175.1	185.8	196.5	207.2
L2	55.7	66.4	77.1	87.8	98.5	109.2	119.9	130.6	141.3	152	162.7	173.4	184.1	194.8	205.5	216.2
L3	125	137.5	150	150	162.5	175	187.5	200	212.5	225	225	237.5	250	262.5	275	287.5
L4	135.5	148	160.5	160.5	173	185.5	198	210.5	223	235.5	235.5	248	260.5	273	285.5	298

Plug Lead Unit Series VQ0000/1000

VQ1000

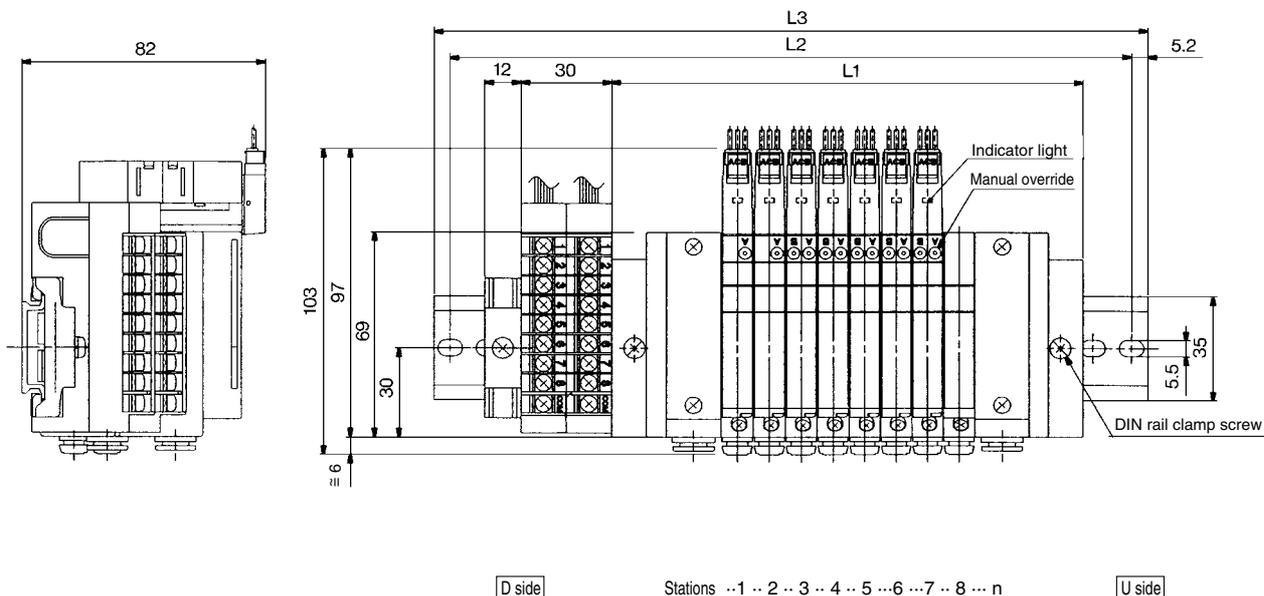

- VQC
- SQ
- VQ0**
- VQ4
- VQ5
- VQZ
- VQD

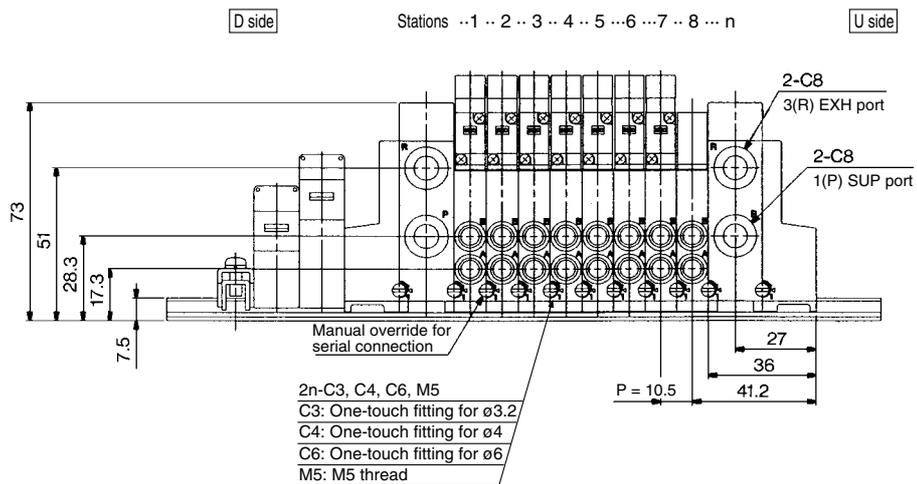

This drawing shows the case of VV5Q12-□□T2-D□.


Dimensions

Formula L1 = 10.5n + 72 n: Station (Maximum 16 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	82.5	93	103.5	114	124.5	135	145.5	156	166.5	177	187.5	198	208.5	219	229.5	240
L2	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5	300	312.5
L3	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5	323

C VQ0000/1000 Kit (Connector)

- Standard with lead wires plug-connected to each valve individually.
- Maximum stations are 16.


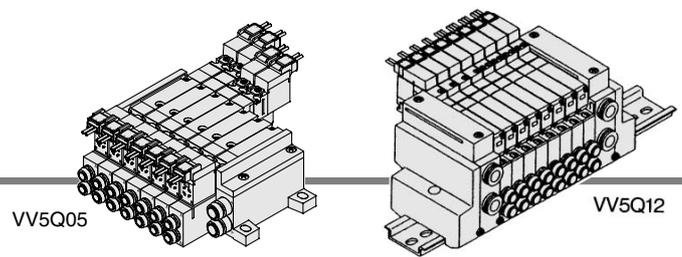


Manifold Specifications

Series	Port location	Porting specifications		Applicable stations
		1(P), 3(R)	4(A), 2(B)	
VQ0000	Side	C6	C3, C4, M5	Max. 16
VQ1000	Side	C8	C3, C4, C6, M5	Max.16 stations

Wiring specifications: Positive COM ●

- The lead wires are connected to the valve as shown below. Connect each to the power supply side.

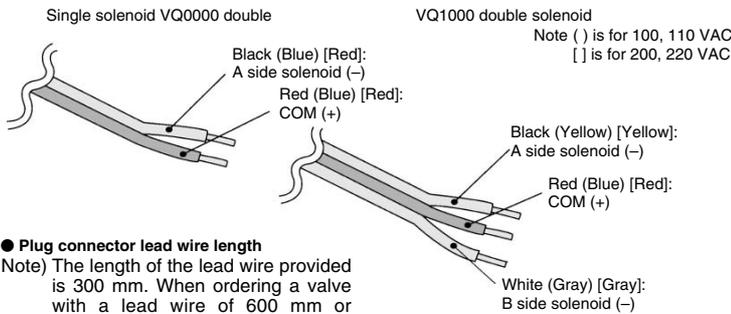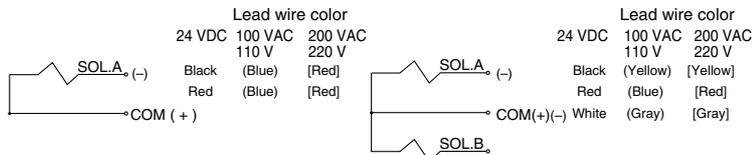

● Plug connector lead wire length



Note) The length of the lead wire provided is 300 mm. When ordering a valve with a lead wire of 600 mm or longer, be sure to indicate the model number of the valve without connector and connector assembly.

Example) Lead wire length 1000 mm
VQ1110-5LO..... 3 pcs.
AXT661-14A-10 3 pcs.

Connector Assembly (For DC)

Lead wire length	Part no. for single & VQ0000 double	Part no. for VQ1000 double
Socket (3 pcs.)	AXT661-12A	
300 mm	AXT661-14A	AXT661-13A
600 mm	AXT661-14A-6	AXT661-13A-6
1000 mm	AXT661-14A-10	AXT661-13A-10
2000 mm	AXT661-14A-20	AXT661-13A-20
3000 mm	AXT661-14A-30	AXT661-13A-30

Note) 100/110 VAC for single: AXT661-31A-□; for double: AXT661-32A-□
200/220 VAC for single: AXT661-34A-□; for double: AXT661-35A-□

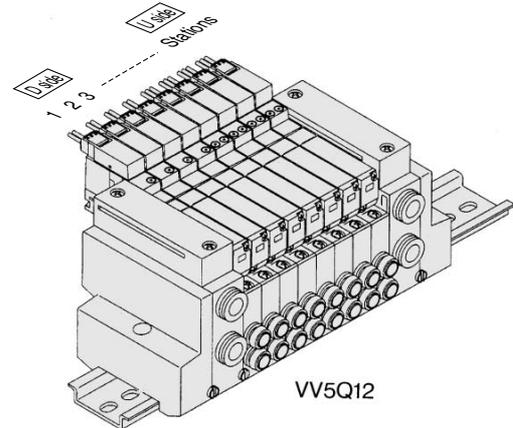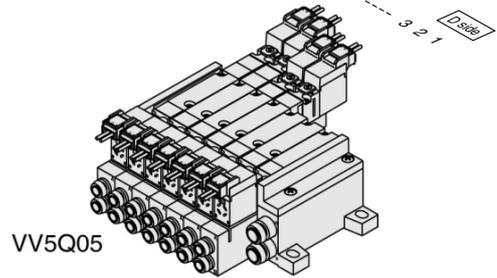

How to Order Manifold

VV5Q 12 - 08 C6 C - N

Series/Manifold		
05	VQ0000	Plug lead unit
12	VQ1000	

Stations	
01	1 station
:	:
16	16 stations

● Cylinder port

Symbol	Port size	VQ0000	VQ1000
C3	With One-touch fitting for ø3.2	●	●
C4	With One-touch fitting for ø4	●	●
C6	With One-touch fitting for ø6	—	●
M5	M5 thread	●	●
CM	With mixed size/with port plug	●	● (Note)

Note 1) Specify "Mixed size/with port plug" on the manifold specification sheet.
Note 2) For One-touch fittings in inch sizes, refer to "Option" on page 2-4-216.

● Option

Symbol	Option	VQ0000	VQ1000
Nil	None	●	—
B	With back pressure check valve	—	● (2)
D	DIN rail mounting style	●	● (3)
N	With name plate	●	●
S	Built-in silencer, direct exhaust	●	●


Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BNS

Note 2) Models with a suffix "-B" have the back pressure check valve at all manifold stations. If not all stations need this check valve, specify the stations where check valves are installed by using the manifold specification sheet.

Note 3) VQ1000 are all equipped with a DIN rail, so indicate suffix "-D".

● Wiring specifications: Negative COM (Option) for VQ1000

● The lead wires are connected to the valve as shown below. Connect each to the power supply side.

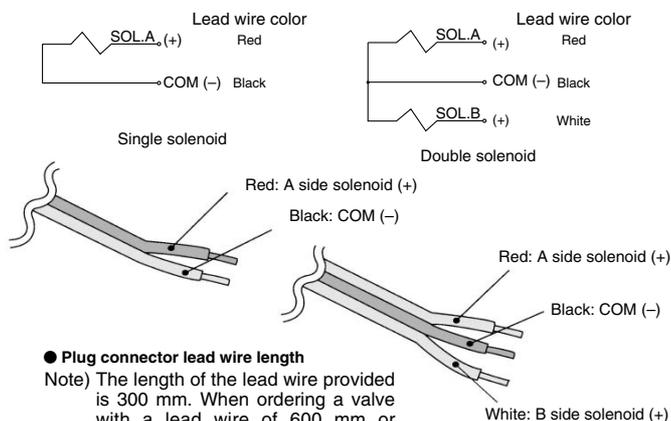

● Plug connector lead wire length

Note) The length of the lead wire provided is 300 mm. When ordering a valve with a lead wire of 600 mm or longer, be sure to indicate the model number of the valve without connector and connector assembly.

Example) Lead wire length 1000 mm
VQ1110N-5LO.....3 pcs.
AXT661-14AN-10.....3 pcs.

Connector Assembly Part No.

Lead wire length	Single	Double solenoid part no.
Socket (3 pcs.) AXT661-12A		
300 mm	AXT661-14AN	AXT661-13AN
600 mm	AXT661-14AN-6	AXT661-13AN-6
1000 mm	AXT661-14AN-10	AXT661-13AN-10
2000 mm	AXT661-14AN-20	AXT661-13AN-20
3000 mm	AXT661-14AN-30	AXT661-13AN-30

Note) When using the negative common specifications, use valves for negative common.

(Series VQ0□50 has no polarity, so the negative common is applicable to standard models.)

How to Order Valves

VQ 1 1 1 0 Y 5 L

Series

0	VQ0000
1	VQ1000

Type of actuation

1	2 position single
2	2 position double
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center (VQ1000 only)

Body type

5	VQ0000	Plug lead unit
1	VQ1000	Plug lead unit

Seal

0	Metal seal
1	Rubber seal

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual) Note

Note) Available only for VQ1000.

Electrical entry

	VQ0000	VQ1000
G	Grommet (Except AC)	●
L	L plug connector with lead wire	●
LO	L plug connector without connector	●
M	M plug connector with lead wire	●
MO	M plug terminal without connector	●

Coil voltage

	VQ0000	VQ1000
1	100 VAC (50/60 Hz)	●
2	200 VAC (50/60 Hz)	●
3	110 VAC (50/60 Hz)	●
4	220 VAC (50/60 Hz)	●
5	24 VDC	●
6	12 VDC	●

Function

Symbol	Specifications	DC	AC
Nil	Standard type	(1.0 W) ○	Note) ○
H	High pressure type	(1.5 W) ○	—
Y	Low wattage type	(0.5 W) ○	—

Note 1) For negative common specifications, refer to "Option" on page 2-4-216.

Note) For power consumption of AC type, refer to page 2-4-186.

How to Order Manifold Assembly


Please indicate manifold base type, corresponding valve, and option parts.

<Example>

Connector kit

VV5Q12-08C6C-D1 set—Manifold base no.
*VQ1110-53 sets—Valve part no. (Stations 1 to 3)
*VQ1210-54 sets—Valve part no. (Stations 4 to 7)
*VVQ1000-10A-1...1 set—Blanking plate part no. (stations 8)

Prefix the asterisk to the part nos. of the solenoid valve, etc. Write sequentially from the 1st station on the D side. When part nos. written collectively are complicated, specify by using the manifold specification sheet.

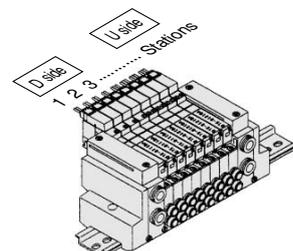

VQC

SQ

VQ0


VQ4

VQ5

VQZ

VQD

The broken lines indicate DIN rail mounting style [-D].

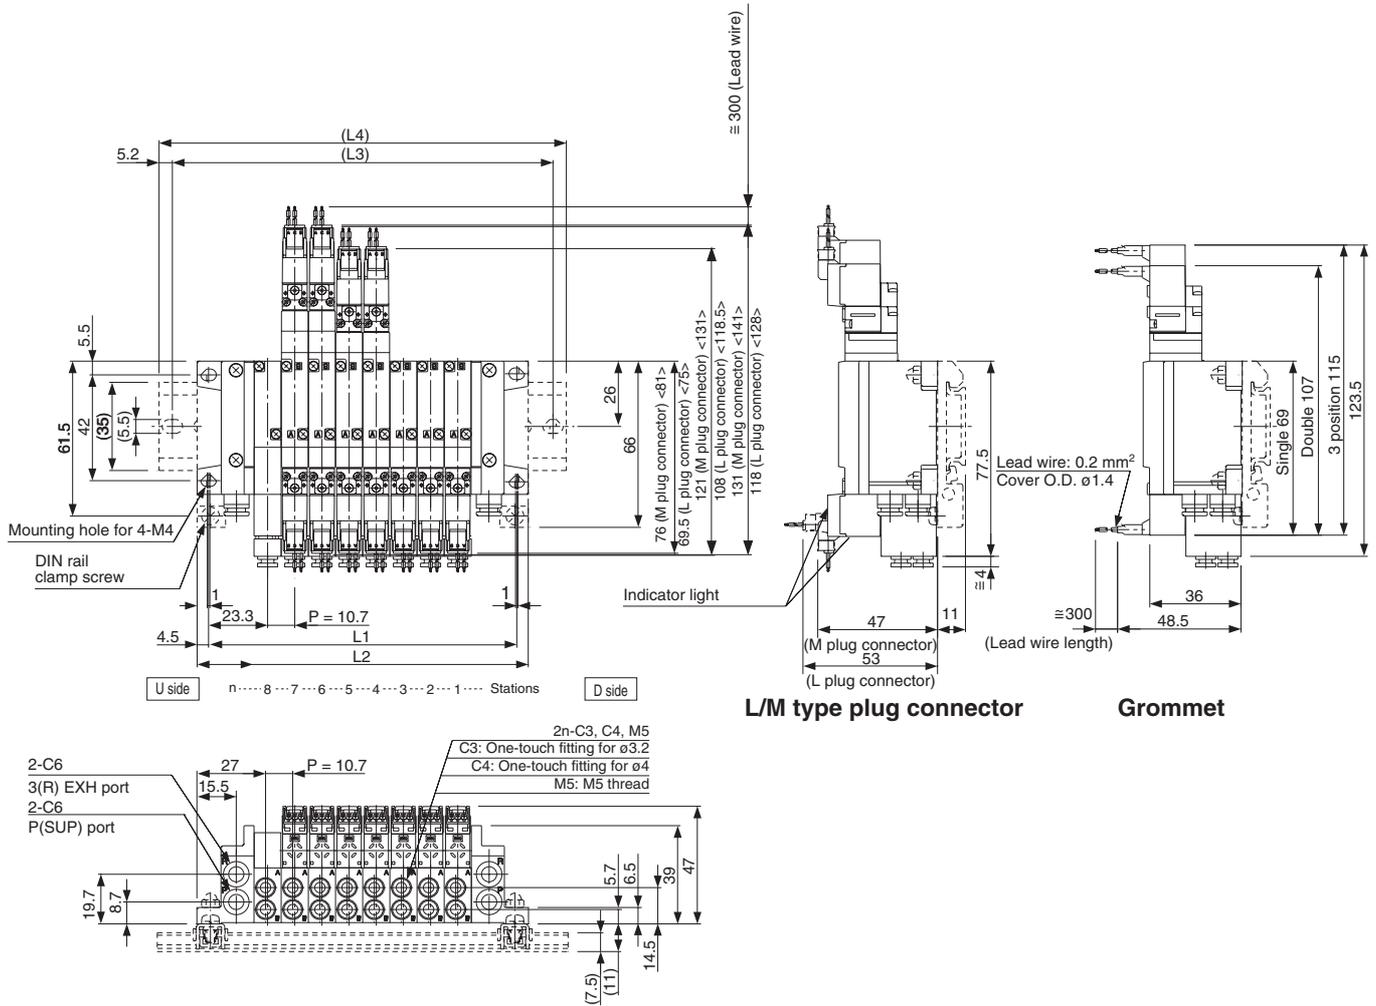


< >: AC

Dimensions


Formula L1 = 10.7n + 36, L2 = 10.7n + 45 n: Station (Maximum 16 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	46.7	57.4	68.1	78.8	89.5	100.2	110.9	121.6	132.3	143	153.7	164.4	175.1	185.8	196.5	207.2
L2	55.7	66.4	77.1	87.8	98.5	109.2	119.9	130.6	141.3	152	162.7	173.4	184.1	194.8	205.5	216.2
(L3)	87.5	87.5	100	112.5	125	137.5	150	162.5	162.5	175	187.5	200	212.5	225	225	237.5
(L4)	98	98	110.5	123	135.5	148	160.5	173	173	185.5	198	210.5	223	235.5	235.5	248

VQ1000

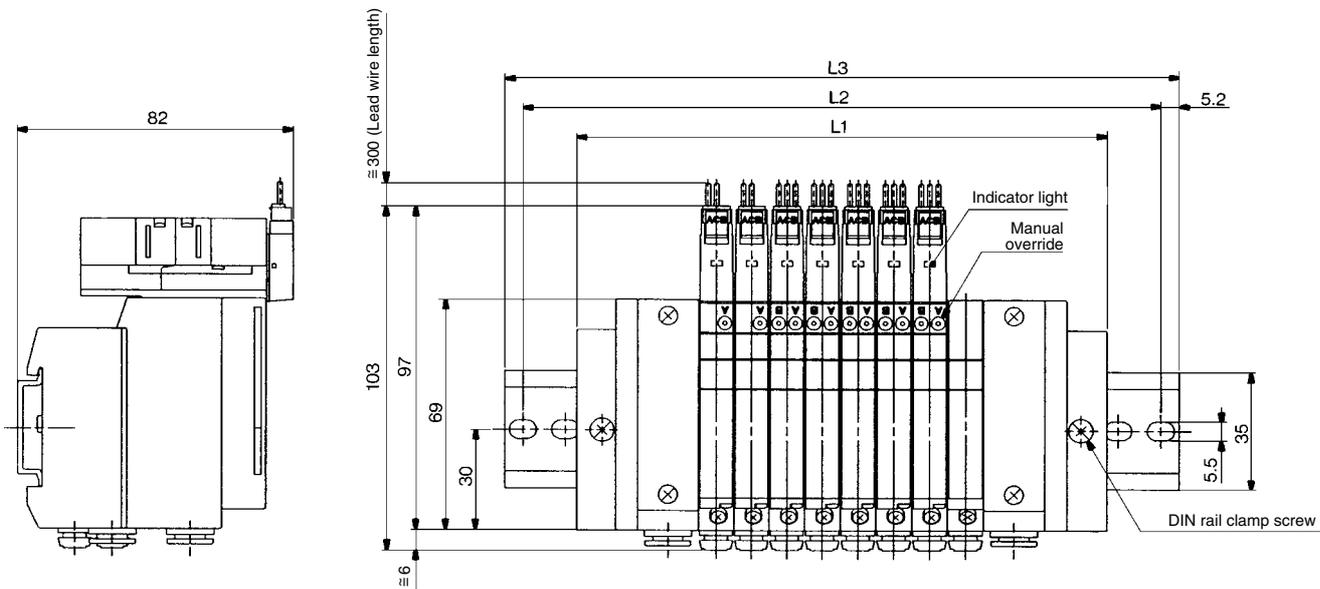

- VQC
- SQ
- VQ0**
- VQ4
- VQ5
- VQZ
- VQD

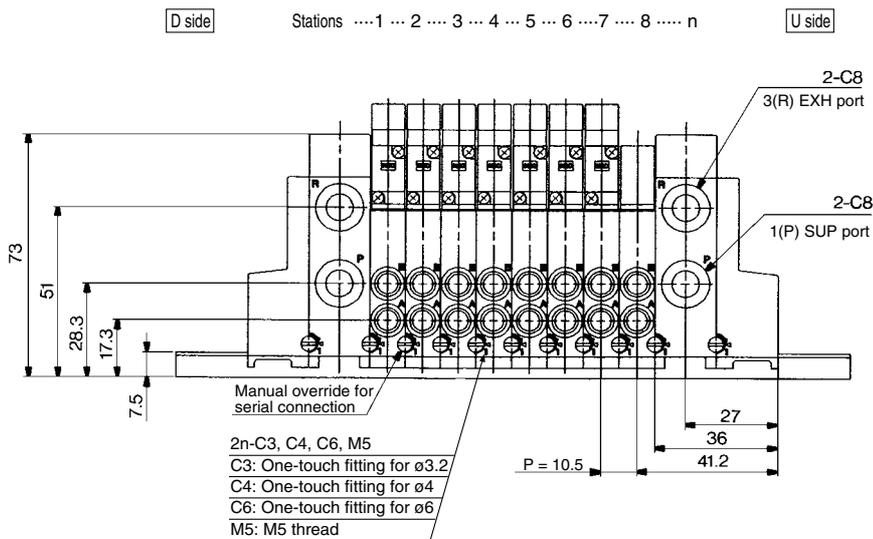


Dimensions

Formula $L1 = 10.5n + 72$ n: Station (Maximum 16 stations)

n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	82.5	93	103.5	114	124.5	135	145.5	156	166.5	177	187.5	198	208.5	219	229.5	240
L2	112.5	112.5	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5
L3	123	123	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273


S VQ0000/1000 Kit (Serial transmission unit)

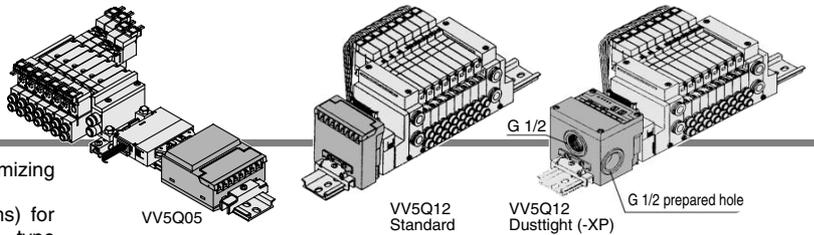

- The serial transmission system reduces wiring work, while minimizing wiring and saving space.
- The system comes in type SA (generic for small scale systems) for equipment with a small number of I/O points, or 32 points max., type SB (applicable to Mitsubishi Electric models) for controlling 512 I/O points max., type SC (applicable to OMRON models), type SD (applicable to SHARP models: 504 points max.), type SF (applicable to NKE models: 128 points max.), type SJ (applicable to SUNX models), type SK (applicable to Fuji Electric models), type SQ (applicable to OMRON's Compo Bus/D), and type SR (applicable to OMRON's Compo Bus/S).
- Max. 8 stations. (Specify a option model with 9 to 16 stations by using the manifold specification sheet.)

Manifold Specifications

Series	Port location	Porting specifications		Applicable stations
		1(P), 3(R)	4(A), 2(B)	
VQ0000	Side	C6	C3, C4, M5	Max.16 stations
VQ1000	Side	C8	C3, C4, C6, M5	Max.16 stations

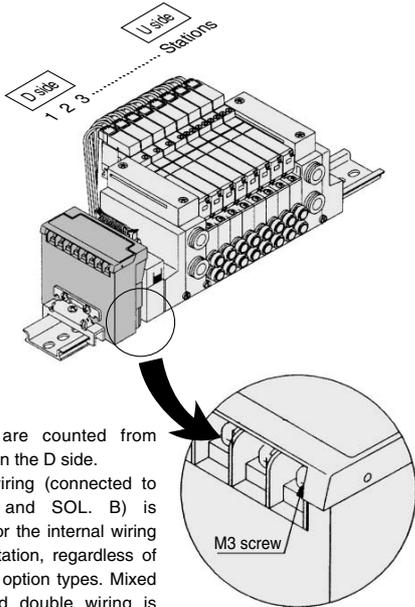

- Stations are counted from station 1 on the D side.
- Double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station, regardless of valve and option types. Mixed single and double wiring is available as an option. For details, refer to page 2-4-216.

	Type SA With general type SI unit (Series EX300)	Type SB Mitsubishi Electric Corporation MELSECNET/MINI-S3 Data Link System																		
Name of terminal block (LED)	<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>TRD</td> <td>Lighting during data reception</td> </tr> <tr> <td>RUN/ERR</td> <td>Blinking when received data is normal; Lighting when data reception</td> </tr> </tbody> </table>	LED	Description	TRD	Lighting during data reception	RUN/ERR	Blinking when received data is normal; Lighting when data reception	<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>POWER</td> <td>Lighting when power is turned ON</td> </tr> <tr> <td>RUN</td> <td>Lighting when data transmission with the master station is normal</td> </tr> <tr> <td>RD</td> <td>Lighting during data reception</td> </tr> <tr> <td>SD</td> <td>Lighting during data transmission</td> </tr> <tr> <td>ERR.</td> <td>Lighting when reception data error occurs Light turns off when the error is corrected</td> </tr> </tbody> </table>	LED	Description	POWER	Lighting when power is turned ON	RUN	Lighting when data transmission with the master station is normal	RD	Lighting during data reception	SD	Lighting during data transmission	ERR.	Lighting when reception data error occurs Light turns off when the error is corrected
	LED	Description																		
TRD	Lighting during data reception																			
RUN/ERR	Blinking when received data is normal; Lighting when data reception																			
LED	Description																			
POWER	Lighting when power is turned ON																			
RUN	Lighting when data transmission with the master station is normal																			
RD	Lighting during data reception																			
SD	Lighting during data transmission																			
ERR.	Lighting when reception data error occurs Light turns off when the error is corrected																			
Note	<ul style="list-style-type: none"> ● T unit Can be connected with PLC I/O card for serial transmission. EX300-TMB1.... For models of Mitsubishi Electric Corporation EX300-TTA1.... For models of OMRON Corporation EX300-TFU1.... For models of Fuji Electric Co., Ltd. EX300-T001... For general models * Up to 32 points per unit. * No. of output points, 16 point 	<ul style="list-style-type: none"> ● Master station: PLC made by Mitsubishi Electric Corporation Series MELSEC-A AJ71PT32-S3, AJ71T32-S3 A1SJ71PT32-S3 * Max. 64 stations, connected to remote I/O stations (Max. 512 points). ● No. of output points, 16 points. No. of sta. occupied, 2 stations 																		

* For details on specifications and handling, refer to the separate technical instruction manual.

Item	Specifications
External power supply	24 VDC, +10%, -5%
Current consumption (Internal unit)	SA, SB, SD, SE, SF, SG, SJ, SK, SQ, SR, SH, SV: 0.1A SC: 0.3A

How to Order Manifold

VV5Q 12-08 C6 S A-D -XP Dust-protected type (-XP) (VQ1000 only)
Suffix "-XP" for the dust-protected type SI unit. (Except SE and SQ.)

Series/Manifold

05	VQ0000	Plug lead unit
12	VQ1000	Plug lead unit

Stations

01	1 station
16	16 stations (Note)

Note) For details, refer to page 2-4-216.

Cylinder port

Symbol	Port size	VQ0000	VQ1000
C3	With One-touch fittings for ø3.2	●	●
C4	With One-touch fitting for ø4	●	●
C6	With One-touch fitting for ø6	—	●
M5	M5 thread	●	●
CM	With mixed size/with port plug	●	●

Note 1) Specify "Mixed size/with port plug" on the manifold specification sheet.
Note 2) For inch-size One-touch fittings, refer to "Option" on page 2-4-216.

Model


Symbol	Option	VQ0000	VQ1000	Note
B	With back pressure check valve	—	●	(2)
D	DIN rail mounting	●	●	(3)
K	Special wiring specifications (Not double wiring)	●	●	(4)
N	With name plate	●	●	
S	Built-in silencer, direct exhaust	●	●	

Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -BNS
Note 2) Models with a suffix "-B" have the back pressure check valve at all manifold stations. If not all stations need this check valve, specify the stations where check valves are installed by using the manifold specification sheet.
Note 3) S kit of VQ0000 and all of VQ1000 are equipped with a DIN rail, so indicate suffix "-D".
Note 4) Specify the wiring specifications on the manifold specification sheet.

Note 1) The general type requires a transmission unit on CPU side.
Note 2) Usable only for VQ1000


● SI unit output and coil numbering

<Wiring example 1>

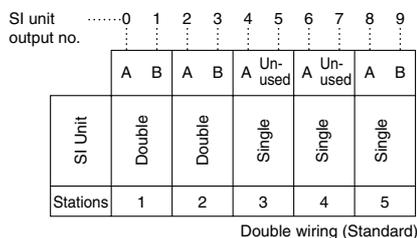

<Wiring example 2>


Mixed wiring is available as an option. Use the manifold specification sheet to specify.

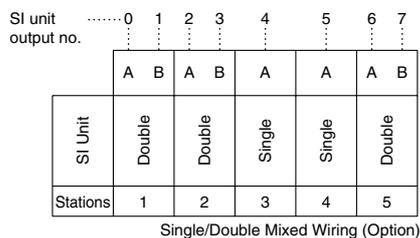

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

	Type SC OMRON Corporation SYSBUS Wire System	Type SD SHARP Corporation Satellite I/O Link System															
Name of terminal block (LED)																	
	<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>RUN</td> <td>Lights when transmission is normal and PLC is in operation mode</td> </tr> <tr> <td>T/R ERR</td> <td>Blinks during data transmission/reception ON when transmission is abnormal</td> </tr> </tbody> </table>	LED	Description	RUN	Lights when transmission is normal and PLC is in operation mode	T/R ERR	Blinks during data transmission/reception ON when transmission is abnormal	<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>POWER</td> <td>ON when power supply is ON</td> </tr> <tr> <td>RUN</td> <td>Lights when power is ON and slave stations are operating normally</td> </tr> <tr> <td>ERROR</td> <td>Lights when slave station switch setting is abnormal, communication is abnormal, PLC stopped and defective slave unit</td> </tr> <tr> <td>R.SET HOLD</td> <td>ON for master unit control input</td> </tr> </tbody> </table>	LED	Description	POWER	ON when power supply is ON	RUN	Lights when power is ON and slave stations are operating normally	ERROR	Lights when slave station switch setting is abnormal, communication is abnormal, PLC stopped and defective slave unit	R.SET HOLD
LED	Description																
RUN	Lights when transmission is normal and PLC is in operation mode																
T/R ERR	Blinks during data transmission/reception ON when transmission is abnormal																
LED	Description																
POWER	ON when power supply is ON																
RUN	Lights when power is ON and slave stations are operating normally																
ERROR	Lights when slave station switch setting is abnormal, communication is abnormal, PLC stopped and defective slave unit																
R.SET HOLD	ON for master unit control input																
Note	<ul style="list-style-type: none"> Master station unit: OMRON PLC SYSMAC C(CV) series Types C500-RM201 and C200H-RM201 * 32 units max., transmission terminal connection (512 points max.) No. of output points, 16 points 	<ul style="list-style-type: none"> Master station unit: SHARP's PLC New Satellite Series W ZW-31LM New Satellite Series JW JW-23LM, JW-31LM * Max. 31 units, I/O slave stations connected (504 points max.) No. of output points, 16 points 															

How to Order Valves

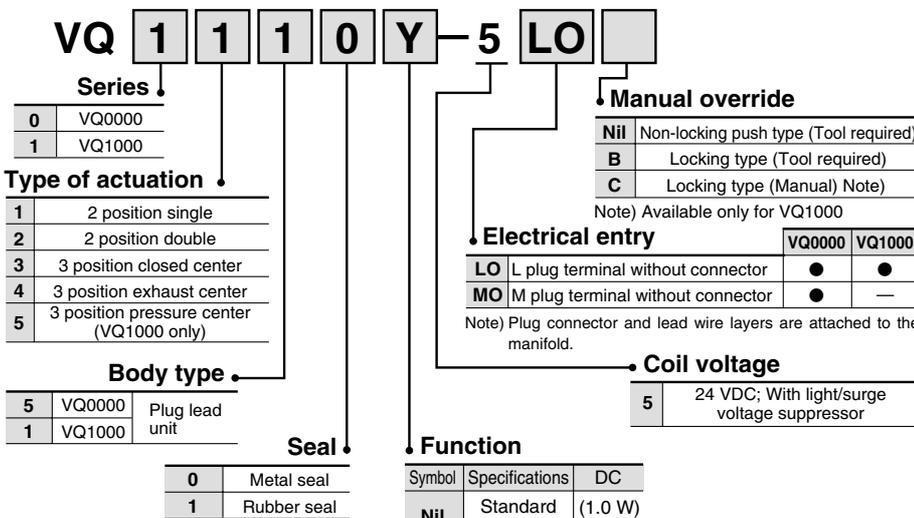

Note) Connector assembly will be required when the S kits add a valve. For part nos., refer to "Option" on page 2-4-216.


How to Order Manifold Assembly

Please indicate manifold base type, corresponding valve, and option parts.

<Example>


Serial transmission kit
 VV5Q12-08C6SA-D 1 set-Manifold base no.
 *VQ1110-5LO 4 sets-Valve part no. (Stations 1 to 4)
 *VQ1210-5LO 3 sets-Valve part no. (Stations 5 to 8)

Prefix the asterisk to the part nos. of the solenoid valve, etc. Write sequentially from the 1st station on the D side. When part nos. written collectively are complicated, specify by using the manifold specification sheet.

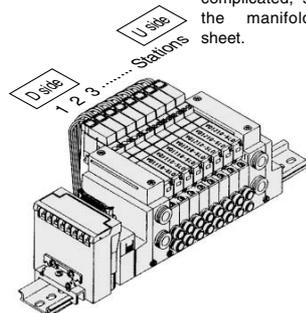

S VQ0000/1000 Kit (Serial transmission unit)

VQ0000

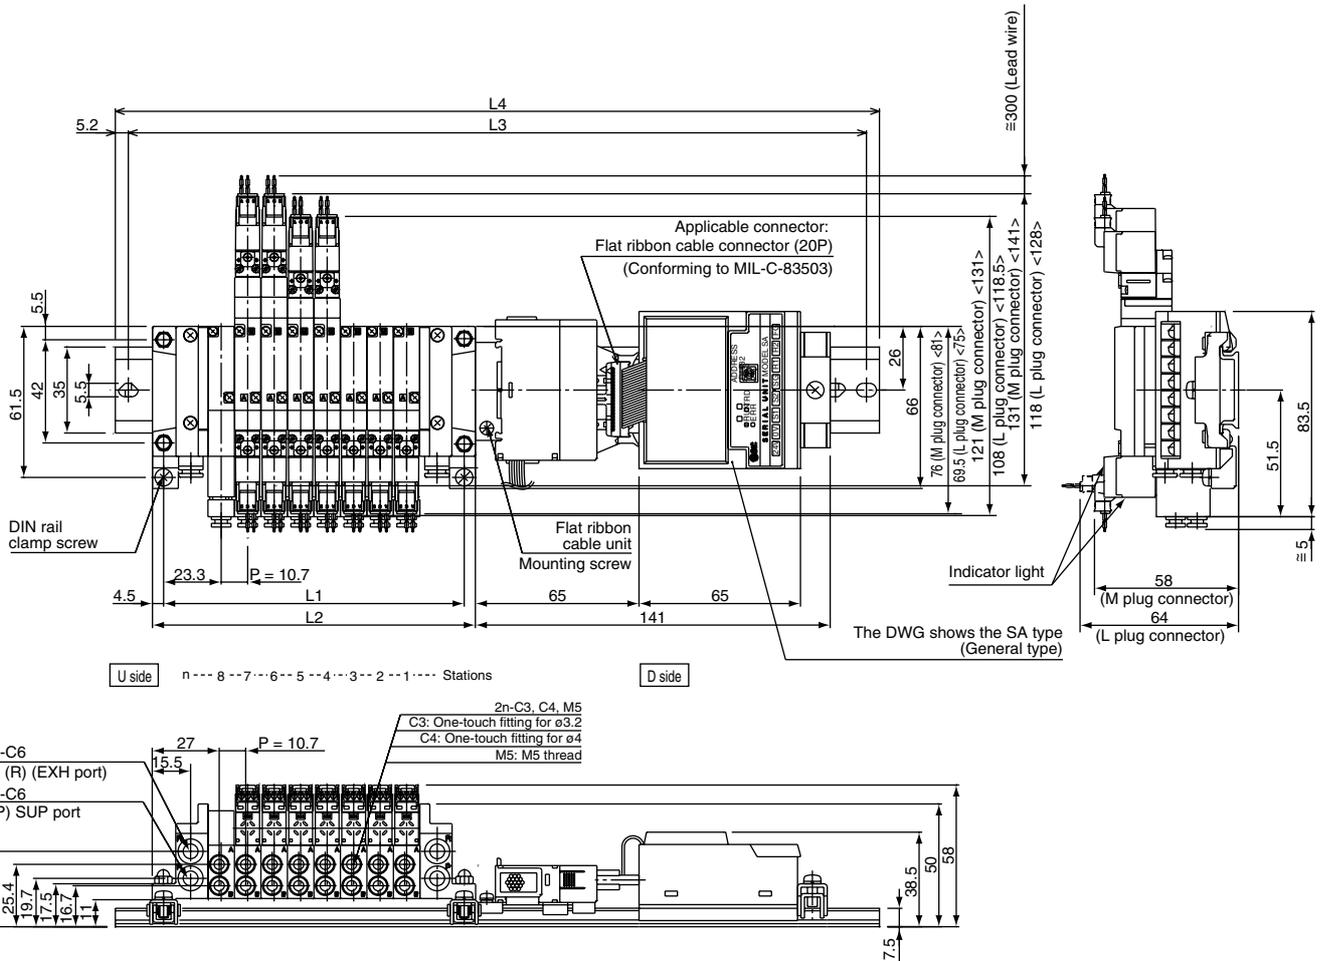


Dimensions



Formula $L1 = 10.7n + 36$, $L2 = 10.7n + 45$ n: Station (Maximum 16 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	46.7	57.4	68.1	78.8	89.5	100.2	110.9	121.6	132.3	143	153.7	164.4	175.1	185.8	196.5	207.2
L2	55.7	66.4	77.1	87.8	98.5	109.2	119.9	130.6	141.3	152	162.7	173.4	184.1	194.8	205.5	216.2
L3	225	237.5	250	250	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5	375	387.5
L4	235.5	248	260.5	260.5	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373	385.5	398

VQ1000

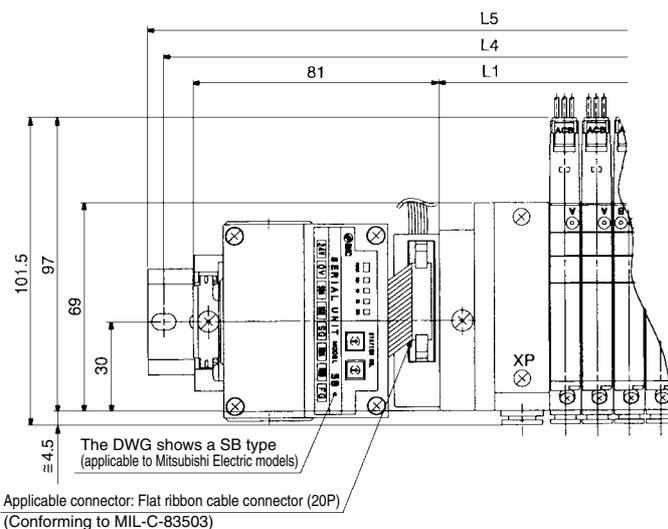

Dusttight SI unit

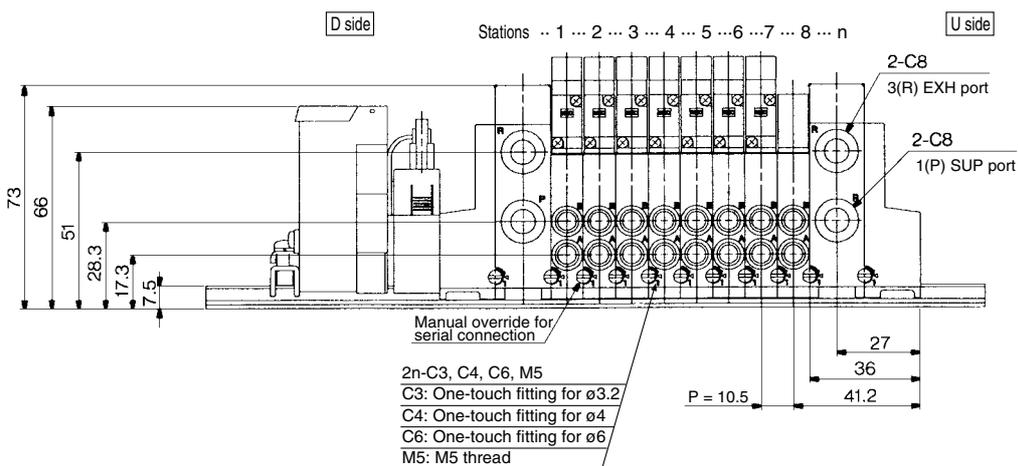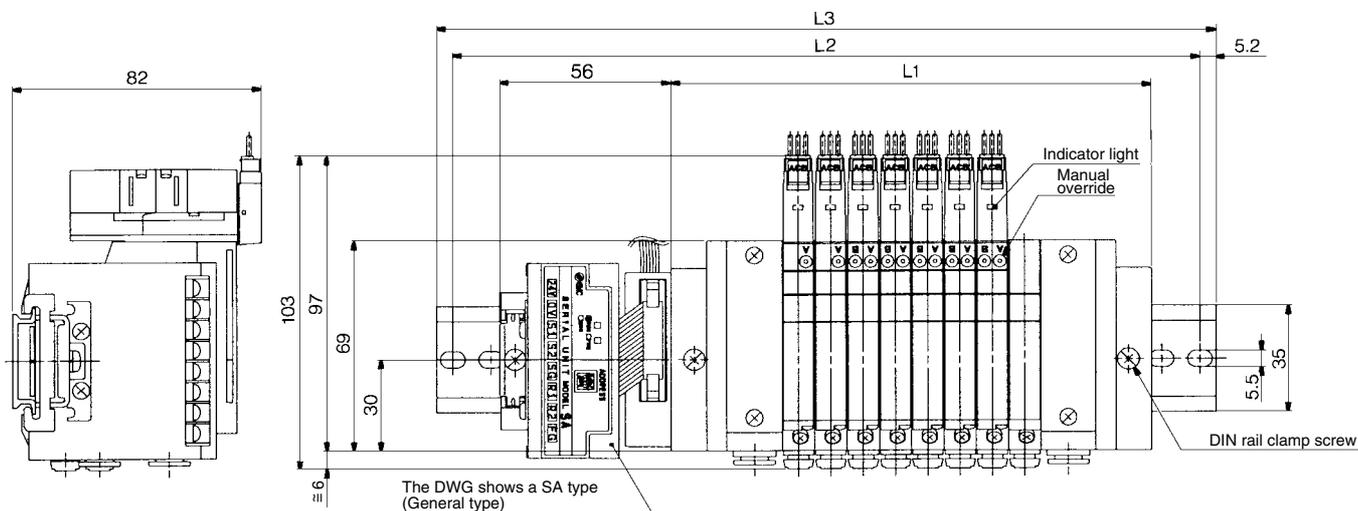

Dimensions

Dust-protected type SI unit: L4 = L3 + 25, L5 = L4 + 25
 Formula L1 = 10.5n + 72 n: Station (Maximum 16 stations)

n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	82.5	93	103.5	114	124.5	135	145.5	156	166.5	177	187.5	198	208.5	219	229.5	240
L2	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	275	275	287.5	300	312.5	325
L3	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5


* Manifolds with SI unit for Matsushita Electric Works' MEWNET FP and Rockwell Automation's model are the same with L4 and L5 dimensions of dustproof SI unit.

- VQC
- SQ
- VQ0**
- VQ4
- VQ5
- VQZ
- VQD



Series VQ0000

Manifold Option Parts for VQ0000

Blanking plate assembly VVQ0000-10A-5



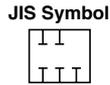


It is used by attaching on the manifold block for being prepared for removing a valve for maintenance reasons or planning to mount a spare valve, etc.

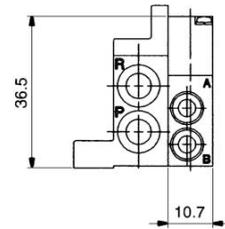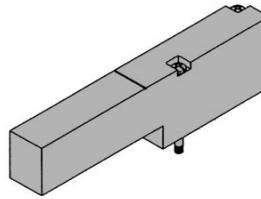




Individual SUP spacer VVQ0000-P-5-C4

When the same manifold is to be used for different pressures, this spacer is mounted under the valve to equip each valve with an individual supply port.

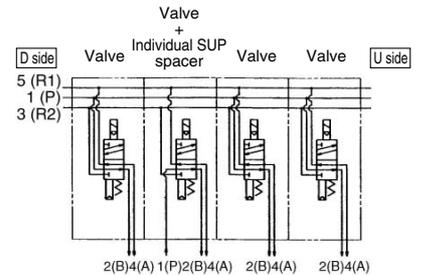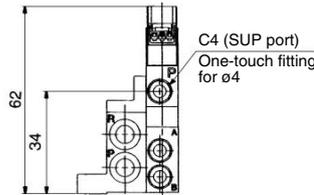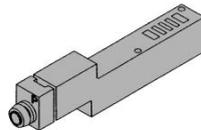

Individual EXH spacer VVQ0000-R-5-C4

When a valve exhaust affects other stations due to the circuit configuration, this spacer is mounted under the valve to equip each valve with an individual valve exhaust.

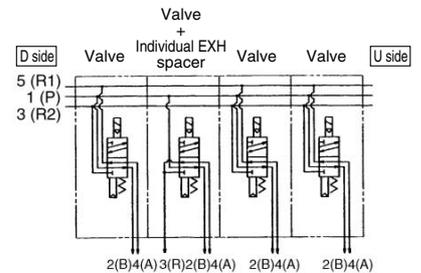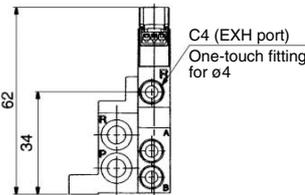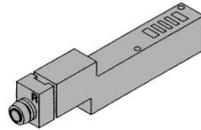

SUP/EXH block plate VVQ0000-16A-5

P (SUP)
R (EXH)
PR (SUP/EXH)

1(P) (For SUP)

When different pressures, high and low, are supplied to one manifold, block a plate is inserted between the stations under different pressures.



3(R) (For EXH)

When a valve exhaust affects other stations due to the circuit configuration, this plate is used between the stations where exhaust should be separated.

1(P), 3(R) (For SUP/EXH)

When blocking SUP and EXH simultaneously, SUP/EXH block plate (PR) is used.


* Specify the number of stations on the manifold specification sheet.

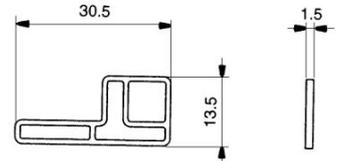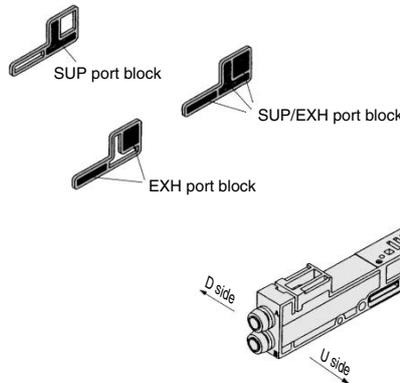


<Blocking indication label>

When blocking the SUP, EXH passage with a SUP, EXH block plate, indication label for confirmation of the blocking position from outside is attached. (One label for each)


* When ordering a block plate incorporated with the manifold no., a block indication label is attached to the manifold.

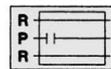

SUP passage blocked
(VVQ0000-16A-5-P)

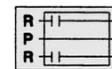

EXH passage blocked
(VVQ0000-16A-5-R)

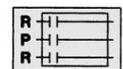


SUP/EXH passage blocked
(VVQ0000-16A-5-PR)


Name plate [-N*]

VVQ0000-N5-Station (1 to Max. stations)

It is a transparent resin plate for placing a label that indicates solenoid valve function, etc. Insert it into the groove on the side of the end plate and bend it as shown in the figure.

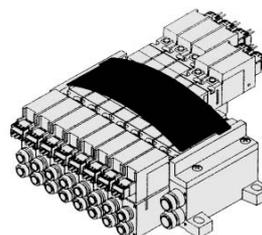

* When ordering assemblies incorporated with a manifold, add suffix "N" to the manifold no.

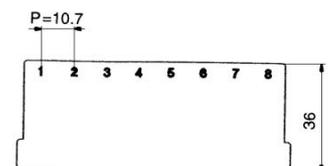


Blanking plug (For One-touch fittings)

KQ2P-²³₀₄⁰⁶

It is inserted into an unused cylinder port and SUP/EXH ports.

Purchasing order is available in units of 10 pieces.

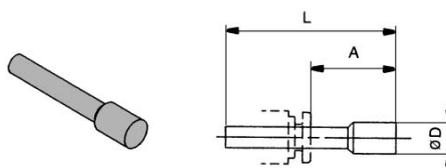

Dimensions


Applicable fitting size ϕ d	Model	A	L	D
3.2	KQ2P-23	16	31.5	3.2
4	KQP-04	16	32	6
6	KQP-06	18	35	8

DIN rail mounting bracket [-D]

VVQ0000-57A-5 (VQ0000)


It is used for mounting a VV5Q05 type manifold on a DIN rail. The DIN rail mounting bracket is fixed to the manifold end plate. (The specification is the same as that for the option "-D".)

1 set of DIN rail mounting bracket is used for 1 set of manifold (2 DIN rail mounting brackets).

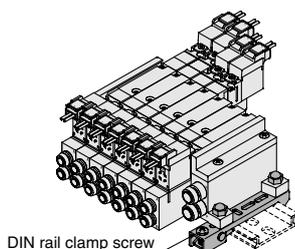

DIN rail clamp screw

* When ordering assemblies incorporated with a manifold, add suffix "-D" to the manifold no.

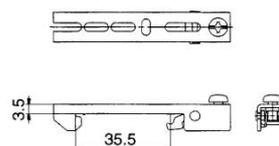


Built-in silencer, Direct exhaust [-S]

This is an exhaust port on the manifold end plate. The built-in silencer exhibits an excellent noise suppression effect. (Silencing effect: 20 dB)



Note) A large quantity of drainage generated in the air source results in exhaust of air together with drainage.

● For maintenance, refer to page 2-4-214.

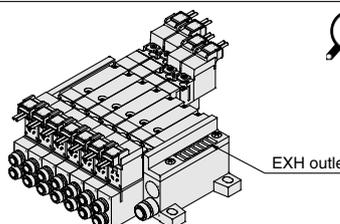


EXH outlet



* When ordering assemblies incorporated with a manifold, add suffix "-S" to the manifold no.

Silencer (For EXH port)

This is inserted into the centralized type EXH port (One-touch fitting).

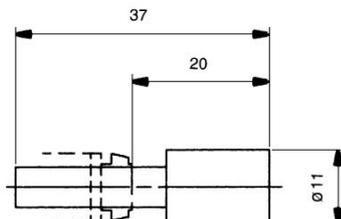

Dimensions

Series	Applicable fitting size ϕ d	Model	A	L	D	Effective area (mm ²)	Noise reduction (dB)
VQ0000	6	AN103-X233	20	37	11	7	25

VQC

SQ

VQ0

VQ4

VQ5


VQZ

VQD



Series VQ1000

Manifold Option Parts for VQ1000

Blanking plate assembly VVQ1000-10A-1

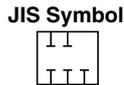

It is used by attaching on the manifold block for being prepared for removing a valve for maintenance reasons or planning to mount a spare valve, etc.

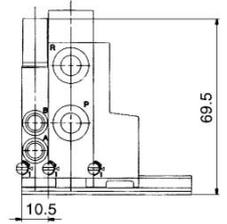
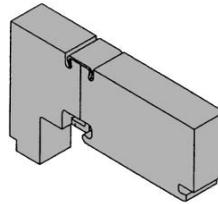


Individual SUP spacer VVQ1000-P-2-C6

When the same manifold is to be used for different pressures, individual SUP spacers are used as SUP ports for different pressures. (One station space is occupied.)

Block both sides of the station, for which the supply pressure from the individual SUP spacer is used, with SUP block plates. (Refer to the application ex.)

* Specify the spacer mounting position and SUP block plate position on the manifold specification sheet. The block plates are used in two places for one set. (Two SUP block plates for blocking SUP station are attached to the individual SUP spacer.)

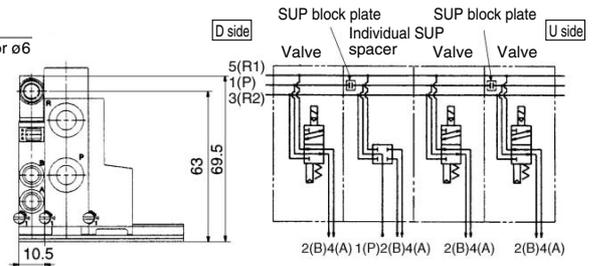
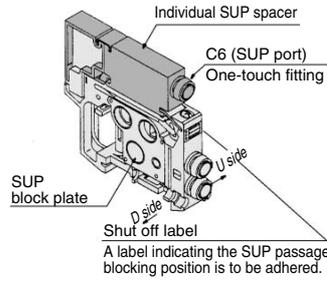


Individual EXH spacer VVQ1000-R-2-C6

When valve exhaust affects other stations due to the circuit configuration, this spacer is used for individual valve exhaust. (One station space is occupied.)

Block both sides of the individual valve EXH station. (See example.)

* Specify the mounting position, as well as EXH block base or EXH block plate position on the manifold specification sheet. The block plates are used in two places for one set.

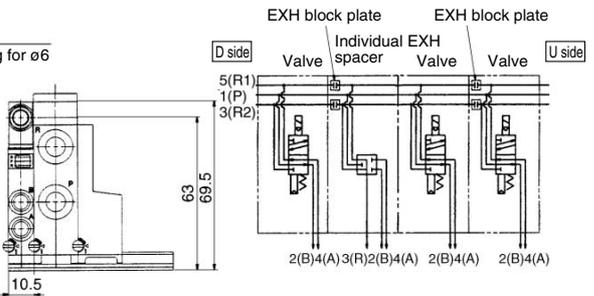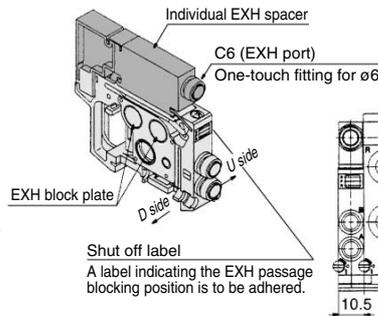

SUP/EXH block plate VVQ1000-16A-2


When different pressures, high and low, are supplied to one manifold, a SUP block plate is inserted between the stations under different pressures.

When a valve exhaust affects other stations due to the circuit configuration, this plate is also used between the stations where exhaust should be separated. It is also used for individual exhaust by combining an EXH block plate with an individual EXH spacer.

(2 EXH plates are necessary for 1 station.)

Note) The SUP/EXH block plate is common.


* Specify the number of stations on the manifold specification sheet.

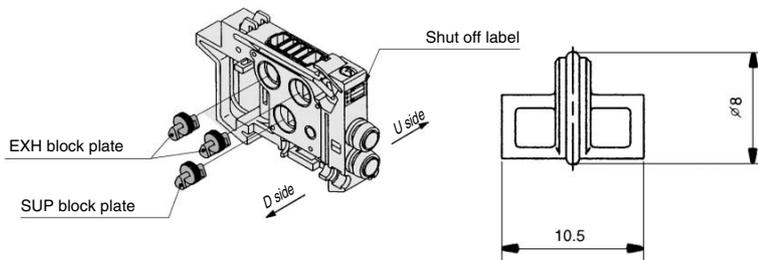


<Blocking indication label>

When using block plates for SUP/EXH passage, the indication label for confirmation of the blocking position from outside is attached. (One label for each)


* When ordering a block plate incorporated with the manifold no., a block indication label is attached to the manifold.

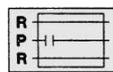

SUP passage blocked

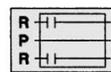

EXH passage blocked



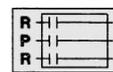


SUP/EXH passage blocked

Back pressure check valve assembly [-B] VVQ1000-18A

It prevents cylinder malfunction caused by other valve exhaust. Insert it into R (EXH) port on the manifold side of a valve which is affected. It is effective when a single acting cylinder is used or an exhaust center type solenoid valve is used.

Note) When a check valve for back pressure prevention is desired to be installed only in certain manifold stations, write clearly the part no. and specify the station numbers by using the manifold specification sheet.

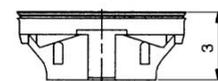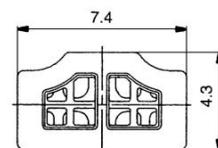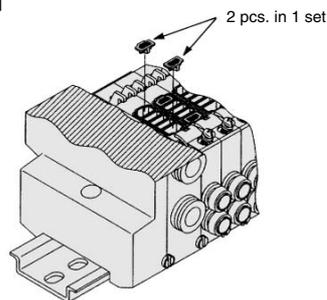

* When ordering assemblies incorporated with a manifold, add suffix "-B" to the manifold no.



<Precautions>

1. Back pressure check valve assembly is assembled with a check valve structure. However, as slight air leakage is allowed for the back pressure, take note the exhaust air will not be throttled at the exhaust port.
2. When a back pressure check valve is mounted, the effective orifice of the valve will decrease by about 20%.

Name plate [-N*]

VVQ1000-N2-Station (1 to Max. stations)


It is a transparent resin plate for placing a label that indicates solenoid valve function, etc. Insert it into the groove on the side of the end plate and bend it as shown in the figure.

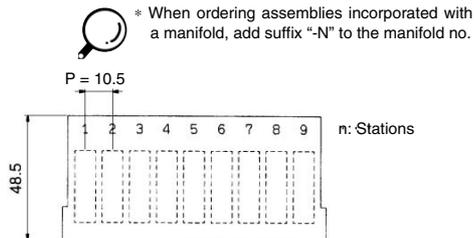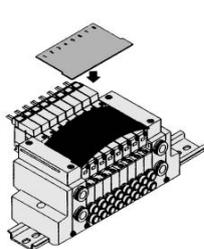

Blanking plug (For One-touch fittings)

KQ2P-²³₀₄₀₆₀₈

It is inserted into an unused cylinder port and SUP/EXH ports. Purchasing order is available in units of 10 pieces.

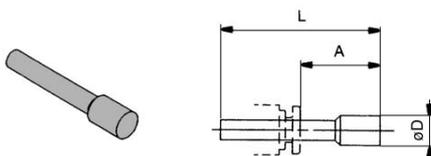



Dimensions

Applicable fitting size øD	Model	A	L	D
3.2	KQ2P-23	16	31.5	3.2
4	KQP-04	16	32	6
6	KQP-06	18	35	8
8	KQP-08	20.5	39	10

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

Port plug VVQ0000-58A

The plug is used to block the cylinder port when using a 4 port valve as a 3 port valve.

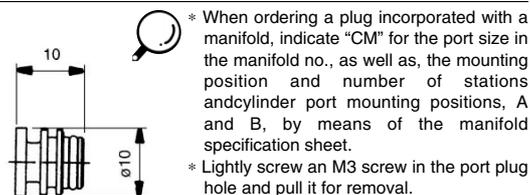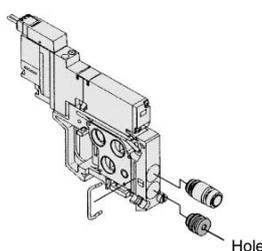

Elbow fittings assembly



VVQ1000-F-L^{CC3}_{CC4}_{MS}

It is used for piping that extends upward or downward from the manifold.

When not mounting it to all manifold stations, clearly write the elbow type fitting assembly no. and specify the station's qty and position by manifold specifications.

* When mounting elbow fittings assembly on the edge of manifold station and a silencer on EXH port, select a silencer, AN203-KM8.

Silencer (AN200-KM8) is interfered with fittings.

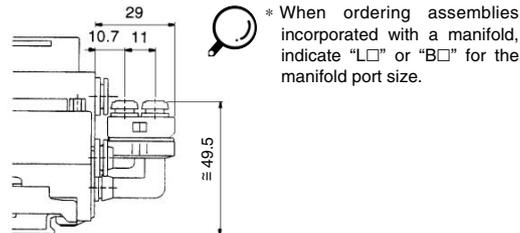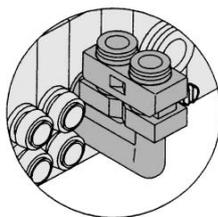

Built-in silencer, Direct exhaust [-S]



This is an exhaust port on the manifold end plate.

The built-in silencer exhibits an excellent noise suppression effect. (Silencing effect: 30 dB)

(Note) A large quantity of drainage generated in the air source results in exhaust of air together with drainage.



• For maintenance, refer to page 2-4-214.

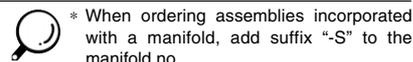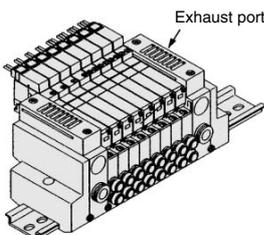



2 stations matching fitting assembly

VVQ1000-52A-C8

For driving a cylinder with a large bore, valves for two stations are operated to double the flow rate. This assembly for the cylinder port is used in that case. The assembly is equipped with One-touch fittings for a ø8 bore.

* The bore for the manifold no. is "CM".

Clearly indicate the 2 station matching fitting assembly no., and specify the number of stations and positions on the manifold specification sheet.

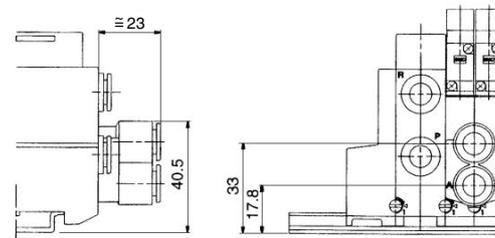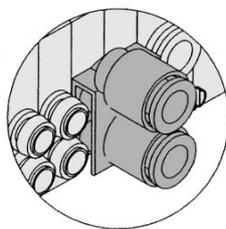


Silencer (For EXH port)

This is inserted into the centralized type EXH port (One-touch fitting).

* When mounting elbow fittings assembly (VVQ1000-F-L□) on the edge of manifold station, select a silencer, AN203-KM8.

Silencer (AN200-KM8) is interfered with fittings.

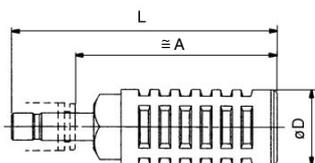

Dimensions

Series	Applicable fitting size øD	Model	A	L	D	Effective area (mm ²)	Noise reduction (dB)
VQ1000	8	AN200-KM8	59	78	22	20	30
		AN203-KM8	32	51	16	14	25*

Manifold Option Parts for VQ0000/VQ1000

Double check block (Separated type)


VQ1000-FPG-□□

It is used on the outlet side piping to keep the cylinder in the intermediate position for a long time. Combining the double check block with a built-in pilot type double check valve and a 3 position exhaust center solenoid valve will enable the cylinder to stop in the middle or maintain its position for a long time.

The combination with a 2 position single/double solenoid valve will permit this block to be used for preventing the dropping at the cylinder stroke end when the SUP residual pressure is released.

Specifications


Max. operating pressure	0.8 MPa
Min. operating pressure	0.15 MPa
Ambient and fluid temperature	-5 to 50°C
Flow characteristics: C	0.60 dm ³ /(s·bar)
Max. operating frequency	180 CPM

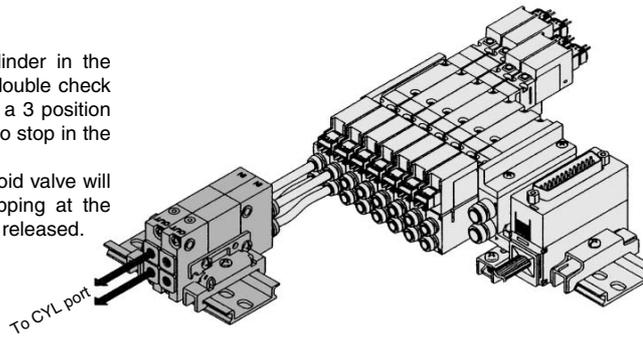

VVQ1000-FPG-02 1 set
*VQ1000-FPG-C6M5-D 2 pcs.


Note) Based on JIS B 8375-1981
(Supply pressure: 0.5 MPa)

<Check valve operation principle>

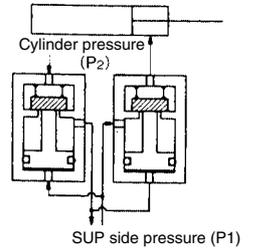


Dimensions

Single unit

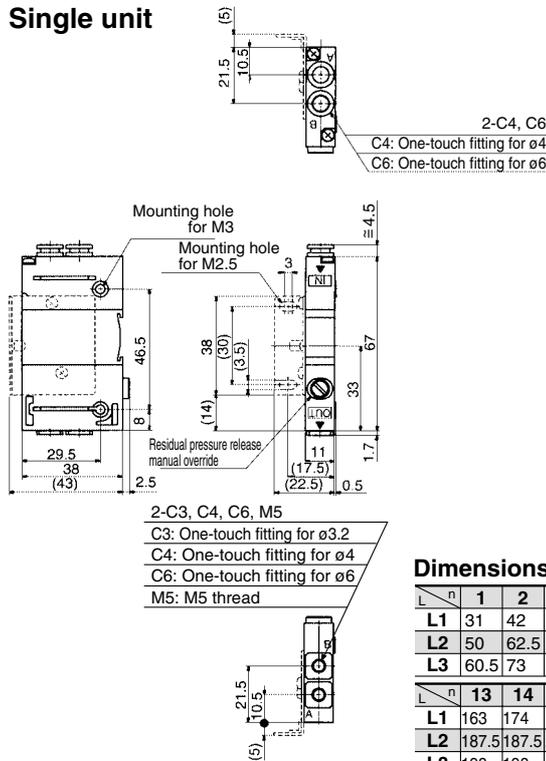

Manifold

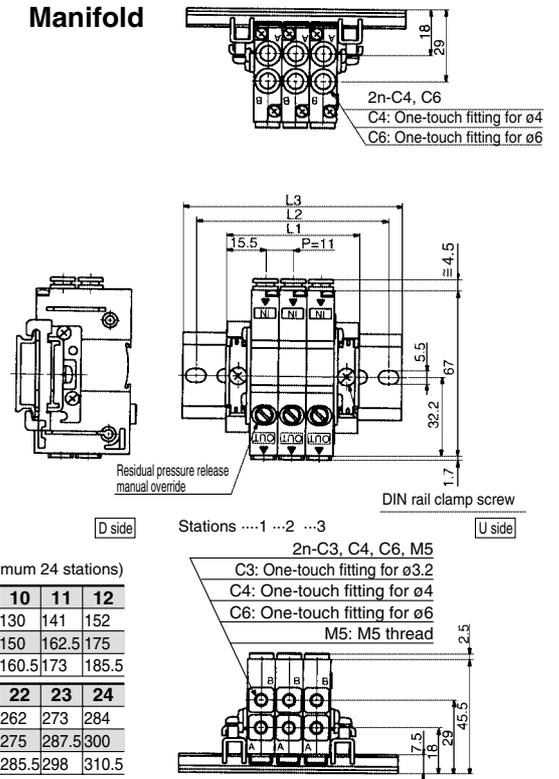

Dimensions Formula L1=11n+20 n: Station (Maximum 24 stations)

L	n	1	2	3	4	5	6	7	8	9	10	11	12
L1		31	42	53	64	75	86	97	108	119	130	141	152
L2		50	62.5	75	87.5	100	112.5	125	137.5	150	162.5	175	
L3		60.5	73	85.5	98	110.5	123	135.5	148	160.5	173	185.5	
L	n	13	14	15	16	17	18	19	20	21	22	23	24
L1		163	174	185	196	207	218	229	240	251	262	273	284
L2		187.5	187.5	200	212.5	225	237.5	250	262.5	275	287.5	300	
L3		198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5

How to Order

Double check block

VQ1000-FPG-**C4** **M5** **F**

IN side port size

C4	One-touch fitting for ø4
C6	One-touch fitting for ø6

OUT side port size

M5	M5 thread
C3	One-touch fitting for ø3.2
C4	One-touch fitting for ø4
C6	One-touch fitting for ø6

Option

Nil	None
F	With bracket
D	DIN rail mounting style (For manifold)
N	Name plate

Note) When two or more symbols are specified, indicate them alphabetically.
Example) -DN

Manifold

VVQ1000-FPG-**06**

Stations

01	1 station
⋮	⋮
16	16 stations

<Example>


VVQ1000-FPG-06 ... 6 types of manifold
*VQ1000-FPG-C4M5-D, 3 sets } Doublecheck block
*VQ1000-FPG-C6M5-D, 3 sets }

Bracket Assembly

Part no.	Tightening torque
VQ1000-FPG-FB	0.22 to 0.25 N·m

Caution

- Air leakage from the pipe between the valve and cylinder or from the fittings will prevent the cylinder from stopping for a long time. Check the leakage using neutral household detergent, such as dish washing soap. Also check the cylinder's tube gasket, piston packing and rod packing for air leakage.
- Since One-touch fittings allow slight air leakage, screw piping (with M5 thread) is recommended when stopping the cylinder in the middle for a long time.
- Combining double check block with 3 position closed center or pressure center solenoid valve will not work.
- M5 fitting assembly is attached, not incorporated into the double check block. After screwing in the M5 fittings, mount the assembly on the double check block. (Tightening torque: 0.8 to 1.2 N·m)
- If the exhaust of the double check block is throttled too much, the cylinder may not operate properly and may not stop intermediately.
- Set the cylinder load so that the cylinder pressure will be within two times that of the supply pressure.

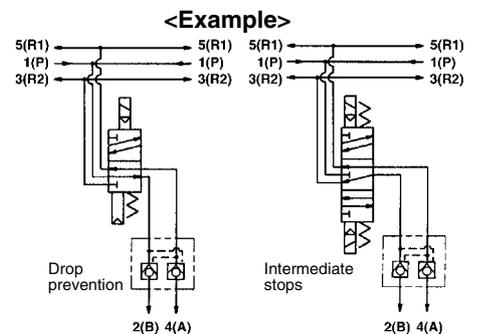

⚠ Precautions 1


Be sure to read before handling. For Safety Instructions and Solenoid Valve Precautions, refer to page 2-9-2.

Light/Surge Voltage Suppressor

⚠ Caution


In the case of VQ1000, the standard model is equipped with an indicator light and surge voltage suppressor. The lighting positions are concentrated on one side for both single solenoid type and double solenoid type.

For the double solenoid type, A side and B side energization are indicated by two colors which match the colors of the manual overrides.

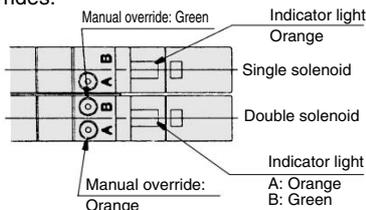

* In the case of VQ0000, solenoid and manual override on both sides.


DC circuit diagram VQ0000

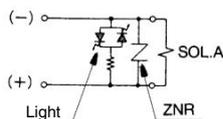


* In the case of VQ0000, solenoid and manual override on both sides.

Note) A side energization:
A light (orange) illuminates.
With wrong wiring preventing ability (stop diode)
B side energization:
B light (green) illuminates.
Equipped with a surge absorption (surge absorption diode) mechanism.

VQ1000 (DC)/Single solenoid

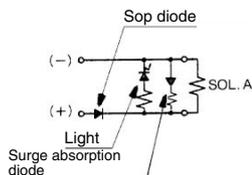

VQ1000/Double solenoid

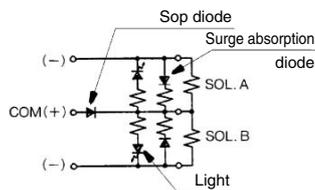

Manual Override



⚠ Warning

Without an electric signal for the solenoid valve the manual override is used for switching the main valve.

Push type is standard. (Tool required)

Option: Locking type (Tool required/Manual)

■ Push type (Tool required)

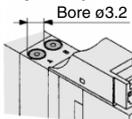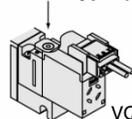



Push down on the manual override button with a small screwdriver until it stops. Release the screwdriver and the manual override will return.

■ Locking type (Tool required) <Option>


If the manual override is turned by 180° clockwise and the ► mark is adjusted to 1, it will be locked in the ON state.

If the manual override is turned by 180° counterclockwise and the ► mark is adjusted to 0, locking will be released and the manual override will return.

Push down completely on the manual override button with a small screwdriver. While down, turn clockwise 90° to lock it. Turn it counterclockwise to release it.

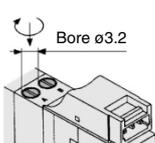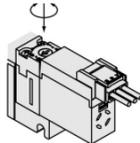

■ Locking type (Manual) <Option>

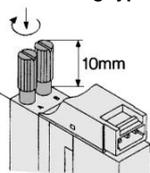

VQ1000


Push down on the manual override button with a small screwdriver or with your fingers until it stops. Turn clockwise by 90° to lock it. Turn it counterclockwise to release it.

⚠ Caution

Do not apply excessive torque when turning the locking type manual override. (0.1 N·m or less)

How to Mount/Remove Solenoid Valve

⚠ Caution

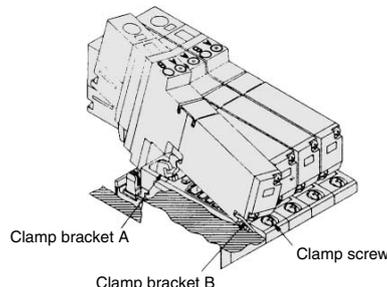

How to Remove

1. Loosen the clamp screw until it turns freely. (The screw is captive.)
2. Lift the coil side of the valve body while pressing down slightly on the screw head and remove it from the clamp bracket B. When the screw head cannot be pressed easily, gently press the area near the manual override of the valve.

How to Remove

1. Press down on the clamp screw. → Clamp bracket A opens. Diagonally insert the hook on the valve end plate side into clamp B.
2. Press the valve body downward. (When the screw is released, it will be locked by clamp bracket A.)
3. Tighten the clamp screw. (Proper tightening torque: 0.25 to 0.35 N·m)

Mounting


1. Dust on the sealing surface of the gasket or solenoid valve can cause air leakage.
2. In the case of VQ0000, valve mounting screw clamping torque is 0.18 to 0.25 N·m.

Replacement of Cylinder Port Fittings

⚠ Caution

The cylinder port fittings are a cassette for easy replacement. The fittings are blocked by a clip inserted from the top of manifold. Remove the clip with a screwdriver to remove fittings.

For replacement, insert the fitting assembly until it strikes against the inside wall and then re-insert the clip to specified position.

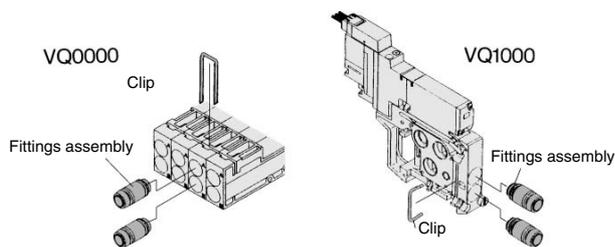

Take off the valve and remove the clip.

Remove the clip after taking off the manifold.

Applicable tubing O.D.	Fitting assembly part no.	
	VQ0000	VQ1000
Applicable tubing ø3.2	VVQ1000-51A-C3	VVQ1000-50A-C3
Applicable tubing ø4	VVQ1000-51A-C4	VVQ1000-50A-C4
Applicable tubing ø6	—	VVQ1000-50A-C6
M5	—	VVQ1000-50A-M5

* Refer to "Option" on pages 2-4-208 to 2-4-211 for other types of fittings.

⚠ Caution

1. Use caution that O-rings must be free from scratches and dust. Otherwise, air leakage may result.
2. After screwing in the fittings, mount the M5 fitting assembly on the manifold base. (Tightening torque 0.8 to 1.2 N·m)
3. Purchasing order is available in units of 10 pieces.

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD


⚠ Precautions 2

Be sure to read before handling. For Safety Instructions and Solenoid Valve Precautions, refer to page 2-9-2.

How to Use Plug Connector

⚠ Caution

Attaching and detaching connectors

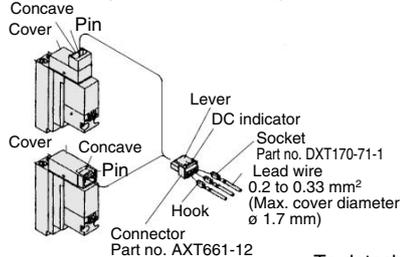


To attach a connector, hold the lever and connector unit between your fingers and insert straight onto the pins of the solenoid valve so that the lever's pawl is pushed into the groove and locks.

To detach a connector, remove the pawl from the groove by pushing the lever downward with your thumb, and pull the connector straight out.

Crimping the lead wire and socket

Peel 3.2 to 3.7 mm of the tip of lead wire, neatly into a socket and press contact it by a press tool. Be careful so that the cover of lead wire does not enter into the core press contacting part.

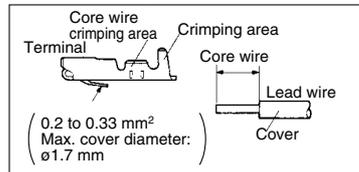


Attaching and detaching lead wires with sockets

Attaching

Insert a socket in the square hole (Indicated as ⊕, ⊖) of connector, push in the lead wire and lock by hanging the hook of socket to the seat of connector. (Pushing-in can open the hook and lock it automatically.) Then confirm the lock by lightly pulling on the lead wire.

Detaching

For pulling-out the socket from the connector, pull out the lead wire while pushing the hook of the socket with a fine point (ca. 1 mm) tool. If the socket is to be re-used, spread the hook to the outside.

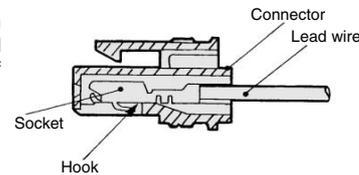


Mounting/Removing from the DIN Rail (VQ1000)

⚠ Caution

Removing

- Loosen the clamp screw on side (a) of the end plate on both sides.
- Lift side (a) of the manifold base and slide the end plate in the direction of (2) shown in the figure to remove.

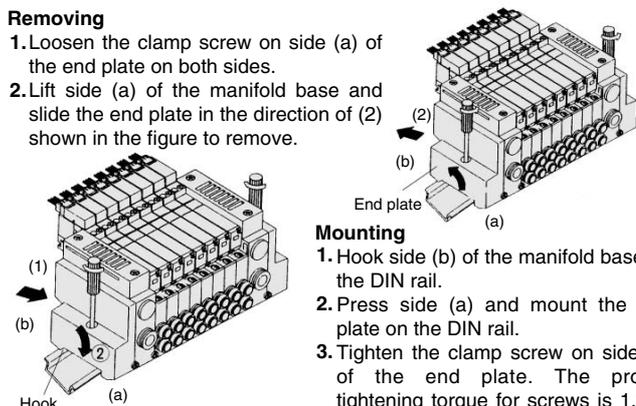

Mounting

- Hook side (b) of the manifold base on the DIN rail.
- Press side (a) and mount the end plate on the DIN rail.
- Tighten the clamp screw on side (a) of the end plate. The proper tightening torque for screws is 1.2 to 1.6 N·m.

Enclosure IP65

⚠ Caution

Wires, cables, connectors, etc. used for models conforming to IP65 should also have enclosures equivalent to or of stricter than IP65.


How to Calculate the Flow Rate

⚠ Caution

For obtaining the flow rate, refer to pages 2-1-8 to 2-1-11.

Built-in Silencer Replacement

⚠ Caution

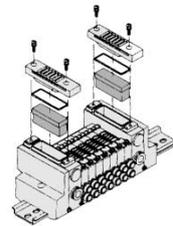

A silencer element is incorporated in the end plate on both sides of the manifold base. A dirty and choked element may reduce cylinder speed and cause malfunction. Clean or replace the dirty element.

Remove the cover from the top of the end plate and remove the old element with a screwdriver, etc.

Element part no.



Type	Element part no.	
	VQ0000	VQ1000
Built-in silencer, direct exhaust (-S)	VVQ0000-82A-1	VVQ1000-82A-1

* The minimum order quantity is 10 pcs.

Manifold Base Station Increasing Procedure (VQ1000)

⚠ Caution

- Loosen the clamp screw on the top surface of the end plate on one side.
- Turn the manual override between the manifold blocks with a regular screwdriver, etc. in a counterclockwise direction.
- Slide the manifold base to the side where the screw is loosened. Make a clearance of 15 mm or more.
- Mount the station increasing manifold block assembly and solenoid valve on the DIN rail. Install it to the DIN rail by applying the hook on the (b) side of the manifold block and pushing down the (a) side.

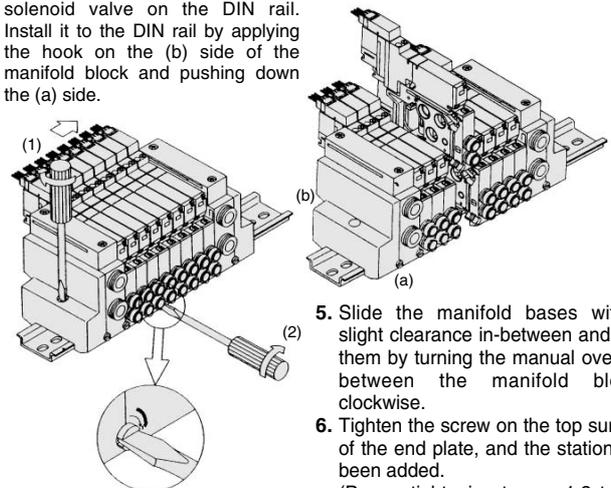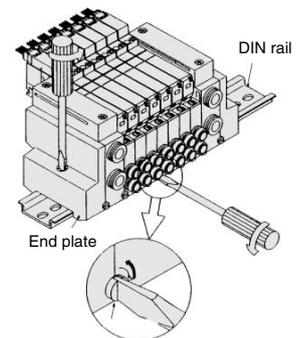

- Slide the manifold bases with a slight clearance in-between and lock them by turning the manual override between the manifold blocks clockwise.
- Tighten the screw on the top surface of the end plate, and the station has been added. (Proper tightening torque 1.2 to 1.6 N·m)

Manifold Block Assembly


VQ1000	Port size
VVQ1000-1A-2-C3	With One-touch fitting for ø3.2
VVQ1000-1A-2-C4	With One-touch fitting for ø4
VVQ1000-1A-2-C6	With One-touch fitting for ø6
VVQ1000-1A-2-M5	M5 thread

Option


Different Number of Connector Pins

F and P kits with the following number of pins are available besides the standard number (F = 25; P = 26). Select the desired number of pins and cable length from the cable assembly list. Place an order for the cable assembly separately.

F kit (D-sub connector) 15 pins

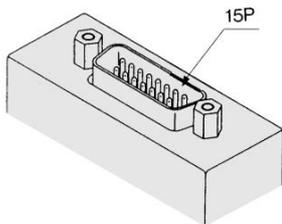

How to order manifold

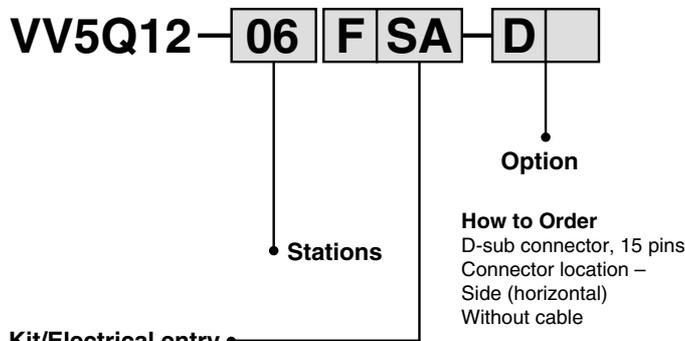


Kit/Electrical entry

Pins	Location	Top entry		Side entry	
15P (Max. 7 stations)		Kit F	UA	Kit F	SA

Wiring Specifications

* In the same way as the 25-pin models (standard), terminal no. 1 for is SOL.A at the 1st station, terminal no. 9 for SOL.B at the 1st station, and terminal no. 8 for COM.

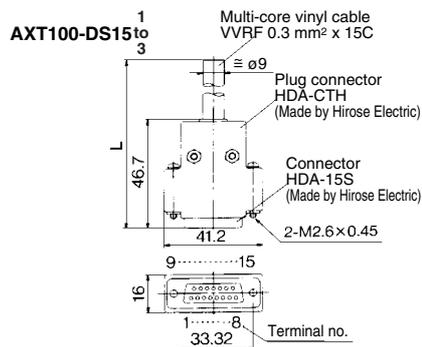

Wire Color by Terminal No. of D-sub Connector Cable Assembly


Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black

D-sub Connector Cable Assembly


Cable length (L)	Pins	15P
1.5 m		AXT100-DS15-1
3 m		AXT100-DS15-2
5 m		AXT100-DS15-3

* For other commercial connectors, use a type conforming to MIL-C-24308.

P kit (Flat ribbon cable connector) 10 pins, 16 pins, 20 pins

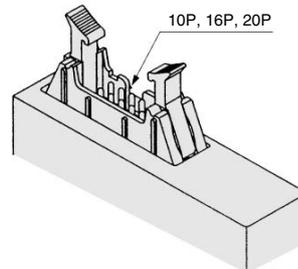

How to order manifold

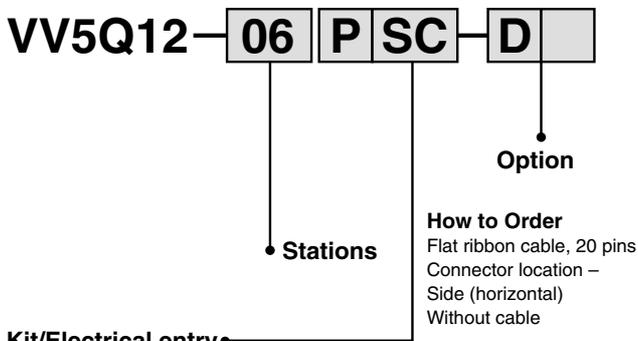


Kit/Electrical entry

Pins	Location	Top entry		Side entry	
10P (Max. 4 stations)		Kit P	UA	Kit P	SA
16P (Max. 7 stations)			UB		SB
20P (Max. 9 stations)			UC		SC

Wiring Specifications

* In the same way as the 26-pin models (standard), terminal no. 1 is SOL.A at the 1st station, terminal no. 2 for SOL.B at the 1st station, and two pins from the max.

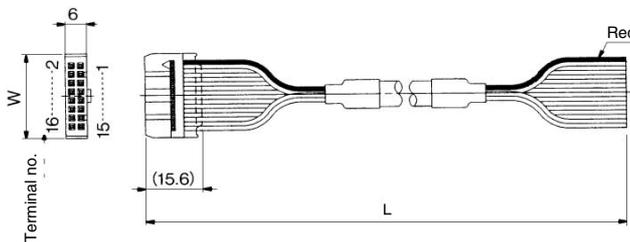

Flat Ribbon Cable Assembly

Cable length (L)	Pins	10P	16P	20P
1.5 m		AXT100-FC10-1	AXT100-FC16-1	AXT100-FC20-1
3 m		AXT100-FC10-2	AXT100-FC16-2	AXT100-FC20-2
5 m		AXT100-FC10-3	AXT100-FC16-3	AXT100-FC20-3
Connector width (W)		17.2	24.8	30

* For other commercial connectors, use a type with strain relief conforming to MIL-C-83503.

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

Series VQ0000/1000

Option

Special Wiring Specifications

In the internal wiring of F kit, P kit, T kit and S kit, double wiring (connected to SOL. A and SOL. B) is adopted for each station regardless of the valve and option types. Mixed single and double wiring is available as an option.

1. How to Order


Indicate an option symbol “-K”, for the manifold no. and be sure to specify the mounting position and number of stations of the single and double wiring by means of the manifold specification sheet.

Example) VV5Q05-08C4FU1-D K S

Others, option symbols: to be indicated alphabetically.

2. Wiring specifications

With the A side solenoid of the 1st station as no. 1 (meaning, to be connected to no. 1 terminal), without making any terminals vacant.

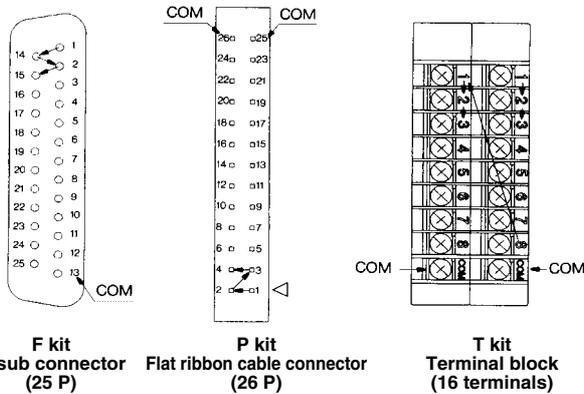

3. Max. number of stations

The maximum number of stations depends upon the number of solenoids. Assuming one for a single and two for a double, determine the number of stations so that the total number is not more than the max. number given in the following table.

Kit	F kit (D-sub connector)		P kit (Flat ribbon cable connector)			T kit (Terminal block)		S kit (Serial transmission)	
	F _S ^U 25P	F _S ^U A 15P	P _S ^U 26P	P _S ^U C 20P	P _S ^U B 16P	P _S ^U A 10P	T1		T2
Type									S□
Max. points	16 ^{Note)}	14	16 ^{Note)}	16 ^{Note)}	14	8	8	16	16

Note) Due to the limitation of internal wiring.

Negative Common Specifications [Series VQ1□10]

The following valve part numbers are for negative COM specifications. Manifold model no. is the same as the standard products.

How to order negative COM valves


VQ1110 N - 5M

• Negative common specifications

* Series VQ0□50 has no polarity, so the negative common is applicable to standard models.

Inch-size One-touch Fittings

Valve with inch-size One-touch fittings is shown below.

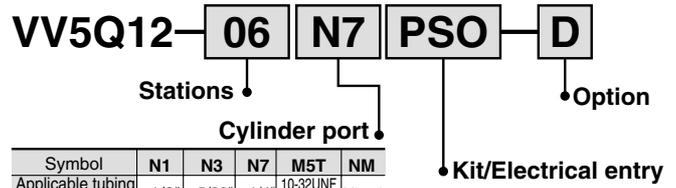

Symbol	N1	N3	N7	M5T	NM
Applicable tubing O.D. (Inch)	ø1/8"	ø5/32"	ø1/4"	10-32UNF (M5 thread)	Mixed
A, B port	VQ0000	○	○	○	○
	VQ1000	○	○	○	○

1(P), 3(R) port size
 VQ0000ø1/4"
 VQ1000ø5/16"

Note) When inch size fittings are selected for a cylinder port, use inch size fittings for both P and R port, too.

Plug Connector Assembly Model

Connector assembly will be required when the F, P, S kits add a valve. Specify the style of valve and connector assembly.

Connector Assembly Part No.

Specifications		Part no.
Single VQ0000 (2-wire)	Positive common	AXT661-14A-F
	Negative common	AXT661-14AN-F
Double (latching) (3-wire)	Positive common	AXT661-13A-F
	Negative common	AXT661-13AN-F

Note) Lead wire length: 300 mm

The part numbers above are applicable to 2 to 10 stations. 11 to 16 stations: "AXT661-13A(N)-F-425".

DIN Rail Mounting

Each manifold can be mounted on a DIN rail. Order it by indicating a DIN rail mounting option symbol, “-D”. In this case, a DIN rail which is approx. 30 mm longer than the manifold with the specified number of stations is attached. Other than this, it is applicable for the following cases.

● **When DIN rail is unnecessary (C kit VQ0000 only)**

Indicate the option symbol, -DO, for the manifold no.

Example)

VV5Q05-08C4C-DOS

Others, option symbols:
to be indicated alphabetically.

● **When using DIN rail longer than the manifold with specified number of stations (VQ0000/VQ1000)**

Clearly indicate the necessary number of stations next to the option symbol. “D” for the manifold no.

Example)

VV5Q05-08C4FU1-D09S

DIN rail for 9 stations
Others, option symbols:
to be indicated alphabetically.

● **When changing the manifold style into a DIN rail mounting style (VQ0000 only)**


Order brackets for mounting a DIN rail. (Refer to “Option” on page 2-4-209.)

No. VVQ0000-57A-5 2 pcs. per one set.

● **When ordering DIN rail only (VQ0000 only)**

DIN rail no.: AXT100-DR-□

As for □, specify the number from the DIN rail table.
For L dimension, refer to the dimensions of each kit.

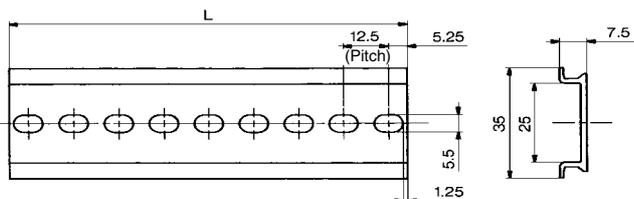

L Dimension

$L = 12.5 \times n + 10.5$

No.	1	2	3	4	5	6	7	8	9	10
L dimension	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5
No.	11	12	13	14	15	16	17	18	19	20
L dimension	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5
No.	21	22	23	24	25	26	27	28	29	30
L dimension	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5
No.	31	32	33	34	35	36	37	38	39	40
L dimension	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

Series VQ Single Unit

Model

Series	Number of solenoid	Model		Flow characteristic ⁽¹⁾						Response time (ms) ⁽²⁾			Weight (g)		
				1 → 4/2 (P → A/B)			4/2 → 5/3 (A/B → R1/R2)			Standard: 1W H: 1.5W	Low wattage: 0.5 W	AC			
				C [dm ³ /(s·bar)]	b	Cv	C [dm ³ /(s·bar)]	b	Cv						
Base mounted	VQ0000 Plug lead	2 position	Single	Metal seal	VQ0150	0.41	0.20	0.10	0.44	0.26	0.11	12 or less	15 or less	29 or less	50 ⁽³⁾
				Rubber seal	VQ0151	0.53	0.20	0.12	0.53	0.22	0.13	15 or less	20 or less	34 or less	
		Double	Metal seal	VQ0250	0.41	0.20	0.10	0.44	0.26	0.11	10 or less	13 or less	13 or less		
			Rubber seal	VQ0251	0.53	0.20	0.12	0.53	0.22	0.13	15 or less	20 or less	20 or less		
	3 position	Closed center	Metal seal	VQ0350	0.32	0.10	0.07	0.32	0.20	0.07	20 or less	26 or less	40 or less	65 ⁽³⁾	
			Rubber seal	VQ0351	0.43	0.21	0.10	0.44	0.24	0.11	25 or less	33 or less	47 or less		
Exhaust center	Metal seal	VQ0450	0.32	0.10	0.07	0.44	0.26	0.11	20 or less	26 or less	40 or less				
	Rubber seal	VQ0451	0.43	0.21	0.10	0.53	0.22	0.13	25 or less	33 or less	47 or less				



Note 1) Cylinder port size C4: (VQ0000)


Note 2) Based on JIS B 8375-1981 (Supply pressure: 0.5 MPa; with indicator light and surge voltage suppressor; clean air) The response time is subject to the pressure and quality of the air. The valves at the time of ON are given for double types.

Note 3) Weight including sub-plate.

For individual use of a single valve.



JIS Symbol

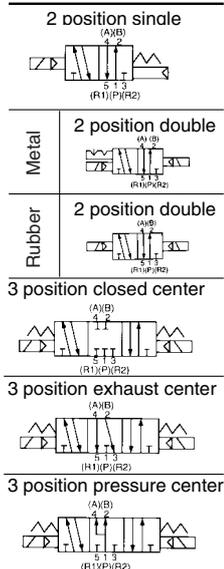

Standard Specifications

Valve specifications	Valve construction		Metal seal	Rubber seal
	Fluid		Air/Inert gas	Air/Inert gas
	Maximum operating pressure		0.7 MPa (High pressure type: 0.8 MPa)	
	Min. operating pressure	Single	0.1 MPa	0.15 MPa
		Double	0.1 MPa	0.1 MPa
		3 position	0.1 MPa	0.2 MPa
	Ambient and fluid temperature		-10 to 50°C ⁽¹⁾	
	Lubrication		Not required	
	Manual override		Push type/Locking type (Tool required, Manual type) Option	
	Impact/Vibration resistance ⁽²⁾		150/30 m/s ²	
Enclosure		Dust tight		
Solenoid	Coil rated voltage		12, 24 VDC, 100, 110, 200, 220 VAC (50/60 Hz)	
	Allowable voltage fluctuation		±10% of rated voltage	
	Coil insulation type		Class B or equivalent	
	Power consumption (Current)	24 VDC	1 W DC (42 mA), 1.5 W DC (63 mA) ⁽³⁾ , 0.5 W DC (21 mA) ⁽⁴⁾	
		12 VDC	1 W DC (83 mA), 1.5 W DC (125 mA) ⁽³⁾ , 0.5 W DC (42 mA) ⁽⁴⁾	
		100 VAC	Inrush 0.5 VA (5 mA), Holding 0.5 VA (5 mA)	
110 VAC		Inrush 0.55 VA (5 mA), Holding 0.55 VA (5 mA)		
200 VAC		Inrush 1.0 VA (5 mA), Holding 1.0 VA (5 mA)		
	220 VAC	Inrush 1.1 VA (5 mA), Holding 1.1 VA (5 mA)		



Note 1) Use dry air to prevent condensation when operating at low temperatures.

Note 2) Impact resistance ... No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)

Vibration resistance ... No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

Note 3) Values for high pressure type (1.5 W)

Note 4) Values for low wattage type (0.5 W)

How to Order Valves

VQ0 1 5 0 Y-5 L □ C4

Series VQ0000

Type of actuation

1	2 position single
2	2 position double
3	3 position closed center
4	3 position exhaust center

Seal

0	Metal seal
1	Rubber seal

Function

Symbol	Specifications	DC	AC
Nil	Standard type	(1.0 W) ○	(Note) ○
H	High pressure type	(1.5 W) ○	—
Y	Low wattage type	(0.5 W) ○	—

Note) For power consumption of AC type, refer to page 2-4-218.

Sub-plate SUP, Cylinder port

Nil	Without sub-plate
C3	With One-touch fitting for ø3.2
C4	With One-touch fitting for ø4
M5	M5 thread

Note) EXH port: M5 thread

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required) *

* Option

Electrical entry

G	Grommet (Except AC)
L	L plug connector with lead wire
LO	L plug connector without connector
M	M plug connector with lead wire
MO	M plug connector without connector



Coil rated voltage

1	100 VAC (50/60 Hz)
2	200 VAC (50/60 Hz)
3	110 VAC (50/60 Hz)
4	220 VAC (50/60 Hz)
5	24 VDC
6	12 VDC

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

Wiring Specifications

● The lead wires are connected to the valve as shown below. Connect each to the power supply side.

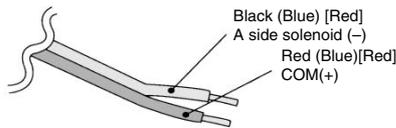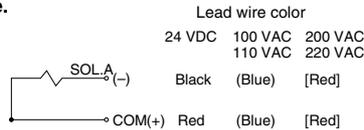

● Plug connector lead wire length

Note) The length of the lead wire provided is 300 mm. When ordering a valve with a lead wire of 600 mm or longer, be sure to indicate the model number of the valve without connector and connector assembly.

Example) Lead wire length 1000 mm
 VQ0150-5LO 3 pcs.
 AXT661-14A-10 3 pcs.

Connector Assembly Part No. (For DC)


Lead wire length	Part no.
Socket (3 pcs.)	AXT661-12A
300 mm	AXT661-14A
600 mm	AXT661-14A-6
1000 mm	AXT661-14A-10
2000 mm	AXT661-14A-20
3000 mm	AXT661-14A-30

Note) AXT661-31A-□, for 100/110 VAC.
 AXT661-34A-□, for 200/220 VAC.

Series VQ


Dimensions

2 position single: VQ015⁰

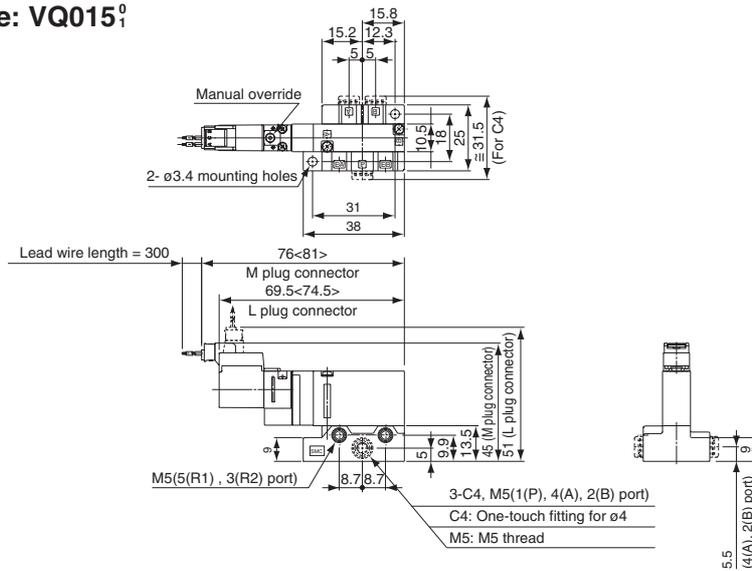


< >: AC

2 position double: VQ025⁰

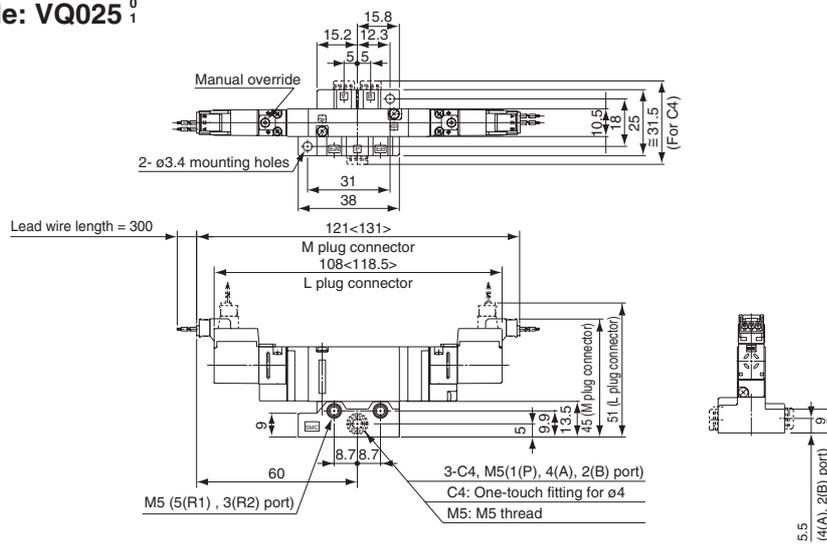

< >: AC

3 position exhaust center: VQ035⁰

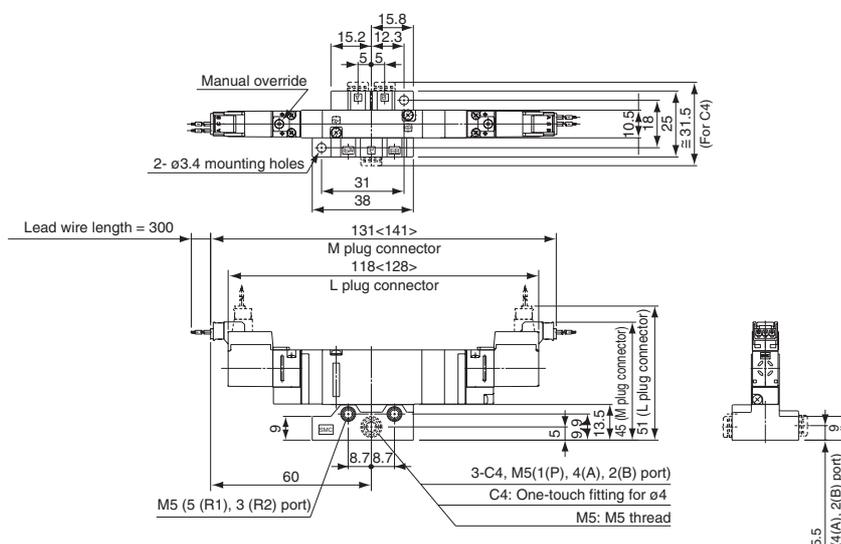

< >: AC

VQC

SQ

VQ0

VQ4

VQ5




VQZ

VQD




Series VQ Construction Main Parts, Replacement Parts

Construction: VQ1000/Plug-in Unit

Metal seal

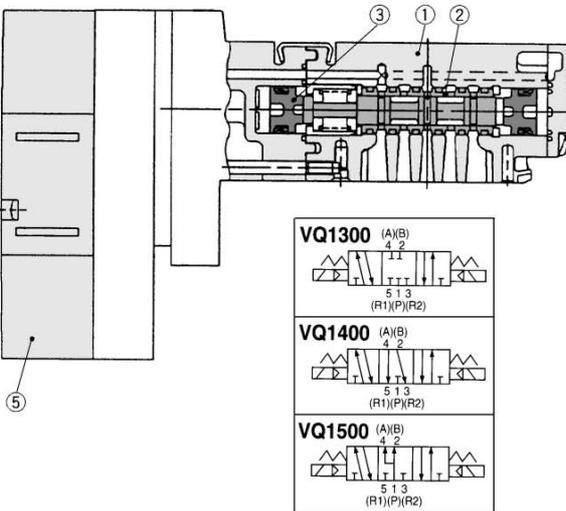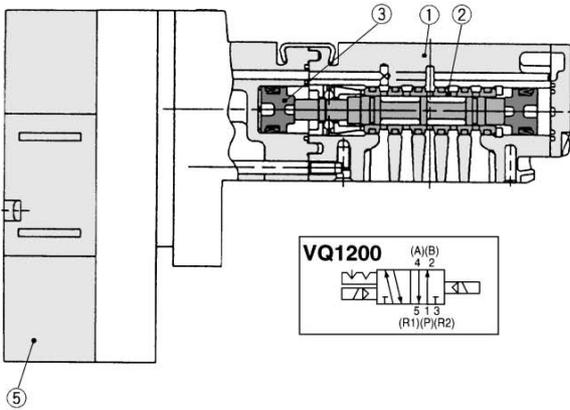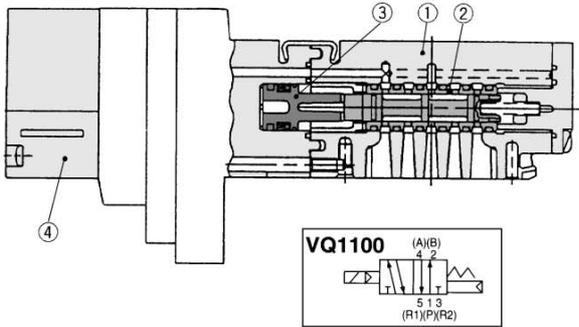

Rubber seal type

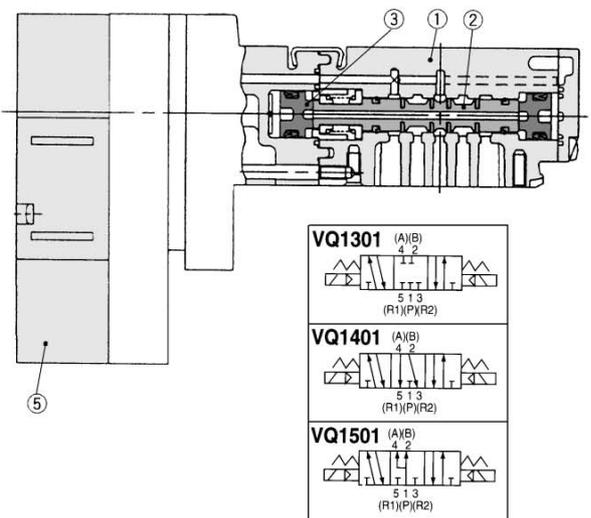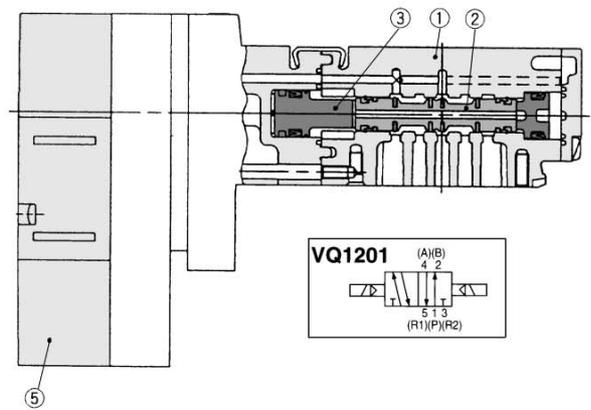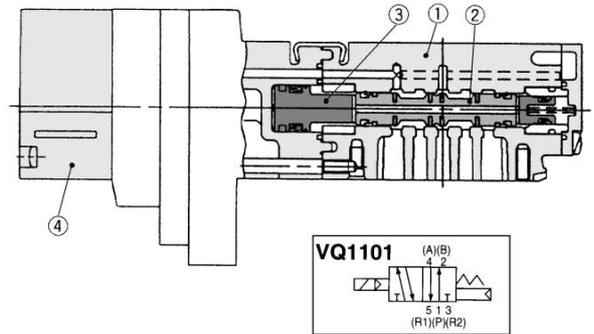

Component Parts

No.	Description	Material	Note
①	Body	Zinc die-casted	
②	Spool/Sleeve	Stainless steel	
③	Piston	Resin	

Replacement Parts

④	Pilot valve assembly	VQ111 ^(H) _(Y) -□-1 <small>Note) Voltage 1 to 6</small>	Single
⑤	Pilot valve assembly	VQ131 ^(H) _(Y) -□-1 <small>Note) Voltage 1 to 6</small>	Double/3 position

Note) (H): 1.5 W, (Y): 0.5 W

Component Parts

No.	Description	Material	Note
①	Body	Zinc die-casted	
②	Spool valve	Aluminum/HNBR	
③	Piston	Resin	









Replacement Parts

④	Pilot valve assembly	VQ111 ^(H) _(Y) -□-1 <small>Note) Voltage 1 to 6</small>	Single
⑤	Pilot valve assembly	VQ131 ^(H) _(Y) -□-1 <small>Note) Voltage 1 to 6</small>	Double/3 position

Note) (H): 1.5 W, (Y): 0.5 W

Construction: VQ2000/Plug-in Unit

Metal seal

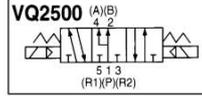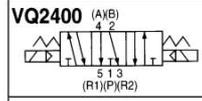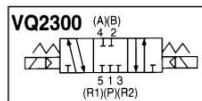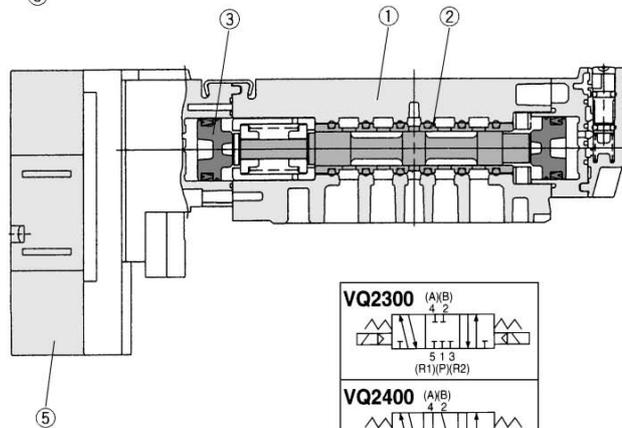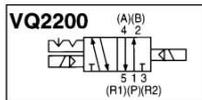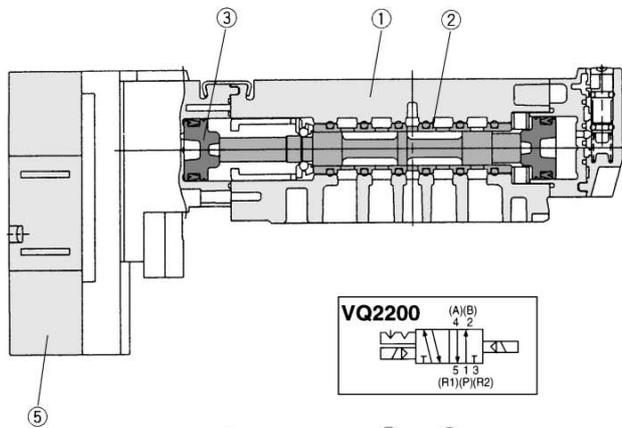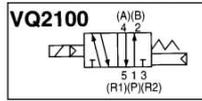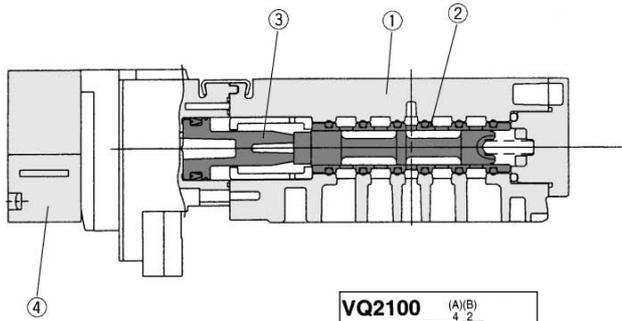

Component Parts









No.	Description	Material	Note
①	Body	Aluminum die-casted	
②	Spool/Sleeve	Stainless steel	
③	Piston	Resin	

Replacement Parts

④	Pilot valve assembly	VQ111 ^(H) _(Y) -□-1 <small>Note) Voltage1 to 6</small>	Single
⑤	Pilot valve assembly	VQ131 ^(H) _(Y) -□-1 <small>Note) Voltage1 to 6</small>	Double/3 position

Note) (H): 1.5 W, (Y): 0.5 W

Rubber seal type

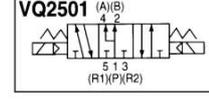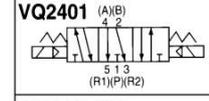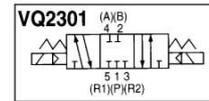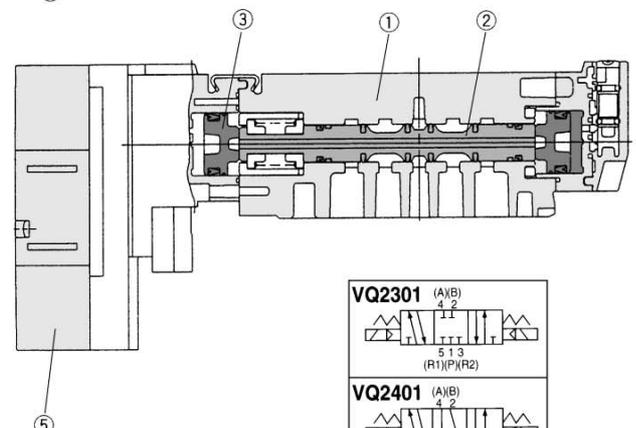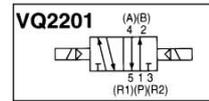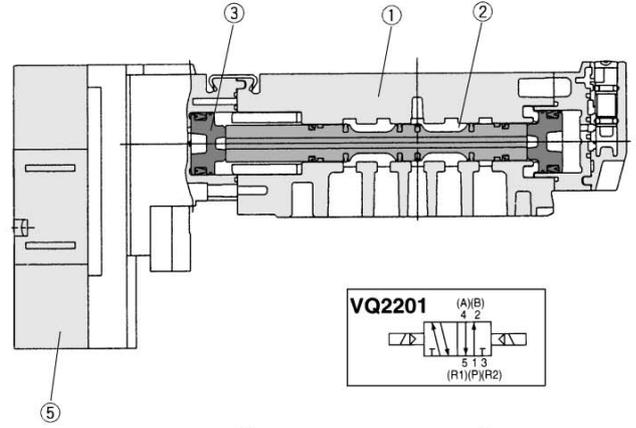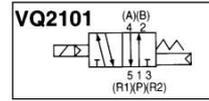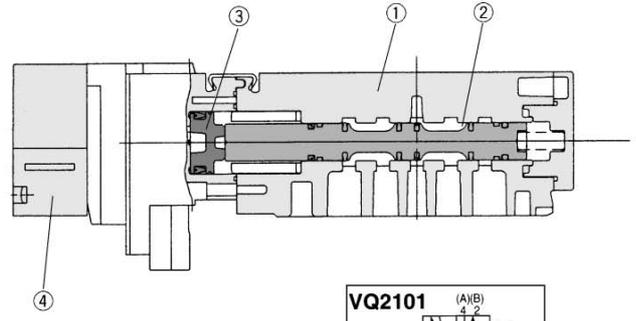

Component Parts

No.	Description	Material	Note
①	Body	Aluminum die-casted	
②	Spool valve	Aluminum/HNBR	
③	Piston	Resin	

Replacement Parts

④	Pilot valve assembly	VQ111 ^(H) _(Y) -□-1 <small>Note) Voltage1 to 6</small>	Single
⑤	Pilot valve assembly	VQ131 ^(H) _(Y) -□-1 <small>Note) Voltage1 to 6</small>	Double/3 position

Note) (H): 1.5 W, (Y): 0.5 W

VQC

SQ

VQ0

VQ4

VQ5








VQZ

VQD

Series VQ

Construction: VQ0000/Plug Lead Unit

Metal seal

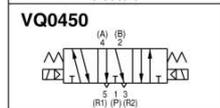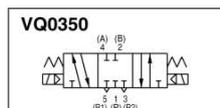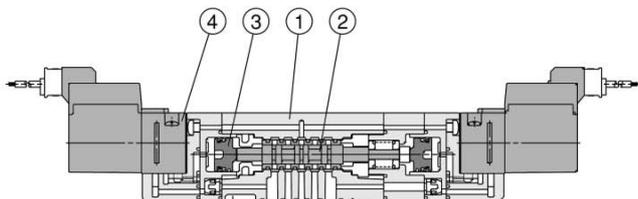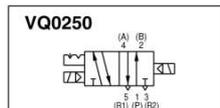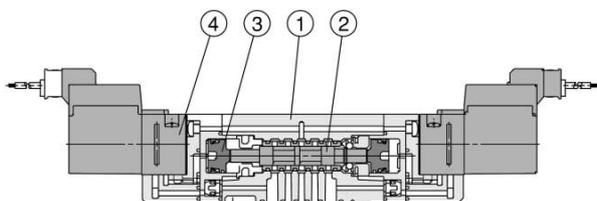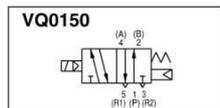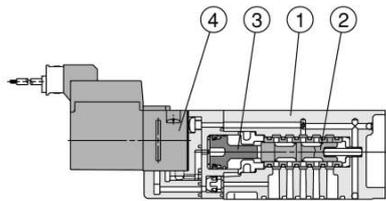

Component Parts








No.	Description	Material	Note
①	Body	Aluminum die-casted	
②	Spool/Sleeve	Stainless steel	
③	Piston	Resin	

Replacement Parts

④	Pilot valve assembly	VQ110 (H) (Y) (G) (Note)	
---	----------------------	--------------------------	--

Note) (Y): 0.5 W, (H): 1.5 W, (G): DC

Rubber seal type

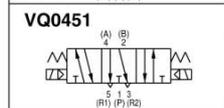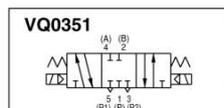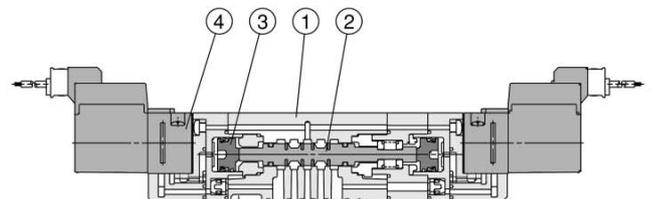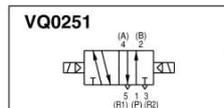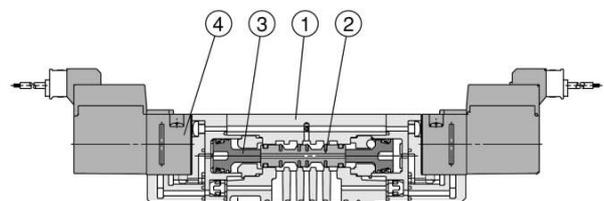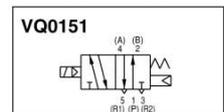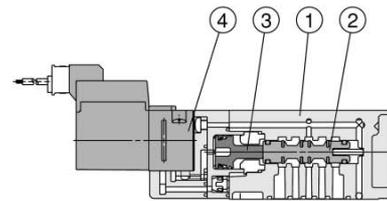

Component Parts

No.	Description	Material	Note
①	Body	Aluminum die-casted	
②	Spool valve	Aluminum/HNBR	
③	Piston	Resin	





Replacement Parts

④	Pilot valve assembly	VQ110 (H) (Y) (G) (Note)	
---	----------------------	--------------------------	--





Note) (Y): 0.5 W, (H): 1.5 W, (G): DC

Construction: VQ1000/Plug Lead Unit

Metal seal

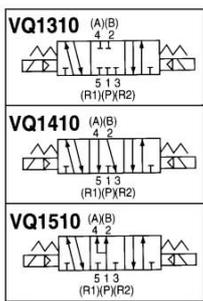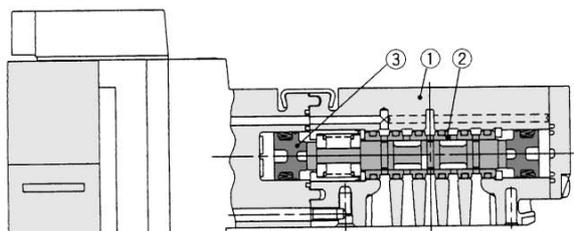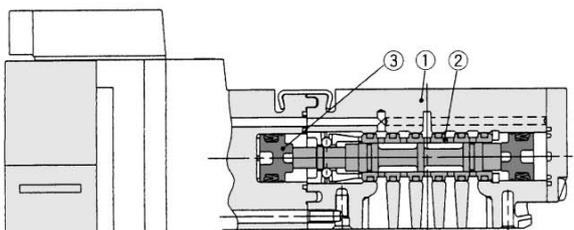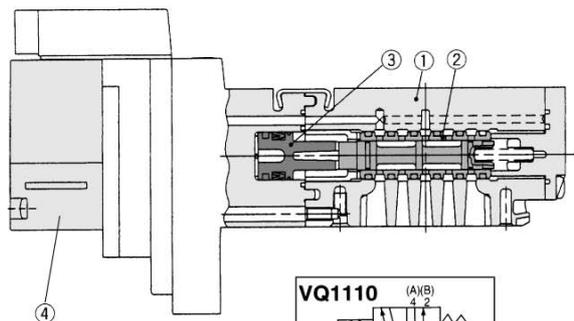

Rubber seal type

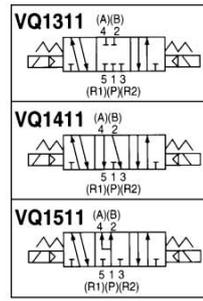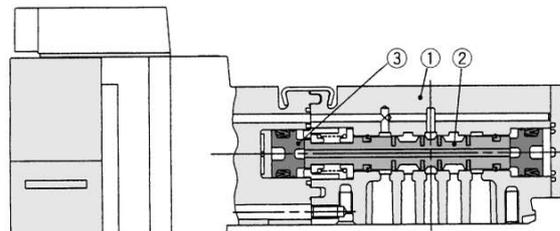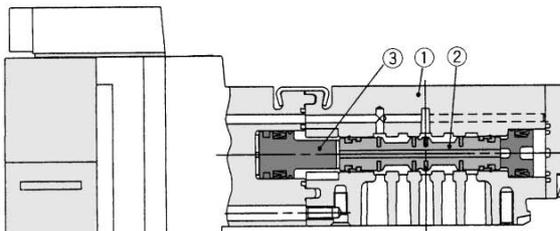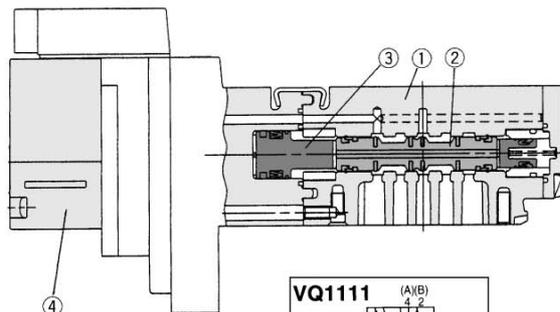

- VQC
- SQ
- VQ0**
- VQ4
- VQ5
- VQZ
- VQD

Component Parts

No.	Description	Material	Note
①	Body	Zinc die-casted	
②	Spool/Sleeve	Stainless steel	
③	Piston	Resin	

Replacement Parts

④	Pilot valve assembly	VQ111 ^(H) _(Y) - □ - 1 <small>Note</small> <small>Voltage 1 to 6</small>	Single
⑤	Pilot valve assembly	VQ131 ^(H) _(Y) - □ - 1 <small>Note</small> <small>Voltage 1 to 6</small>	Double/3 position

Note) (H): 1.5 W, (Y): 0.5 W

Component Parts

No.	Description	Material	Note
①	Body	Zinc die-casted	
②	Spool valve	Aluminum/HNBR	
③	Piston	Resin	

Replacement Parts


④	Pilot valve assembly	VQ111 ^(H) _(Y) - □ - 1 <small>Note</small> <small>Voltage 1 to 6</small>	Single
⑤	Pilot valve assembly	VQ131 ^(H) _(Y) - □ - 1 <small>Note</small> <small>Voltage 1 to 6</small>	Double/3 position

Note) (H): 1.5 W, (Y): 0.5 W

Exploded View of Manifold

Exploded view: VQ1000/Plug-in Unit

(F, P, J, L, Skit)

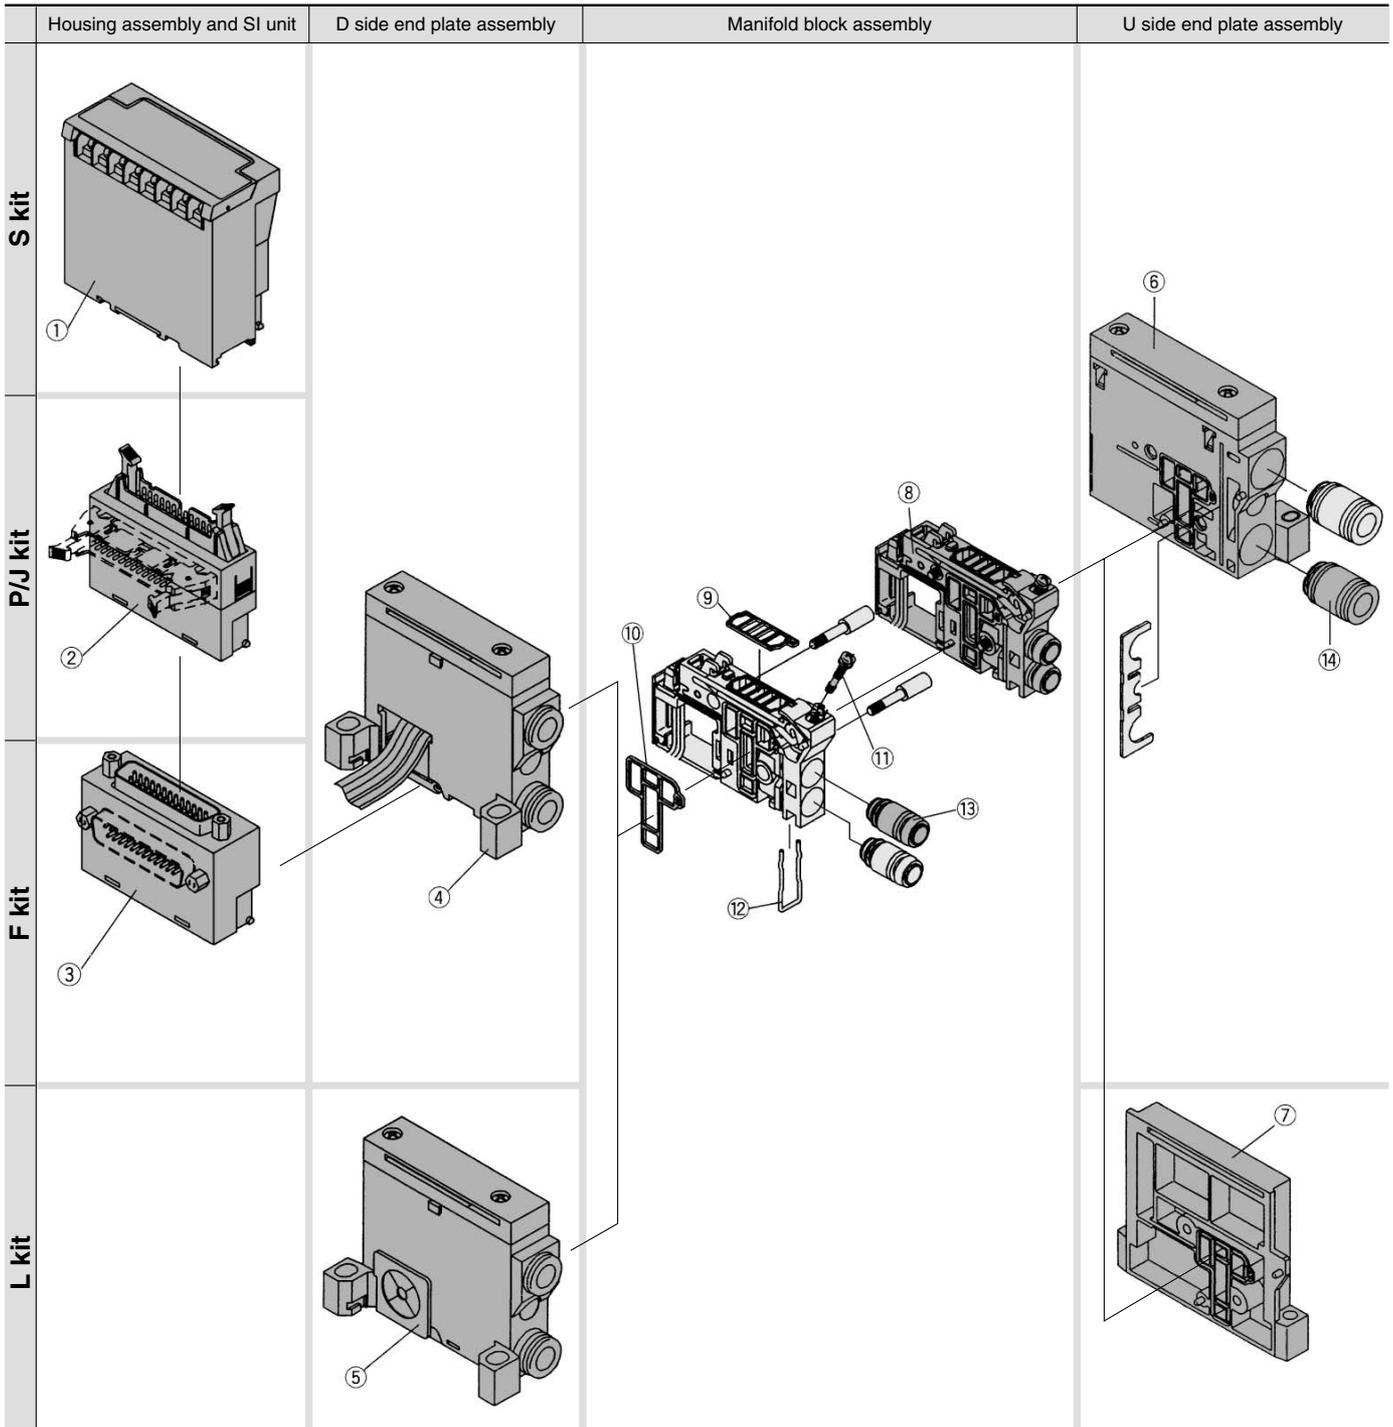

<Housing Assembly and SI Unit> Housing assembly and SI unit no.

No.	Manifold	Part no.	Description
①	(SA kit)	EX320-S001(-XP) ⁽²⁾	General type SI unit (Series EX300)
	(SB kit)	EX120-SMB1(-XP) ⁽²⁾	SI unit for MELSECNET/MINI-S3 Data Link System (Mitsubishi Electric Corporation)
	(SC kit)	EX120-STA1(-XP) ⁽²⁾	SI unit for SYSBUS Wire System (OMRON Corporation)
	(SD kit)	EX120-SSH1(-XP) ⁽²⁾	SI unit for Satellite I/O Link System (SHARP Corporation)
	(SE kit)	EX120-SPA1	SI unit for MEWNET-F System (Matsushita Electric Works, Ltd.)
	(SF1kit)	EX120-SUW1(-XP) ⁽²⁾	SI unit for 16 point Uni-wire System (NKE Corporation)
	(SG kit)	EX120-SAB1(-XP) ⁽²⁾	SI unit for Allen Bradley Remote I/O (RIO) System (Rockwell Automation, Inc.)
	(SH kit)	EX120-SUH1(-XP) ⁽²⁾	SI unit for 16 point Uni-wire H System (NKE Corporation)
	(SJ1 kit)	EX120-SSL1(-XP) ⁽²⁾	16 point S-LINK System (SUNX Corporation)
	(SJ2 kit)	EX120-SSL2(-XP) ⁽²⁾	8 point S-LINK System (SUNX Corporation)
	(SK kit)	EX120-SFU1(-XP) ⁽²⁾	T-LINK Mini System (Fuji Electric Co.,Ltd.)
	(SQ kit)	EX120-SDN1	DeviceNet, CompoBus/D (OMRON Corporation)
	(SR1 kit)	EX120-SCS1(-XP) ⁽²⁾	OMRON Corporation: CompoBus/S (16 output points)
	(SR2 kit)	EX120-SCS2(-XP) ⁽²⁾	OMRON Corporation: CompoBus/S (8 output points)
	(SV kit)	EX120-SMJ1(-XP) ⁽²⁾	Mitsubishi Electric Corporation: CC-LINK System
②	P $\frac{1}{2}$ kit	AXT100-1-P $\frac{1}{2}$ □ ⁽¹⁾	Flat cable housing assembly □ = Number of pins: 26, 20, 16, 10
	J $\frac{1}{2}$ kit	AXT100-1-J $\frac{1}{2}$ 20 ⁽¹⁾	Flat cable housing assembly
③	F $\frac{1}{2}$ kit	AXT100-1-F $\frac{1}{2}$ □ ⁽¹⁾	D-sub connector housing assembly □ = Number of pins: 25, 15

Note 1) Top (vertical) entry connector for FU, PU and JU while side (horizontal) entry connector for FS, JS and PS.
Note 2) Enter suffix "-XP" at the end of the part number for dust proof type SI unit.

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

<D Side End Plate Assembly>

④⑤ D side end plate assembly no.

VVQ1000-3A-1-□-□

Electrical entry  Option

F	For F kit	Nil	Common exhaust type
P	For P kit	R ⁽¹⁾	External pilot
J	For J kit	S ⁽¹⁾	Built-in silencer, direct exhaust
L	For L kit		
S	For S kit		

Note 1) When both options are specified, indicate as RS.
Note 2) The housing assembly and SI unit of F/P/S kit are not included.
Separately place an order for ①, ②, and ③.

<U Side End Plate Assembly>

⑥ U side end plate assembly no. (For F, P, J, S kit)

VVQ1000-2A-1-□

Option

Nil	Common exhaust type
R	External pilot
S	Built-in silencer, direct exhaust



Note) The ④'s fitting assembly is included.

<Manifold Block Assembly>

⑧ Manifold block assembly no. Tie-rod (2 pcs.) and lead wire assembly for extensions are attached

VVQ1000-1A-□

Electrical entry  Port size

F1	F kit for 2 to 12 stations/Double wiring	C3	With One-touch fitting for ø3.2
F2	F kit for 13 to 24 stations/Double wiring	C4	With One-touch fitting for ø4
F3	F kit for 2 to 24 stations/Single wiring	C6	With One-touch fitting for ø6
P1	P, J, S kit for 2 to 12 stations/Double wiring	M5	M5 thread
P2	P, J, S kit for 13 to 24 stations/Double wiring		
P3	P, J, S kit for 2 to 24 stations/Single wiring		
L0 □	L0 kit □ Stations (1 to 8)		
L1 □	L1 kit □ Stations (1 to 8)		
L2 □	L2 kit □ Stations (1 to 8)		

⑦ U side end plate assembly no. (For L kit)

VVQ1000-2A-1-L

<Replacement Parts for Manifold Block>

Replacement Parts

No.	Part no.	Description	Material	Number
⑨	VVQ1000-80A-1	Gasket	NBR	12
⑩	VVQ1000-80A-2	Packing	NBR	12
⑪	VVQ1000-80A-3	Clamp screw	Carbon steel	12
⑫	VVQ1000-80A-4	Clip	Stainless steel	12

Note) A set of parts containing 12 pcs. each is enclosed.

<Fitting Assembly>

⑬ Fitting assembly part no. (For cylinder port)

VVQ1000-50A-□

Port size



Note) Purchasing order is available in units of 10 pieces.

C3	Applicable tubing ø3.2
C4	Applicable tubing ø4
C6	Applicable tubing ø6
M5	M5 thread

⑭ Fitting assembly part no. (For P, R port)

VVQ1000-51A-C8

Applicable tubing ø8




Note) Purchasing order is available in units of 10 pieces.

Series VQ

Exploded View: VQ2000/Plug-in Unit

(F, P, J, L, G, S kit)

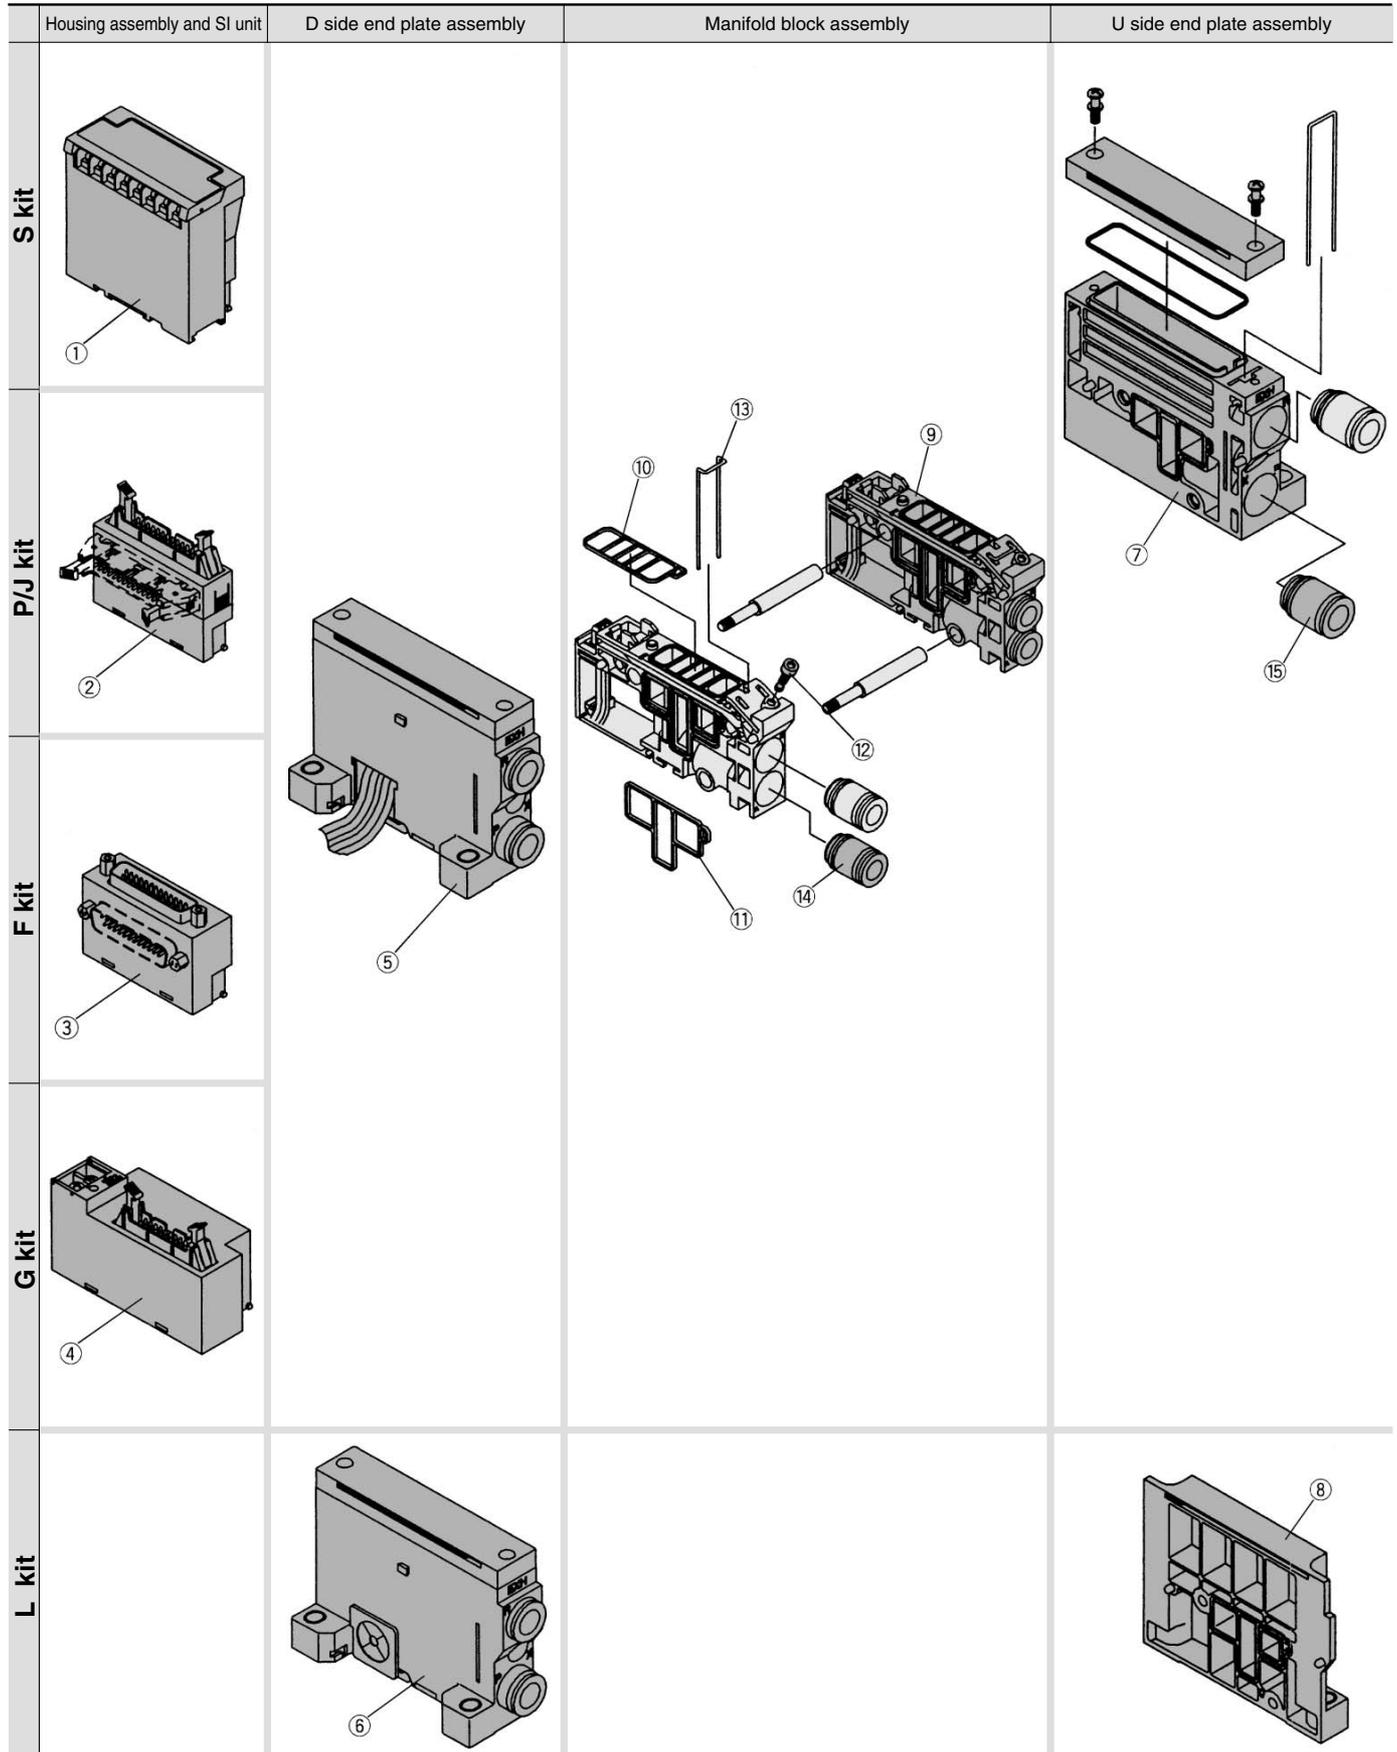

<Housing Assembly and SI Unit>

Housing assembly and SI unit no.

No.	Manifold	Part no.	Description
①	(SA kit)	EX320-S001(-XP) ⁽¹⁾ [EX323-S001] ⁽²⁾	General type SI unit (Series EX300)
	(SB kit)	EX120-SMB1(-XP) ⁽¹⁾ [EX123-SMB1] ⁽²⁾	SI unit for MELSECNET/MINI-S3 Data Link System (Mitsubishi Electric)
	(SBB kit)	[EX124-SMB1] ⁽³⁾	SI unit for MELSECNET/MINI-S3 Data Link System (2 power supply lines) (Mitsubishi Electric Corp.)
	(SC kit)	EX120-STA1(-XP) ⁽¹⁾ [EX123-STA1] ⁽²⁾	SI unit for SYSBUS Wire System (OMRON Corporation)
	(SD kit)	EX120-SSH1(-XP) ⁽¹⁾ [EX123-SSH1] ⁽²⁾	SI unit for Satellite I/O Link System (SHARP Corporation)
	(SE kit)	EX120-SPA1	SI unit for MEWNET-F System (Matsushita Electric Works, Ltd.)
	(SF1 kit)	EX120-SUW1(-XP) ⁽¹⁾ [EX123-SUW1] ⁽²⁾	SI unit for 16 point Uni-wire System (NKE Corporation)
	(SG kit)	EX120-SAB1	SI unit for Allen Bradley Remote I/O (RIO) System (Rockwell Automation, Inc.)
	(SH kit)	EX120-SUH1(-XP) ⁽¹⁾ [EX123-SUH1] ⁽²⁾	SI unit for 16 point Uni-wire H System (NKE Corporation)
	(SJ1 kit)	EX120-SSL1(-XP) ⁽¹⁾ [EX123-SSL1] ⁽²⁾	16 point S-LINK System (SUNX Corporation)
	(SJ2 kit)	EX120-SSL2(-XP) ⁽¹⁾ [EX123-SSL2] ⁽²⁾	8 point S-LINK System (SUNX Corporation)
	(SK kit)	EX120-SFU1(-XP) ⁽¹⁾ [EX123-SFU1] ⁽²⁾	T-LINK Mini System (Fuji Electric Co., Ltd.)
	(SQ kit)	EX120-SDN1 [EX124-SDN1] ⁽²⁾	SI unit for DeviceNet, CompoBus/D (OMRON Corporation)
	(SR1 kit)	EX120-SCS1(-XP) ⁽¹⁾ [EX124-SCS1] ⁽²⁾	SI unit for 16 point Compo Bus/S System (OMRON)
(SR2 kit)	EX120-SCS2(-XP) ⁽¹⁾ [EX124-SCS2] ⁽²⁾	SI unit for 8 point Compo Bus/S System (OMRON)	
(SV kit)	EX120-SMJ1(-XP) ⁽¹⁾ [EX124-SMJ1] ⁽²⁾	SI unit for CC-LINK System (2 power supply systems) (Mitsubishi Electric Corporation)	
②	P _U kit	AXT100-1-P _U □ ⁽⁴⁾	Flat ribbon cable housing assembly □ = Number of pins: 26, 20, 16, 10
	J _U kit	AXT100-1-J _U □ ⁽⁴⁾	Flat ribbon cable housing assembly
③	G kit	AXT100-1-GU20	Flat ribbon cable housing assembly with terminal block
④	F _U kit	AXT100-1-F _U □ ⁽⁴⁾	D-sub connector housing assembly □ = Number of pins: 25, 15

Note 1) Suffix "-XP" for dust-protected type SI unit.
Note 2) Dusttight/Low jetproof type (IP65)

Note 3) SBB kit is usable only for dust tight/low jetproof type (IP65).

Note 4) Top entry connector for FU and PU while side entry connector for FS and PS.

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

<D Side End Plate Assembly>

⑤⑥ D side end plate assembly no.

VVQ2000-3A-1-□-□

Electrical entry

Option

F	For F kit
P	For P kit
J	For J kit
L	For L kit
G	For G kit
S	For S kit

Nil	Common EXH
R ⁽¹⁾	External pilot
S ⁽¹⁾	Built-in silencer, direct exhaust



Note 1) When both options are specified, indicate as RS.

Note 2) The housing assembly and SI unit of F/P/J/G/S kit are not included.

Note 3) Separately place an order for ①, ②, ③, and ④.

For Dusttight/Low jetproof type (IP65), please consult with SMC.

<U Side End Plate Assembly>

⑦ U side end plate assembly no. (For F/P/G/S kits)

VVQ2000-2A-1-□-□

Nil	Common EXH
R	External pilot
S	Built-in silencer, direct exhaust



Note 1) The ⑤'s fitting assembly is included.

Note 2) The housing assembly and SI unit of F/P/J/G/S kit are not included.

Note 3) Separately place an order for ①, ②, ③, and ④.

For Dusttight/Low jetproof type (IP65), please consult with SMC.

⑧ U side end plate assembly no. (For L kit)

VVQ2000-2A-1-L

<Manifold Block Assembly> Tie-rod (2 pcs.) and lead wire assembly for extensions are attached

⑨ Manifold block assembly no.

VVQ2000-1A-□-□-□

Electrical entry

Port size

Enclosure

F1	F kit for 2 to 12 stations/Double wiring
F2	F kit for 13 to 24 stations/Double wiring
F3	F kit for 2 to 24 stations/Single wiring
P1	P, J, G, S kit for 2 to 12 stations/Double wiring
P2	P, J, G, S kit for 13 to 24 stations/Double wiring
P3	P, J, G, S kit for 2 to 24 stations/Single wiring
L0□	L0 kit □ Stations (1 to 8)
L1□	L1 kit □ Stations (1 to 8)
L2□	L2 kit □ Stations (1 to 8)
T1	T kit for 2 to 20 stations/Double wiring
T3	T kit for 2 to 20 stations/Single wiring
M1	M kit for 2 to 12 stations/Double wiring
M2	M kit for 13 to 24 stations/Double wiring
M3	M kit for 2 to 24 stations/Single wiring

C4	One-touch fitting for ø4
C6	One-touch fitting for ø6
C8	One-touch fitting for ø8

Nil	Dusttight
W	Dusttight/Low jetproof type (IP65)

Note) F, P, J, G kits are available with "Nil" only.

M kit is available with [W] only.

S, L, T kits are selectable, depending upon the manifold type.

<Fitting Assembly>

⑭ Fitting assembly part no. (For cylinder port)

VVQ1000-51A-□

Port size



Note) Purchasing order is available in units of 10 pieces.

C4	Applicable tubing ø4
C6	Applicable tubing ø6
C8	Applicable tubing ø8

⑮ Fitting assembly part no. (For P, R ports)

VVQ2000-51A-C10

Applicable tubing ø10



Note) Purchasing order is available in units of 10 pieces.



Note) A set of parts containing 12 pcs. each is enclosed.

<Replacement Parts for Manifold Block>

Replacement Parts


No.	Part no.	Description	Material	Number
⑩	VVQ2000-80A-1	Gasket	HNBR	12
⑪	VVQ2000-80A-2	Packing	HNBR	12
⑫	VVQ2000-80A-3	Clamp screw	Carbon steel	12
⑬	VVQ2000-80A-4	Clip	Stainless steel	12

Series VQ

Exploded View: VQ0000/Plug Lead Unit

(F, P, C, S kit)

* For how to increase the stations, refer to the instruction manual.

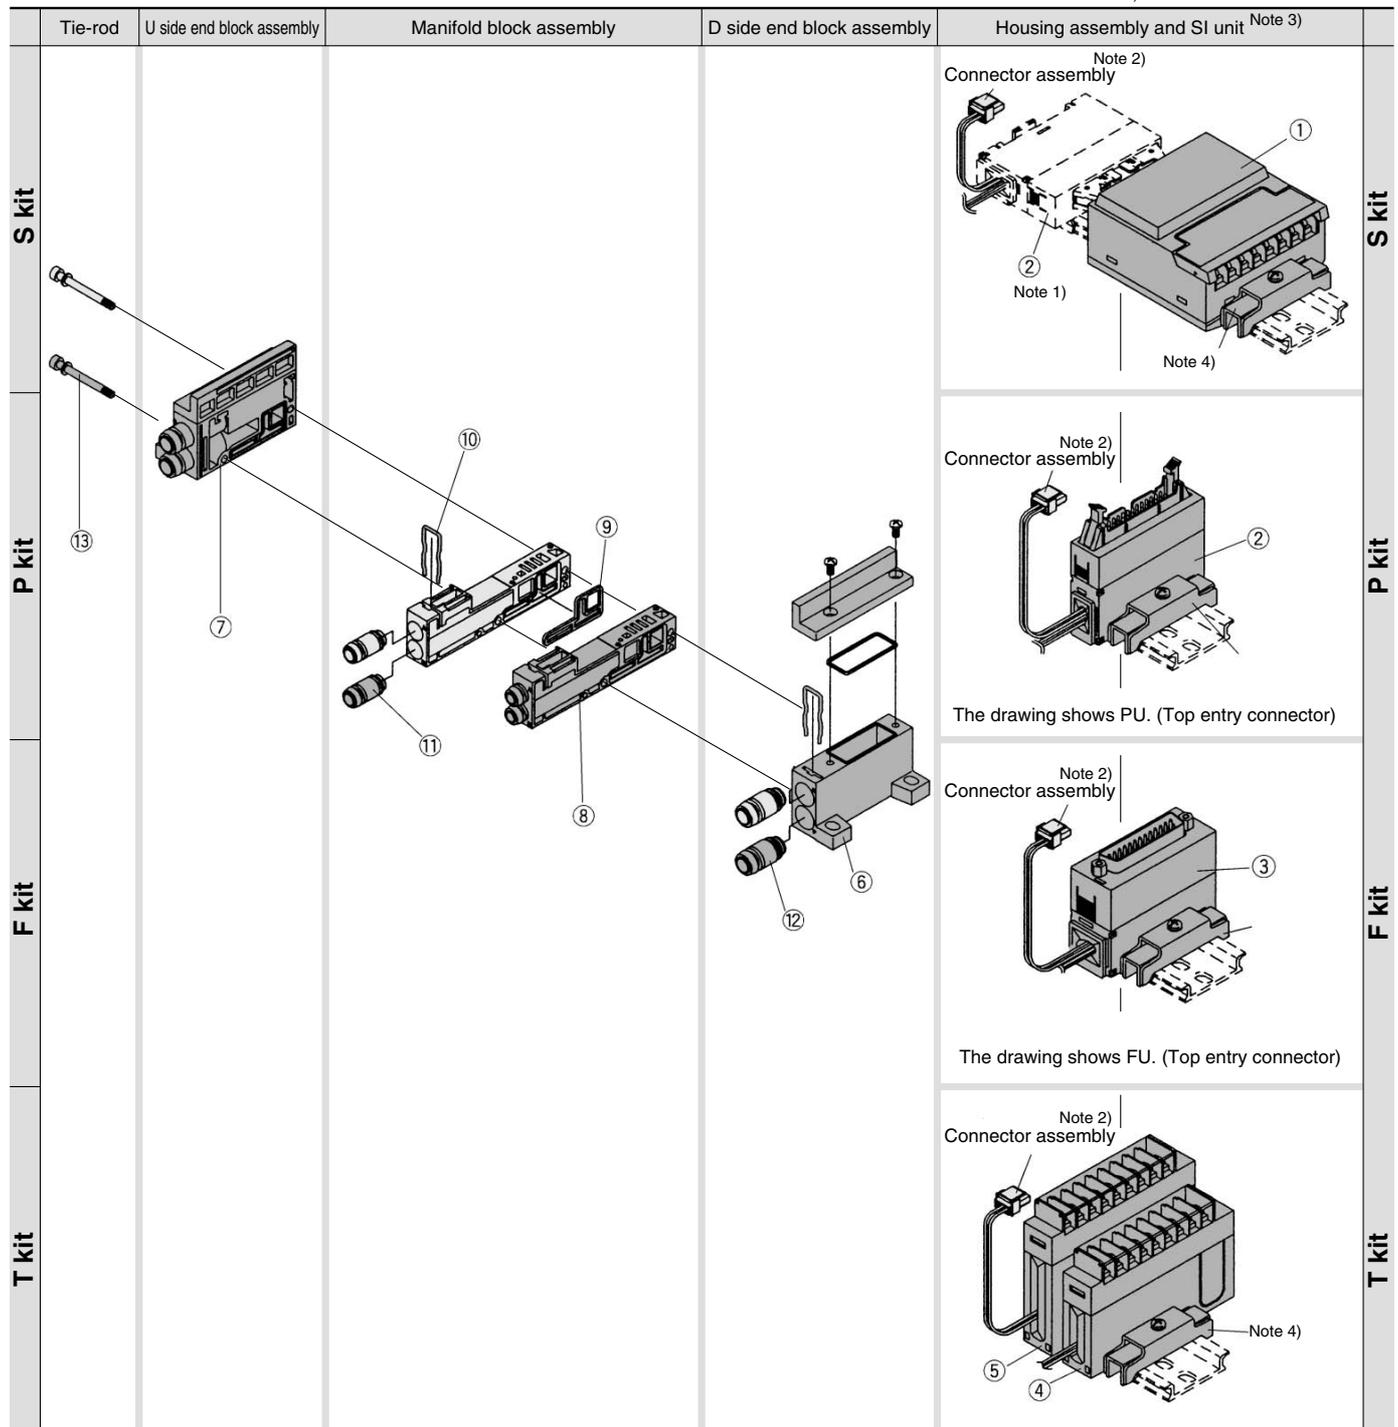

Note 1) S kit is composed of a flat ribbon cable housing assembly (AXT100-2-PS20) of ① SI unit and ② P kit (20 pins).

Note 2) Since no connector assembly is included, order it separately. (Refer to page 2-4-216.)

Note 3) A housing assembly is not used for a C kit.

Note 4) A DIN rail clamping bracket is attached to each.



<Housing Assembly and SI Unit>

Housing assembly and SI unit no.

No.	Manifold	Part no.	Description
①	(SA kit)	EX330-S001	General type SI unit (Series EX300)
	(SB kit)	EX130-SMB1	SI unit for MELSECNET/MINI-S3 Data Link System (Mitsubishi Electric Corp.)
	(SC kit)	EX130-STA1	SI unit for SYSBUS Wire System (OMRON Corporation)
	(SD kit)	EX130-SSH1	SI unit for Satellite I/O Link System (SHARP Corporation)
	(SF1 kit)	EX130-SUW1	16 point Uni-wire System (NKE Corporation)
	(SH kit)	EX130-SUH1	SI unit for 16 point Uni-wire H System (NKE Corporation)
②	P _S ^U kit	AXT100-2-P _S ^U □ ⁽²⁾	Flat ribbon cable housing assembly l = Number of pins: 26, 20, 16, 10
③	F _S ^U kit	AXT100-2-F _S ^U □ ⁽²⁾	D-sub connector housing assembly l = Number of pins: 25, 15
④	T kit	AXT100-2-TB1 ⁽⁴⁾	Terminal block assembly (8 terminals)
⑤	T kit	AXT100-2-TB2 ⁽⁴⁾	Terminal block assembly (8 terminals)



Note 1) S kit is composed of a flat ribbon cable housing assembly (AXT100-2-PS20) of ① SI unit and ② P kit (20 pins). Place an order for AXT100-2-PS20 separately.

Note 2) Top/vertical entry connector for FU and PU while side (horizontal) entry connector for FS and PS.



Note 3) Since no connector assembly is included, order it separately. (Refer to page 2-4-216.)

Note 4) In the case of standard specifications and double wiring, ④ is for 1 to ⑤ stations and t is for 5 to 8 stations.

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

<D Side End Plate Assembly>

⑥ D side end plate assembly no.

VVQ0000-3A-5-□

Option

Nil	Common exhaust type
S	Built-in silencer, direct exhaust



Note) The ⑫'s fitting assembly is included.

<U Side End Plate Assembly>

⑦ U side end plate assembly no.

VVQ0000-2A-5-□

Option

Nil	Common exhaust type
S	Built-in silencer, direct exhaust

<Manifold Block Assembly>

⑧ manifold block assembly no.

VVQ0000-1A-5-□

Port size

C3	With One-touch fitting for ø3.2
C4	With One-touch fitting for ø4
M5	M5 thread

<Replacement Parts for Manifold Block>

Replaceable Parts

No.	Part no.	Description	Material	Number
⑨	VVQ0000-80A-5-2	Seal	HNBR	12
⑩	VVQ0000-80A-5-4	Clip	HNBR	12



Note) A set of parts containing 12 pcs. each is enclosed.

<Fitting Assembly>

⑪ Fittings assembly part no. (For cylinder port)

VVQ0000-50A-□

Port size



Note) Purchasing order is available in units of 10 pieces.

C3	With One-touch fitting for ø3.2
C4	With One-touch fitting for ø4

⑫ Fitting assembly part no. (For P, R port)

VVQ1000-50A-C6

Applicable tubing ø6



Note) Purchasing order is available in units of 10 pieces.

<Tie-rod Bolt>

⑬ Tie-rod bolt

VVQ0000-103A-5-□

Stations

1	For 1 station
2	For 2 station
⋮	⋮
16	For 16 station




Note) 2 bolts per one set.

Series VQ

Exploded View: VQ1000/Plug Lead Unit

(F, P, T, S kit)

* For how to increase the stations, refer to the instruction manual.

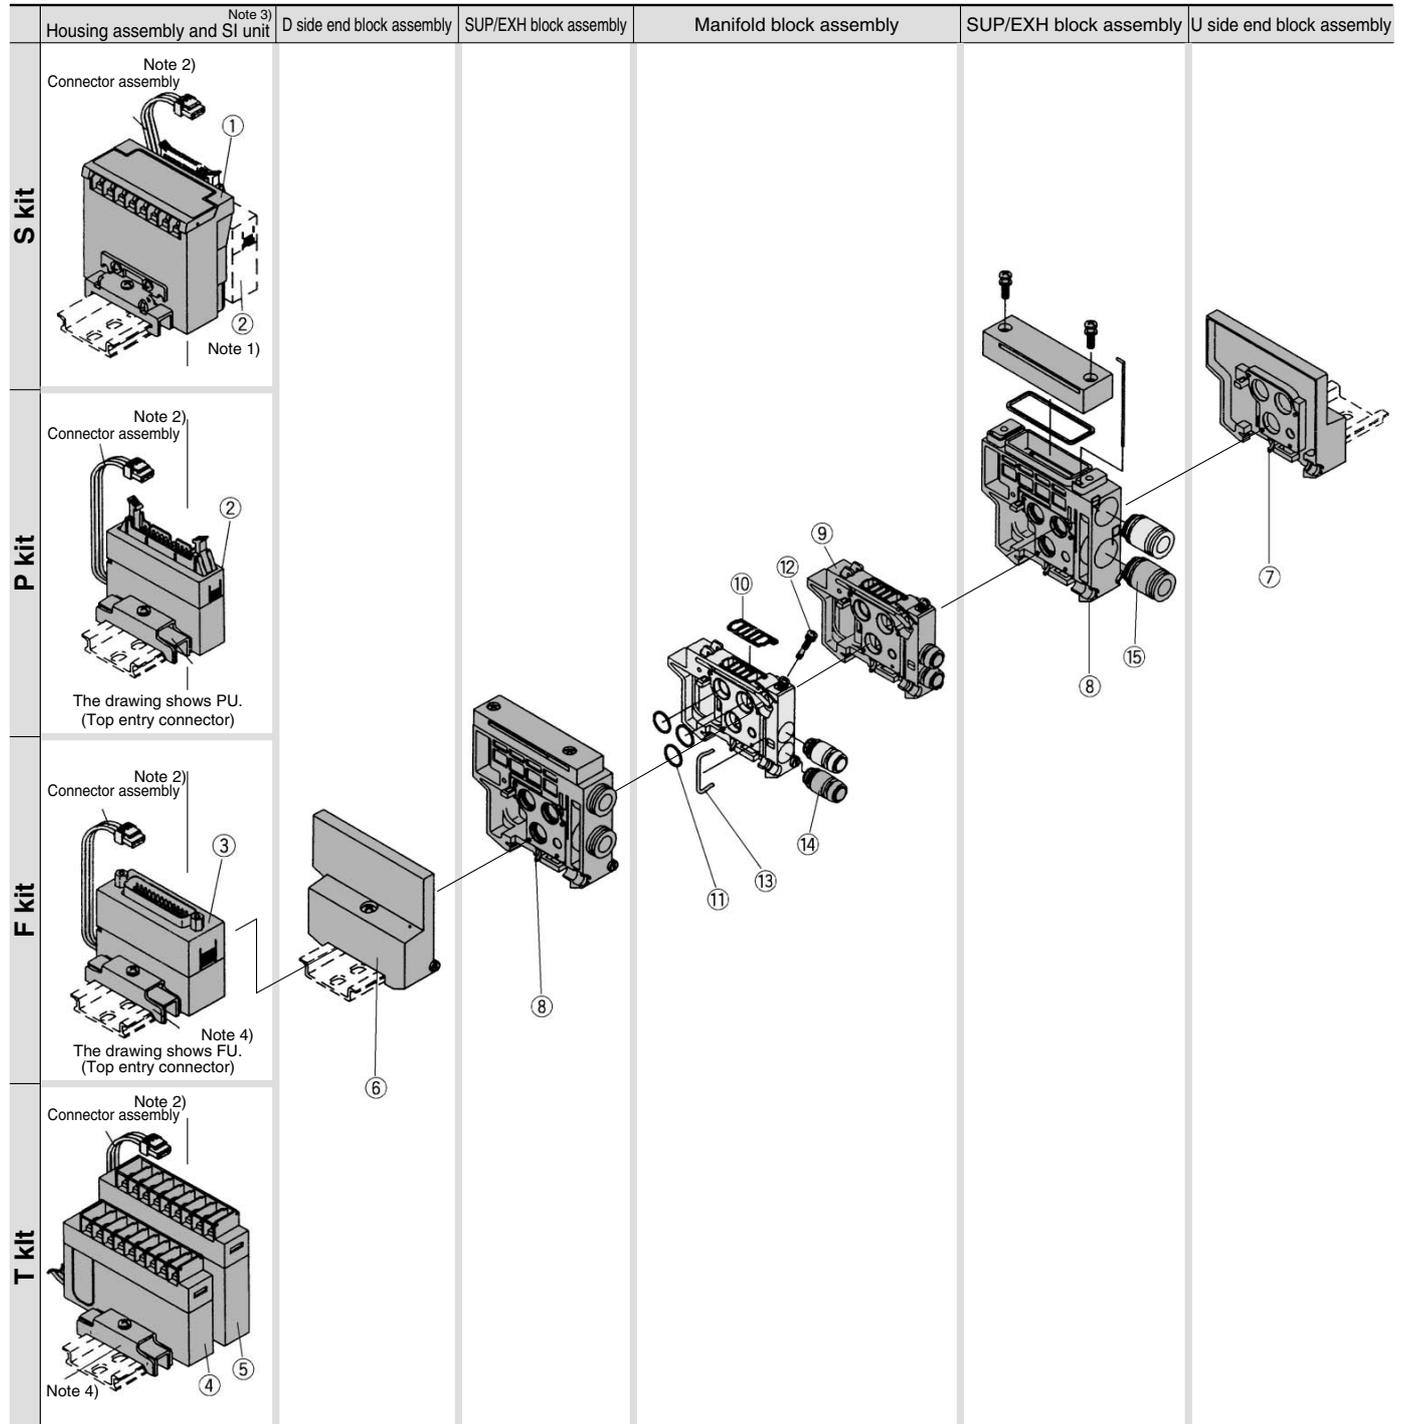

Note 1) S kit is composed of a flat ribbon cable housing assembly (AXT100-2-PU20) of ① SI unit and ② P kit (20 pins).

Note 2) Since no connector assembly is included, order it separately. (Refer to page 2-4-216.)

Note 3) A housing assembly is not used for a C kit.

Note 4) A DIN rail clamping bracket is attached to each.



<Housing Assembly and SI Unit>

Housing assembly and SI unit no.

No.	Manifold	Part no.	Description
	(SA kit)	EX321-S001(-XP) ⁽⁵⁾	General type SI unit (Series EX300)
	(SB kit)	EX121-SMB1(-XP) ⁽⁵⁾	SI unit for MELSECNET/MINI-S3 Data Link System (Mitsubishi Electric Corporation)
	(SC kit)	EX121-STA1(-XP) ⁽⁵⁾	SI unit for SYSBUS Wire System (OMRON Corporation)
	(SD kit)	EX121-SSH1(-XP) ⁽⁵⁾	SI unit for Satellite I/O Link System (SHARP Corporation)
	(SE kit)	EX121-SPA1	SI unit for MEWNET-F System (Matsushita Electric Works, Ltd.)
	(SF1kit)	EX121-SUW1(-XP) ⁽⁵⁾	SI unit for 16 point Uni-wire System (NKE Corporation)
	(SG kit)	EX121-SAB1(-XP) ⁽⁵⁾	SI unit for Allen Bradley Remote I/O (RIO) System (Rockwell Automation, Inc.)
①	(SH kit)	EX120-SUH1(-XP) ⁽⁵⁾	SI unit for 16 point Uni-wire H System (NKE Corporation)
	(SJ1 kit)	EX121-SSL1(-XP) ⁽⁵⁾	16 point S-LINK System (SUNX Corporation)
	(SJ2 kit)	EX121-SSL2(-XP) ⁽⁵⁾	8 point S-LINK System (SUNX Corporation)
	(SK kit)	EX121-SFU1(-XP) ⁽⁵⁾	T-LINK Mini System (Fuji Electric Co., Ltd.)
	(SQ kit)	EX121-SDN1	DeviceNet, CompoBus/D (OMRON Corporation)
	(SR1 kit)	EX121-SCS1(-XP) ⁽⁵⁾	OMRON Corporation: CompoBus/S System (16 output points)
	(SR2 kit)	EX121-SCS2(-XP) ⁽⁵⁾	OMRON Corporation: CompoBus/S System (8 output points)
	(SV kit)	EX120-SMJ1(-XP) ⁽⁵⁾	Mitsubishi Electric Corporation: CC-LINK System
②	P $\frac{U}{S}$ kit	AXT100-2-P $\frac{U}{S}$ □ ⁽²⁾	Flat ribbon cable housing assembly □ = Number of pins: 26, 20, 16, 10
③	F $\frac{U}{S}$ kit	AXT100-2-F $\frac{U}{S}$ □ ⁽²⁾	D-sub connector housing assembly □ = Number of pins: 25, 15
④	T kit	AXT100-2-TB1 ⁽⁴⁾	Terminal block assembly (8 terminals)
⑤	T kit	AXT100-2-TB2 ⁽⁴⁾	Terminal block assembly (8 terminals)

Note 1) A S kit is composed of a flat ribbon cable housing assembly (AXT100-2-PS20) of ① SI unit and ② P kit (20 pins).
Place an order for AXT100-2-PU20 separately.

Note 2) Top/vertical entry connector for FU and PU while side (horizontal) entry connector for FS and PS.

Note 3) Since no connector assembly is included, order it separately. (Refer to page 2-4-216.)

Note 4) In the case of standard specifications and double wiring, ④ is for 1 to 4 stations and ⑤ is for 5 to 8 stations.

Note 5) Suffix "-XP" for dust-protected type SI unit.

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

<D Side End Plate Assembly>

⑥ D side end plate assembly no.

VVQ1000-3A-2

<U Side End Plate Assembly>

⑦ U side end plate assembly no.

VVQ1000-2A-2

<SUP/EXH block Assembly>

⑧ SUP/EXH block assembly no.

VVQ1000-PR-2-C8-□

Option

Nil	Common exhaust type
S	Built-in silencer, direct exhaust

Note) The ⑮'s fitting assembly is included.

<Replacement Parts for Manifold Block>

Replaceable Parts

No.	Part no.	Description	Material	Number
⑩	VVQ1000-80A-1	Gasket	HNBR	12
⑪	VVQ1000-80A-2-2	O-ring	HNBR	12
⑫	VVQ1000-80A-3	Clamp screw	Carbon steel	12
⑬	VVQ1000-80A-2-4	Clip	Stainless steel	12

Note) A set of parts containing 12 pcs. each is enclosed.

<Fitting Assembly>

⑭ Fitting assembly part no. (For cylinder port)

VVQ1000-50A-□

Port size

C3	Applicable tubing ø3.2
C4	Applicable tubing ø4
C6	Applicable tubing ø6
M5	With M5 thread

Note) Purchasing order is available in units of 10 pieces.

<Manifold Block Assembly>

⑧ Manifold block assembly no.

VVQ1000-1A-2-□

Port size

C3	With One-touch fitting for ø3.2
C4	With One-touch fitting for ø4
C6	With One-touch fitting for ø6
M5	M5 thread

⑮ Fitting assembly part no. (For P, R port)

VVQ1000-51A-C8

Applicable tubing ø8


Note) Purchasing order is available in units of 10 pieces.

5 Port Solenoid Valve Metal Seal/Rubber Seal Base Mounted Series VQ4000

Space-saving profile

Clean space-saving design with all pilot valves concentrated to one side with no protrusions in any direction

Space-saving — 40% less
Capacity-saving — 50% less
(In-house comparison)

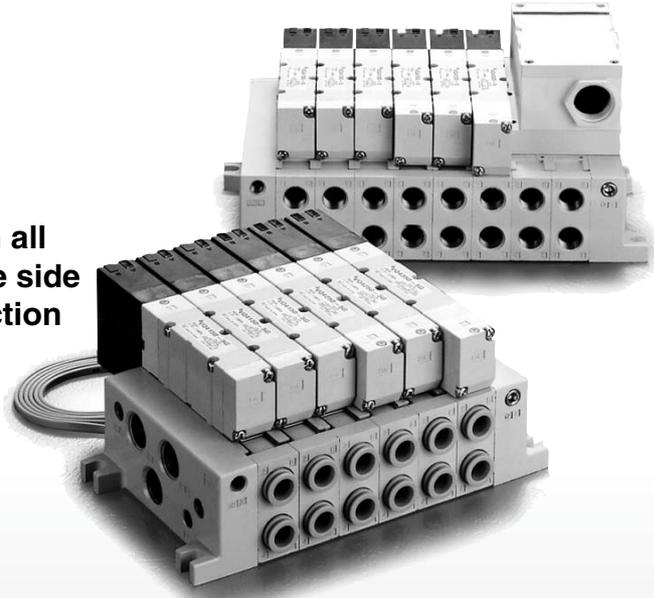


- VQC
- SQ
- VQ0
- VQ4**
- VQ5
- VQZ
- VQD

Compact with large flow capacity
(Ideal for driving cylinders up to $\phi 140$)

Built-in One-touch fittings for easier piping

Enclosure IP65 compliant Dusttight/Low jetproof type

Cylinder Speed Chart

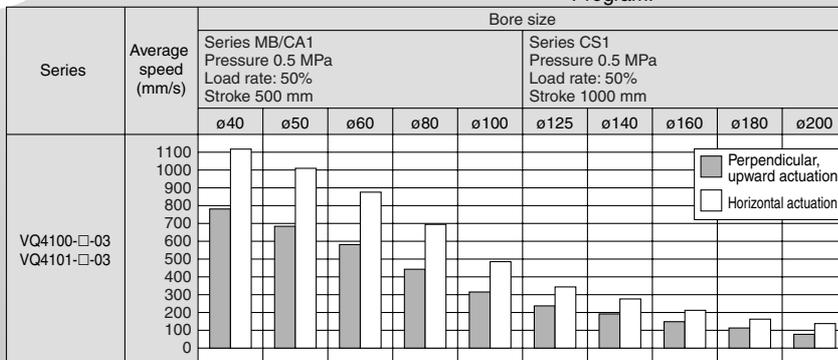

* It is when the cylinder is extending that is meter-out controlled by speed controller which is directly connected with cylinder, and its needle valve with being fully open.
* The average velocity of the cylinder is what the stroke is divided by the total stroke time.
* Load factor: $((\text{Load weight} \times 9.8) / \text{Theoretical force}) \times 100\%$

System Components

Speed controller	Silencer	SPG (Steel pipe) dia. x Length
AS420-03	AN300-03	10A x 1 m


Outstanding response times and long service life

(Metal seal with indicator light/surge suppressor)
VQ4100 17 mS (Single)
VQ4200 12 mS (Double)
Accuracy ± 3 mS
100 million cycles
* According to SMC life test conditions

Use as a guide for selection. Please confirm the actual conditions with SMC Sizing Program.


A variety of common wiring methods are standardized.

<Plug-in type>

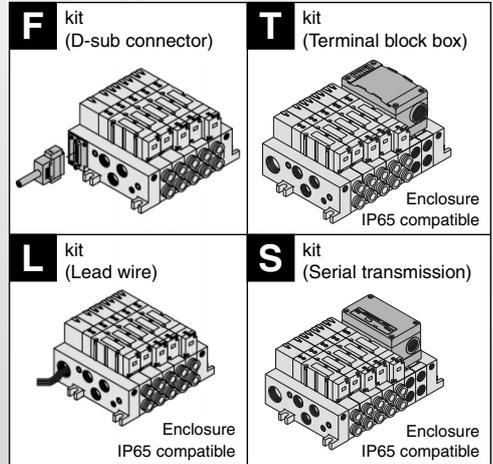

Individual wiring type

<Plug lead type>

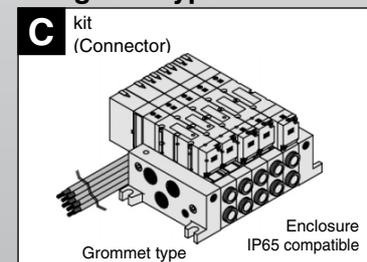

⚠ Precautions 1


Be sure to read before handling. For Safety Instructions and Solenoid Valve Precautions, refer to page 2-9-2.

Manual Override Operation

⚠ Warning


Since connected equipment will be actuated when the manual override is operated, first confirm that conditions are safe. Non-locking push type (tool required) is standard. As an option, slotted locking type (tool required) is available.

Push type (Tool required)

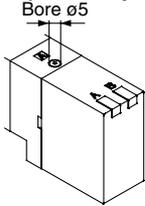


Push down on the manual override button with a small screwdriver until it stops. Release the screwdriver and the manual override will return.

Locking type (Tool required) <Option>

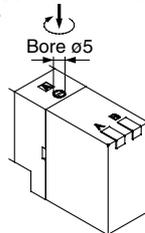

Push down completely on the manual override button with a small screwdriver. While down, turn clockwise 90° to lock it. Turn it counterclockwise to release it.

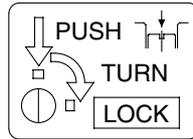


Mounting of Valves

⚠ Caution

After confirming the gasket is correctly placed under the valve, securely tighten the bolts with the proper torque shown in the table below.

Proper tightening torque


0.8 to 1.2

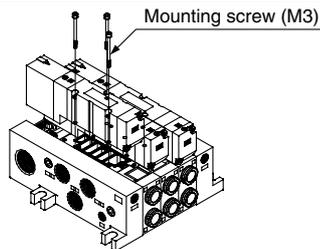

Changing the One-touch Fittings

⚠ Caution

The built-in One-touch fittings on the cylinder port side are easily replaceable because of the cassette type. Clip prevents the fittings to come off. After removing the corresponding valve and take out the clip with a screwdriver, etc., then replace the fittings. About mounting the fittings, after inserting the fitting until it stops, then put the clip into the prescribed position.

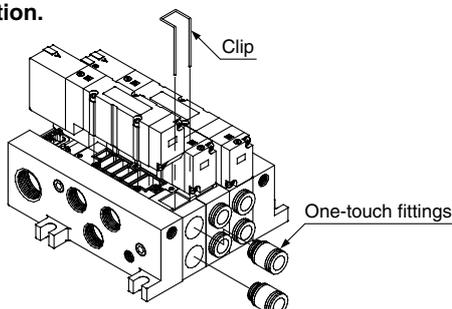


Lead Wire Connection

⚠ Caution

Plug-in sub-plate (With terminal block)

● If the junction cover (1) of the sub-plate is removed, you can see the plug-in type terminal block (2) mounted inside the sub-plate.

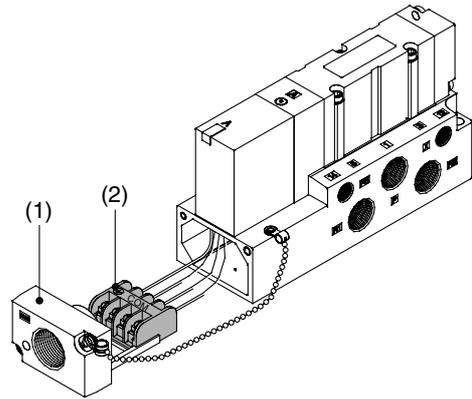

● The terminal block is marked as follows. Connect wiring to each of the power supply terminals.

Model	Terminal block marking	A	COM	B	\bar{T}
VQ410 ₀		A side	COM	—	—
VQ420 ₀		A side	COM	B side	—
VQ430 ₀ VQ450 ₀ VQ460 ₀		A side	COM	B side	—


Note 1) There is no polarity. It can also be used as -COM.

Note 2) Double wiring is used on sub-plate VQ410₀.

• Applicable terminal 1.25-3S, 1.25Y-3, 1.25Y-3N, 1.25Y-3.5

Plug lead: Grommet type

Make connections to each corresponding wire.

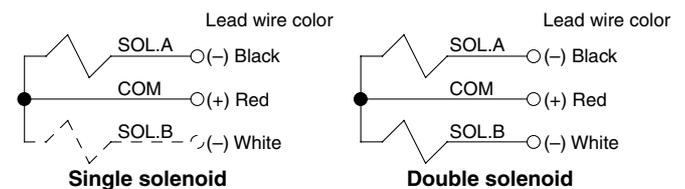

	Single solenoid	Double solenoid
Standard	Black: A side solenoid (-) Red: COM (+)	Black: A side solenoid (-) Red: COM (+) White: B side solenoid (-)
Enclosure IP65 compliant	Black: A side solenoid (-) Red: COM (+) White: B side solenoid (-) Green: (Not used for single or double.)	Black: A side solenoid (-) Red: COM (+) White: B side solenoid (-) (Not used for single solenoid)

Note) There is no polarity. It can also be used as -COM.

⚠ Precautions 2

Be sure to read before handling. For Safety Instructions and Solenoid Valve Precautions, refer to pages 2-9-2.

Installation and Removal of Light Cover

⚠ Caution


Installation/Removal of light cover

● Removal

Open the cover by inserting a small flat head screwdriver into the slot on the side of the pilot assembly (see drawing below), lift the cover out about 1 mm and then pull off. If it is pulled off at an angle, the pilot valve may be damaged or the protective O-ring may be scratched.

● Installation

Place the cover straight over the pilot assembly so that the pilot valve is not touched, and push it until the cover hook locks without twisting the protective O-ring. (When pushed in, the hook opens and locks automatically.)

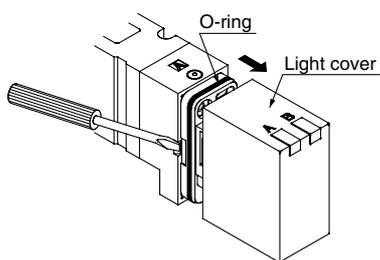


Replacement of Pilot Valve

⚠ Caution


● Removal

1. Remove the mounting screw that holds the pilot valve using a small screwdriver.
2. When equipped with light, remove the light circuit board which is installed on the pilot valve by pulling it straight off the connector pins.

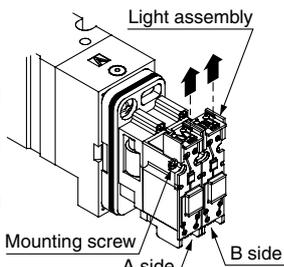

● Installation

1. Insert the light circuit board straight onto the connector pins following the guide. If it is pushed in forcibly without following the guide, there is a danger of possibly bending the board contacts.
2. After confirming the gasket is correctly placed under the valve, securely tighten the bolts with the proper torque shown in the table below.

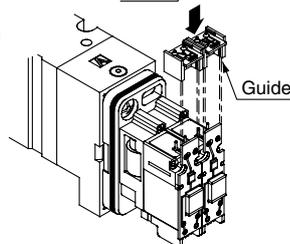


Proper tightening torque (N·m)

0.1 to 0.13

Note) The mounting of pilot valves is not directional with respect to the A and B sides.

However, the light circuit boards' A side is orange and the B side is green. It must be mounted on the pilot valve in accordance with the mounting indicators. The light will not go on if the mounting is reversed.

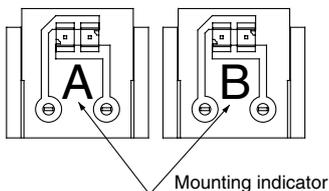

Light Circuit Board Part No.


SOL.A	VQZ100-47-A
SOL.B	VQZ100-47-B

Note) It can be used with all voltages.

For Plug Lead Type

Attaching and detaching connectors


- To attach a connector, hold the lever and connector unit between your fingers and insert straight onto the pins of the solenoid valve so that the lever's pawl is pushed into the groove and locks.
- To detach a connector, remove the pawl from the groove by pushing the lever downward with your thumb, and pull the connector straight out.

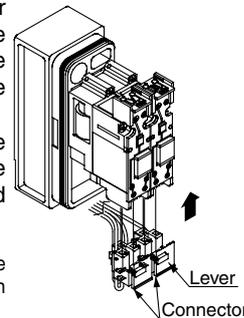

Note) Do not pull on the lead wires with excessive force. This can cause faulty and/or broken contacts.


Internal Wiring Specifications

⚠ Caution

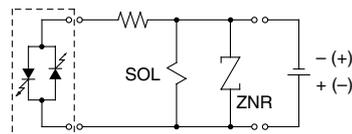

Light circuit assembly (Orange)


DC: Single

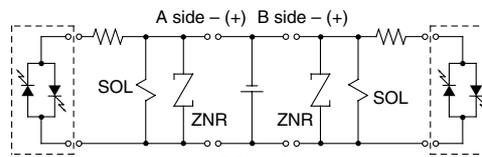

A side light circuit assembly (Orange)


DC: Double

B side light circuit assembly (Green)

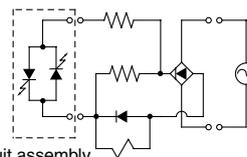

Light circuit assembly (Orange)

AC: Single

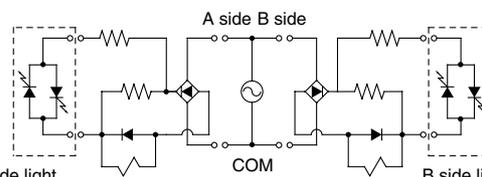

A side light circuit assembly (Orange)

AC: Double

B side light circuit assembly (Green)

Enclosure IP65

⚠ Caution

Wires, cables, connectors, etc. used for models conforming to IP65 should also have enclosures equivalent to or stricter rating than IP65.

How to Calculate the Flow Rate

For obtaining the flow rate, refer to pages 2-1-8 to 2-1-11.

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD


Series VQ4000

Base Mounted

Plug-in/Plug Lead Single Unit

Model

Series	Configuration	Model	Port size	Flow characteristics						Response time (ms)			Weight (kg)	
				1 → 4/2 (P → A/B)			4/2 → 5/3 (A/B → EA/EB)			Standard 1 W	Low wattage 0.5 W	AC		
				C [dm ³ /(s·bar)]	b	Cv	C [dm ³ /(s·bar)]	b	Cv					
VQ4000	2 position	Single	Metal seal VQ41 ⁰ ₅₀	Rc 3/8	6.2	0.19	1.5	6.9	0.17	1.7	20 or less	22 or less	22 or less	0.23 (0.29)
			Rubber seal VQ41 ⁰ ₅₁		7.2	0.43	2.1	7.3	0.38	2.0	25 or less	27 or less	27 or less	
		Double	Metal seal VQ42 ⁰ ₅₀		6.2	0.19	1.5	6.9	0.17	1.7	12 or less	14 or less	14 or less	
			Rubber seal VQ42 ⁰ ₅₁		7.2	0.43	2.1	7.3	0.38	2.0	15 or less	17 or less	17 or less	
	3 position	Closed center	Metal seal VQ43 ⁰ ₅₀		5.9	0.23	1.5	6.3	0.18	1.6	45 or less	47 or less	47 or less	0.28 (0.34)
			Rubber seal VQ43 ⁰ ₅₁		7.0	0.34	1.9	6.4	0.42	1.9	50 or less	52 or less	52 or less	
		Exhaust center	Metal seal VQ44 ⁰ ₅₀		6.2	0.18	1.5	6.9	0.17	1.7	45 or less	47 or less	47 or less	0.28 (0.34)
			Rubber seal VQ44 ⁰ ₅₁		7.0	0.38	1.9	7.3	0.38	2.0	50 or less	52 or less	52 or less	
		Pressure center	Metal seal VQ45 ⁰ ₅₀		6.2	0.18	1.6	6.4	0.18	1.6	45 or less	47 or less	47 or less	0.28 (0.34)
			Rubber seal VQ45 ⁰ ₅₁		7.0	0.38	1.9	7.1	0.38	2.0	50 or less	52 or less	52 or less	
		Double check	Metal seal VQ46 ⁰ ₅₀		2.7	—	—	3.7	—	—	55 or less	57 or less	57 or less	0.50 (0.56)
			Rubber seal VQ46 ⁰ ₅₁		2.8	—	—	3.9	—	—	62 or less	64 or less	64 or less	

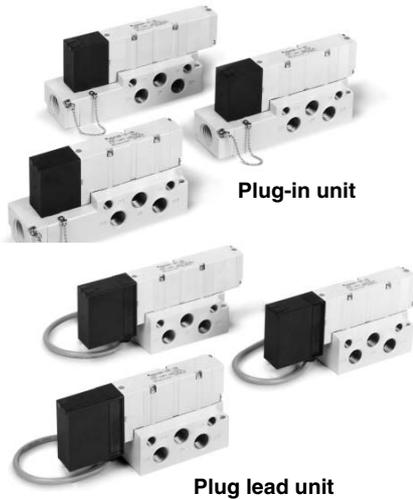

Plug-in unit

Plug lead unit



- Note 1) Value for valve on sub-plate and cylinder port Rc 3/8
 Note 2) Based on JIS B 8375-1981 Supply pressure: 0.5 MPa, with indicator light and surge voltage suppressor, clean air. This will change depending on pressure and air quality.) The value when ON for the double type.
 Note 3) Values inside () indicate the weight of plug lead units.
 Table: Without sub-plate, With sub-plate: Add 0.41 kg for plug-in type, 0.30 kg for plug lead type.

Standard Specifications

Valve specifications	Valve construction		Metal seal	Rubber seal
	Fluid		Air/Inert gas	Air/Inert gas
	Maximum operating pressure ⁽³⁾		1.0 MPa (0.7 MPa)	
	Min. operating pressure	Single	0.15 MPa	0.20 MPa
		Double	0.15 MPa	0.15 MPa
		3 position	0.15 MPa	0.20 MPa
	Ambient and fluid temperature		-10 to 50°C ⁽¹⁾	-5 to 50°C ⁽¹⁾
	Lubrication		Not required	
	Manual override		Push type/Locking type (Tool required) Option	
	Shock/Vibration resistance		150/30 m/s ²	
Enclosure		Dust tight (IP65 compatible)		
Solenoid specifications	Coil rated voltage		12, 24 VDC, 100, 110, 200, 220 VAC (50/60 Hz)	
	Allowable voltage fluctuation		±10% of rated voltage	
	Coil insulation type		Class B or equivalent	
	Power consumption (Current)	24 VDC	1 W DC (42 mA), 0.5 W DC (21 mA)	
		12 VDC	1 W DC (83 mA), 0.5 W DC (42 mA)	
		100 VAC	Inrush 1.2 VA (12 mA), Holding 1.2 VA (12 mA)	
		110 VAC	Inrush 1.3 VA (11.7 mA), Holding 1.3 VA (11.7 mA)	
200 VAC	Inrush 2.4 VA (12 mA), Holding 2.4 VA (12 mA)			
	220 VAC	Inrush 2.6 VA (11.7 mA), Holding 2.6 VA (11.7 mA)		




- Note 1) Use dry air to prevent condensation when operating at low temperatures.
 Note 2) Impact resistance: No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)
 Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)


Note 3) Values inside () denote the low wattage (0.5 W) specifications.

JIS Symbol


2 position single

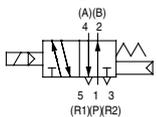


3 position closed center

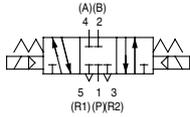


2 position double (Metal)

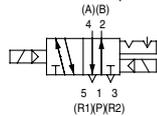


3 position exhaust center

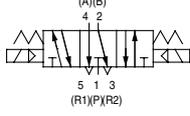


2 position double (Rubber)

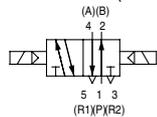

3 position pressure center

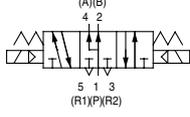


3 position double check

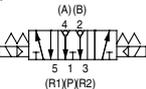

How to Order Valves

Body

0: Plug-in sub-plate

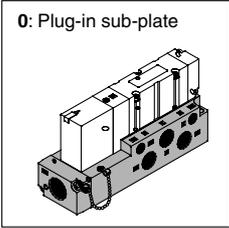

Port size

Nil	Without sub-plate (For manifold)
02	Rc 1/4
03	Rc 3/8

Note) For thread standard, refer to page 2-5-39.

Porting specifications

Nil	Side ported
B	Bottom ported

Plug-in VQ4 1 0 0

Plug lead VQ4 2 5 1

Type of actuation

1	2 position single	3	3 position closed center
2	2 position double	4	3 position exhaust center
	2 position double	5	3 position pressure center
		6	3 position double check
			Note) For double check style, refer to page 2-5-36.


Note) For double check style, refer to page 2-5-36.

Enclosure

Nil	Dust-protected
W	Dusttight/Low jetproof type (IP65)

Manual override

Nil: Non-locking push type (Tool required)	B: Slotted locking type (Tool required)
--	---

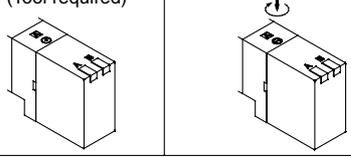


Light/Surge voltage suppressor

Nil	Yes
E	Without light, with surge voltage suppressor

Electrical entry

Grommet	G	Lead wire length 0.6 m
	H	Lead wire length 1.5 m

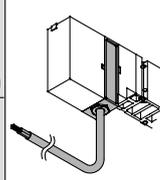

Coil voltage

1	100 VAC (50/60 Hz)
2	200 VAC (50/60 Hz)
3	110 VAC (50/60 Hz)
4	220 VAC (50/60 Hz)
5	24 VDC
6	12 VDC

Seal

0	Metal seal
1	Rubber seal


Function

Nil	Standard type (1 W)
Y ⁽¹⁾	Low wattage type (0.5 W)
R ⁽²⁾	External pilot

Note 1) Applicable to DC specifications.
 Note 2) For external pilot specifications, refer to page 2-5-39. Combination of external pilot and perfect interface is not possible.
 Note 3) When two or more symbols are specified, indicate them alphabetically.

Body

5: Plug lead sub-plate

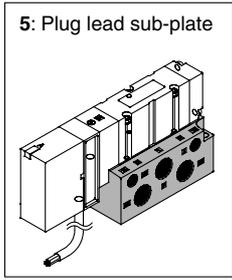

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

How to Order Sub-plates

VQ4000

Electrical entry

P	Plug-in conduit terminal
S	Plug lead

Port size

02	Rc 1/4
03	Rc 3/8

Note 1) For bottom ported port size is RC 1/4 only.
 Note 2) For thread standard, refer to page 2-5-39.

Porting specifications

Nil	Side ported
B	Bottom ported ⁽¹⁾

Enclosure

Nil	Dust-protected
W ^{Note)}	Dusttight/Low jetproof type

Note) It is not necessary for plug lead type.



Replacement of pilot valve assembly (Voltage)

- Refer to pages 2-5-44 and 2-5-45 for pilot valve assembly part numbers.
- For "How to Replace", refer to page 2-5-3.

Plug-in Type





Conduit terminal

2 position single: VQ410⁰-□

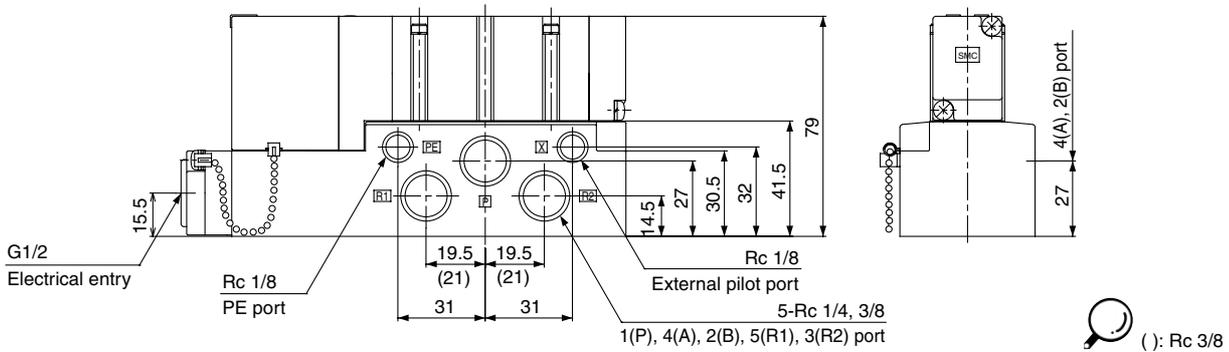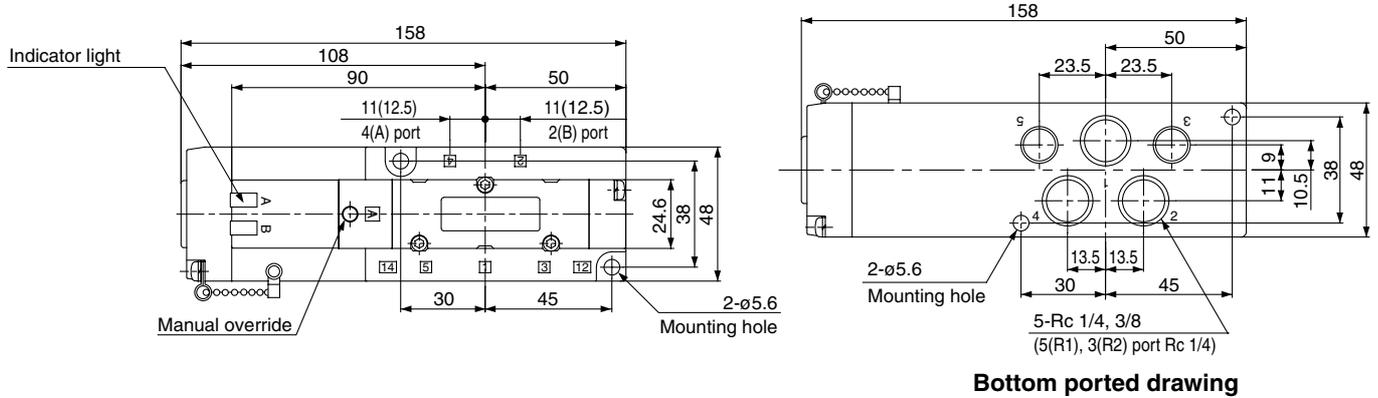

- 2 position double: VQ420⁰-□
- 3 position closed center: VQ430⁰-□
- 3 position exhaust center: VQ440⁰-□
- 3 position pressure center: VQ450⁰-□

3 position double check: VQ460⁰-□

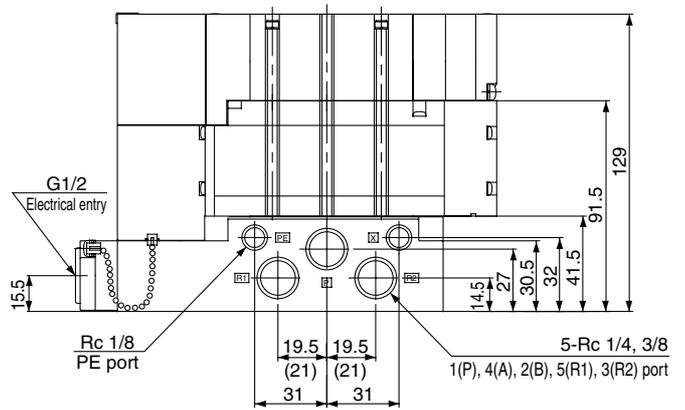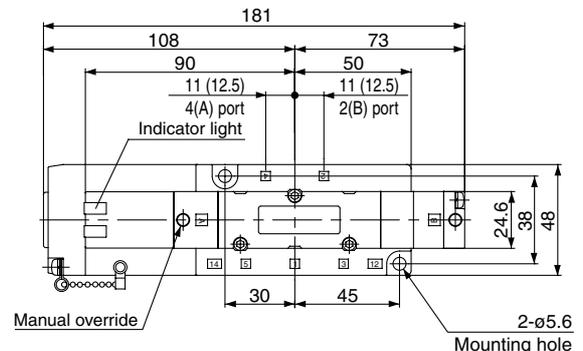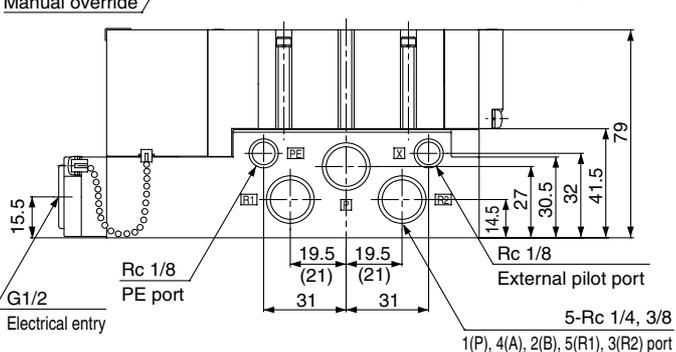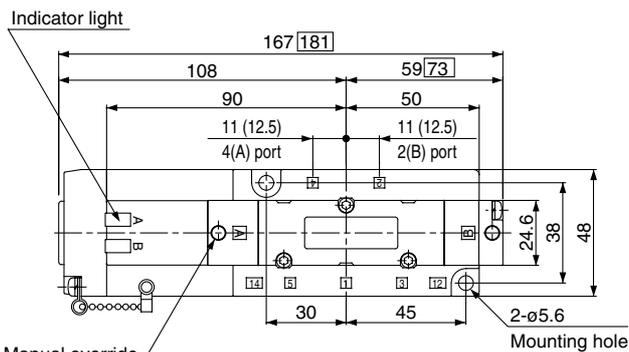


() : 3 position
() : Rc 3/8

Plug Lead Type

Grommet

2 position single: VQ415 $\frac{0}{1}$ -□ $\frac{G}{H}$

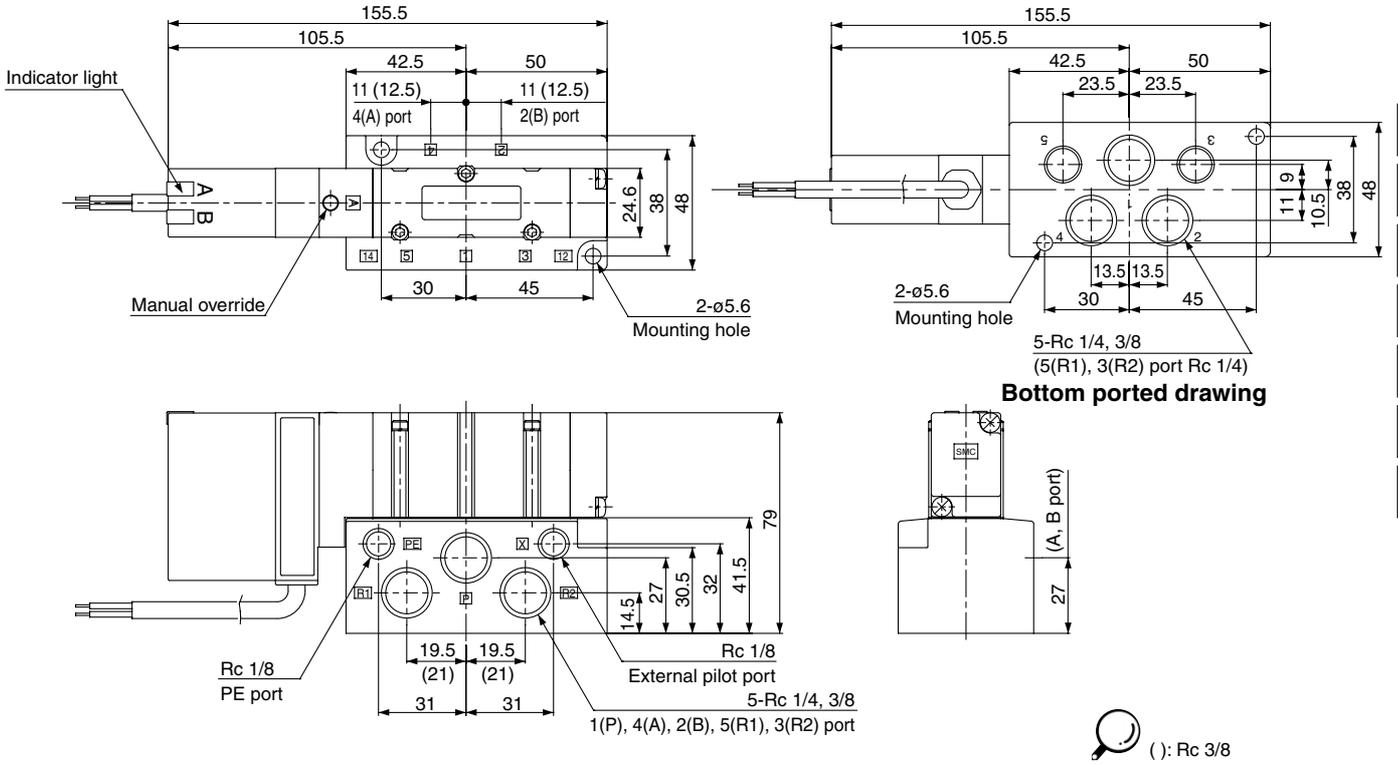


2 position double: VQ425 $\frac{0}{1}$ -□ $\frac{G}{H}$


3 position closed center: VQ435 $\frac{0}{1}$ -□ $\frac{G}{H}$

3 position exhaust center: VQ445 $\frac{0}{1}$ -□ $\frac{G}{H}$

3 position pressure center: VQ455 $\frac{0}{1}$ -□ $\frac{G}{H}$

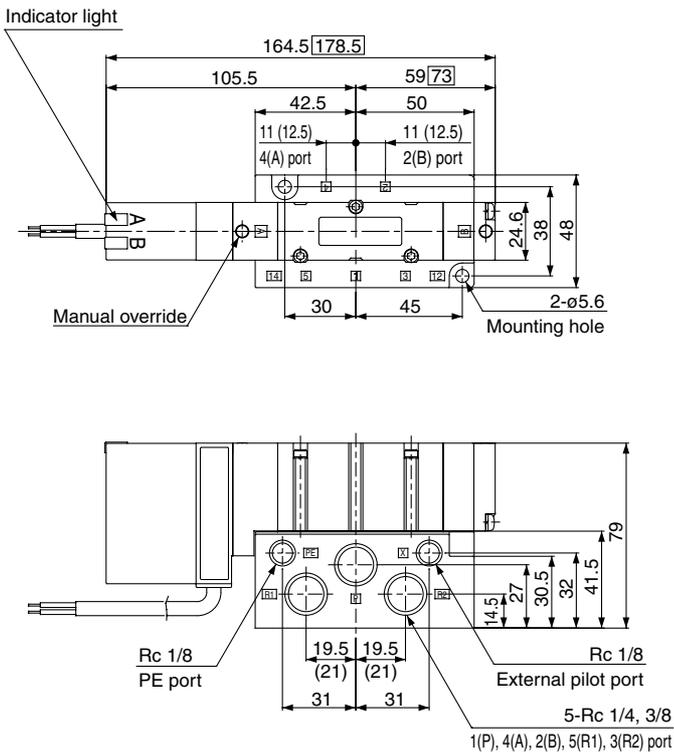


3 position double check: VQ465 $\frac{0}{1}$

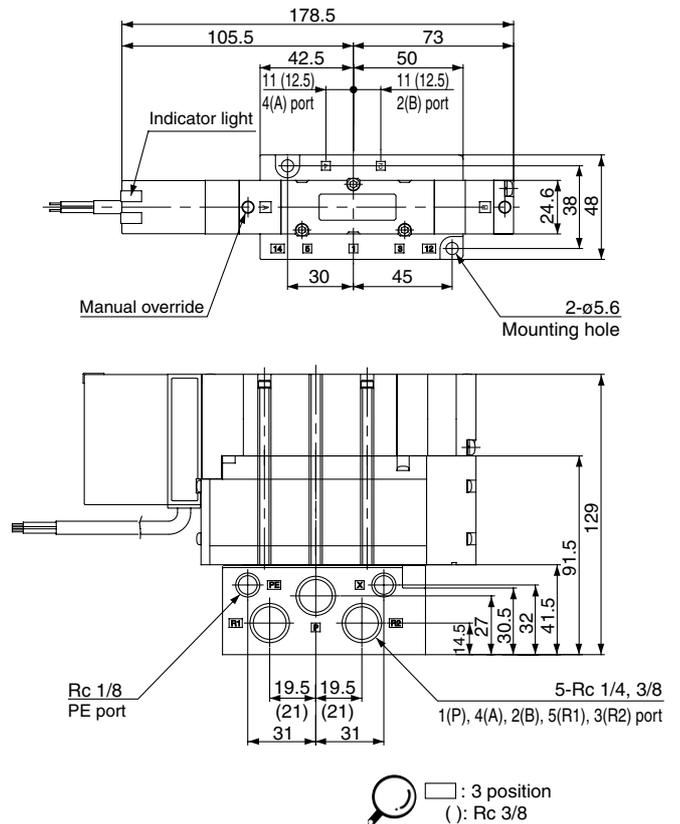

Series VQ4000

Base Mounted Plug-in Unit

How to Order Manifold

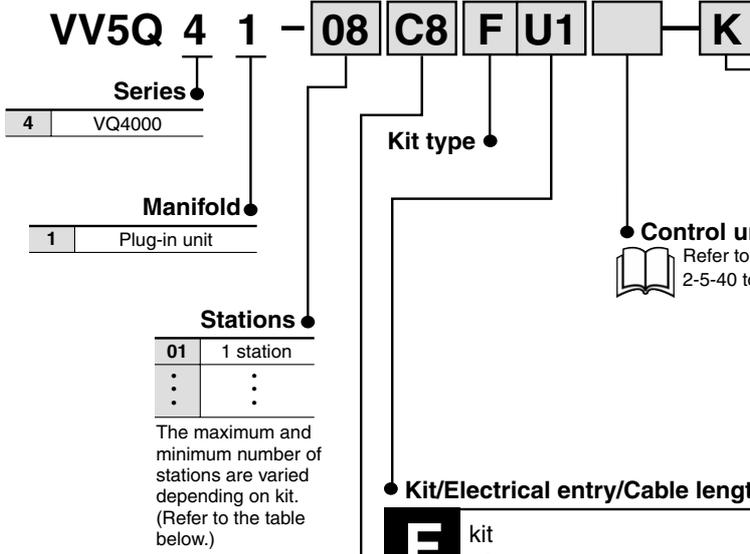

Symbol	Option
Nil	None
CD ⁽²⁾	Exhaust cleaner: For D side mounting
CU ⁽²⁾	Exhaust cleaner: For U side mounting
K ⁽³⁾	Special wiring specifications (Except double wiring)
N	Name plate (T kit only)
SB	Direct exhaust with silencer box: Exhaust from both sides (F/L kits only)
SD ⁽²⁾	Direct exhaust with silencer box: D side exhaust
SU ⁽²⁾	Direct exhaust with silencer box: U side exhaust
W	Enclosure IP65 (Except F kit)

Note 1) When two or more symbols are specified, indicate them alphabetically.
Example) -CDK
Note 2) Combination of [C^U] and [S^U] is not possible.
Note 3) Specify the wiring specifications on the manifold specification sheet. (Except L kit)

Cylinder port


C8	With One-touch fitting for ø8
C10	With One-touch fitting for ø10
C12	With One-touch fitting for ø12
02	Rc 1/4
03	Rc 3/8
B	Bottom ported Rc 1/4
CM	Mixed

F kit (D-sub connector)

Connector entry direction				
D side	U side			
Kit D0	Kit U0	Without cable	1 to 18 stations	
F D1	F U1	Cable length 1.5 m		
F D2	F U2	Cable length 3 m		
F D3	F U3	Cable length 5 m		

T kit (Terminal block box kit)

Terminal block mounting position		IP65 compatible	
D side	U side		
TD	TO	Terminal block box	3 to 18 stations

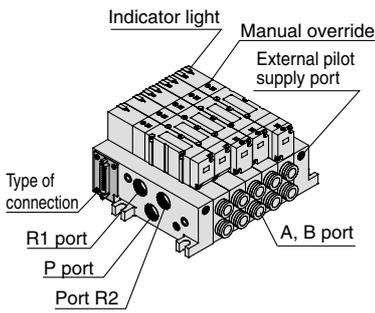

L kit (Lead wire cable)

Electrical entry		IP65 compatible	
D side	U side		
Kit L D0	Kit U0	Cable length 0.6 m	1 to 16 stations
L D1	L U1	Cable length 1.5 m	
L D2	L U2	Cable length 3 m	

S kit (Serial transmission unit)

The valve is equipped with a lamp/surge suppressor, and the voltage is 24 VDC.

Unit mounting position		IP65 compatible	
D side	U side		* Applicable to INPUT and OUTPUT type.
0		Without SI unit	
A		With general type SI unit (Series EX300)	
B		Mitsubishi Electric Corp.: MELSECNET/MINI-S3 Data Link System	
BB		Mitsubishi Electric Corp.: MELSECNET/MINI-S3 Data Link System (2 power supply systems)	
C		OMRON Corp.: SYSBUS Wire System	
D		SHARP Corp.: Satellite I/O Link System	
F1		NKE Corp.: Uni-wire System (16 output points)	
J1		SUNX Corp.: S-LINK System (16 output points)	
J2		SUNX Corp.: S-LINK System (8 output points)	
K		Fuji Electric Co.: T-LINK Mini System	
Q		DeviceNet, CompoBus/D (OMRON Corp.)	
R1		OMRON Corp.: CompoBus/S System (16 output points)	
R2		OMRON Corp.: CompoBus/S System (8 output points)	
U		JEMANET (JPCN-1)	
V		Mitsubishi Electric Corp.: CC-LINK System	
G		Rockwell Automation: Allen Bradley Remote I/O (RIO) System	
H		NKE Corp.: Uni-wire H System	

3 to 18 stations

Note) Shown VV5Q41-05C12FD0

Simple specials are available with SMC Simple Special System. For details about applicable models, please contact SMC.

* For INPUT and OUTPUT type, refer to pages 2-5-26 to 2-5-29.

Manifold Specifications

Series	Base model	Type of connection	Porting specifications			Maximum applicable stations	Applicable solenoid valve	5 station weight (kg)
			4(A), 2(B) port location	Port size <small>Note)</small>				
				1(P), 5(R1), 3(R2)	4(A), 2(B)			
VQ4000	VV5Q41-□□□	<ul style="list-style-type: none"> ■ F kit-D-sub connector ■ T kit-Terminal block box ■ L kit-Lead wire ■ S kit-Serial transmission 	Side	Rc 1/2 Option (Direct exhaust with silencer box)	C8 (For ø8) C10 (For ø10) C12 (For ø12)	F, T kit 12 stations L kit 16 stations S kit 10 stations	VQ4□00 VQ4□01	2.24 • L kit • Except solenoid valve weight
			Bottom		Rc 1/4			



Note) For details about inch-size One-touch fittings and other thread standards, refer to page 2-5-39.

Flow Characteristics at the Number of Manifold Stations (Operated individually)

Model	Passage/Stations	Station 1	Station 5	Station 10	Station 15	
2 position metal seal VQ4 ₂ 00	1 → 4/2 (P → A/B)	C [dm ³ /(s·bar)]	5.9	5.9	5.9	5.9
		b	0.23	0.23	0.23	0.23
		Cv	1.5	1.5	1.5	1.5
	4/2 → 5/3 (A/B → EA/EB)	C [dm ³ /(s·bar)]	6.2	6.2	6.2	6.2
		b	0.19	0.19	0.19	0.19
		Cv	1.5	1.5	1.5	1.5
2 position rubber seal VQ4 ₂ 01	1 → 4/2 (P → A/B)	C [dm ³ /(s·bar)]	6.8	6.8	6.8	6.8
		b	0.31	0.31	0.31	0.31
		Cv	1.8	1.8	1.8	1.8
	4/2 → 5/3 (A/B → EA/EB)	C [dm ³ /(s·bar)]	7.0	7.0	7.0	7.0
		b	0.38	0.38	0.38	0.38
		Cv	1.9	1.9	1.9	1.9



Note) Port size: Rc 3/8

Manifold Option

<p>Blanking plate assembly VVQ4000-10A-1</p>	<p>Individual SUP spacer VVQ4000-P-1-₀₂/₀₃</p>	<p>Individual EXH spacer VVQ4000-R-1-₀₂/₀₃</p>	<ul style="list-style-type: none"> • Refer to pages 2-5-34 to 2-5-38 for detailed dimensions of each option. For replacement parts, refer to page 2-5-47. • Refer to pages 2-5-40 to 2-5-43 for control unit.
<p>Throttle valve spacer VVQ4000-20A-1</p>	<p>SUP stop valve spacer VVQ4000-37A-1</p>	<p>SUP/EXH block plate VVQ4000-16A</p>	
<p>Release valve spacer VVQ4000-24A-1D ^(1, 2)</p>	<p>Double check spacer with residual pressure exhaust VVQ4000-25A-1 ⁽¹⁾</p>	<p>Direct exhaust with silencer box [-S_D[□]]⁽¹⁾</p>	<p>For exhaust cleaner mounting [-C_D[□]]⁽¹⁾</p>



Note 1) Release valve spacer, built-in silencer (direct exhaust), exhaust cleaner mounting and double check spacer for residual pressure exhaust cannot be combined with external pilot.

Note 2) Can be mounted on L kit only. For other kits, order E type control unit. (Refer to pages 2-5-40 to 2-5-43.)



VQC

SQ

VQ0

VQ4


VQ5

VQZ

VQD

Series VQ4000

F Kit (D-sub connector kit)

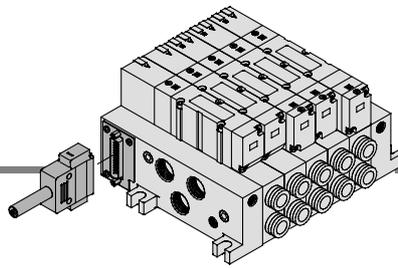

- Simplification and labor savings for wiring work can be achieved by using a D-sub connector for the electrical connection.
- Using connector for flat ribbon cable (25P) conforming to MIL standard permits the use of connectors put on the market and gives a wide interchangeability.
- Connector entry can be selected on either the U side or the D side according to the mounting orientation.
- Maximum stations are 18.

Manifold Specifications


Series	Porting specifications		Applicable stations
	4(A), 2(B) port location	Port size	
VQ4000	Side	1(P), 5(R1), 3(R2) C 8, 10, 12 Rc 1/4, 3/8	Max. 18 stations
	Bottom	Rc 1/2 Rc 1/4	

D-Sub Connector Kit (25 pins)

Cable assembly ●

015
AXT100-DS25-030
050

(D-sub connector cable assemblies can be ordered by with manifolds.)
Refer to How to Order Manifold.

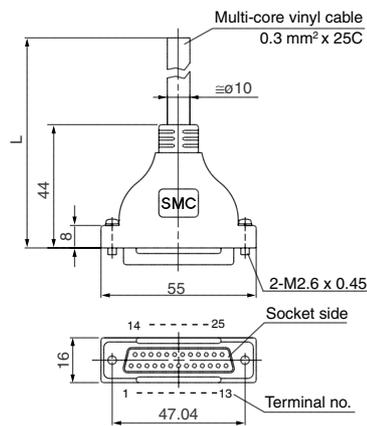

D-sub Connector Cable Assembly (Option)

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-DS25-015	Cable 25 cores x 24AWG
3 m	AXT100-DS25-030	
5 m	AXT100-DS25-050	

* For other commercial connectors, use a 25 pins type with female connector conforming to MIL-C-24308.

Connector manufacturers' example

- Fujitsu, Ltd.
- Japan Aviation Electronics Industry, Ltd.
- J.S.T. Mfg. Co., Ltd.
- Hirose Electric Co., Ltd.

Electric Characteristics

Item	Characteristics
Conductor resistance Ω/km, 20°C	65 or less
Voltage limit VAC, 1 min.	1000
Insulation resistance MΩkm, 20°C	5 or less

Note) The minimum bending radius for D-sub connector cables is 20 mm.

D-sub Connector Cable Assembly Terminal No.

Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Gray	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Gray	Red
24	Black	White
25	White	None

How to Order Manifold



- Series**
 - 4 VQ4000
- Manifold**
 - 1 Plug-in unit
- Stations**
 - 01 1 station
 - ⋮ ⋮
 - 18 18 stations

- Cylinder port**
 - C8 With One-touch fitting for ø8
 - C10 With One-touch fitting for ø10
 - C12 With One-touch fitting for ø12
 - 02 Rc 1/4
 - 03 Rc 3/8
 - B Bottom ported Rc 1/4
 - CM Mixed

- Cable (Length)**
 - 0 Without cable
 - 1 Cable length 1.5 m
 - 2 Cable length 3 m
 - 3 Cable length 5 m

- Connector entry direction**
 - D D side entry
 - U U side entry


Option

Symbol	Option
Nil	None
CD ⁽²⁾	Exhaust cleaner: For D side mounting
CU ⁽²⁾	Exhaust cleaner: For U side mounting
K ⁽³⁾	Special wiring specifications (Except double wiring)
SB	Direct exhaust with silencer box: Exhaust from both sides
SD ⁽²⁾	Direct exhaust with silencer box: D side exhaust
SU ⁽²⁾	Direct exhaust with silencer box: U side exhaust

- Note 1) When two or more symbols are specified, indicate them alphabetically.
Example) -CDK
- Note 2) Combination of [C_D^U] and [S_D^U] is not possible.
- Note 3) Specify the wiring specifications on the manifold specification sheet.
- Note 4) Refer to pages 2-5-40 to 2-5-43 for with control unit.

Note) As an option, the maximum number of stations can be increased by special wiring specifications.
For details, refer to page 2-5-11.

● Electrical wiring specifications

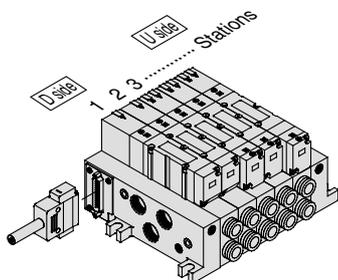

Stations are counted starting from the first station on the D side.

D-sub connector

Connector terminal no.

Double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station, regardless of valve and option types. Mixed single and double wiring is available as an option. For details, refer to below.

Note) There is no polarity. It can also be used as a negative common.

Standard wiring	Wiring with control unit	D-sub connector assembly AXT100-DS25-015-030-050	Wire colors	Dot marking
Terminal no.	Terminal no.	Polarity	Lead wire color	
1 station { SOL.A 1	Release valve 1 (-)	(+)	Black	None
SOL.B 14	Pressure switch 14 (+)	(-)	Yellow	Black
2 stations { SOL.A 2		(+)	Brown	None
SOL.B 15		(-)	Pink	Black
3 stations { SOL.A 3	SOL.A 15 (+)	(+)	Red	None
SOL.B 16	SOL.B 3 (-)	(-)	Blue	White
4 stations { SOL.A 4	SOL.A 16 (-)	(+)	Orange	None
SOL.B 17	SOL.B 4 (-)	(-)	Purple	None
5 stations { SOL.A 5	SOL.A 17 (-)	(+)	Yellow	None
SOL.B 18	SOL.B 5 (-)	(-)	Gray	None
6 stations { SOL.A 6	SOL.A 18 (-)	(+)	Pink	None
SOL.B 19	SOL.B 6 (-)	(-)	Orange	Black
7 stations { SOL.A 7	SOL.A 19 (-)	(+)	Blue	None
SOL.B 20	SOL.B 7 (-)	(-)	Red	White
8 stations { SOL.A 8	SOL.A 20 (-)	(+)	Purple	White
SOL.B 21	SOL.B 8 (-)	(-)	Brown	White
9 stations { SOL.A 9	SOL.A 21 (-)	(+)	Gray	Black
SOL.B 22	SOL.B 9 (-)	(-)	Gray	Black
10 stations { SOL.A 10	SOL.A 22 (-)	(+)	Pink	Red
SOL.B 23	SOL.B 10 (-)	(-)	White	Black
11 stations { SOL.A 11	SOL.A 23 (-)	(+)	Gray	Red
SOL.B 24	SOL.B 11 (-)	(-)	White	Red
12 stations { SOL.A 12	SOL.A 24 (-)	(+)	Black	White
SOL.B 25	SOL.B 12 (-)	(-)	Yellow	Red
COM. 13	COM. 13 (+)	(+)	White	None
		(-)	Orange	Red

Positive common specifications Negative common specifications

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

Special Wiring Specifications


Double wiring (connected to SOL. A and SOL. B) is used for the internal wiring of each station regardless of valve and option types. Mixed single and double wiring is available as an option.

1. How to order

Indicate option symbol “-K” in the manifold part number and be sure to specify station positions for single or double wiring on the manifold specification sheet.

2. Wiring specifications

Connections begin with the A side solenoid of the first station being connected to terminal no. 1, and continue in the order indicated by the arrows in the drawing without skipping any terminals. Maximum stations are 18.

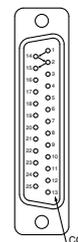

D-sub connector

How to Order Valves

VQ 4 1 0 0 5

Series: VQ4000

Type of actuation:

1	2 position single
2	2 position double
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center
6	3 position double check

Manual override:

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)

Light/Surge voltage suppressor:

Nil	Yes
E	Without light, with surge voltage suppressor

Coil voltage:

1	100 VAC (50/60 Hz)
2	200 VAC (50/60 Hz)
3	110 VAC (50/60 Hz)
4	220 VAC (50/60 Hz)
5	24 VDC
6	12 VDC

Seal:

0	Metal seal
1	Rubber seal

Function:

Nil	Standard type (1 W)
Y ⁽¹⁾	Low wattage type (0.5 W)
R ⁽²⁾	External pilot

Note 1) Applicable to DC specifications.
 Note 2) Refer to page 2-5-39 for external pilot specification. Combination of external pilot and perfect interface is not possible.
 Note 3) When two or more symbols are specified, indicate them alphabetically.

How to Order Manifold Assembly


Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>

D-sub connector kit with cable (3 m)
 VV5Q41-05C8FD2....1 set — Manifold base part no.
 *VQ4100-5.....2 sets— Valve part no. (Stations 1 and 2)
 *VQ4200-5.....2 sets— Valve part no. (Stations 3 and 4)
 *VQ4300-5.....1 set — Valve part no. (Station 5)


Prefix the asterisk to the part nos. of the solenoid valve, etc.

Enter in order starting from the first station on the D side. When entry of part numbers becomes complicated, indicate in the manifold specification sheet.


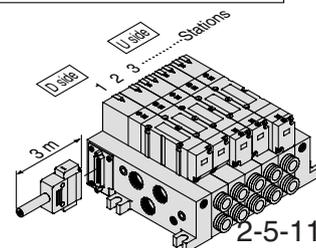


F Kit (D-sub connector kit)

Applicable connector: D-sub connector (25P)
(Conforming to MIL-C-24308)

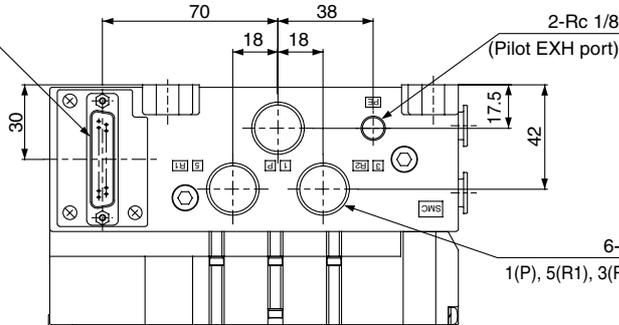


- 2n-Rc 1/4, 3/8, C8, C10, C12 4(A), 2(B) port
- Rc 1/4: Rc 1/4 thread
- Rc 3/8: Rc 3/8 thread
- C8: One-touch fitting for ø8
- C10: One-touch fitting for ø10
- C12: One-touch fitting for ø1

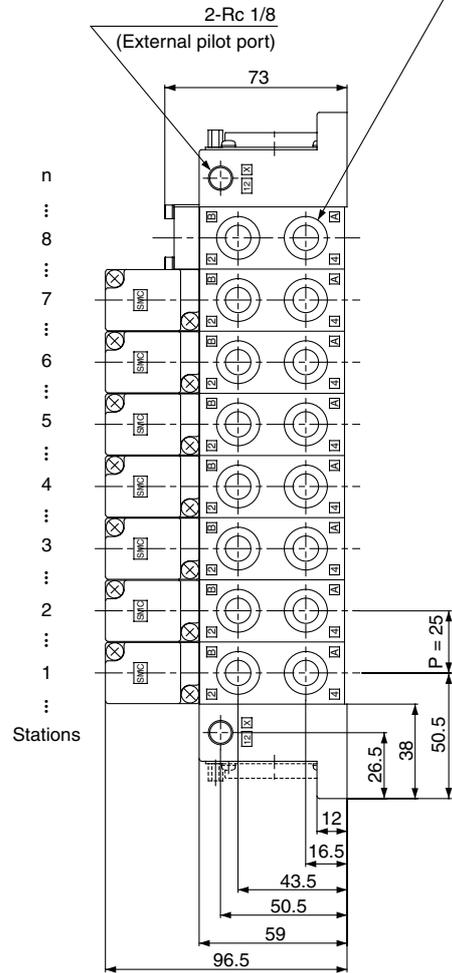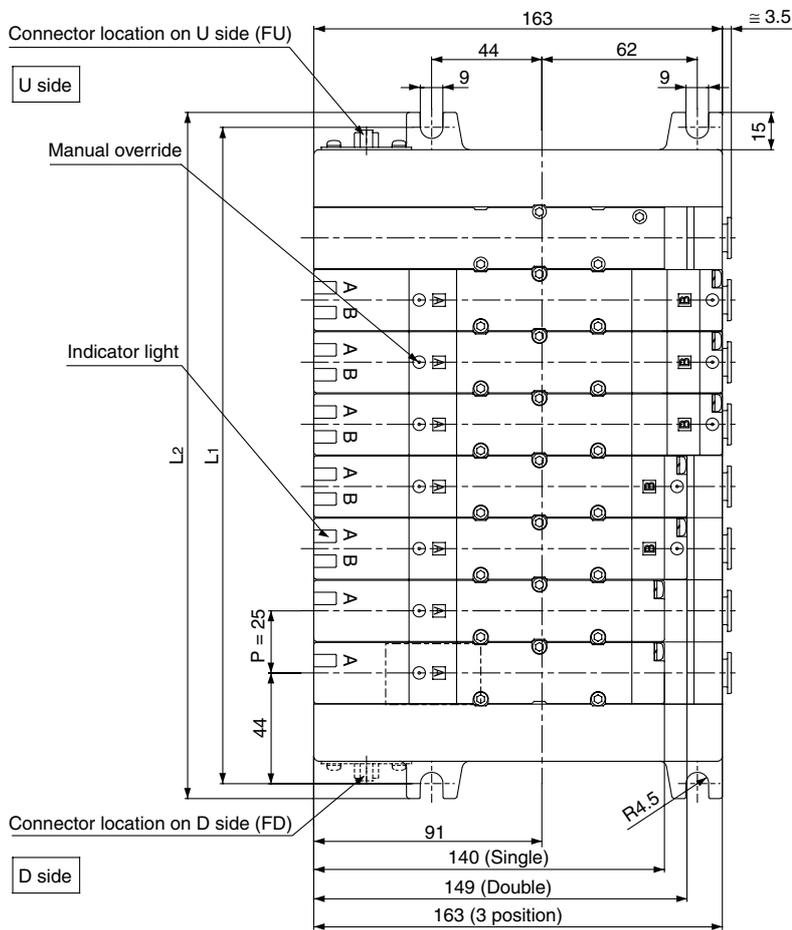

Bottom ported drawing

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

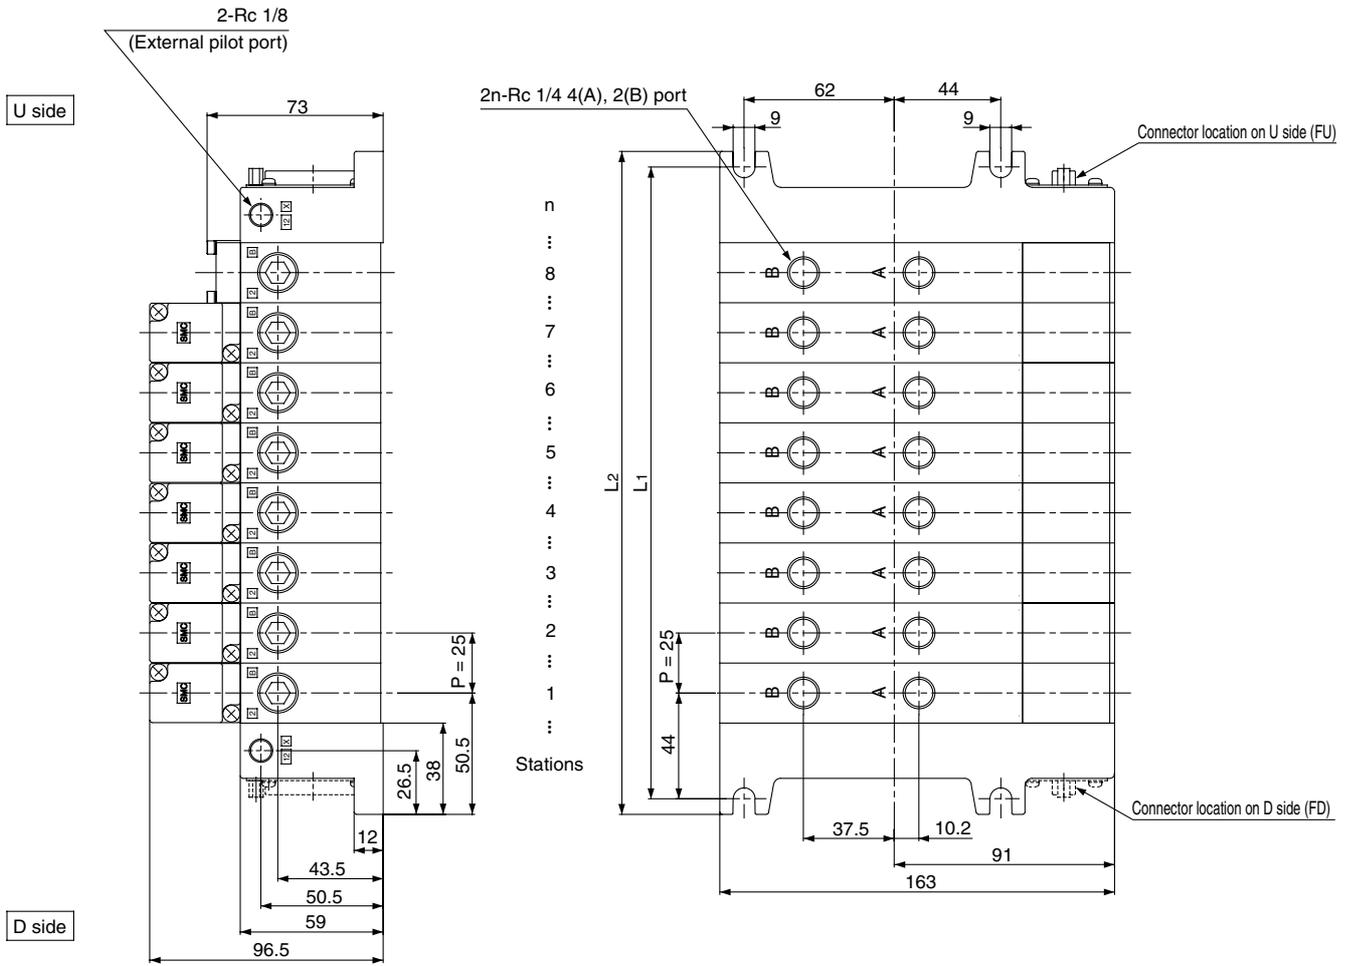


Dimensions

Formula $L1 = 25n + 63$, $L2 = 25n + 76$ n: Station (Maximum standard 18 stations)

L	n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L1		88	113	138	163	188	213	238	263	288	313	338	363	388	413	438	463	488	513
L2		101	126	151	176	201	226	251	276	301	326	351	376	401	426	451	476	501	526

T Kit (Terminal block box kit)

IP65 compliant

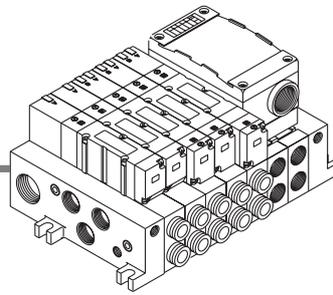

- Enclosure IP65 compliant
- This type has a small terminal block inside a junction box.
The provision of a G 3/4 electrical entry allows connection of conduit fittings.
- Maximum stations are 18.
- 2 stations are used for terminal box mounting.


Manifold Specifications

Series	Porting specifications			Applicable stations
	4(A), 2(B) port location	Port size		
VQ4000	Side	Rc 1/2	C 8, 10, 12 Rc 1/4, 3/8	Max. 18 stations
	Bottom		Rc 1/4	

Terminal Block Connections


Step 1. How to remove terminal block cover

Loosen the 4 mounting screws (M4) and open the terminal block cover.

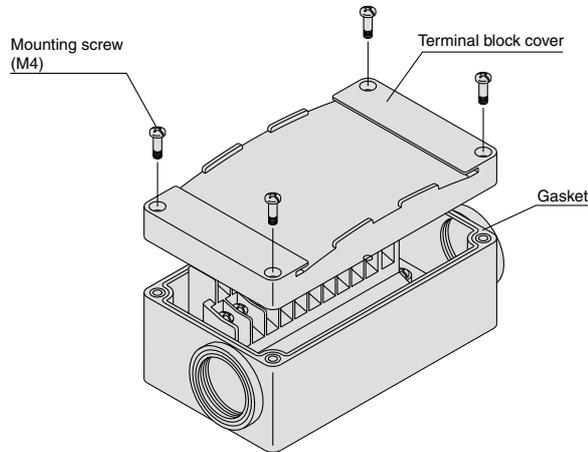

Step 2. The diagram on the right shows the terminal block wiring. All stations are provided with double wiring regardless of the valves which are mounted.

Connect each wire to the power supply side, according to the markings provided inside the terminal block.

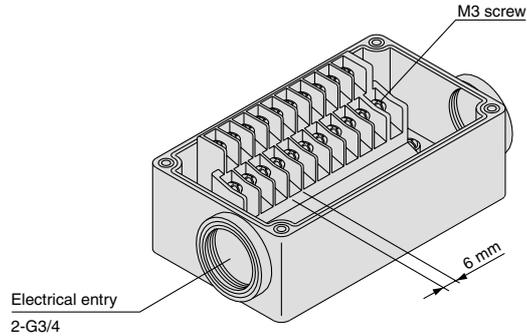

Step 3. How to attach the terminal block cover

Securely tighten the screws with the torque shown in the table below, after confirming that the gasket is installed correctly.

Proper tightening torque (N·m)
0.7 to 1.2

- Applicable terminal 1.25-3S, 1.25Y-3, 1.25Y-3N, 1.25Y-3.5

How to Order Manifold

VV5Q 4 1 - 08 C8 T 0 - []

Series

4	VQ4000
---	--------

Manifold

1	Plug-in unit
---	--------------

Stations

03	3 stations
⋮	⋮
18	18 stations

Note) Add 2 stations for terminal block box mounting.

Stations

O	U side mounting
D	D side mounting

Cylinder port

C8	With One-touch fitting for ø8
C10	With One-touch fitting for ø10
C12	With One-touch fitting for ø12
02	Rc 1/4
03	Rc 3/8
B	Bottom ported Rc 1/4
CM	Mixed

Note) As an option, the maximum number of stations can be increased by special wiring specifications. For details, refer to page 2-5-15.

Option

Symbol	Option
Nil	None
CD ⁽²⁾	Exhaust cleaner: For D side mounting
CU ⁽²⁾	Exhaust cleaner: For U side mounting
K ⁽³⁾	Special wiring specifications (Except double wiring)
N ⁽⁴⁾	Name plate
SD ⁽²⁾	Direct exhaust with silencer box: D side exhaust
SU ⁽²⁾	Direct exhaust with silencer box: U side exhaust
W	IP65 enclosure


Note 1) When two or more symbols are specified, indicate them alphabetically.
Example) -CDK

Note 2) Combination of [CD] and [SD] is not possible.

Note 3) Specify the wiring specifications on the manifold specification sheet.

Note 4) Name plate is inlaid in the terminal block cover.


Note 5) Refer to pages 2-5-40 to 2-5-43 for with control unit.

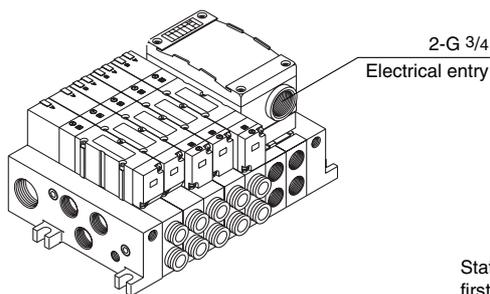

2-G 3/4
Electrical entry

Stations are counted starting from the first station on the D side.

● Electrical wiring specifications

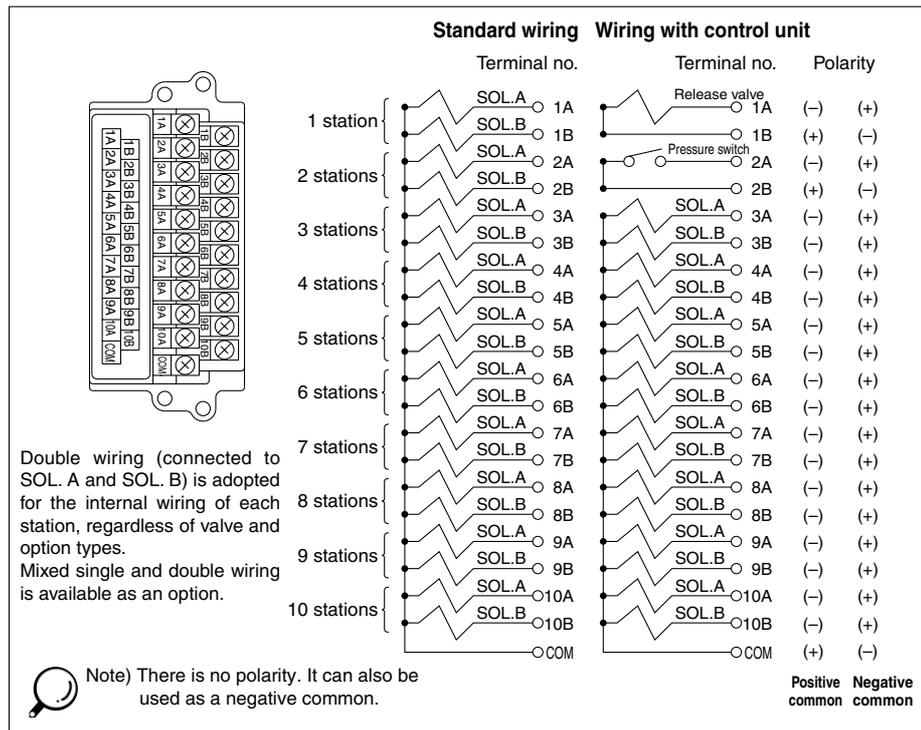

Special Wiring Specifications

Double wiring (connected to SOL. A and SOL. B) is used for the internal wiring of each station regardless of valve and option types. The optional specification permits mixture of single and double wiring. However, the maximum number of stations is 16.

1. How to Order


Indicate option symbol "K" in the manifold part number and be sure to specify station positions for single or double wiring on the manifold specification sheet.

2. Wiring specifications

Connections begin with the A side solenoid of the first station being connected to terminal no. 1, and continue in the order indicated by the arrows in the drawing without skipping any terminals.



How to Order Valves

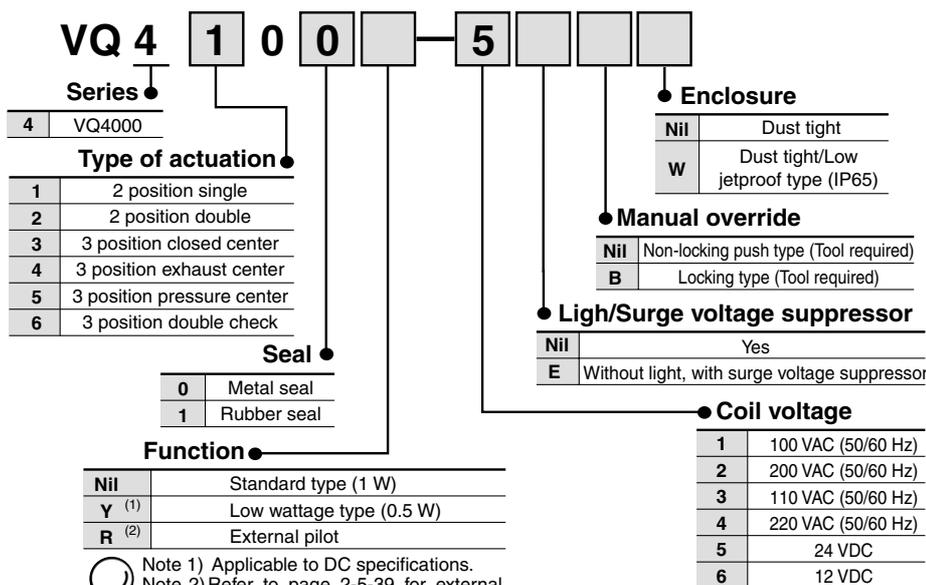

How to Order Manifold Assembly


Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>

Terminal block box kit
VV5Q41-07C8T0....1 set —Manifold base part no.
*VQ4100-5.....2 sets —Valve part no. (Stations 1 and 2)
*VQ4200-5.....2 sets —Valve part no. (Stations 3 and 4)
*VQ4300-5.....1 set —Valve part no. (Station 5)

Prefix the asterisk to the part nos. of the solenoid valve, etc.

Enter in order starting from the first station on the D side. When entry of part numbers becomes complicated, indicate in the manifold specification sheet.

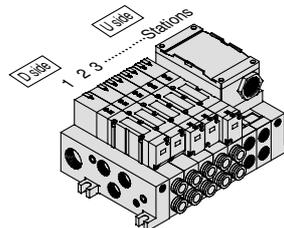

Note 1) Applicable to DC specifications.
Note 2) Refer to page 2-5-39 for external pilot specification. Combination of external pilot and perfect interface is not possible.
Note 3) When two or more symbols are specified, indicate them alphabetically.

VQC

SQ

VQ0


VQ4

VQ5

VQZ

VQD

Bottom ported drawing

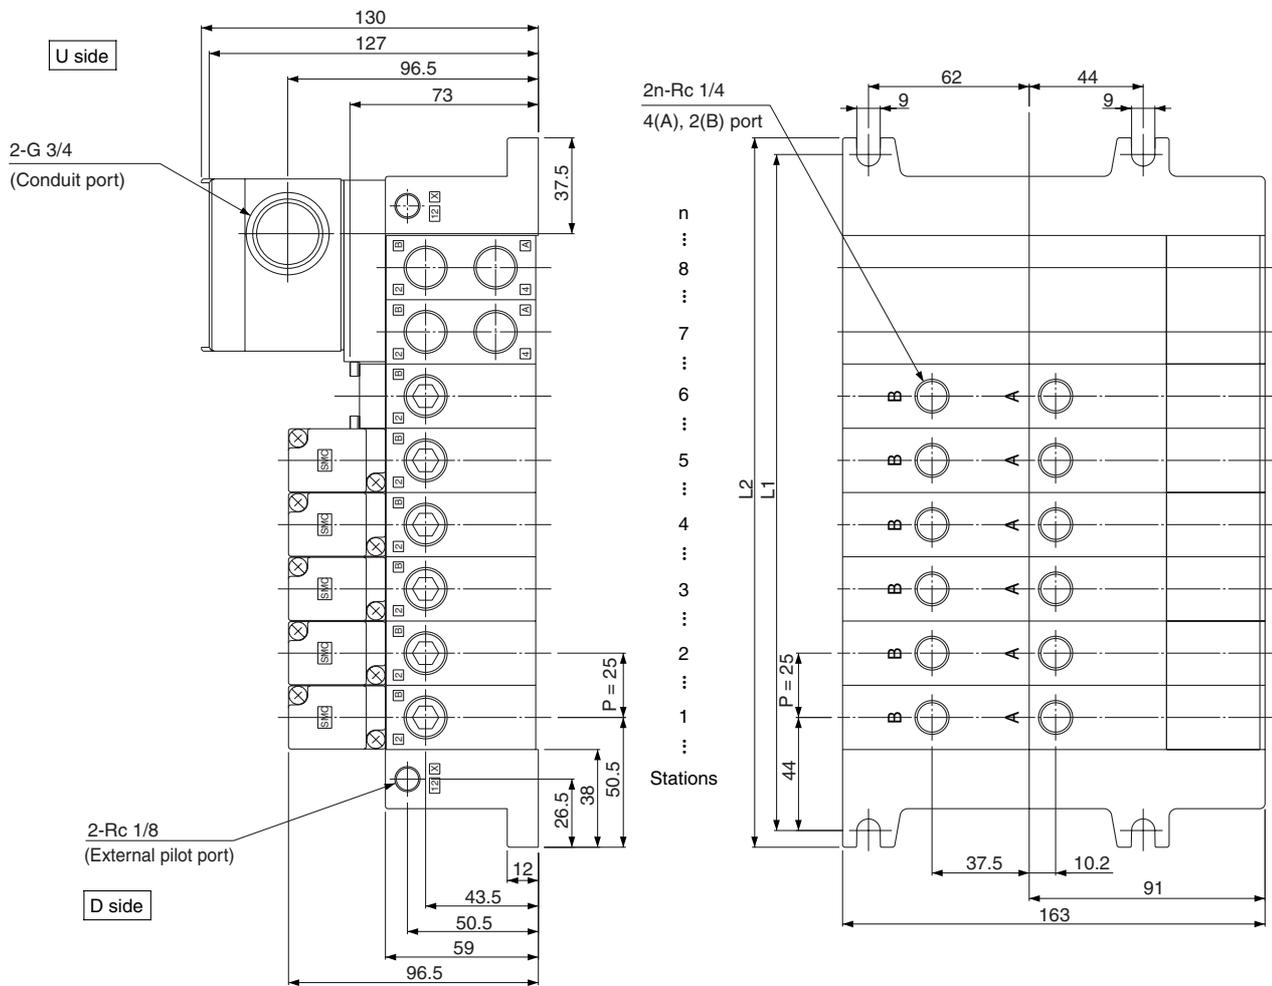

- VQC
- SQ
- VQ0
- VQ4**
- VQ5
- VQZ
- VQD

Formula $L1 = 25n + 63$, $L2 = 25n + 76$


n: Station (Maximum standard 18 stations)

* Including 2 stations for terminal box.

Dimensions

L	n	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L1		138	163	188	213	238	263	288	313	338	363	388	413	438	463	488	513
L2		151	176	201	226	251	276	301	326	351	376	401	426	451	476	501	526

L Kit (Lead wire cable)

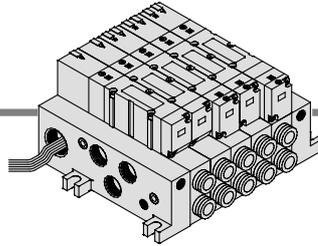

IP65 compliant


- Enclosure IP65 compliant
- Direct electrical entry. Models with two or more stations are available.
- Electrical entry can be selected on either the U side or the D side according to the mounting orientation.
- Maximum stations are 16.

Manifold Specifications

Series	Porting specifications			Applicable stations
	4(A), 2(B) port location	Port size		
		1(P), 5(R1), 3(R2)	4(A), 2(B)	
VQ4000	Side	Rc 1/2	C 8, 10, 12	Max. 16 stations
	Bottom		Rc 1/4, 3/8	
			Rc 1/4	

Wiring Specifications


Three lead wires are attached to each station regardless of the type of valve which is mounted. The red wire is for COM connection.

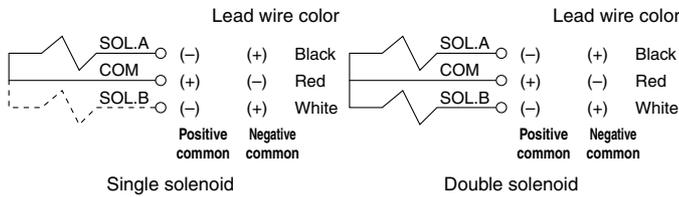

Lead Wire Assembly with Connector

Lead wire length	Part no.
0.6 m	VVQ4000-44A-8-□
1.5 m	VVQ4000-44A-15-□
3 m	VVQ4000-44A-30-□

□: Number of stations 1 to 16.

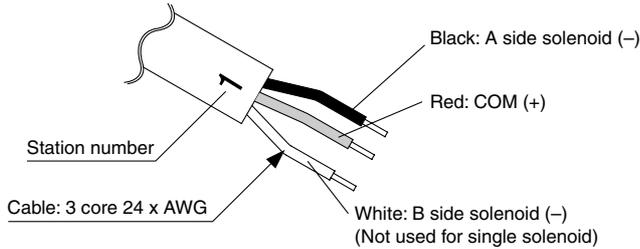

For different lead wire lengths, order a lead wire assembly with connector shown in the table on the right.
 Note 1) There is no polarity. It can also be used as a negative common.
 Note 2) Connect the release valve and the pressure switch to SOL. A side on the manifold with control unit.

How to Order Manifold



Series

4	VQ4000
---	--------

Manifold

1	Plug-in unit
---	--------------

Stations

01	1 station
⋮	⋮
16	16 stations

Connector locations

D	D side entry
U	U side entry

Cable (Length)

0	Cable length 0.6 m
1	Cable length 1.5 m
2	Cable length 3 m


Cylinder port

C8	With One-touch fitting for ø8
C10	With One-touch fitting for ø10
C12	With One-touch fitting for ø12
02	Rc 1/4
03	Rc 3/8
B	Bottom ported Rc 1/4
CM	Mixed

Option

Symbol	Option
Nil	None
CD	Exhaust cleaner: For D side mounting
CU	Exhaust cleaner: For U side mounting
SB	Direct exhaust with silencer box: Exhaust from both sides
SD	Direct exhaust with silencer box: D side exhaust
SU	Direct exhaust with silencer box: U side exhaust
W	IP65 enclosure

Note) When two or more symbols are specified, indicate them alphabetically.
 Example) -CDW

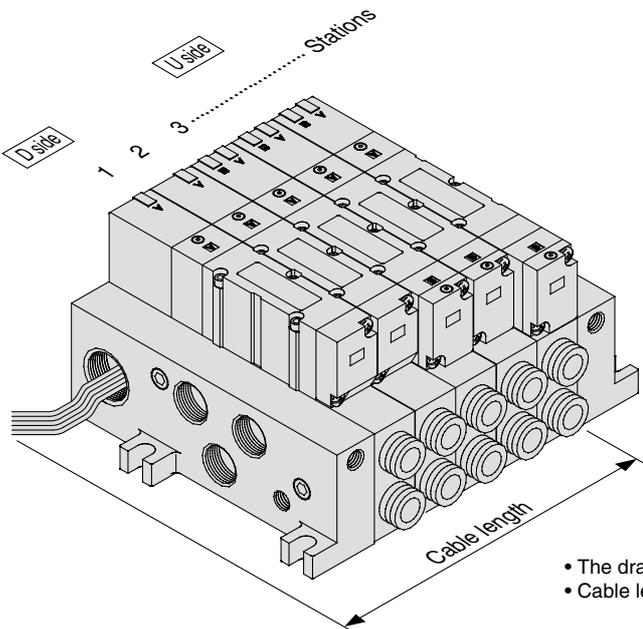

- The drawing shows the electrical entry on the D side.
- Cable length is measured from the solenoid valve body.

- VQC
- SQ
- VQ0
- VQ4**
- VQ5
- VQZ
- VQD

How to Order Valves

VQ 4 | **1** | **0** | **0** | **0** | **5** | | | |

Series

4	VQ4000
---	--------

Type of actuation

1	2 position single
2	2 position double
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center
6	3 position double check

Seal

0	Metal seal
1	Rubber seal

Enclosure

Nil	Dust tight
W	Dust tight/Low jetproof type (IP65)

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)

Light/Surge voltage suppressor

Nil	Yes
E	Without light, with surge voltage suppressor

Coil voltage

1	100 VAC (50/60 Hz)
2	200 VAC (50/60 Hz)
3	110 VAC (50/60 Hz)
4	220 VAC (50/60 Hz)
5	24 VDC
6	12 VDC

How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.


<Example>

Lead wire kit with cable (3 m)

VV5Q41-05C8LD2... 1 set —Manifold base part no.
 *VQ4100-5.....2 sets —Valve part no. (Stations 1 and 2)
 *VQ4200-5.....2 sets —Valve part no. (Stations 3 and 4)
 *VQ4300-51 set —Valve part no. (Station 5)


Prefix the asterisk to the part nos. of the solenoid valve, etc.

Enter in order starting from the first station on the D side. When entry of part numbers becomes complicated, indicate in the manifold specification sheet.

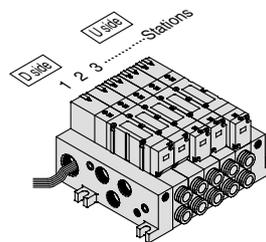


- Function**
- | | |
|------------------|--------------------------|
| Nil | Standard type (1 W) |
| Y ⁽¹⁾ | Low wattage type (0.5 W) |
| R ⁽²⁾ | External pilot |
- Note 1) Applicable to DC specification.
 Note 2) Refer to page 2-5-39 for external pilot specification. Combination of external pilot and perfect interface is not possible.
 Note 3) When two or more symbols are specified, indicate them alphabetically.

L Kit (Lead wire cable)

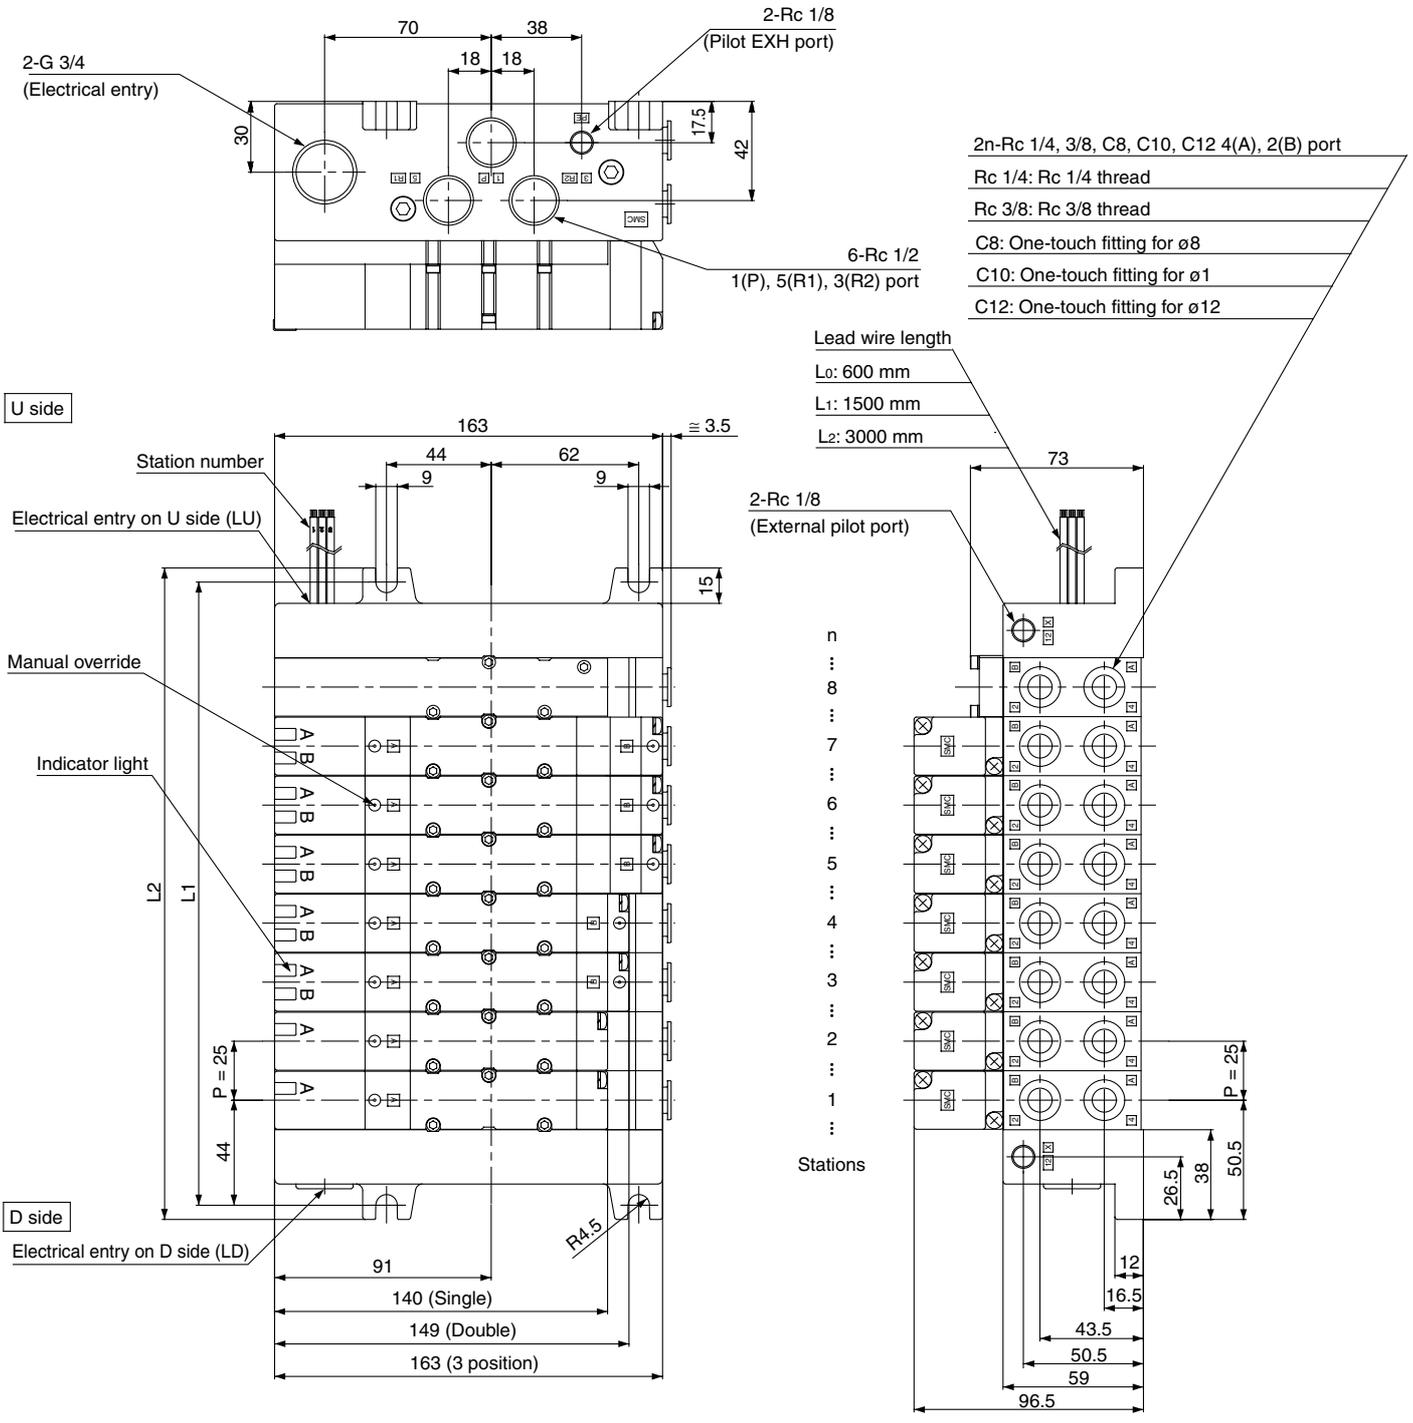

Bottom ported drawing

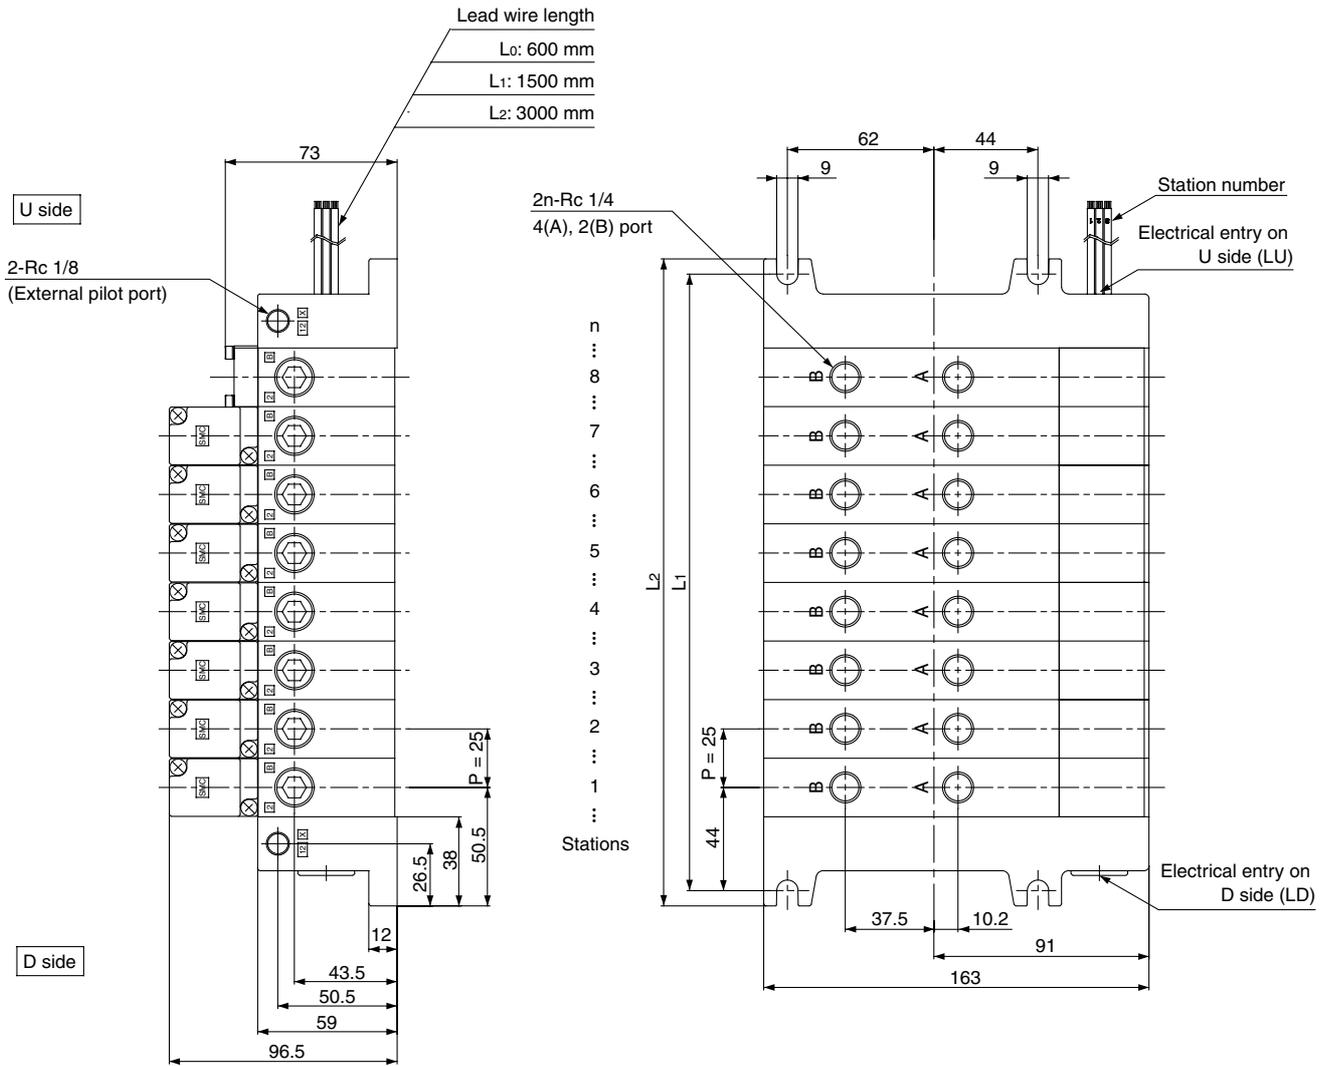

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD


Dimensions

Formula $L1 = 25n + 63$, $L2 = 25n + 76$ n: Station (Maximum 16 stations)

n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	88	113	138	163	188	213	238	263	288	313	338	363	388	413	438	463
L2	101	126	151	176	201	226	251	276	301	326	351	376	401	426	451	476

S Kit (Serial transmission unit)

- The serial transmission system reduces wiring work, while minimizing wiring and saving space.
- The system comes in an type SA (generic for small scale systems) for equipment with a small number of I/O points, or 32 points max., type SB (applicable to Mitsubishi Electric models) for controlling 512 I/O points max., type SC (applicable to OMRON models), type SD (applicable to SHARP models; 504 points max.), and type SF (applicable to NKE Uni-wire System; 128 points max.), type SJ (applicable to SUNX models), type SK (applicable to Fuji Electric models), type SQ (applicable to OMRON CompoBus/D), type SR (CompoBus/S).
- Maximum stations are 18.
- 2 stations are used for serial unit mounting.

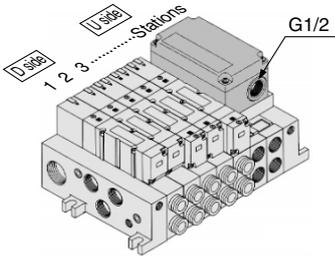

- Stations are counted from station 1 on the D side.
- Double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station, regardless of valve and option types.

Item	Specifications
External power supply	24 VDC +10%, -5%
Current consumption (Internal unit)	SA, SB, SBB, SD, SF, SH, SJ, SK, SQ, SR, SV: 0.1A SC: 0.3A


Manifold Specifications

Series	Porting specifications		Applicable stations
	4(A), 2(B) port port location	Port size	
VQ4000	Side	1(P), 5(R1), 3(R2) Rc 1/2	Max. 18 stations
	Bottom	4(A), 2(B) C 8, 10, 12 Rc 1/4, 3/8 Rc 1/4	

	Type SA With general type SI unit (Series EX300)	Type SB Mitsubishi Electric Corporation MELSECNET/mini-S3 Data Link System																		
Name of terminal block (LED)	<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>TRD</td> <td>Lighting during data reception</td> </tr> <tr> <td>RUN/ERR</td> <td>Blinking when received data is normal; Lighting when data reception</td> </tr> </tbody> </table>	LED	Description	TRD	Lighting during data reception	RUN/ERR	Blinking when received data is normal; Lighting when data reception	<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>POWER</td> <td>Lighting when power is turned ON</td> </tr> <tr> <td>RUN</td> <td>Lighting when data transmission with the master station is normal</td> </tr> <tr> <td>RD</td> <td>Lighting during data reception</td> </tr> <tr> <td>SD</td> <td>Lighting during data transmission</td> </tr> <tr> <td>ERR.</td> <td>Lighting when reception data error occurs. Light turns off when the error is corrected.</td> </tr> </tbody> </table>	LED	Description	POWER	Lighting when power is turned ON	RUN	Lighting when data transmission with the master station is normal	RD	Lighting during data reception	SD	Lighting during data transmission	ERR.	Lighting when reception data error occurs. Light turns off when the error is corrected.
	LED	Description																		
TRD	Lighting during data reception																			
RUN/ERR	Blinking when received data is normal; Lighting when data reception																			
LED	Description																			
POWER	Lighting when power is turned ON																			
RUN	Lighting when data transmission with the master station is normal																			
RD	Lighting during data reception																			
SD	Lighting during data transmission																			
ERR.	Lighting when reception data error occurs. Light turns off when the error is corrected.																			
Note	<ul style="list-style-type: none"> ● T unit Can be connected with PLC I/O card for serial transmission. EX300-TMB1.....For models of Mitsubishi Electric Corporation EX300-TTA1.....For OMRON EX300-TFU1.....For Fuji Electric EX300-T001.....General purpose * T units have 32 control points per unit ● No. of output points, 16 points 	<ul style="list-style-type: none"> ● Master station PLC made by Mitsubishi Electric Corporation Series MELSEC-A AJ71PT32-S3, AJ71T32-S3 A1SJ71PT32-S3 * Max. 64 stations, connected to remote I/O stations (Max. 512 points). ● No. of output points, 16 points. No. of stations occupied, 2 stations 																		

* For details on specifications and handling, refer to the separate technical instruction manual.

How to Order Manifold

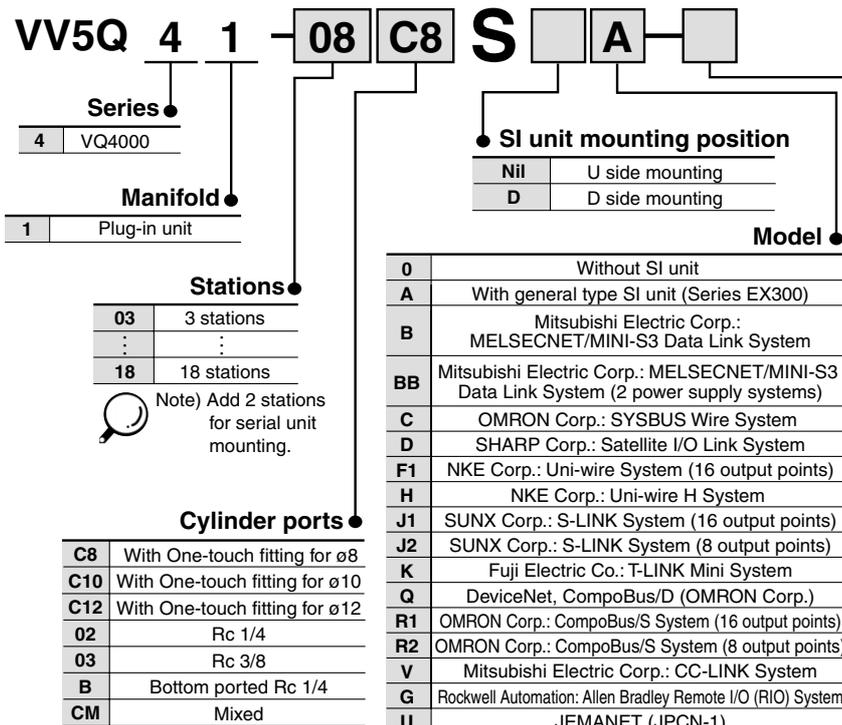

Option


Symbol	Option
Nil	None
CD ⁽²⁾	Exhaust cleaner: D side mounting
CU ⁽²⁾	Exhaust cleaner for Rc 1: U side exhaust
K ⁽³⁾	Special wiring specifications (Except double wiring)
SD ⁽²⁾	Direct exhaust with silencer box: D side exhaust
SU ⁽²⁾	Direct exhaust with silencer box: U side exhaust
W ⁽²⁾	IP65 enclosure

- Note 1) When two or more symbols are specified, indicate them alphabetically.
Example) -CDK
- Note 2) Combination of [CD] and [SD] is not possible.
- Note 3) Specify the wiring specifications in the manifold specification sheet.
- Note 4) Refer to pages 2-5-40 to 2-5-43 for with control unit.consumption of AC type.
- Note 5) The release valve and the pressure switch on the manifold with control unit are connected to another power supply. Cable length is 0.6 m for L kit.


● Correspondence of SI unit output numbers and solenoid valve coils

Mixed wiring is available as an option.
Use the manifold specification sheet to specify.

<Wiring example 1> Double wiring (Standard)

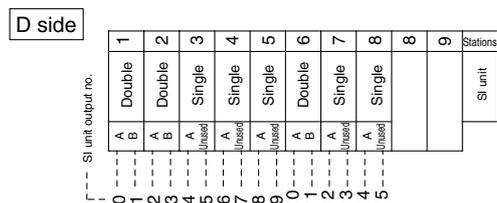


<Wiring example 2> Single/Double mixed wiring (Option)

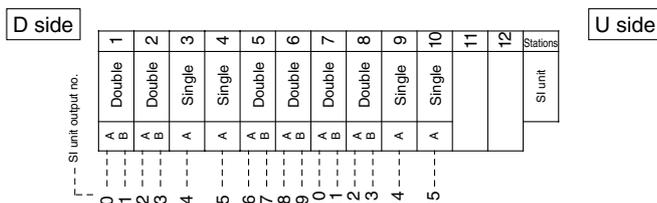

	Type SC OMRON Corporation SYSBUS Wire System	Type SD SHARP Corporation Satellite I/O Link System															
Name of terminal block (LED)																	
	<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>RUN</td> <td>Lights when transmission is normal and PLC is in operation mode</td> </tr> <tr> <td>T/R ERR</td> <td>Blinks during data transmission/reception ON when transmission is abnormal.</td> </tr> </tbody> </table>	LED	Description	RUN	Lights when transmission is normal and PLC is in operation mode	T/R ERR	Blinks during data transmission/reception ON when transmission is abnormal.	<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>POWER</td> <td>ON when power supply is ON</td> </tr> <tr> <td>RUN</td> <td>Lights when power is ON and slave stations are operating normally</td> </tr> <tr> <td>ERROR</td> <td>Lights when slave station switch setting is abnormal, communication is abnormal, PLC stopped and defective slave unit</td> </tr> <tr> <td>R.SET HOLD</td> <td>ON for master unit control input</td> </tr> </tbody> </table>	LED	Description	POWER	ON when power supply is ON	RUN	Lights when power is ON and slave stations are operating normally	ERROR	Lights when slave station switch setting is abnormal, communication is abnormal, PLC stopped and defective slave unit	R.SET HOLD
LED	Description																
RUN	Lights when transmission is normal and PLC is in operation mode																
T/R ERR	Blinks during data transmission/reception ON when transmission is abnormal.																
LED	Description																
POWER	ON when power supply is ON																
RUN	Lights when power is ON and slave stations are operating normally																
ERROR	Lights when slave station switch setting is abnormal, communication is abnormal, PLC stopped and defective slave unit																
R.SET HOLD	ON for master unit control input																
Note	<ul style="list-style-type: none"> Master station unit OMRON PLC SYSMAC C(CV) series Types C500-RM201 and C200H-RM201 * 32 units max., transmission terminal connection (512 points max.) No. of output points, 16 points 	<ul style="list-style-type: none"> Master station unit SHARP Corporation PLC New Satellite Series W ZW-31LM New Satellite Series JW JW-23LM, JW-31LM * Max. 31 units, I/O slave stations connected (504 points max.) No. of output points, 16 points 															

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

How to Order Valves

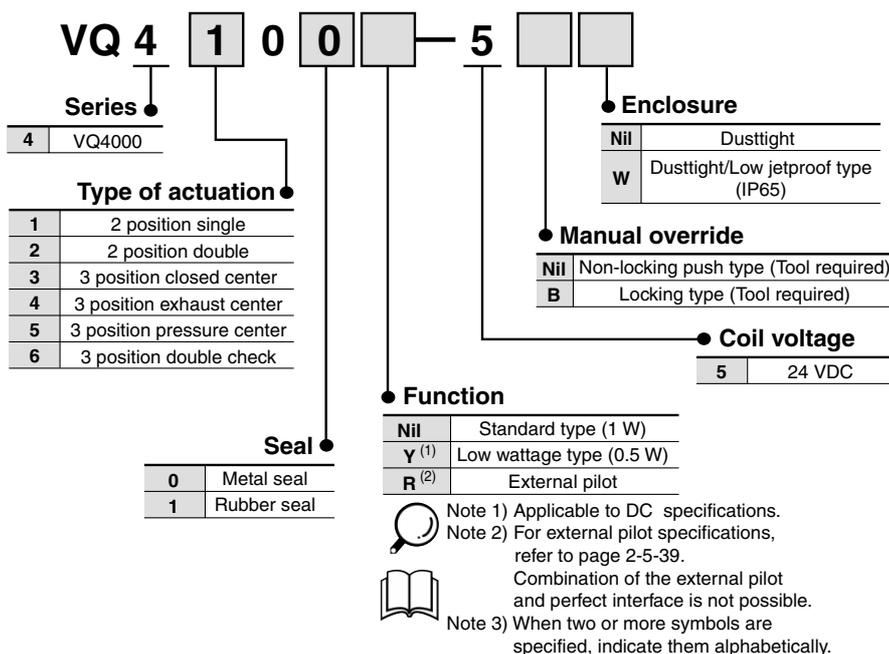

How to Order Manifold Assembly


Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>
Serial transmission unit


VV5Q41-07C8SA1 set —Manifold base part no.
*VQ4100-5.....2 sets —Valve part no. (Stations 1 and 2)
*VQ4200-5.....2 sets —Valve part no. (Stations 3 and 4)
*VQ4300-5.....1 set —Valve part no. (Station 5)

Prefix the asterisk to the part nos. of the solenoid valve, etc.



Enter in order starting from the first station on the D side.
When entry of part numbers becomes complicated, indicate in the manifold specification sheet.

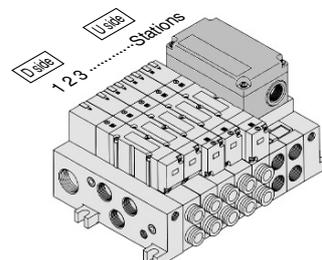

S Kit (Serial transmission unit)

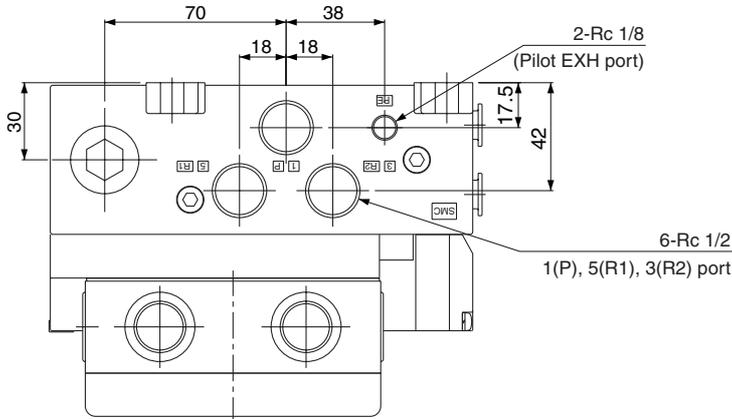

- 2n-Rc 1/4, 3/8, C8, C10, C12 {4(A), 2(B)}
- Rc 1/4: Rc 1/4 thread
- Rc 3/8: Rc 3/8 thread
- C8: One-touch fitting for ø8
- C10: One-touch fitting for ø10
- C12: One-touch fitting for ø12

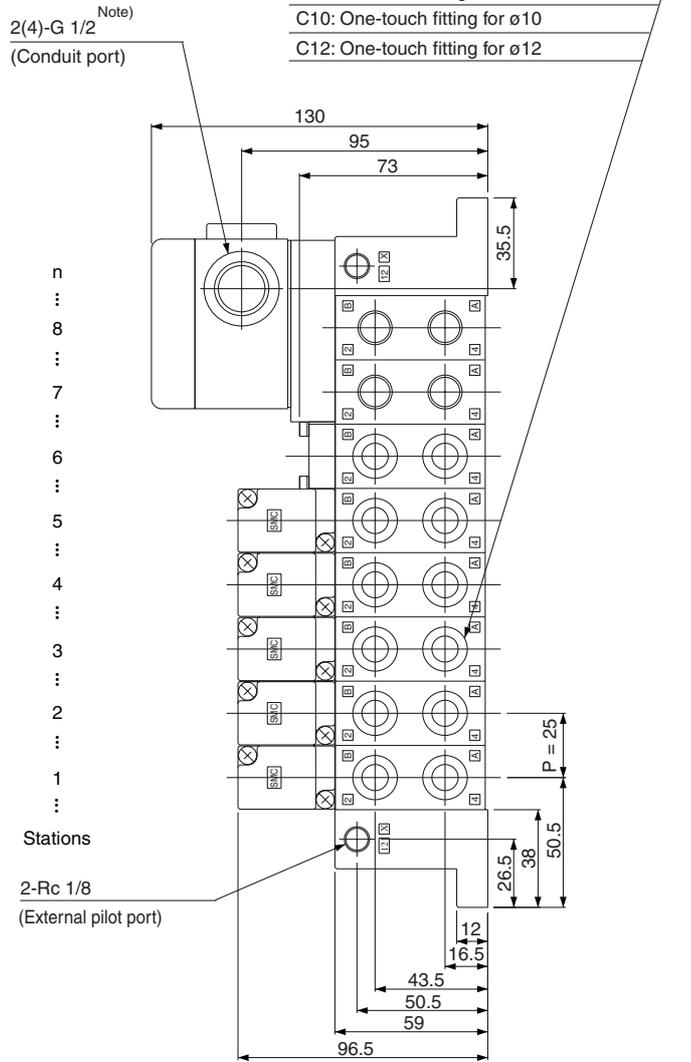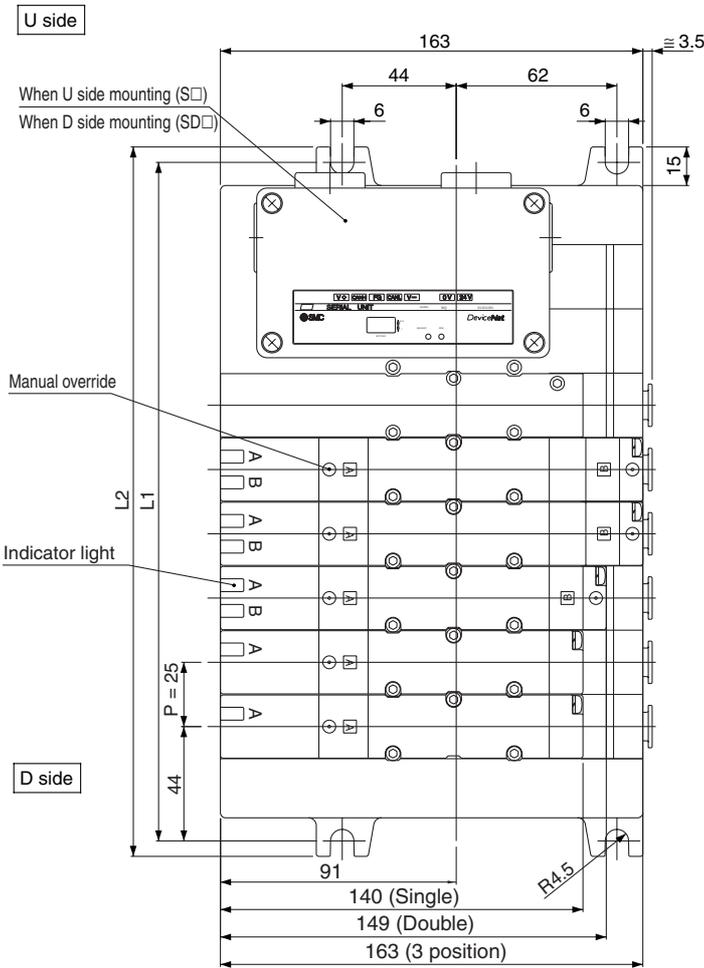

(Note) In the case of EX124 for SI unit, conduit port (G 1/2) will be 4 locations.


(Note) Shown VV5Q41-08C12SQ-W

Formula $L1 = 25n + 63$, $L2 = 25n + 76$
 n: Station (Maximum standard 18 stations)
 * Including 2 stations for mounting SI unit box.

Dimensions

L	n	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L1		138	163	188	213	238	263	288	313	338	363	388	413	438	463	488	513
L2		151	176	201	226	251	276	301	326	351	376	401	426	451	476	501	526

Plug-in Unit Series VQ4000

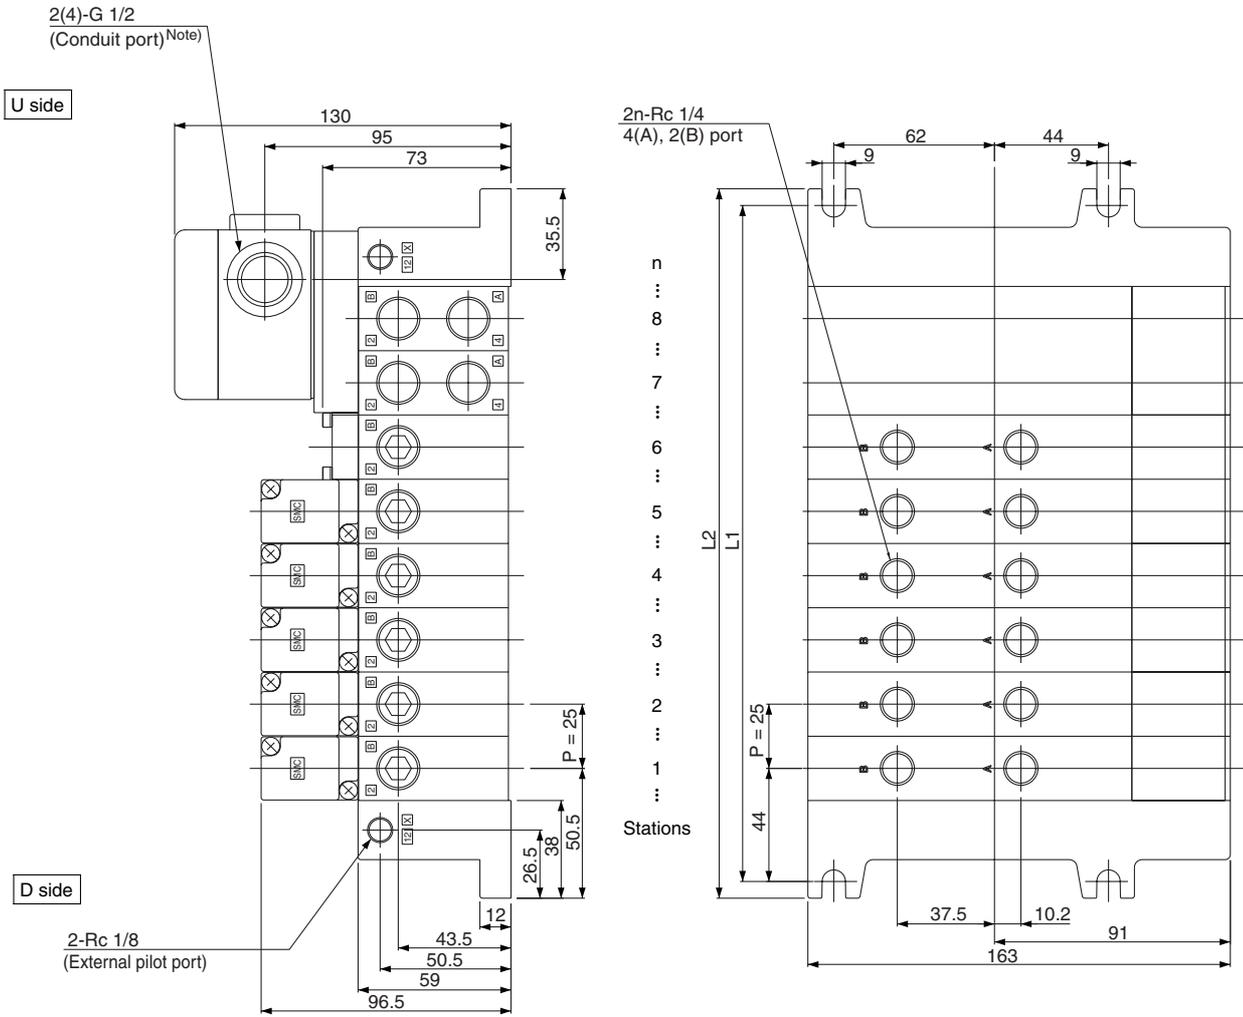

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

Formula $L1 = 25n + 63$, $L2 = 25n + 76$
 n: Station (Maximum standard 18 stations)
 * Including 2 stations for mounting SI unit box.

Dimensions

L \ n	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L1	138	163	188	213	238	263	288	313	338	363	388	413	438	463	488	513
L2	151	176	201	226	251	276	301	326	351	376	401	426	451	476	501	526

S Kit (Serial transmission kit) for I/O

IP65 compliant

Applicable network: **DeviceNet/PROFIBUS-DP**

● The serial transmission system reduces wiring work, while minimizing wiring and saving-space.


SI unit for DeviceNet/PROFIBUS

As a slave for DeviceNet/PROFIBUS, it is possible to control ON/OFF of a solenoid valve with the maximum of 32 points. Furthermore, by connecting a discrete input block, it is possible to input the sensor signal for 32 points at the maximum.


Input block

Meaning of an expansion block, connecting with SI unit, for sensor-inputting for auto switches, etc. Sensor-input is available up to 8 per one input block. By the NPN/PNP switch, it is able to adjust COM to sensor.

Details in Connector

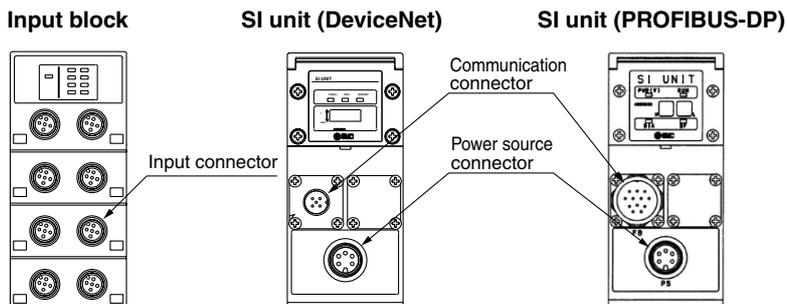

● **Communication connector (PROFIBUS-DP):**
 Made by CONINVERS GmbH RC-2RS1N12 12 pins
 Cable side connector example:
 Made by Siemens AG 6ES5 760-2CB11

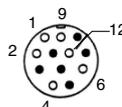

Number	Description	Function
1	M5V	GND Terminal
2	A	Signal-N
4	B	Signal-P
6	+5V	Terminal + 5V
9	SHIELD	Shield ground
12	RTS	Optical fiber (Reserve)

Pin no. 3, 5, 7, 8, 10 and 11 marked with ● are open.

* Connector's shape and pin assignment is interchangeable with ET200C made by Siemens AG.

How to Order Manifold

VV5Q 4 1 - 08 C8 S D QW 1 W

Series
4 VQ4000

Manifold
1 Plug-in unit

Stations

01	1 station
⋮	⋮
16	16 stations

Cylinder ports

Symbol	Port size
C8	With One-touch fitting for ø8
C10	With One-touch fitting for ø10
C12	With One-touch fitting for ø12
02	Rc 1/4
03	Rc 3/8
B	Bottom ported Rc 1/4
CM	Mixed

Kit
Serial transmission kit

Mounting SI unit

D	D side mounting
U	U side mounting

SI unit

OW	With no SI unit, nor input unit
QW	DeviceNet
NW	Profibus DP

SI unit COM

Nil	With no SI/Input unit (For SDOW)	
	+COM	DeviceNet (SDQW)
N	-COM	Profibus DP (SDNWN)

Note) Only +COM is available for DeviceNet. Order a mounting valve with +COM. Since PROFIBUS is -COM only, order -COM for valves to be mounted.

Enclosure
IP65 (Dusttight/Low jetproof type)

Option

Symbol	Option
Nil	None
CD ⁽²⁾⁽³⁾	Exhaust cleaner: For D side mounting
CU ⁽²⁾⁽³⁾	Exhaust cleaner: For U side mounting
K	Special wiring specification (Except double wiring)
SD ⁽²⁾⁽³⁾	Direct exhaust with silencer box: D side exhaust
SU ⁽²⁾⁽³⁾	Direct exhaust with silencer box: U side exhaust

Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -CDK

Note 2) Combination of [C_D^U] and [S_D^U] is not possible.

Note 3) Mounting side for exhaust cleaner, silencer box is available only in the opposite side from SI unit mounting side.

Input unit COM


Nil	PNP (+) or with no SI unit (for SDOW)
N	NPN (-)

Input unit

Nil	With no SI unit, or input unit (In the case of SDOW)
0	Without input unit
1	With 1 input unit
2	With 2 input units
3	With 2 input units
4	With 4 input units



Kit (Serial transmission unit) for I/O

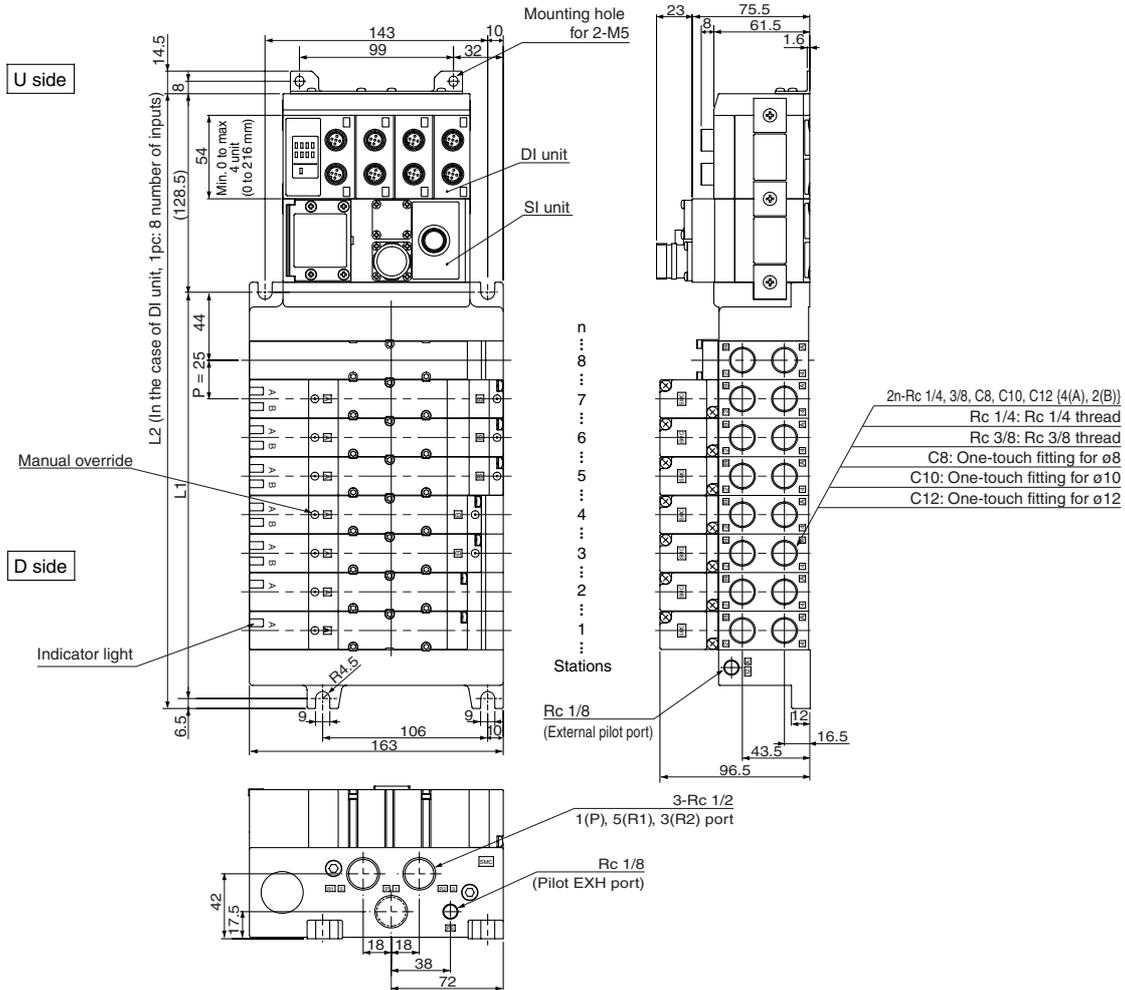


Dimensions

Formula L1 = 25n + 63, L2 = 25n + 198
 n: Stations * In the case of DI unit, 1 pc., 54 mm is added per 1 pc.


L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1		113	138	163	188	213	238	263	288	313	338	363	388	413	438	463
L2		248	273	298	323	348	373	398	423	448	473	498	523	548	573	598

Indicator Unit (LED) Descriptions and Functions

■ SI Unit (DeviceNet)

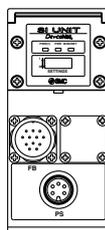

■ SI Unit (PROFIBUS-DP)

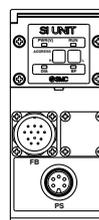

■ Input block




Description	Function
PWR(V)	ON when solenoid valve power supply is turned ON
PWR	ON when DeviceNet circuit power supply input is turned ON
MOD/NET	OFF: Power supply off, off line, or when checking duplication of MAC_ID
	Green blinking: Waiting for connection (On line)
	Green ON: Connection established (On line)
	Red blinking: Connection time out (Minor communication abnormality occurs)
	Red ON: MAC_DI duplication error, or BUSOFF error (Major communication abnormality occurs)

Description	Function
PWR	ON when solenoid valve power supply is turned ON OFF when the power supply voltage is less than 19 V
RUN	ON when operating (SI unit power supply is ON)
DIA	ON when self-diagnosis device detects abnormality
BF	ON for BUS abnormality

Description	Function
PWR	ON when sensor power is turned ON OFF when short circuit protection is working
0 to 7	ON when each sensor input goes ON

Plug-in Unit Series VQ4000

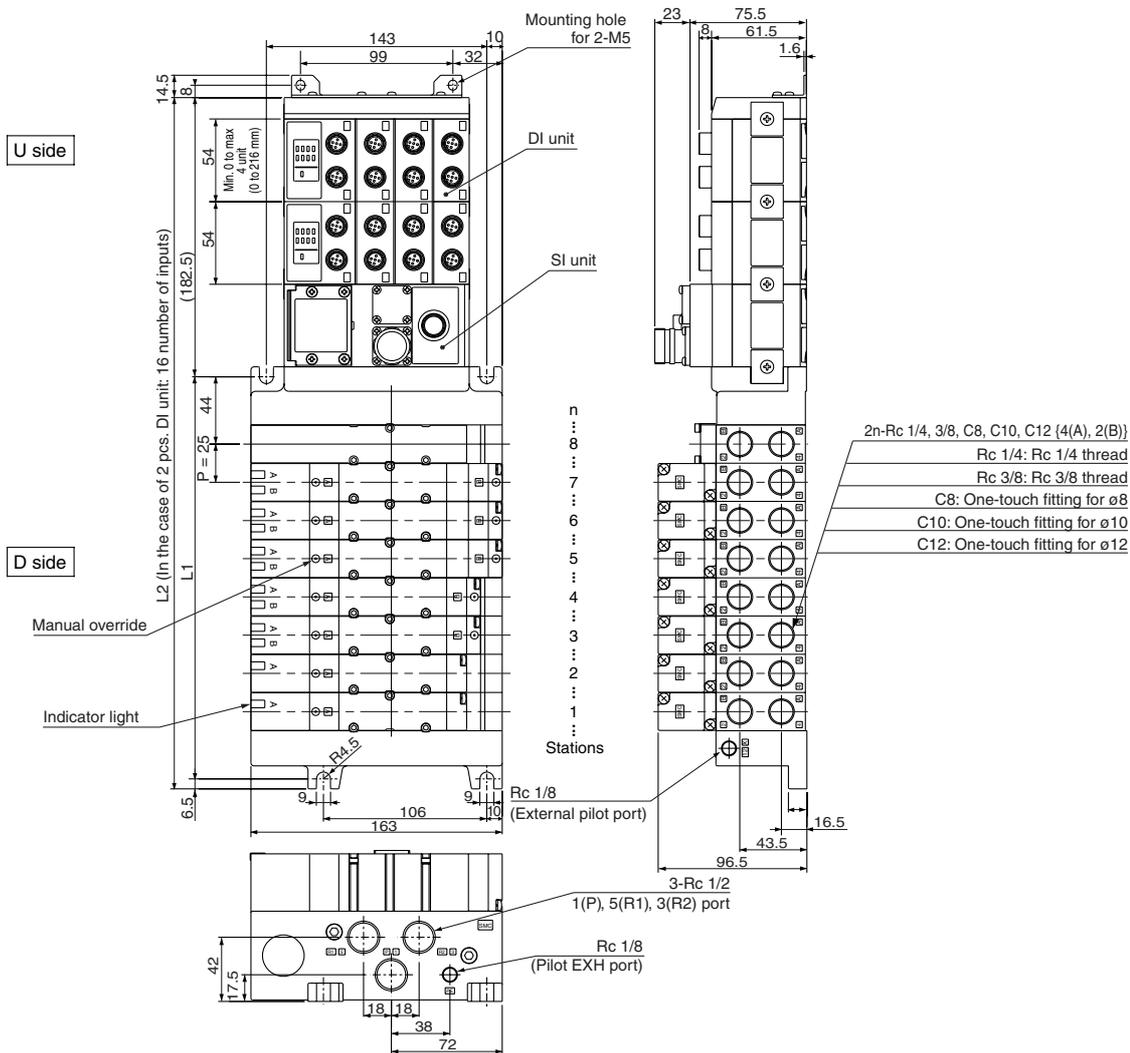

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

Formula $L1 = 25n + 63$, $L2 = 25n + 252$
 n: Stations

Dimensions

* In the case of 2 pcs. DI unit, 105 mm will be added per 2 pcs.


L	n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1		113	138	163	188	213	238	263	288	313	338	363	388	413	438	463
L2		302	327	352	377	402	427	452	477	502	527	552	577	602	627	652

Series VQ4000

Base Mounted

Plug Lead Unit: C Kit (Connector kit)

How to Order Manifold

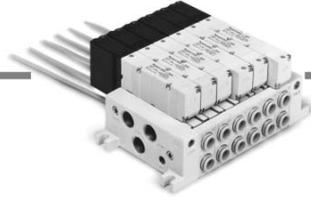

VV5Q 4 5 - 08 C8 C [] [] W

Series

4	VQ4000
---	--------

Manifold

5	Plug lead unit
---	----------------

Stations

01	1 station
⋮	⋮
16	16 stations


Option

Symbol	Option
Nil	None
CD ⁽²⁾	Exhaust cleaner: For D side mounting
CU ⁽²⁾	Exhaust cleaner: For U side mounting
SB	Direct exhaust with silencer box: Exhaust from both sides
SD ⁽²⁾	Direct exhaust with silencer box: D side exhaust
SU ⁽²⁾	Direct exhaust with silencer box: U side exhaust
W	IP65 enclosure

Note 1) When two or more symbols are specified, indicate them alphabetically.
Example) -CDW
Note 2) Combination of [C_D^U] and [S_D^U] is not available.

Kit type

C kit (Connector)

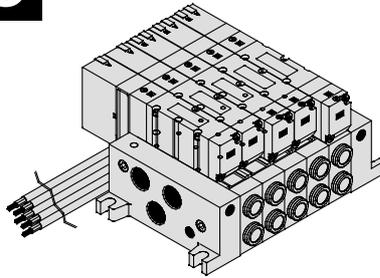

Cylinder port

C8	With One-touch fitting for ø8
C10	With One-touch fitting for ø10
C12	With One-touch fitting for ø12
02	Rc 1/4
03	Rc 3/8
B	Bottom ported Rc 1/4
CM	Mixed

C	Connector kit	Max. 16 stations
---	---------------	------------------

Refer to page 2-5-2 (Grommet type) for wiring specifications.

How to Order Valves

VQ 4 1 5 0 [] [] - 5 G [] [] []

Series

4	VQ4000
---	--------

Type of actuation

1	2 position single
2	2 position double
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center
6	3 position double check

Seal

0	Metal seal
1	Rubber seal

Function

Nil	Standard type (1 W)
Y ⁽¹⁾	Low wattage type (0.5 W)
R ⁽²⁾	External pilot

Note 1) Applicable to DC specifications.
Note 2) For external pilot specifications, refer to page 2-5-39. Combination of the external pilot and perfect interface is not possible.
Note 3) When two or more symbols are specified, indicate them alphabetically.

Coil voltage

1	100 VAC (50/60 Hz)	4	220 VAC (50/60 Hz)
2	200 VAC (50/60 Hz)	5	24 VDC
3	110 VAC (50/60 Hz)	6	12 VDC

Enclosure

Nil	Dusttight
W	Dusttight/Low jetproof type (IP65)

Manual override

Nil:	Non-locking push type (Tool required)
B:	Locking type (Tool required)

Light/Surge voltage suppressor

Nil	Yes
E	Without light, with surge voltage suppressor

Electrical entry

G	Lead wire length 0.6 m
H	Lead wire length 1.5 m

How to Order Manifold Assembly


Specify the part numbers for valves and options together beneath the manifold base part number.

<Example> Connector kit

VV5Q45-05C12C.....1 set — Manifold base part no.
*VQ4150-5G.....2 sets — Valve part no. (Stations 1 and 2)
*VQ4250-5G.....2 sets — Valve part no. (Stations 3 and 4)
*VQ4350-5G.....1 set — Valve part no. (Station 5)

Prefix the asterisk to the part nos. of the solenoid valve, etc.

Enter in order starting from the first station on the D side. When entry of part numbers becomes complicated, indicate in the manifold specification sheet.

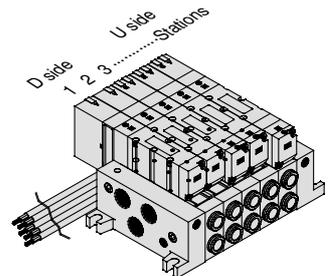

Simple specials are available with SMC Simple Special System. For details about applicable models, please contact SMC.

Manifold Specifications

Series	Base model	Type of connection	Porting specifications		Maximum applicable stations	Applicable solenoid valve	5 station weight (kg)	
			4(A), (B) port location	Port size ^{Note)}				
				1(P), 5(R1), 3(R2)				4(A), 2(B)
VQ4000	VV5Q45-□□□	■ C kit-Grommet	Side Bottom	Rc 1/2 Option (Direct exhaust with silencer box) Rc 1/4	2 to 16 stations	VQ4□50 VQ4□51	2.0 • Except solenoid valve weight	



Note) For details about inch-size One-touch fittings and other thread standards, refer to page 2-5-39.











Flow Characteristics at the Number of Manifold Stations (Operated individually)

Model	Passage/Stations		Station 1	Station 5	Station 10	Station 15
2 position metal seal VQ4 ¹ / ₂ 50	1 → 4/2 (P → A/B)	C [dm ³ /(s-bar)]	5.9	5.9	5.9	5.9
		b	0.23	0.23	0.23	0.23
		Cv	1.5	1.5	1.5	1.5
	4/2 → 5/3 (A/B → EA/EB)	C [dm ³ /(s-bar)]	6.2	6.2	6.2	6.2
		b	0.19	0.19	0.19	0.19
		Cv	1.5	1.5	1.5	1.5
2 position rubber seal VQ4 ¹ / ₂ 51	1 → 4/2 (P → A/B)	C [dm ³ /(s-bar)]	6.8	6.8	6.8	6.8
		b	0.31	0.31	0.31	0.31
		Cv	1.8	1.8	1.8	1.8
	4/2 → 5/3 (A/B → EA/EB)	C [dm ³ /(s-bar)]	7.0	7.0	7.0	7.0
		b	0.38	0.38	0.38	0.38
		Cv	1.9	1.9	1.9	1.9



Note) Port size: Rc 3/8

Manifold Option
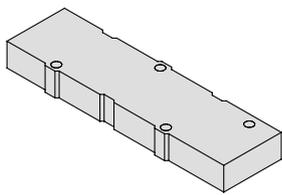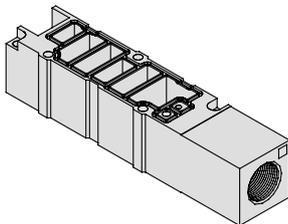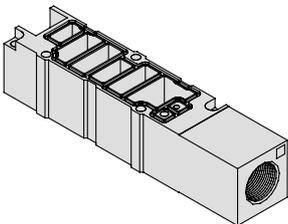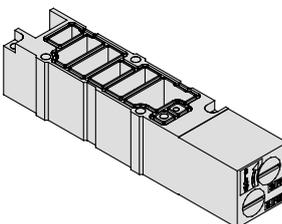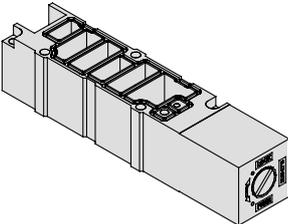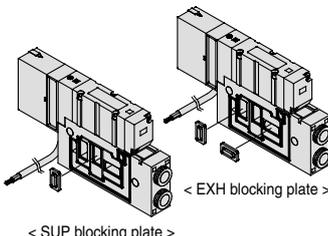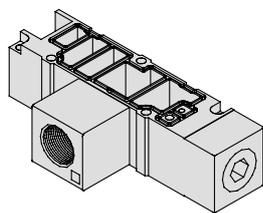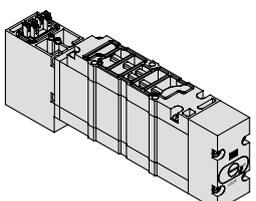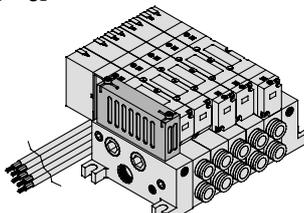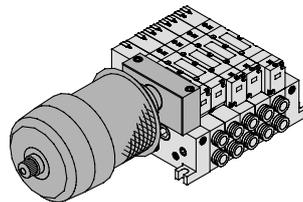
<p>Blanking plate assembly VVQ4000-10A-5</p> 	<p>Individual SUP spacer VVQ4000-P-5-⁰²/₀₃</p> 	<p>Individual EXH spacer VVQ4000-R-5-⁰²/₀₃</p> 	<ul style="list-style-type: none"> Refer to pages 2-5-34 to 2-5-38 for detail dimensions of each option. For replacement parts, refer to page 2-5-47. Refer to pages 2-5-40 to 2-5-43 for control unit.
<p>Throttle valve spacer VVQ4000-20A-5</p> 	<p>SUP stop valve spacer VVQ4000-37A-5</p> 	<p>SUP/EXH block plate VVQ4000-16A</p> 	
<p>Release valve spacer VVQ4000-24A-5D ^{Note)}</p> 	<p>Double check spacer with residual pressure exhaust VVQ4000-25A-5 ^{Note)}</p> 	<p>Direct exhaust with silencer box [-S^D/_U] ^{Note)}</p> 	<p>For exhaust cleaner mounting [-C^D/_U] ^{Note)}</p> 



Note) Release valve spacer, built-in silencer (direct exhaust), exhaust cleaner mounting style and perfect double check spacer for residual pressure exhaust cannot be combined with external pilot.

VQC

SQ

VQ0


VQ4

VQ5

VQZ

VQD

Bottom ported drawing

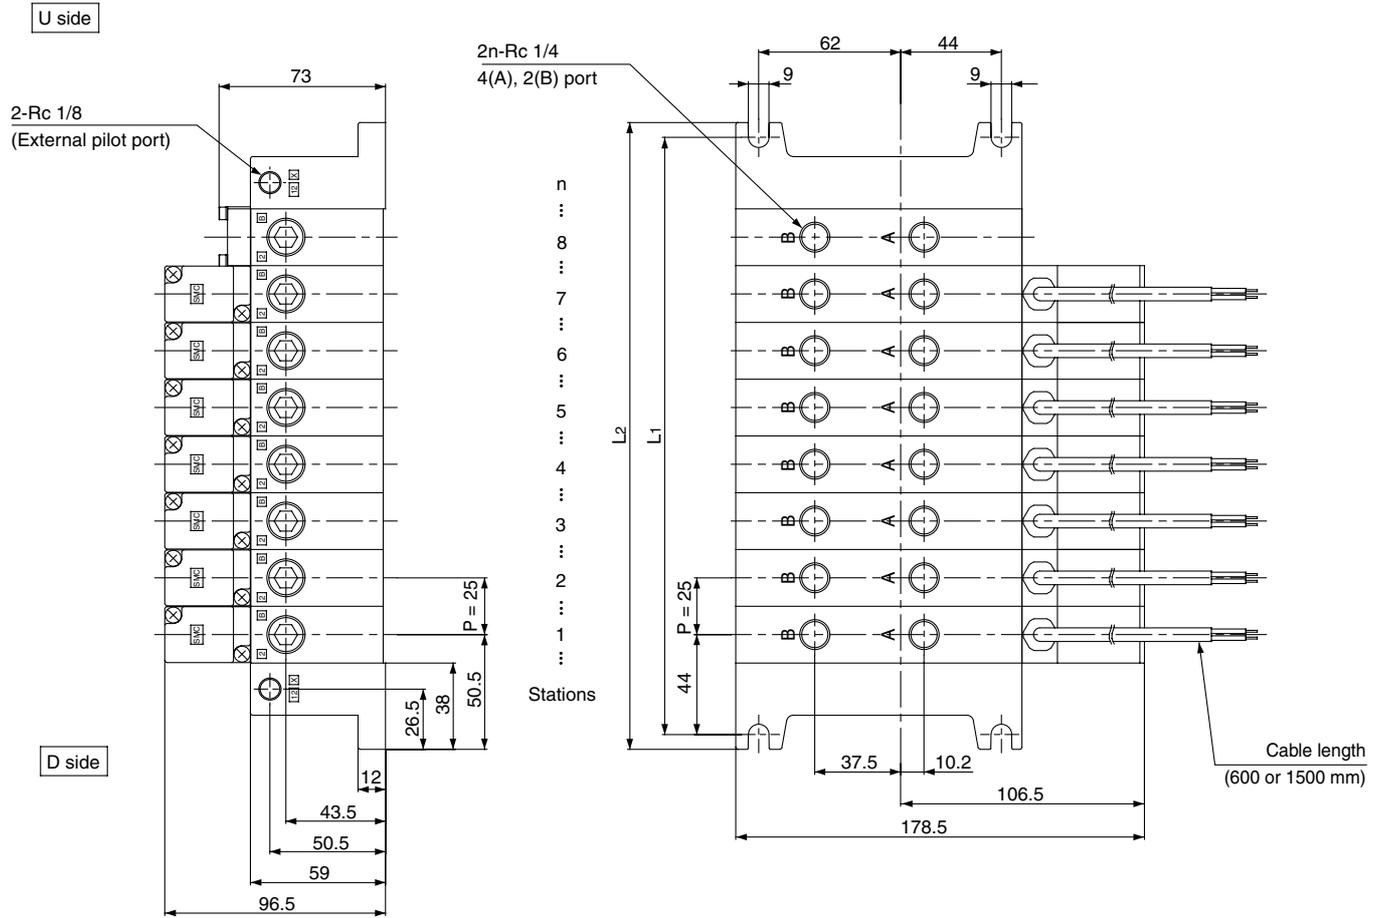

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

Dimensions

Formula $L1 = 25n + 63$, $L2 = 25n + 76$ n: Station (Maximum 16 stations)

L	n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1		88	113	138	163	188	213	238	263	288	313	338	363	388	413	438	463
L2		101	126	151	176	201	226	251	276	301	326	351	376	401	426	451	476



Series VQ4000

Manifold Option Parts


Blanking plate assembly

- VVQ4000-10A-1 (Plug-in type)
- VVQ4000-10A-5 (Plug lead type)

It is used by attaching on the manifold block for being prepared for removing a valve for maintenance reasons or planning to mount a spare valve, etc.

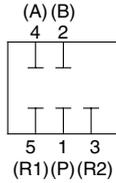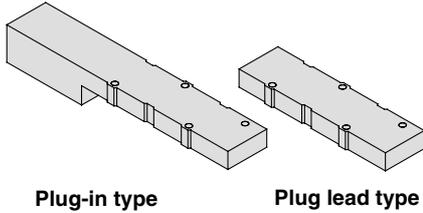



Circuit diagram

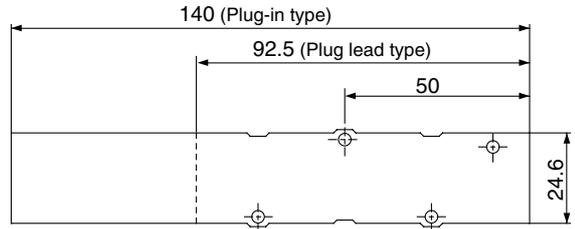



Individual SUP spacer

- VVQ4000-P-1-0²/₀₃ (Plug-in type)
- VVQ4000-P-5-0²/₀₃ (Plug lead type)

By mounting individual SUP spacers on a manifold block, it is possible to provide individual supply ports for each valve.

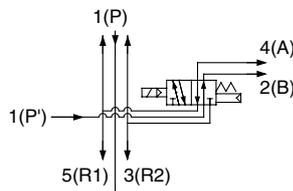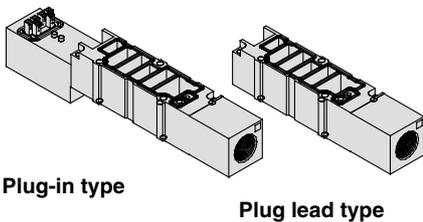



Circuit diagram

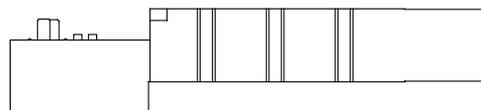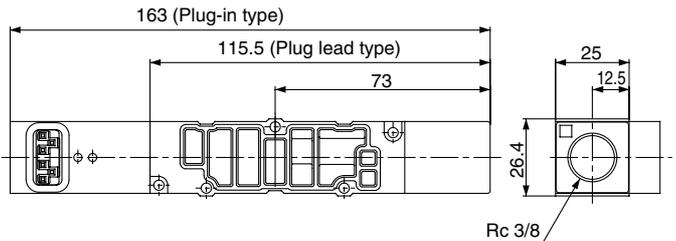



Individual EXH spacer

- VVQ4000-R-1-0²/₀₃ (Plug-in type)
- VVQ4000-R-5-0²/₀₃ (Plug lead type)

By mounting individual EXH spacers on a manifold block, exhaust ports can be provided individually for each valve. (Common EXH type)

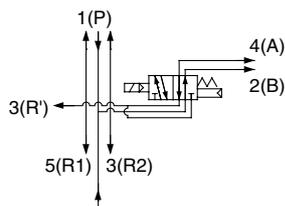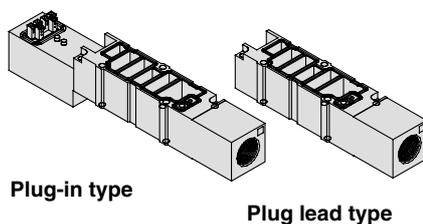




Circuit diagram

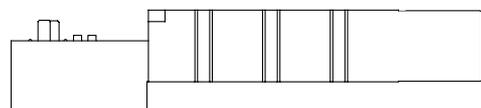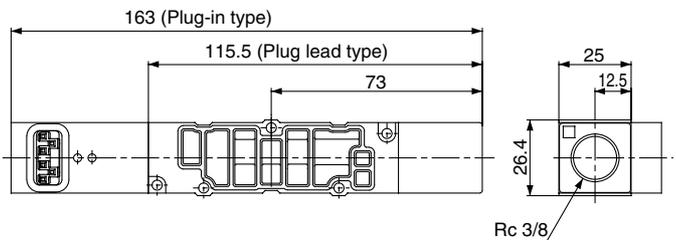

Throttle valve spacer

VVQ4000-20A-1 (Plug-in type)
VVQ4000-20A-5 (Plug-lead type)

A throttle valve spacer is mounted on a manifold block to control cylinder speed by throttling exhaust air flow.

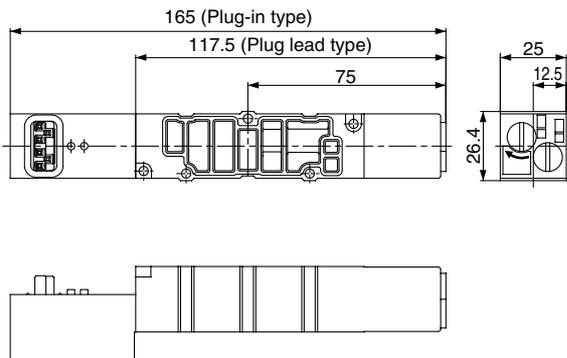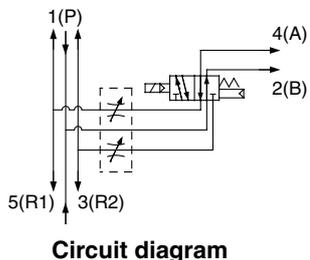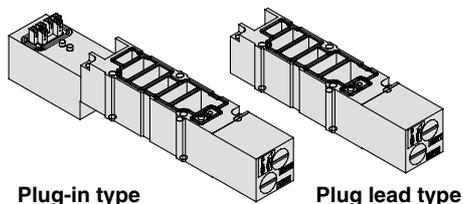

VQC

SQ

VQ0

VQ4

VQ5




VQZ

VQD

SUP stop valve spacer

VVQ4000-37A-1 (Plug-in type)
VVQ4000-37A-5 (Plug-lead type)

A SUP stop valve spacer is mounted on a manifold block, making it possible to individually shut off supply air to each valve.

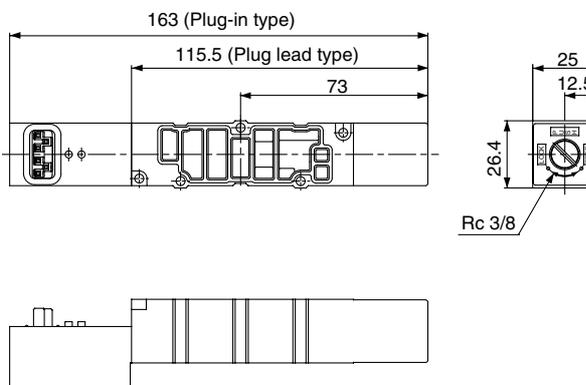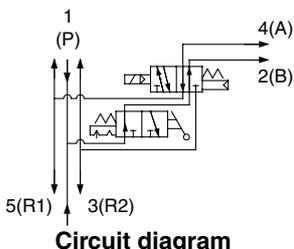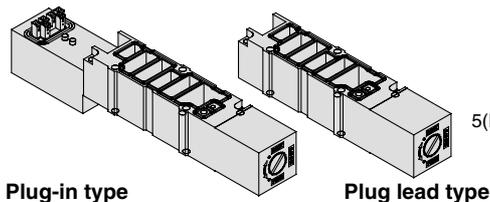

Plug-in type




Plug lead type

Release valve spacer: For D side mounting

VVQ4000-24A-1D (Plug-in type)
VVQ4000-24A-5D (Plug-lead type)

Combination of VQ41□□ (Single) and release valve spacer can be used as air release valve

- Note 1) Mounting on 2 position double and 3 position valve is not possible.
- Note 2) Can be mounted on L kit only. For other kits, order E type control unit. (Refer to pages 2-5-40 to 2-5-43.)

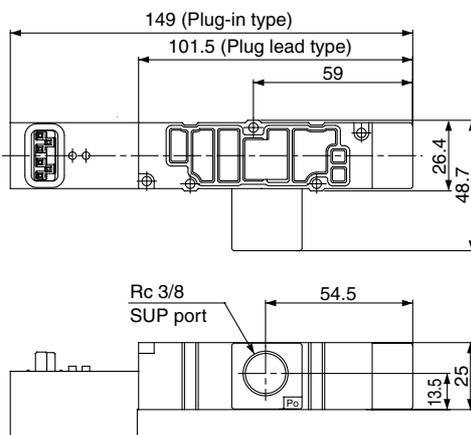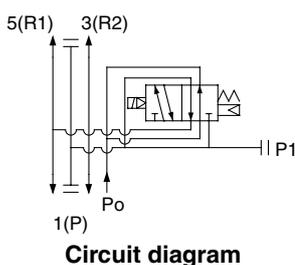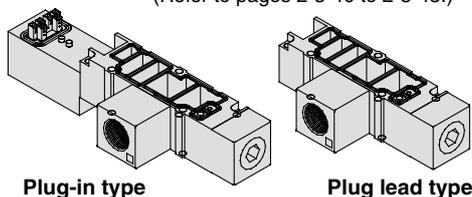



Plug-in type

Plug lead type

SUP/EXH block plate


VVQ4000-16A

When different pressures, high and low, are supplied to manifold, a SUP block plate is inserted between the stations under different pressures.

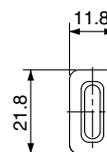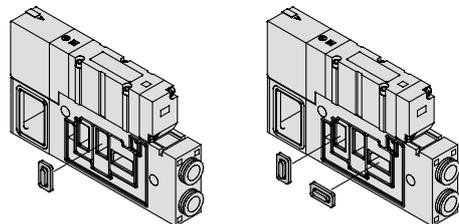


<SUP blocking plate>


<EXH blocking plate>

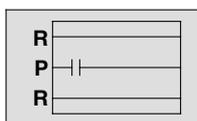

SUP passage blocked

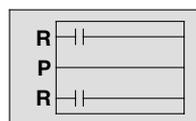


EXH passage blocked

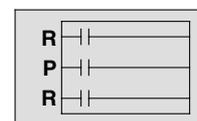

SUP/EXH passage blocked

Series VQ4000

Manifold Option Parts

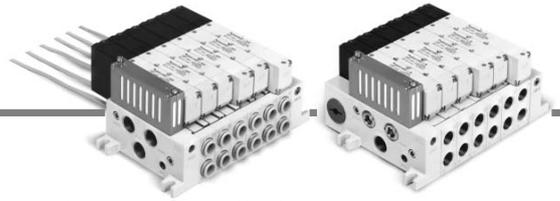

Direct exhaust with silencer box

VV5Q4 $\frac{1}{5}$ -□□□-SB (Exhaust from both sides)





VV5Q4 $\frac{1}{5}$ -□□□-SD (D side exhaust)

VV5Q4 $\frac{1}{5}$ -□□□-SU (U side exhaust)

The EXH outlet is placed on the top side of the manifold end plate. The built-in silencer provides highly effective noise reduction.

(Noise reduction of 35 dB or more)

Note) If a lot of drainage is generated at air supply source, both of exhaust air and drainage are exhausted.

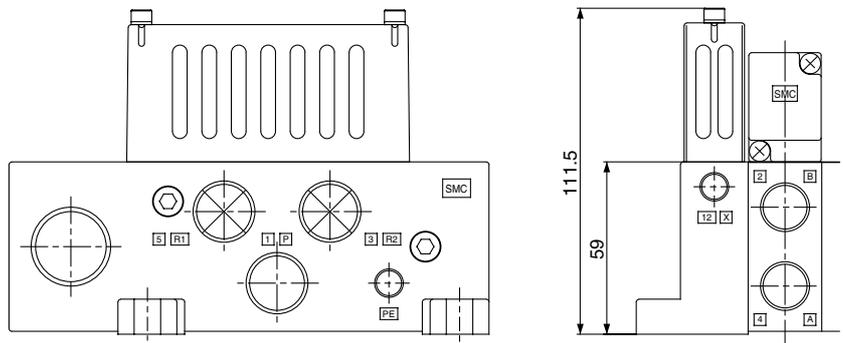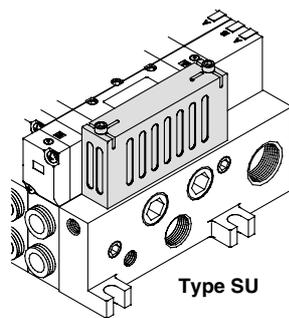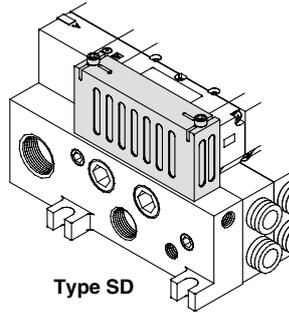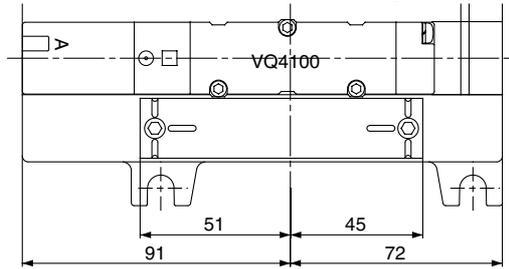

Note) Figure shows VV5Q41-□□□-SD.

Double check spacer with residual pressure exhaust

VVQ4000-25A-1 (Plug-in type)

VVQ4000-25A-5 (Plug lead type)

Can hold an intermediate cylinder position for an extended time.

If the double check spacer with a built-in double check valve is combined, it will enable the cylinder to stop in the intermediate stroke and maintain its position for a long time without being affected by the leakage between the spools.

Besides, combination between 2 position solenoid valve (VQ4 $\frac{1}{2}$ □□) and double check spacer can't hold an intermediate position, but can prevent dropping at the cylinder stroke end.

Specifications





Double check spacer part no.	VVQ4000-25A-1			
	Intermediate stop		Drop prevention	
Applicable solenoid valve	VQ44□□		VQ4 $\frac{1}{2}$ □□	
Leakage N cm ³ /min	Solenoid one side energized	1(P)	5(R ₁) 3(R ₂)	230 or less
		1(P)	5(R ₁) 3(R ₂)	230 or less
	Both solenoids unenergized	4(A)	5(R ₁)	0
		2(B)	3(R ₂)	

* Supply pressure: 0.5 MPa

Caution

Handling Precautions

- Air leakage from the pipe between the valve and cylinder or from the fittings will prevent the cylinder from stopping in the middle for a long time. Check for leakage using a neutral household detergent, such as dish washing soap. Also, check the cylinder sealing and piston seal for leakage.
- Since One-touch fittings allow slight air leakage, screw piping is recommended when stopping the cylinder in the middle for a long time.
- If exhaust side of double check spacer is narrowed down, this causes a decrease in intermediate stop accuracy and may malfunction.
- Combining perfect interface with 3 position valves "VQ4 $\frac{3}{4}$ □□" will not work.
- Set the cylinder load so that the cylinder pressure will be within two times that of the supply pressure.
- Combining double check spacer with external pilot will not work.

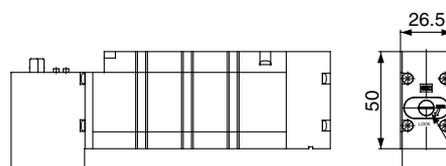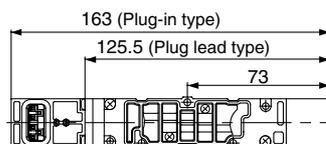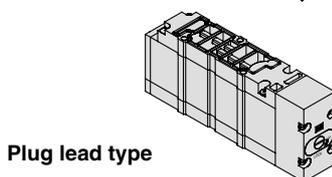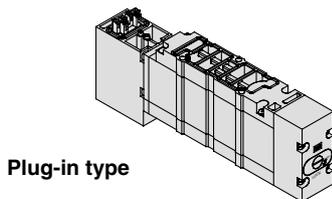

Manual override for residual pressure exhaust
Slotted locking type (Tool required)

Series VQ4000

Manifold Option Parts

Interface regulator (P, A, B port regulation)

ARBQ4000-00-□-1 (Plug-in type)

ARBQ4000-00-□-5 (Plug lead type)

Spacer Interface regulators can be placed on top of the manifold block to reduce the pressure of each of the valves.




Specifications

Interface regulator		ARBQ4000					
Regulating port		A		B		P	
Applicable solenoid valve		Plug-in	Plug lead	Plug-in	Plug lead	Plug-in	Plug lead
Maximum operating pressure		1.0 MPa					
Set pressure range		0.05 to 0.85 MPa					
Fluid		Air					
Ambient and fluid temperature		-5 to 60°C (No freezing)					
Port size for connection of pressure gauge		M5 x 0.8					
Weight (kg)		0.33	0.30	0.33	0.30	0.33	0.30
Effective area at supply side (mm ²) S at P ₁ = 0.7 MPa/P ₂ = 0.5 MPa	P → A	15		31		14	
	P → B	35		16		15	
Effective area at exhaust side (mm ²) S at P ₂ = 0.5 MPa	A → EA	18		40		40	
	B → EB	37		19		37	

- Note 1) Set the pressure within the operating pressure range of the solenoid valve.
- Note 2) Operate an interface regulator only by applying pressure from the "P" port of the base, except when using it as a reverse pressure valve. Further, it cannot be used with reduced pressure at port P.
- Note 3) When using a perfect spacer, assemble a valve, a spacer regulator and a perfect spacer in this order to use it.
- Note 4) When using in A port regulation, B port regulation by closed center, since there is a problem in its operation, please contact SMC.
- Note 5) Dust tight/Low jetproof enclosure (IP65) is not available with interface regulator.


How to Order

Solenoid Valve	Interface regulator	Regulating port
VQ4□0□ (Plug-in type)	ARBQ4000-00-A-1	A
	ARBQ4000-00-B-1	B
	ARBQ4000-00-P-1	P
VQ4□5□ (Plug lead type)	ARBQ4000-00-A-5	A
	ARBQ4000-00-B-5	B
	ARBQ4000-00-P-5	P

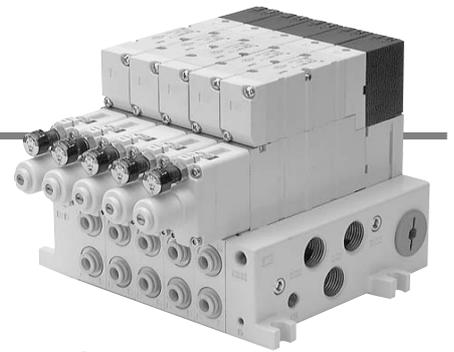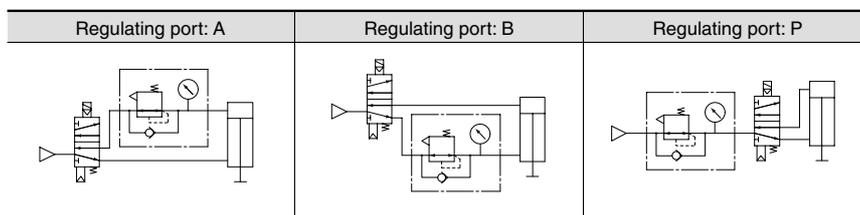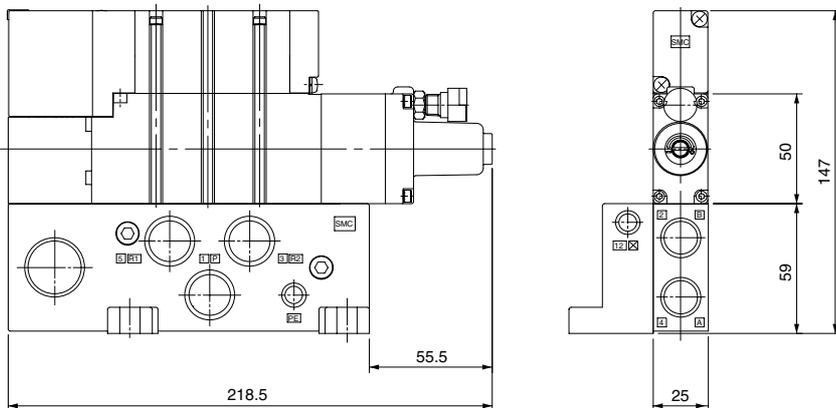


Flow Characteristics


Conditions Inlet pressure: 0.7 MPa
ARBQ4000-00-A

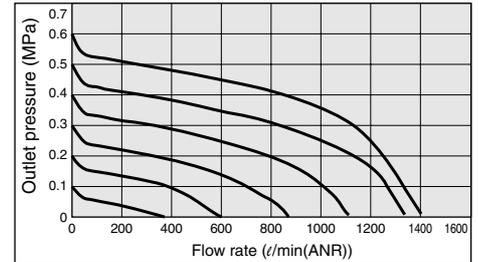


ARBQ4000-00-B

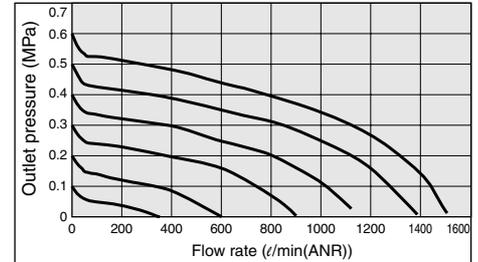

ARBQ4000-00-P (P → A)

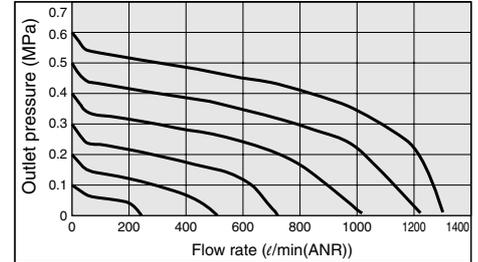


ARBQ4000-00-P (P → B)

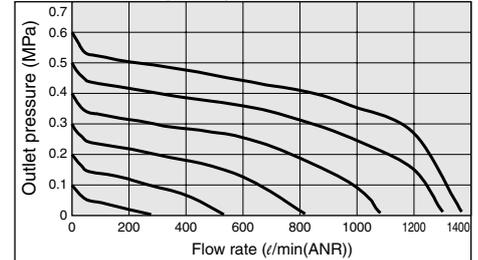

Pressure Characteristics

Conditions
Inlet pressure: 0.7 MPa
Outlet pressure: 0.2 MPa
Flow rate: 20 l/min (ANR)

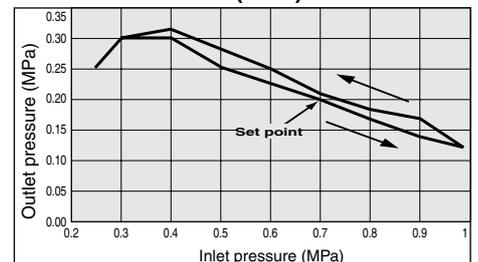

Option


External Pilot Specifications

- When the supply air pressure is:
 - lower than the required minimum operating pressure 0.15 to 0.2 MPa,
 - opposite air supply (R port supply), cylinder supply (A and B port supply),
 - used for vacuum specifications (please contact SMC),
 it can be used for external pilot specifications.
- Order a valve by adding the external pilot specification [R] to the part number. External pilot is available as standard for manifolds and options.
- Internal/external pilot can be mounted in a manifold.

How to Order Manifold

VQ4100 **R**—5—03

● External pilot specifications

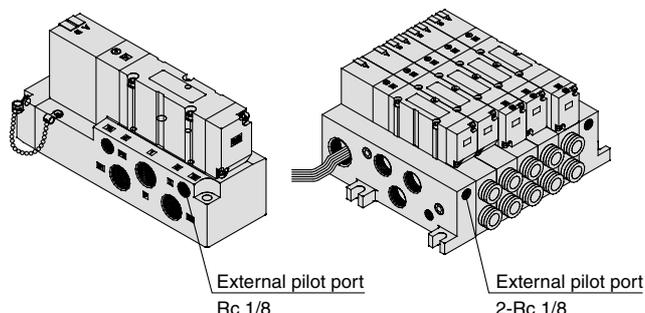

<Sub-plate>

<Manifold>

Note) Possible to mix mounting of internal and external pilot

Pressure Specifications

Valve construction		Metal seal	Rubber seal
Operating pressure range		Vacuum to 1.0 MPa	
External pilot pressure range <small>Note)</small>	Single	0.15 to 1.0 MPa (0.15 to 0.7 MPa)	0.2 to 1.0 MPa (0.2 to 0.7 MPa)
	Double		0.15 to 1.0 MPa (0.15 to 0.7 MPa)
	3 position		0.2 to 1.0 MPa (0.2 to 0.7 MPa)

Note) Values inside () denote the low wattage (0.5 W) specifications.

Combination of manifold options shown below and external pilot specification is not possible.

Release valve spacer	VVQ4000-24A-□□
Direct exhaust with silencer box	VV5Q4□-□□□□-S□
For exhaust cleaner mounting	VV5Q4□-□□□□-C _D ^U
Manifold with control unit	VV5Q4□-□□□□ <small>Control unit model no.</small>
Double check spacer with residual pressure exhaust	VVQ4000-25A- ¹ / ₅

Inch-size One-touch Fittings

Valve with inch size One-touch fittings is shown below.

How to Order Manifold

VV5Q41—06 **N11** SA—K

● Cylinder port

N7	ø1/4"
N9	ø5/16"
N11	ø3/8"

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

International Thread Standards Other than Rc

Rc specifications are standard for all ports, however, NPT, NPTF and G are available for international markets.

Add the appropriate symbol following the port size in the standard part number.

How to Order Single Valves (Example)

VQ4100 — 5 — 03 **T**

● Cylinder port
Port size

● Thread type (P, R and A, B port)

Nil	Rc
N	NPT
T	NPTF
F	G

How to Order Manifold

VV5Q41 — 08 03 **T** FU1

● Cylinder port
Port size

● Thread type (P, R and A, B port)

Nil	Rc
N	NPT
T	NPTF
F	G

VV5Q41 — 08 C8 **T** FU1

● Cylinder port
Port size

● Thread type (P, R port)

Nil	Rc
N	NPT
T	NPTF
F	G

How to Order Sub-plates and Options (Example)

VQ4000 — P — B 02 **N** (Sub-plate)

VVQ4000 — P — 1 — 03 **T** (Option)

● Port size

● Thread type

Nil	Rc
N	NPT
T	NPTF
F	G

Use of Control Unit

<Construction and piping >



1. The supply pressure (Po) passes through the filter regulator (1) and is adjusted to the prescribed pressure. Next, it goes through the release valve (2) (outlet residual pressure switching function used as normally ON) and is supplied to the manifold base side (P).
2. Supply pressure from Po port is blocked when release valve (2) is OFF. Air supplied to manifold side P port is exhausted to R1 port through release valve (2).
3. Pressure switch is piped at outlet side of release valve (2). (Release valve (2) is operated at energizing.)
Also, since there is an internal voltage drop of 4 V, it may not be possible to confirm the OFF and ON states with a tester, etc.

<Wiring >

1. Electrical entry of manifold (except L and C kit) is individual wiring. For details, refer to internal wiring figure of each kit. Cable length is 0.6 m for L kit.


<Change of pressure switch piping >

1. Pressure switch (3) is changed to piping on inlet side of release valve (2), remove the pressure switch, reverse the gasket up and down, and fix **[B]** mark.
2. When pressure switch is mounted, tightening torque of bolt is 0.8 to 1.2 N·m.

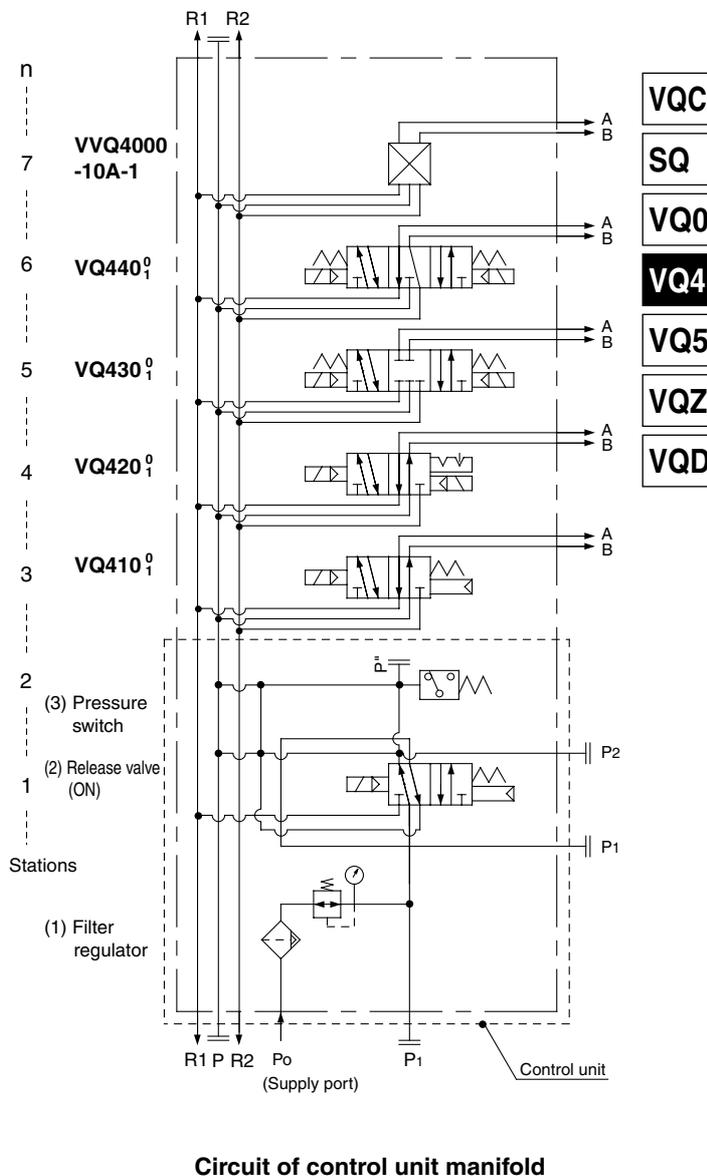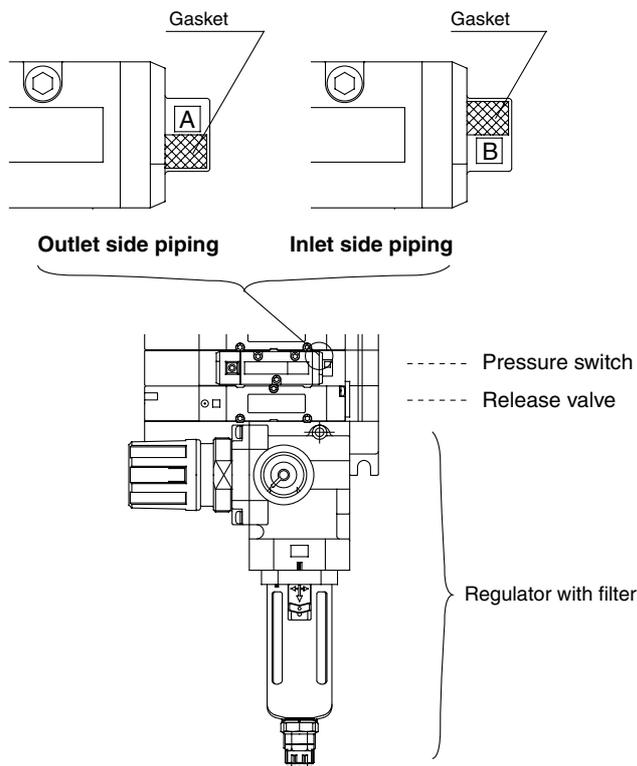

Manifold with Control Unit

Plug-in type

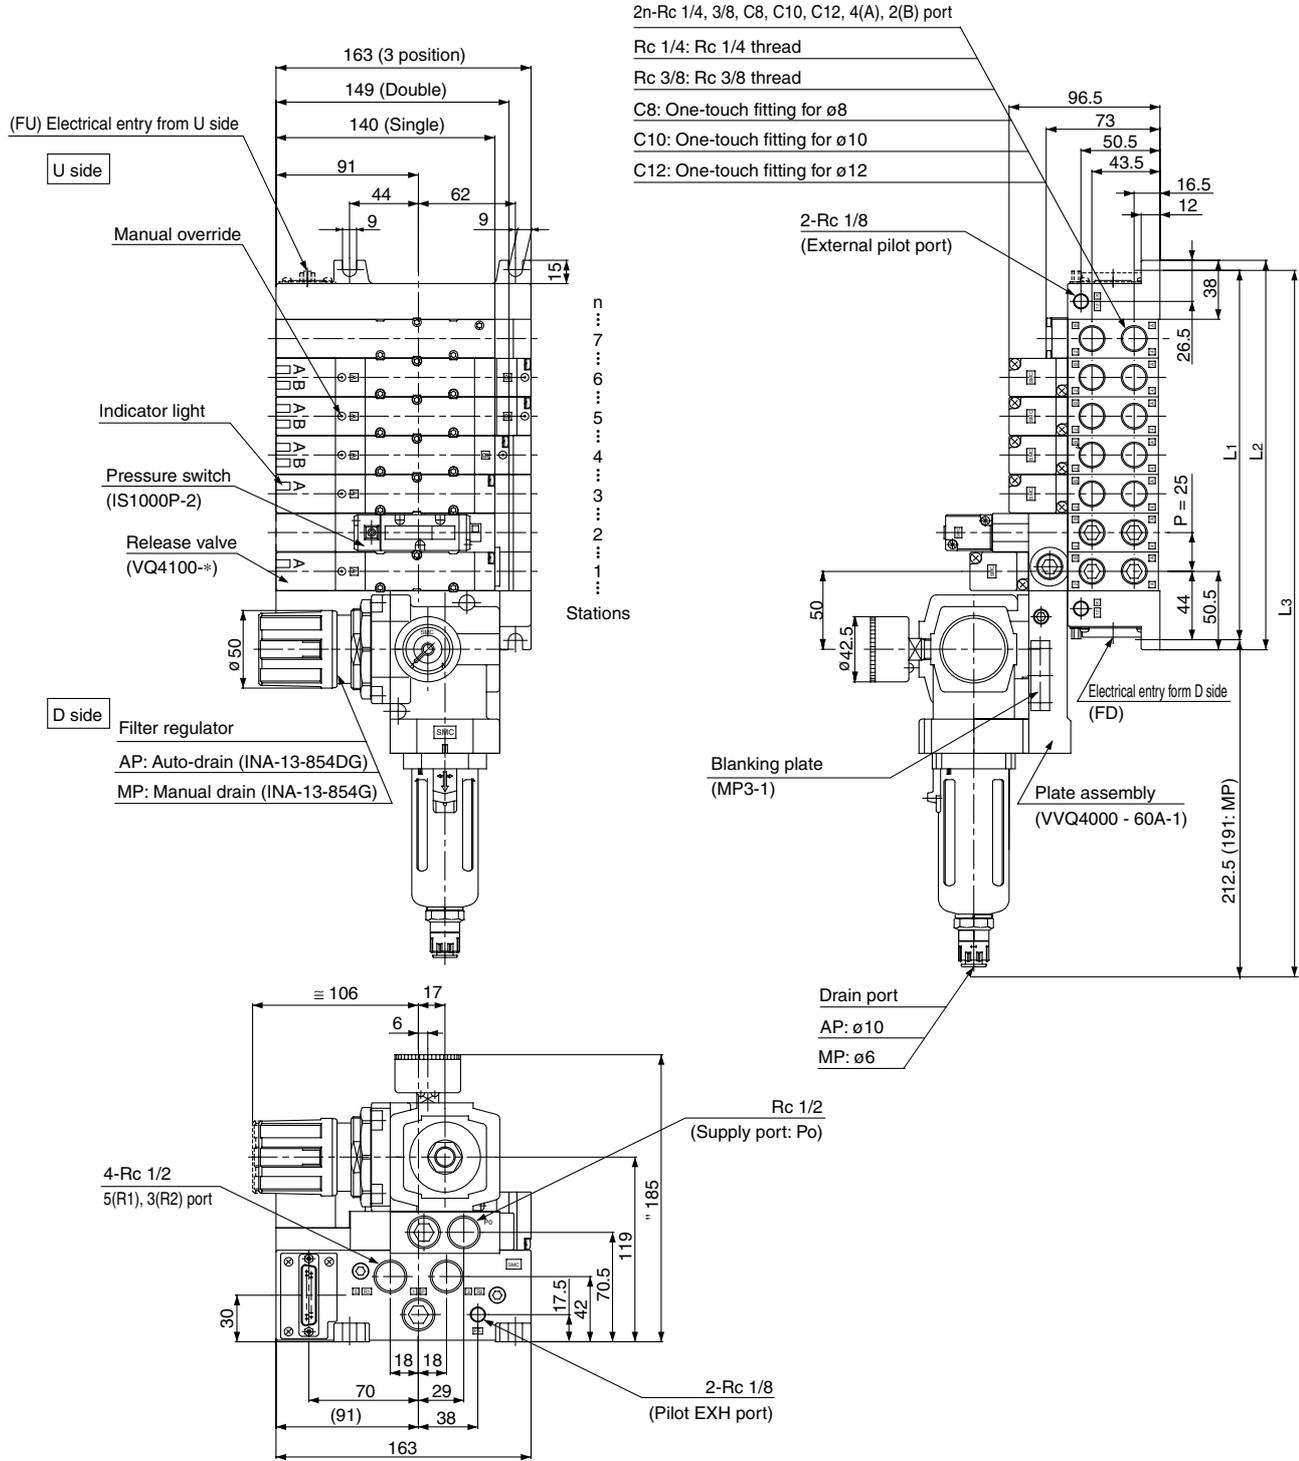


Dimensions

Formula L1 = 25n + 63, L2 = 25n + 76, L3 = 25n + 269.5 (262.5) n: Stations

L \ n	2	3	4	5	6	7	8	9	10	11	12
L1	113	138	163	188	213	238	263	288	313	338	363
L2	126	151	176	201	226	251	276	301	326	351	376
L3	332	357	382	407	432	457	482	507	532	557	582
	(310.5)	(335.5)	(360.5)	(385.5)	(410.5)	(435.5)	(460.5)	(485.5)	(510.5)	(535.5)	(560.5)

* L3 (): Type MP

Plug lead type

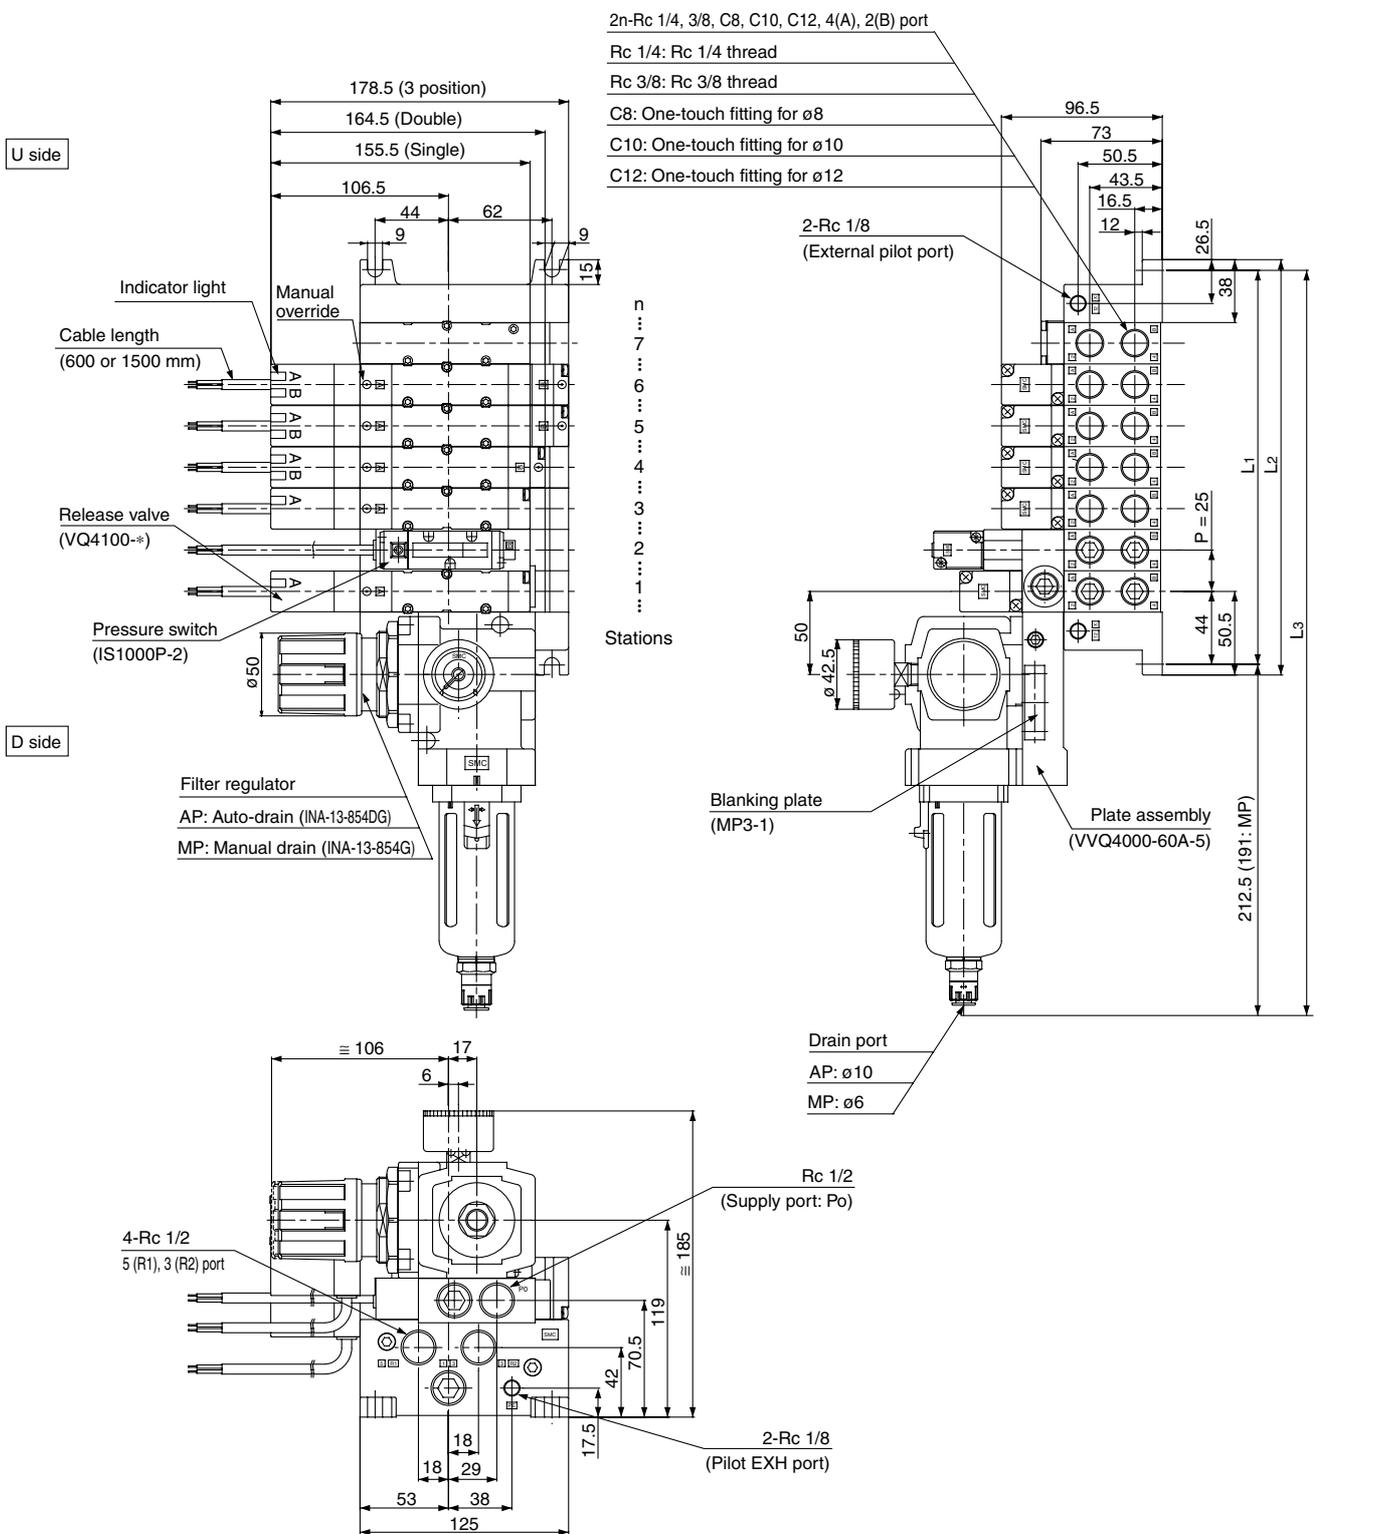

Dimensions

Formula $L1 = 25n + 63$, $L2 = 25n + 76$, $L3 = 25n + 269.5$ (262.5) n: Stations




L	n	2	3	4	5	6	7	8	9	10	11	12
L1		113	138	163	188	213	238	263	288	313	338	363
L2		126	151	176	201	226	251	276	301	326	351	376
L3		332	357	382	407	432	457	482	507	532	557	582
		(310.5)	(335.5)	(360.5)	(385.5)	(410.5)	(435.5)	(460.5)	(485.5)	(510.5)	(535.5)	(560.5)

* L3 (): Type MP

Series VQ4000 Construction

Plug-in Unit

Metal seal type

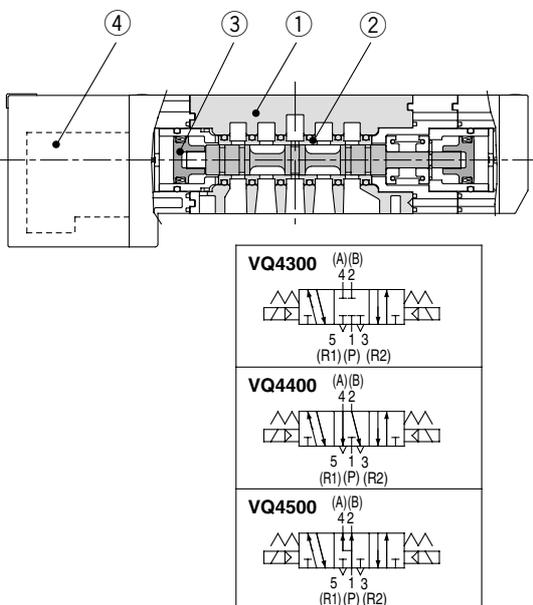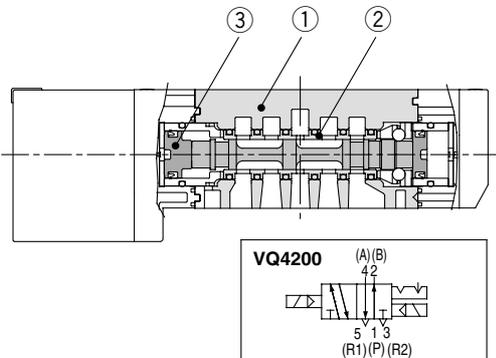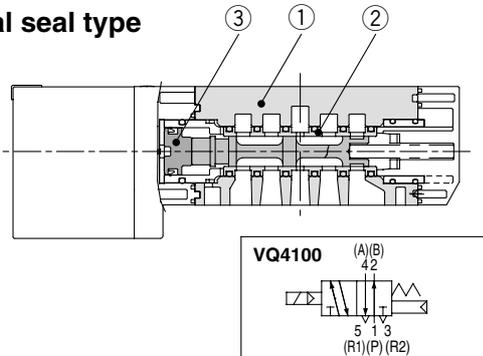




Component Parts

Number	Description	Material	Note
①	Body	Aluminum die-casted	
②	Spool/Sleeve	Stainless steel	
③	Piston	Resin	

Replacement Parts

④	Pilot valve assembly	VQZ111P-□	*: Coil rated voltage Example) 24 VDC: 5
---	----------------------	-----------	---

Rubber seal type

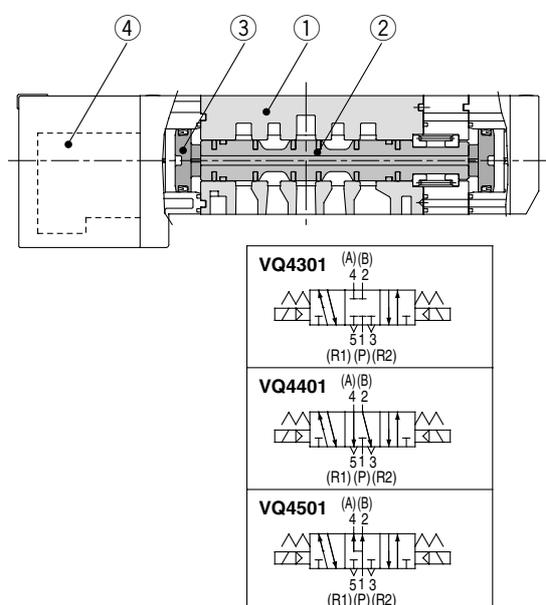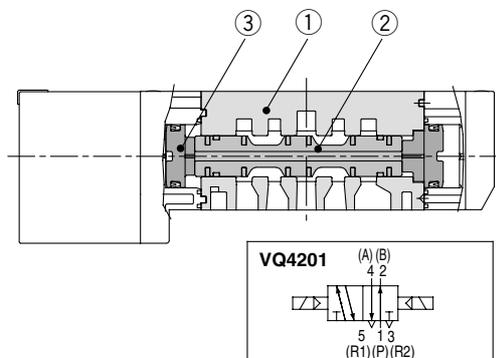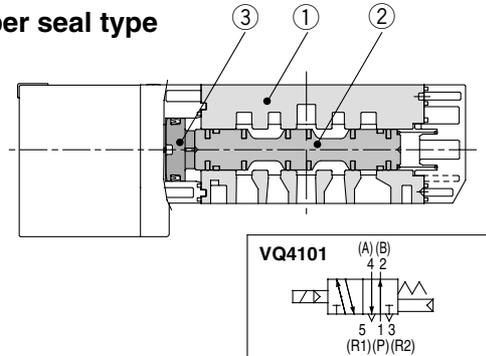

Component Parts

Number	Description	Material	Note
①	Body	Aluminum die-casted	
②	Spool valve	Aluminum, NBR	
③	Piston	Resin	


Replacement Parts

④	Pilot valve assembly	VQZ111P-□	*: Coil rated voltage Example) 24 VDC: 5
---	----------------------	-----------	---

Series VQ4000 Construction

Plug Lead Unit

Metal seal type

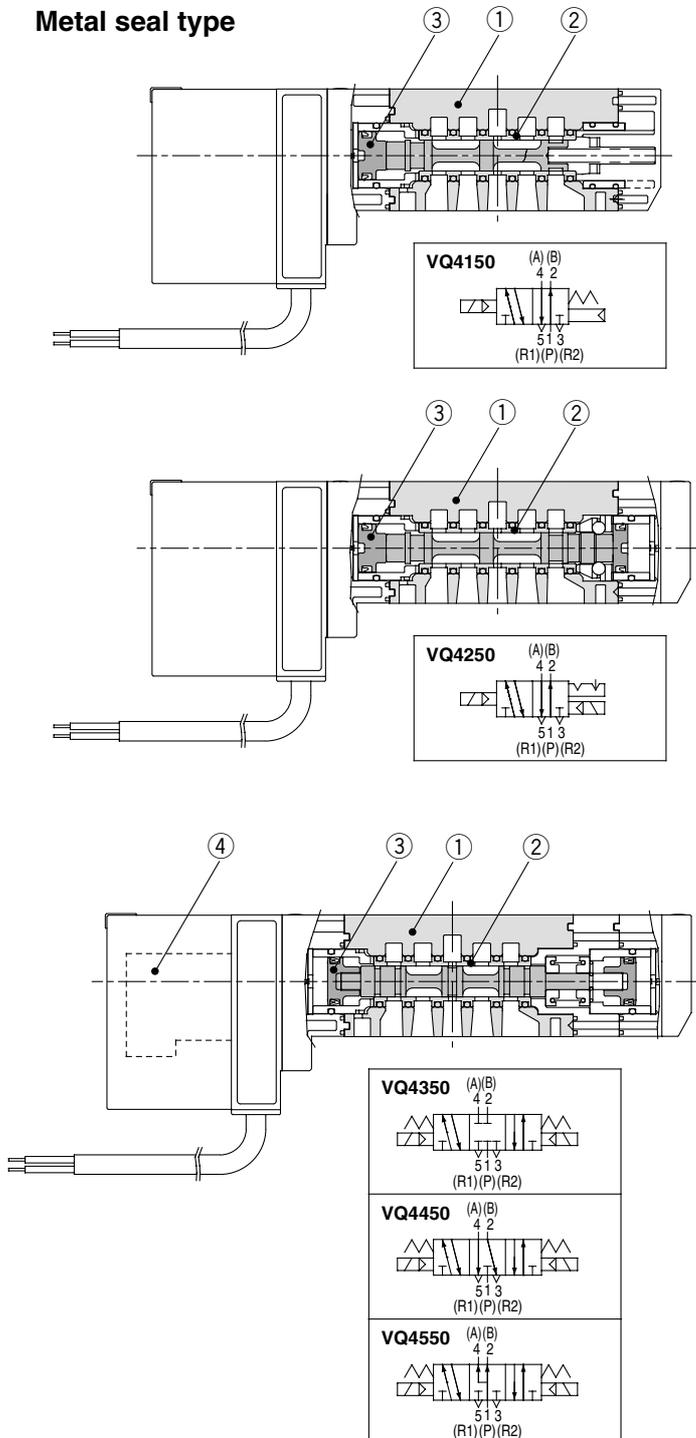


Component Parts

Number	Description	Material	Note
①	Body	Aluminum die-casted	
②	Spool/Sleeve	Stainless steel	
③	Piston	Resin	

Replacement Parts

④	Pilot valve assembly	VQZ111P-□	*: Coil rated voltage Example) 24 VDC: 5
---	----------------------	-----------	---

Rubber seal type

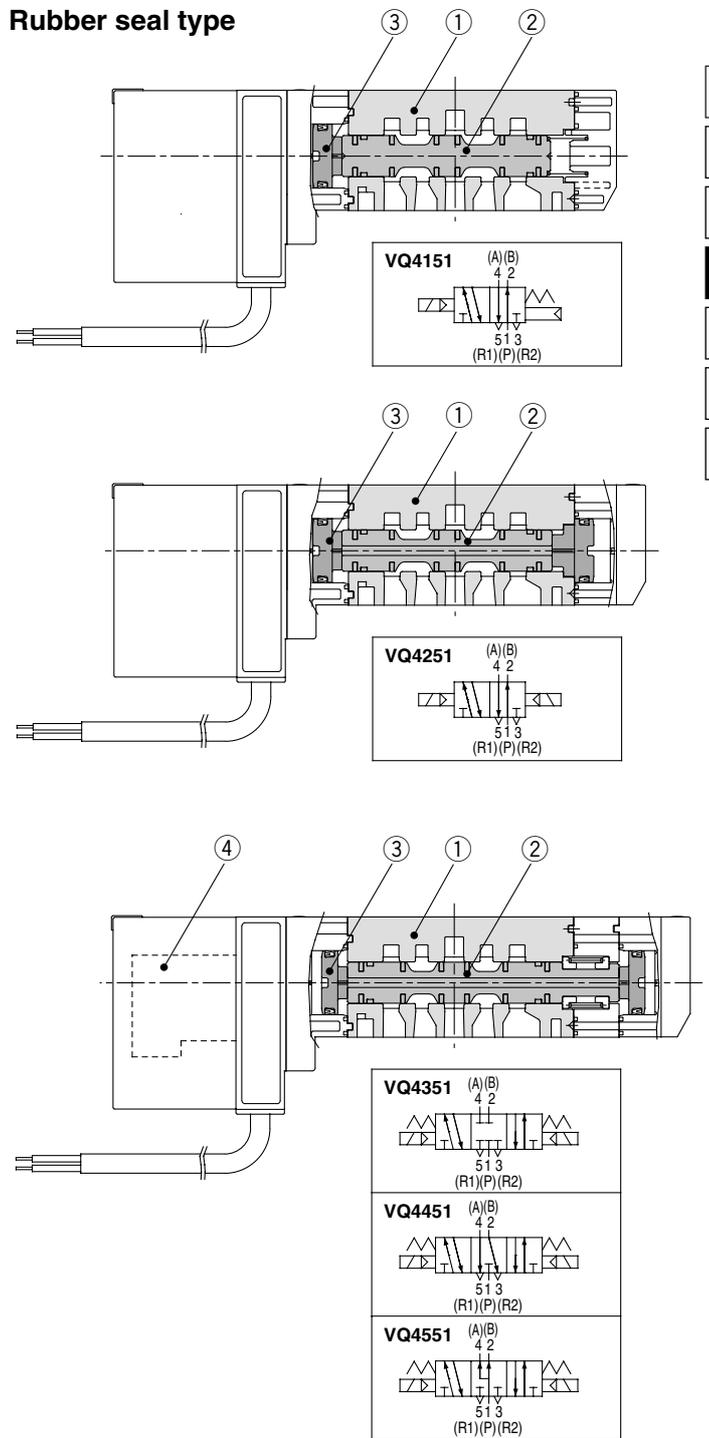

Component Parts

Number	Description	Material	Note
①	Body	Aluminum die-casted	
②	Spool valve	Aluminum, NBR	
③	Piston	Resin	

Replacement Parts

④	Pilot valve assembly	VQZ111P-□	*: Coil rated voltage Example) 24 VDC: 5
---	----------------------	-----------	---

VQC

SQ

VQ0

VQ4


VQ5

VQZ

VQD

Series VQ4000

Exploded View of Manifold

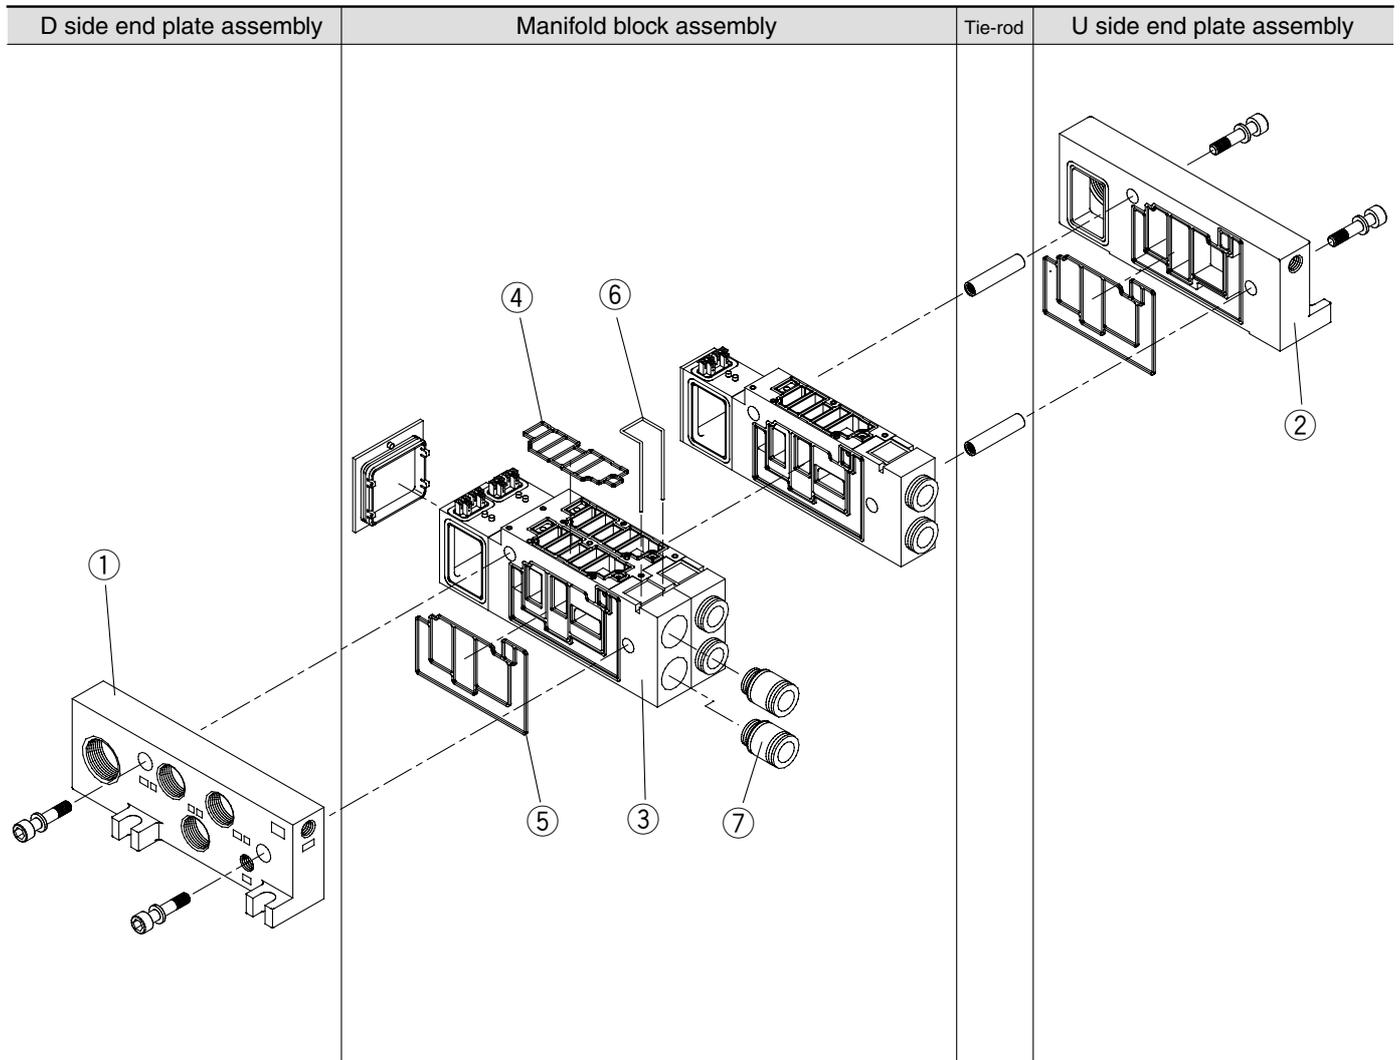

Note 1) The electrical entry cannot be changed.
 Note 2) Manifold block used is 2-station integrated type. For odd number of stations, 1 pc. of one-station manifold block is combined at U side; for even number of stations, 2 pcs. are combined, therefore making the increase/decrease of stations possible.

D side

U side

Example) 1.....2.....3.....4.....5.....6.....Stations

5 stations (Odd number)

2 stations	2 stations	1 station
------------	------------	-----------

6 stations (Even number)

2 stations	2 stations	1 station	1 station
------------	------------	-----------	-----------

<D Side End Plate Assembly>

1. D side end plate assembly no. (For F, L, S, T kit)

VVQ4000 — 3A — 1

L	F, L, T, S kit
F ⁽¹⁾	F kit (Connector side)
C	C kit (Plug lead type)

Nil	Standard
W ⁽²⁾	IP65 enclosure
CD	For exhaust cleaner mounting
SD	Direct exhaust with silencer box

Note 1) D-sub connector is not included.
Note 2) Dripproof F kit is not available.

D side end plate assembly part no. (For input/output type for S kit)

VVQ4000 — 3A — 12

* With connector on the SI unit

<Manifold Block Assembly>

3. Manifold block assembly part no.

VVQ4000 — 1

A	For 1 station
C	For 2 stations ⁽³⁾

Nil	Standard
W ⁽²⁾	IP65 enclosure is dust

F1	F kit Double wiring	02	Rc 1/4
F2	F kit Single wiring	03	Rc 3/8
T1	T kit Double wiring	B	Bottom ported Rc 1/4
T2	T kit Single wiring	C8	With One-touch fitting for ø8
S1	S kit Double wiring	C10	With One-touch fitting for ø10
S2	S kit Single wiring	C12	With One-touch fitting for ø12
L0□	L0 kit □: Stations (1 to 16)	N7	With One-touch fitting for ø1/4
L1□	L1 kit □: Stations (1 to 16)	N9	With One-touch fitting for ø5/16
L2□	L2 kit □: Stations (1 to 16)	N11	With One-touch fitting for ø3/8
C	C kit (Plug lead type)		

Note 1) Tie-rods (2 pcs.) and lead wire assembly for station addition included.
Note 2) Dripproof F kit is not available.
Note 3) When ordering block assembly for L kit 2 stations, the lead wire should be ordered by the smaller numbers of the D side (no. of station).

<SI Unit>

SI Unit Part No.

Type	Model symbol	SI unit part no.	Description	Note
Dedicated output model	O	—	Without SI unit	
	A	EX323 ^U -S001	General type SI unit (Series EX300)	
	B	EX123 ^U -SMB1	Mitsubishi Electric Corporation: MELSECNET/MINI-S3 Data Link System	
	BB	EX124 ^U -SMB1	Mitsubishi Electric Corp.: MELSECNET/MINI-S3 Data Link System (2 power supply systems)	
	C	EX123 ^U -STA1	OMRON Corporation: SYSBUS Wire System	
	D	EX123 ^U -SSH1	SHARP Corporation: Satellite I/O Link System	
	F1	EX123 ^U -SUW1	16 output points Uni-wire System (NKE Corporation)	
	G	EX124 ^U -SAB1	Allen Bradley Remote I/O (RIO) System (2 power supply systems) (Rockwell Automation, Inc.)	
	H	EX123 ^U -SUH1	SI unit for 16 output points Uni-wire H System (NKE)	
	J1	EX123 ^U -SSL1	16 output points S-LINK System (Sunx)	
	J2	EX123 ^U -SSL2	8 output points S-LINK System (Sunx)	
	K	EX123 ^U -SFU1	T-LINK Mini System (Fuji Electric Co.)	
	Q	EX124 ^U -SDN1	SI unit for DeviceNet and CompoBus/D (OMRON)	
	R1	EX124 ^U -SCS1	SI unit for 16 output points CompoBus/S (OMRON)	
	R2	EX124 ^U -SCS2	SI unit for 8 output points CompoBus/S (OMRON)	
	U	EX124 ^U -SJM1	JEMANET (2 power supply systems)	
	V	EX124 ^U -SMJ1	SI unit for CC-LINK System (2 power supply systems) (Mitsubishi Electric Corp.)	
For in/output model	QW	EX240-SDN2	CC-LINK System	
	NW	EX240-SPR1	PROFIBUS-DP (—COM)	
		EX240-IE1	DI unit (For input) M12 8 number of inputs	

<U Side End Plate Assembly Part No.>

2. U side end plate assembly no. (For F, L, S, T kit)

VVQ4000 — 2A — 1

L	F, L, T, S kit
F ⁽¹⁾	F kit (Connector side)
C	C kit (Plug lead type)

Nil	Standard
W ⁽²⁾	IP65 enclosure
CU	For exhaust cleaner mounting
SU	Direct exhaust with silencer box

Note 1) D-sub connector is not included.
Note 2) Dripproof F kit is not available.

U side end plate assembly part no. (For input/output type for S kit)

VVQ4000 — 2A — 12

* With connector on the SI unit

<Manifold Block Replacement Parts>

Replacement Parts

No.	Part no.	Description	Material	Number
④	VVQ4000-80A-1	Gasket	NBR	10
⑤	VVQ4000-80A-2	Gasket	NBR	10
⑥	VVQ4000-80A-4	Clip	Stainless steel	10

Note) Spare parts consist of sets containing 10 pcs. each.

<Fitting Assembly>

7. Fitting assembly part no. (For cylinder port)

VVQ4000 — 50B

C8	Applicable tubing ø8
C10	Applicable tubing ø10
C12	Applicable tubing ø12
N7	Applicable tubing ø1/4
N9	Applicable tubing ø5/16
N11	Applicable tubing ø3/8


Note) Purchasing order is available in units of 10 pieces.

5 Port Solenoid Valve Metal Seal/Rubber Seal Base Mounted Series VQ5000

Space-saving profile

Clean space saving design with all pilot valves concentrated to one side with no protrusions in any direction

Space-saving — 40% less
Capacity-saving — 50% less
(In-house comparison)

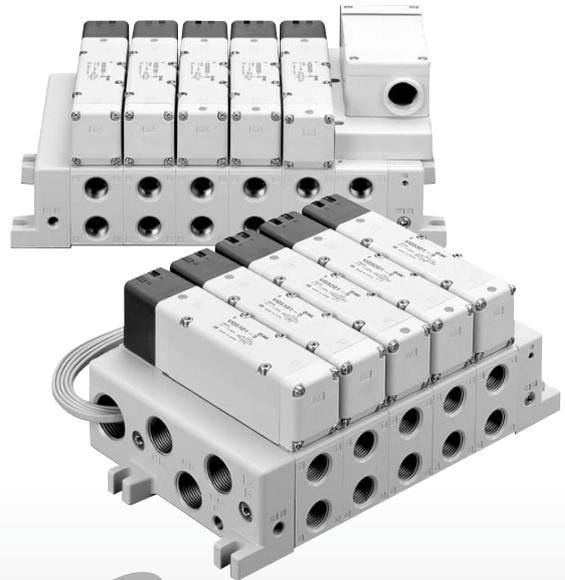

- VQC
- SQ
- VQ0
- VQ4
- VQ5**
- VQZ
- VQD

Compact with large flow capacity

(Ideal for driving cylinders up to $\phi 180$)

Outstanding response times and long service life

(Metal seal with light/surge suppressor)






VQ5100 (Single)	32 mS	100 million cycles * According to SMC life test conditions
VQ5200 (Double)	17 mS	
Accuracy	± 3 mS	

* For applications which demand high speed, high frequency, long life and a precise response time.

Enclosure IP65 compliant Dust tight/Low jetproof type


A variety of common wiring methods are standardized.

<Plug-in type>

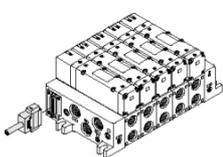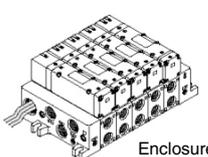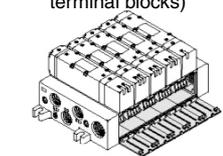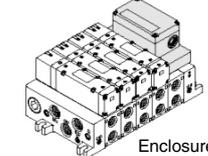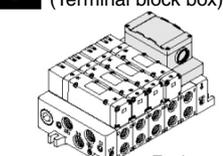F kit (D-sub connector) 	L kit (Lead wire) 
T1 kit (With individual terminal blocks) 	S kit (Serial transmission) 
T kit (Terminal block box) 	<ul style="list-style-type: none"> 5 wiring types have been standardized to facilitate easy wiring work and maintenance. In addition, 3 of the wiring types are available with IP65 enclosures.

Cylinder Speed Chart

Use as a guide for selection. Please confirm the actual conditions with SMC Sizing Program.

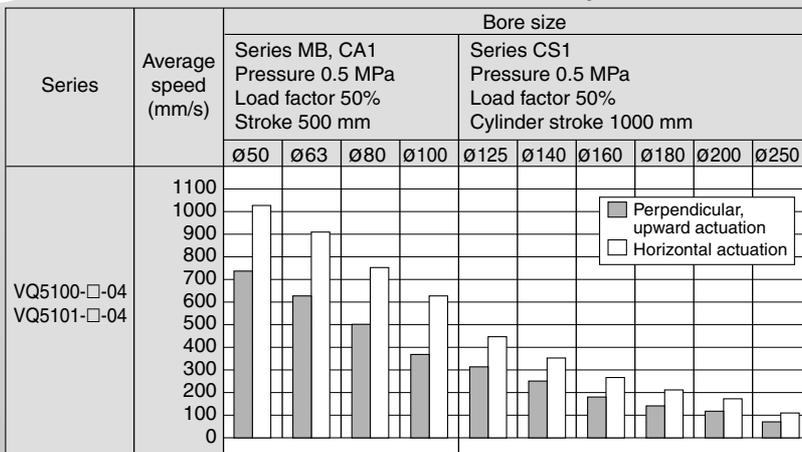


- * It is when the cylinder is extending that is meter-out controlled by speed controller which is directly connected with cylinder, and its needle valve with being fully open.
- * The average velocity of the cylinder is what the stroke is divided by the total stroke time.
- * Load factor: $((\text{Load weight} \times 9.8) / \text{Theoretical force}) \times 100\%$

System Components

Speed controller	Silencer	SGP (Steel pipe) dia. x Length
AS420-04	AN400-04	10A x 1 m

Individual wiring type

<Plug lead type>

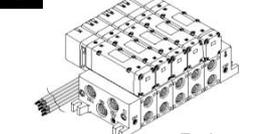C kit (Connector) 
--

Grommet type
Enclosure IP65 compatible

⚠ Precautions

Be sure to read before handling. For Safety Instructions and Solenoid Valve Precautions, refer to page 2-9-2.


Manual Override Operation

⚠ Warning

Since connected equipment will be actuated when the manual override is operated, first confirm that conditions are safe.


Non-locking push type (Tool required) is standard. As an option, slotted locking type (Tool required) is available.

Push type (Tool required)

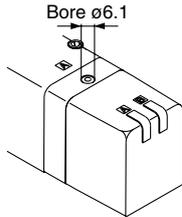


Push down the manual override button with a small screwdriver, etc.
Release the screwdriver and the manual override will return.

Locking type (Option)

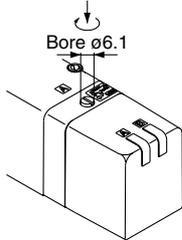

Push down completely on the manual override button with a small screwdriver. While down, turn clockwise 90° to lock it. Turn it counterclockwise to release it.

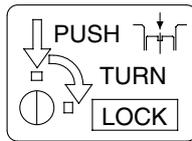


Mounting of Valves

⚠ Caution

After confirming the gasket is correctly placed under the valve, securely tighten the bolts with the proper torque shown in the table below.

Proper tightening torque (N·m)
1 to 1.8

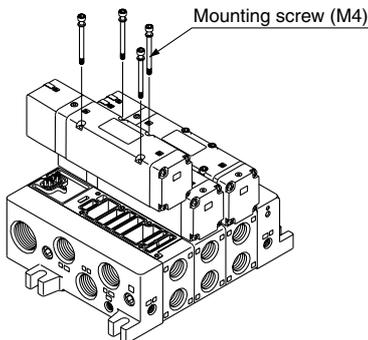


Lead Wire Connection

⚠ Caution

Plug-in sub-plate (With terminal block)

- If the junction cover (1) of the sub-plate is removed, you can see the plug-in type terminal block (2) mounted inside the sub-plate.

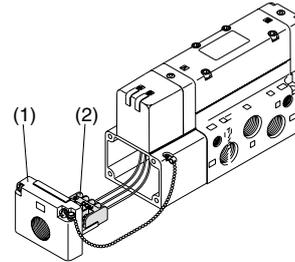

- The terminal block is marked as follows. Connect wiring to each of the power supply terminals.


Terminal block marking	A	COM	B	\bar{T}
Model				
VQ510₁⁰	A side	COM	—	—
VQ520₁⁰	A side	COM	B side	—
VQ5₃⁴0₆⁰	A side	COM	B side	—

Note 1) There is no polarity. It can also be used as -COM.
Note 2) The sub-plate is double wired even for the VQ510₁⁰.

- Applicable terminal 1.25-3s, 1.25Y-3, 1.25Y-3N, 1.25Y-3.5.

Plug lead: Grommet type

Make connections to each corresponding wire.

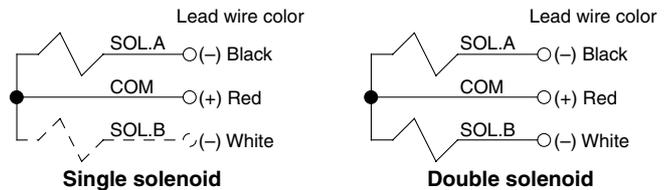

	Single solenoid	Double solenoid
Standard	Black: A side solenoid (-) Red: COM (+)	Black: A side solenoid (-) Red: COM (+) White: B side solenoid (-)
Enclosure IP65 compliant	 Black: A side solenoid (-) Red: COM (+) White: B side solenoid (-) (Not used for single solenoid) Green: (Not used for single or double.)	

Note) There is no polarity. It can also be used as -COM.

Installation and Removal of Light Cover

⚠ Caution


Installation/Removal of light cover

● **Removal**

To remove the pilot cover pull it straight off. If it is pulled off at an angle, the pilot valve may be damaged or the protective O-ring may be scratched.

● **Installation**

Place the cover straight over the pilot assembly so that the pilot valve is not touched, and push it until the cover hook locks without twisting the protective O-ring. (When pushed in, the hook opens and locks automatically.)

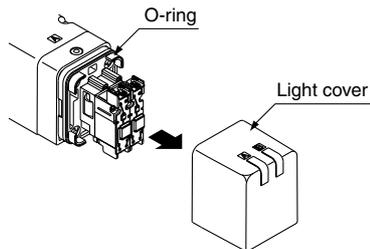

Replacement of Pilot Valve


⚠ Caution

● **Removal**

1. Remove the mounting screw that holds the pilot valve using a small screwdriver.
2. When equipped with light, remove the light circuit board which is installed on the pilot valve by pulling it straight off the connector pins.

● **Installation**


1. Insert the light circuit board straight onto the connector pins following the guide. If it is pushed in forcibly without following the guide, there is a danger of possibly bending the board contacts.
2. After confirming the gasket is correctly placed under the valve, securely tighten the bolts with the proper torque shown in the table below.

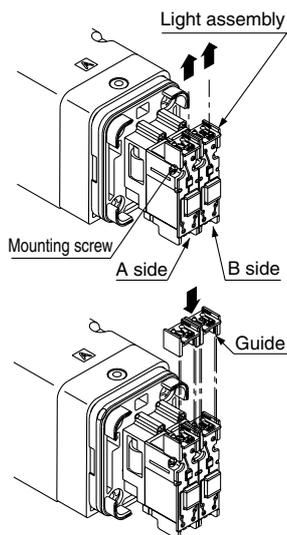

Proper tightening torque (N·m)

0.1 to 0.13

Note) The mounting of pilot valves is not directional with respect to the A and B sides. However, the light circuit boards' A side is orange and the B side is green. It must be mounted on the pilot valve in accordance with the mounting indicators. The light will not go on if the mounting is reversed.

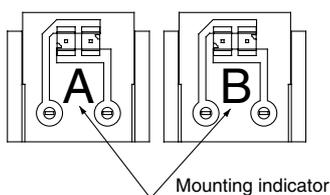

Light Circuit Board Part No.


SOL.A	VQZ100-47-A
SOL.B	VQZ100-47-B

Note) It can be used with all voltages.

For Plug Lead Type

Attaching and detaching connectors

- To attach a connector, hold the lever and connector unit between your fingers and insert straight onto the pins of the solenoid valve so that the lever's pawl is pushed into the groove and locks.
- To detach a connector, remove the pawl from the groove by pushing the lever downward with your thumb, and pull the connector straight out.

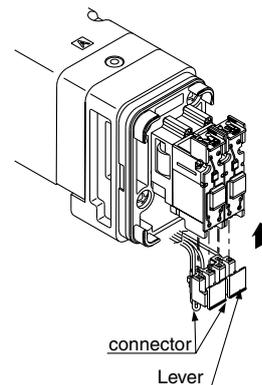

Note) Do not pull on the lead wires with excessive force. This can cause faulty and/or broken contacts.

VQC

SQ

VQ0

VQ4


VQ5

VQZ

VQD


Internal Wiring Specifications

⚠ Caution

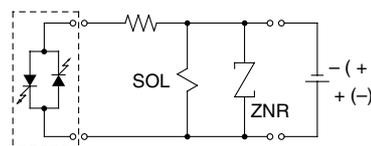

Light circuit assembly (Orange)


DC: Single

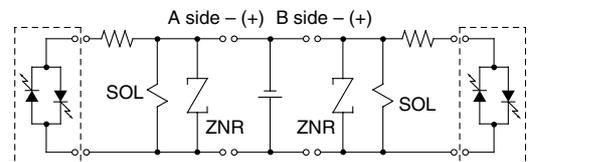

A side light circuit assembly (Orange)


DC: Double

B side light circuit assembly (Green)

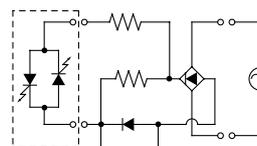

Light circuit assembly (Orange)

AC: Single

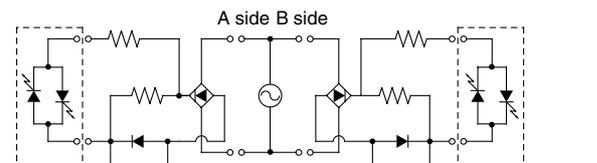

A side light circuit assembly (Orange)

AC: Double

B side light circuit assembly (Green)

How to Calculate the Flow Rate

For obtaining the flow rate, refer to pages 2-1-8 to 2-1-11.

Series VQ5000

Base Mounted Plug-in/Plug Lead: Single Unit


Model

Series	Number of solenoids	Model	Port size	Flow Characteristics						Response time (ms)			Weight (kg)		
				1 → 4/2 (P → A/B)			4/2 → 5/3 (A/B → EA/EB)			Standard 1 W	Low wattage 0.5 W	AC			
				C _d (dm ³ /(s·bar))	b	C _v	C _d (dm ³ /(s·bar))	b	C _v						
VQ5000	2 position	Single	Metal seal	VQ51 ₅ 0	Rc 1/2	12	0.14	2.9	14	0.18	3.4	35 or less	38 or less	38 or less	0.59 (0.67)
			Rubber seal	VQ51 ₅ 1		16	0.33	4.4	17	0.31	4.7	40 or less	43 or less	43 or less	0.58 (0.66)
		Double	Metal seal	VQ52 ₅ 0		12	0.14	2.9	14	0.18	3.4	20 or less	23 or less	23 or less	0.62 (0.70)
			Rubber seal	VQ52 ₅ 1		16	0.33	4.4	17	0.31	4.7	25 or less	28 or less	28 or less	0.60 (0.68)
	3 position	Closed center	Metal seal	VQ53 ₅ 0		11	0.24	2.6	11	0.23	2.8	50 or less	53 or less	53 or less	0.65 (0.73)
			Rubber seal	VQ53 ₅ 1		12	0.33	3.4	13	0.37	3.7	60 or less	63 or less	63 or less	0.58 (0.66)
		Exhaust center	Metal seal	VQ54 ₅ 0		12	0.13	2.9	14	0.18	3.4	50 or less	53 or less	53 or less	0.65 (0.73)
			Rubber seal	VQ54 ₅ 1		14	0.39	3.9	16	0.35	4.5	60 or less	63 or less	63 or less	0.58 (0.66)
		Pressure center	Metal seal	VQ55 ₅ 0		12	0.23	2.9	13	0.24	3.3	50 or less	53 or less	53 or less	0.65 (0.73)
			Rubber seal	VQ55 ₅ 1		13	0.32	3.4	14	0.40	3.9	60 or less	63 or less	63 or less	0.58 (0.66)
		Double check	Metal seal	VQ56 ₅ 0		8.0	—	—	8.5	—	—	62 or less	65 or less	65 or less	1.17 (1.25)
			Rubber seal	VQ56 ₅ 1		8.3	—	—	9.0	—	—	75 or less	78 or less	78 or less	1.10 (1.18)

Note) Value for valve on sub-plate.



JIS Symbol

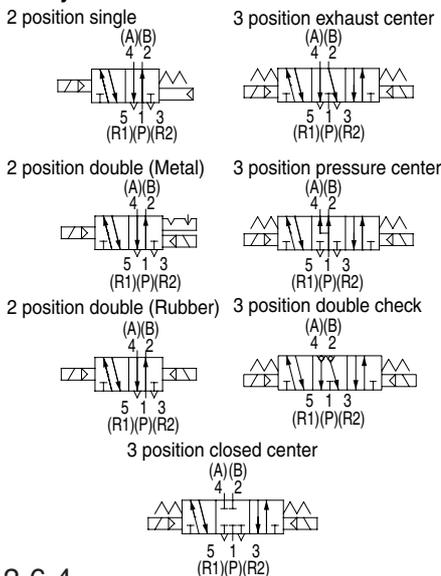

Standard Specifications

Valve specifications	Valve construction		Metal seal	Rubber seal
	Fluid		Air/Inert gas	
	Maximum operating pressure ⁽³⁾		1.0 MPa	
	Min. operating pressure	Single	0.10 MPa	0.20 MPa
		Double	0.10 MPa	0.15 MPa
		3 position	0.15 MPa	0.20 MPa
	Proof pressure		1.5 MPa	
	Ambient and fluid temperature		-5 to 50°C ⁽¹⁾	
	Lubrication		Not required	
	Manual override		Push type/Locking type (Tool required) Option	
Shock/Vibration resistance		150/30 m/s ² ⁽²⁾		
Protection structure		Dust tight (IP65 compatible)		
Solenoid specifications	Coil rated voltage		12, 24 VDC, 100, 110, 200, 220 VAC (50/60 Hz)	
	Allowable voltage fluctuation		±10% of rated voltage	
	Coil insulation type		Class B or equivalent	
	Power consumption (Current)	24 VDC	1 W DC (42 mA), 0.5 W DC (21 mA) ⁽³⁾	
		12 VDC	1 W DC (83 mA), 0.5 W DC (42 mA) Note ⁽³⁾	
100 VAC		Inrush 1.2 VA (12 mA), Holding 1.2 VA (12 mA)		
110 VAC		Inrush 1.3 VA (11.7 mA), Holding 1.3 VA (11.7 mA)		
	200 VAC	Inrush 2.4 VA (12 mA), Holding 2.4 VA (12 mA)		
	220 VAC	Inrush 2.6 VA (11.7 mA), Holding 2.6 VA (11.7 mA)		



Note 1) Use dry air to prevent condensation when operating at low temperatures.

Note 2) Impact resistance: No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)


Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

Note 3) Values inside () denote the low wattage (0.5 W) specifications.


Plug-in Type

Conduit terminal

2 position single: VQ510⁰

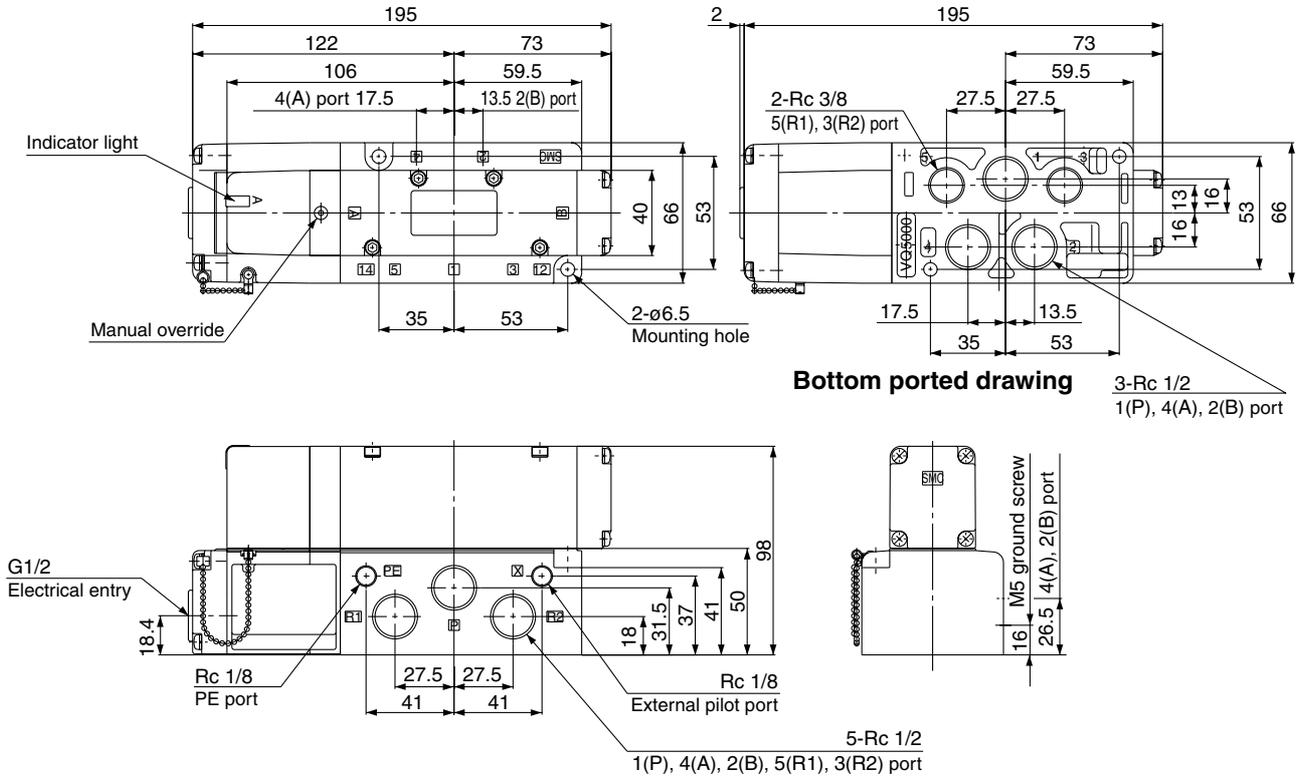


- 2 position double: VQ520⁰
- 3 position closed center: VQ530⁰
- 3 position exhaust center: VQ540⁰
- 3 position pressure center: VQ550⁰

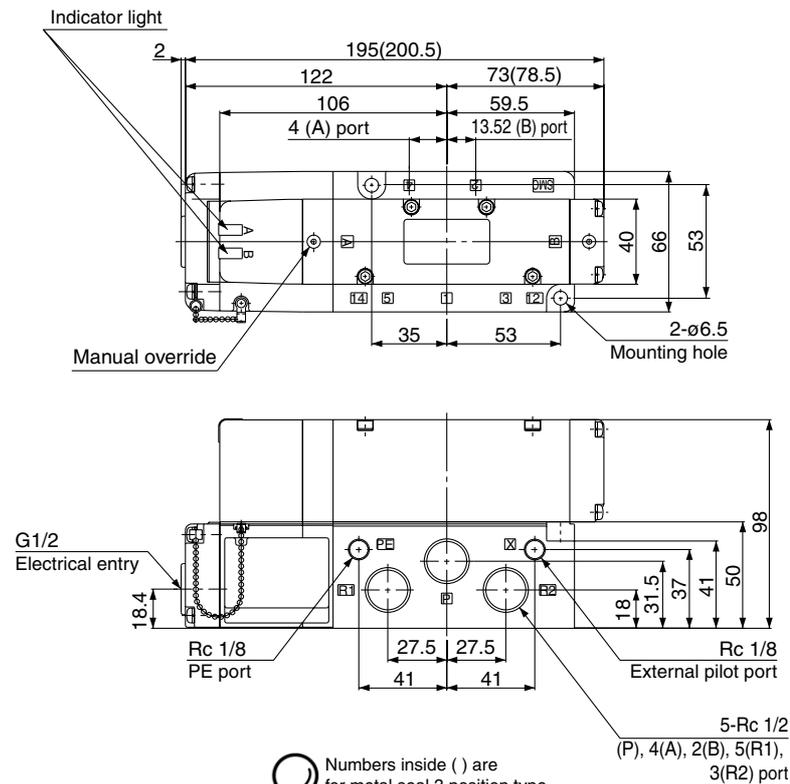

Numbers inside () are for metal seal 3 position type

3 position double check: VQ560⁰

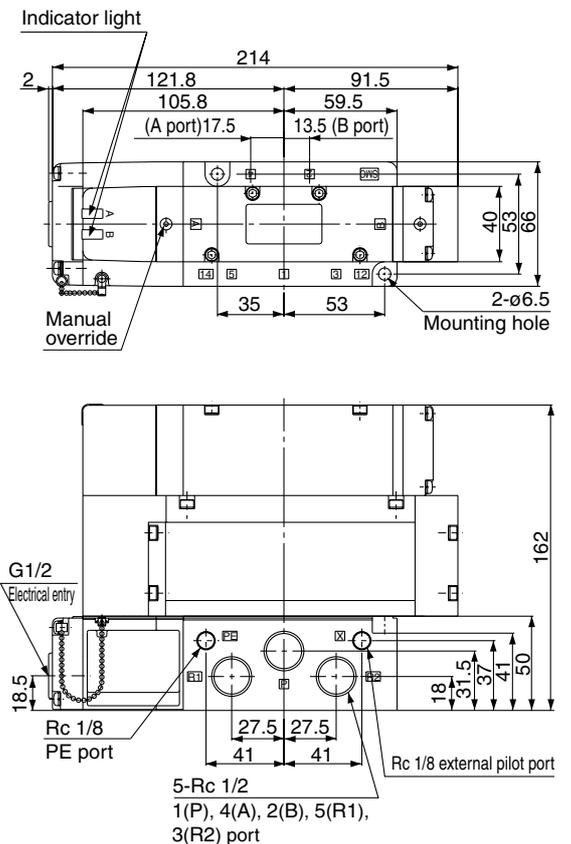


Plug-in/Plug Lead: Single Unit Series VQ5000

Plug Lead Type

Grommet



2 position single: VQ515⁰-□ $\frac{G}{H}$

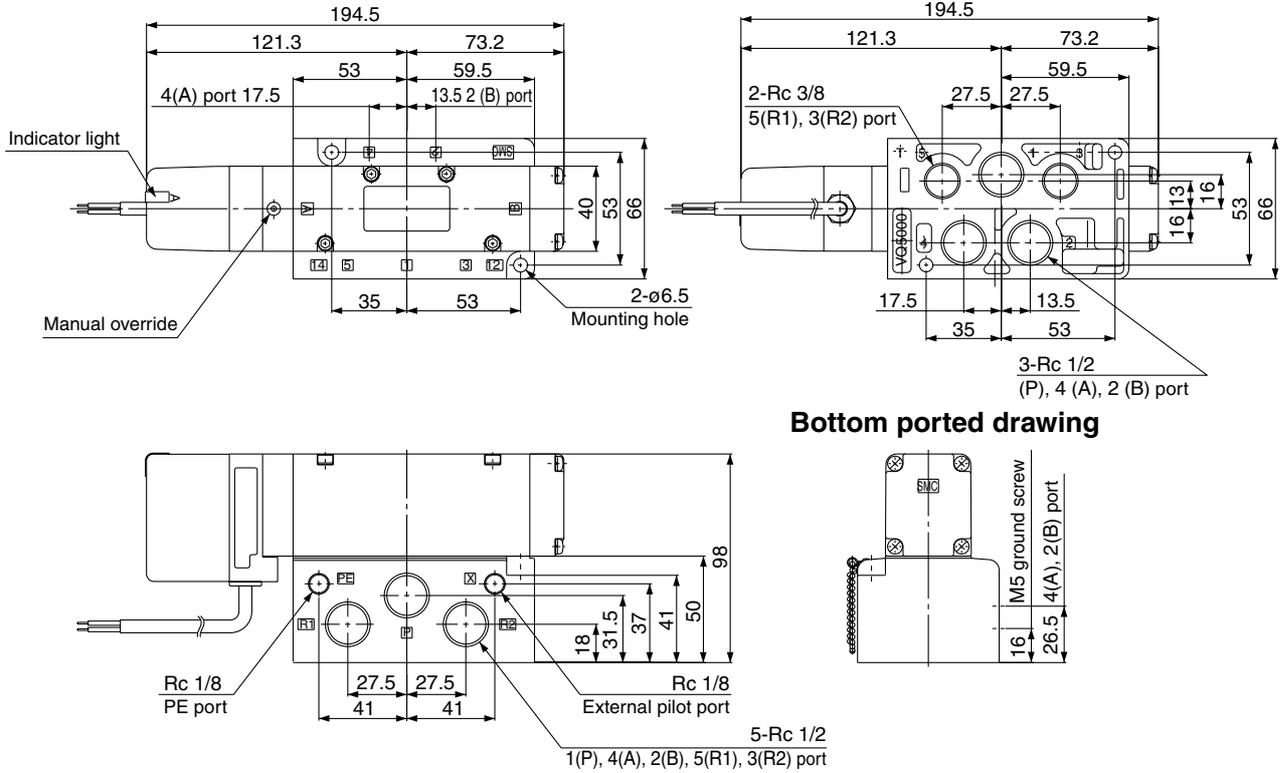

- VQC
- SQ
- VQ0
- VQ4
- VQ5**
- VQZ
- VQD

2 position double: VQ525⁰-□ $\frac{G}{H}$
 3 position closed center: VQ535⁰-□ $\frac{G}{H}$
 3 position exhaust center: VQ545⁰-□ $\frac{G}{H}$
 3 position pressure center: VQ555⁰-□ $\frac{G}{H}$

3 position double check: VQ565⁰-□ $\frac{G}{H}$

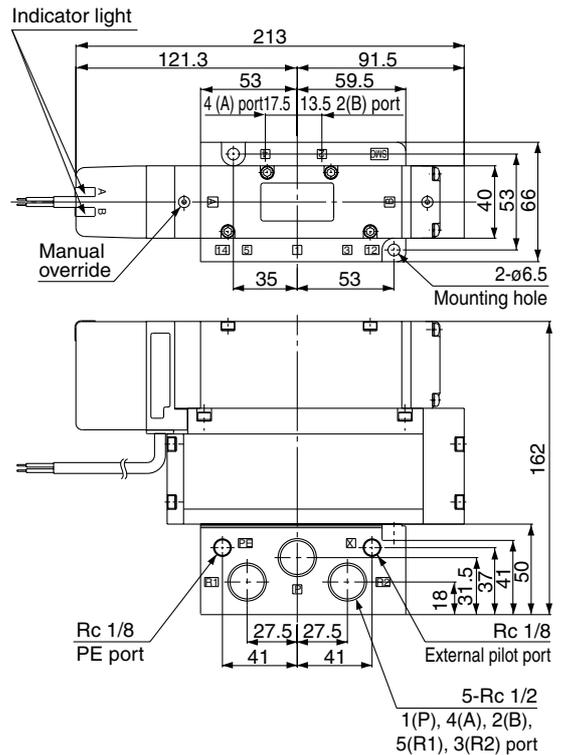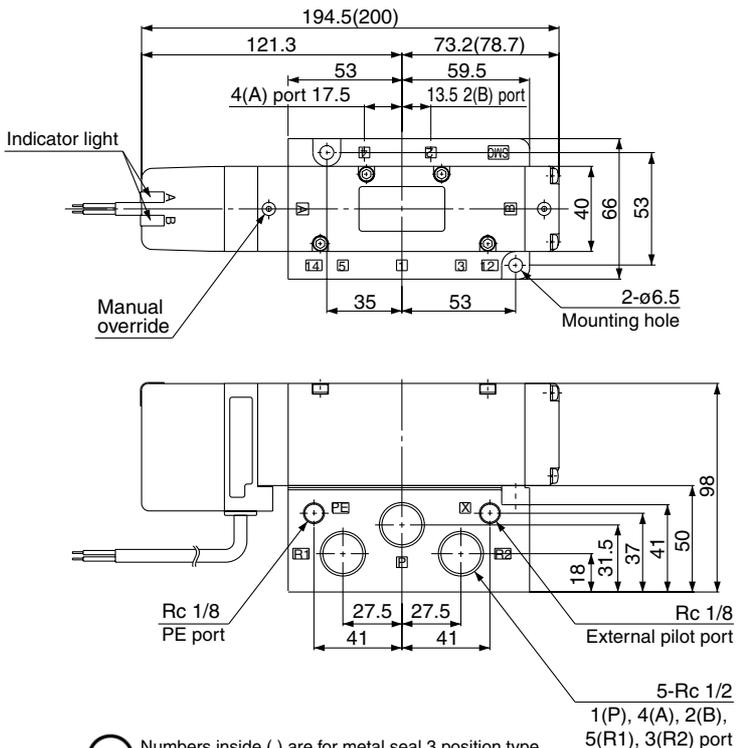


Numbers inside () are for metal seal 3 position type

Series VQ5000

Base Mounted Plug-in Unit



How to Order Manifold

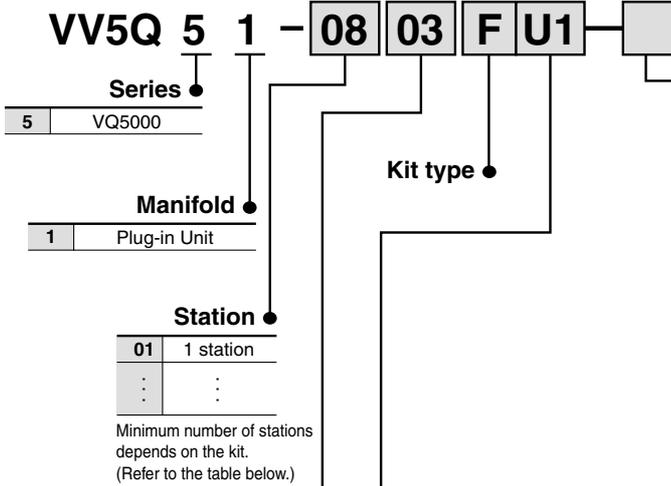

● Option

Symbol	Option
Nil	None
CD1 ⁽²⁾	Exhaust cleaner for Rc 1: D side exhaust
CD2 ⁽²⁾	Exhaust cleaner for Rc 1 1/2: D side exhaust
CU1 ⁽²⁾	Exhaust cleaner for Rc 1: U side exhaust
CU2 ⁽²⁾	Exhaust cleaner for Rc 1 1/2: U side exhaust
K ⁽⁴⁾	Special wiring specifications (Except double wiring)
N	Name plate (T kit only)
SB ⁽³⁾	Direct exhaust with silencer box: Exhaust from both D and U sides
SD ⁽²⁾	Direct exhaust with silencer box: D side exhaust
SU ⁽²⁾	Direct exhaust with silencer box: U side exhaust
W	IP65 enclosure (except F and T1 kits)

Note 1) When two or more symbols are specified, indicate them alphabetically.
Example) -CD1K

Note 2) Combination of [CU□] and [SU□] is not possible.

Note 3) Available only with F, L and T1 kits.

Note 4) Specify the wiring specifications on the manifold specification sheet. (Except L kit)


Cylinder port

03	Rc 3/8
04	Rc 1/2
B	Bottom ported Rc 1/2
CM	Mixed ^{Note)}

Note) In case of mixed specification, indicate on the manifold specification sheet.


● Kit/Electrical entry/Cable length

F kit (D-sub connector)

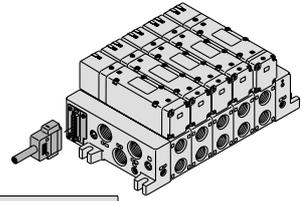


Connector entry direction				1 to 12 stations
D side	U side	Kit	Without cable	
	D0	U0	Without cable	
Kit F	D1	U1	Cable length 1.5 m	
	D2	U2	Cable length 3 m	
	D3	U3	Cable length 5 m	

L kit (Lead wire cable)

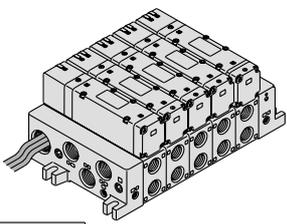


Electrical entry				1 to 12 stations
D side	U side	Kit	IP65 compatible	
	D0	U0	Without cable	
Kit L	D1	U1	Cable length 0.6 m	
	D2	U2	Cable length 1.5 m	
			Cable length 3 m	

T1 kit (Individual terminal block kit)

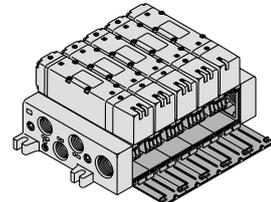


Kit T1	With terminal blocks	1 to 12 stations
--------	----------------------	------------------

T kit (Terminal block box kit)

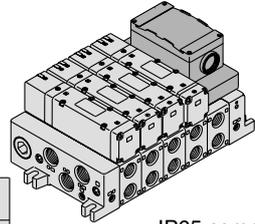

Box mounting position		IP65 compatible
D side	U side	
TD	TU	Terminal block box 2 to 12 stations


S kit (Serial transmission unit)

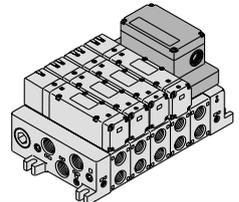

The valve voltage is 24 VDC and it is equipped with light/surge voltage suppressor.
IP65 compatible

Unit mounting position		
D side	U side	
	O	Without SI unit
	A	With general type SI unit (Series EX300)
	B	Mitsubishi Electric Corp.: MELSECNET/MINI-S3 Data Link System
	BB	Mitsubishi Electric Corp.: MELSECNET/MINI-S3 Data Link System (2 power supply systems)
	C	OMRON Corp.: SYSBUS Wire System
	D	SHARP Corp.: Satellite I/O Link System
	F1	NKE Corp.: Uni-wire System (16 output points)
	J1	SUNX Corp.: S-LINK System (16 output points)
	J2	SUNX Corp.: S-LINK System (8 output points)
	K	Fuji Electric Co.: T-LINK Mini System
	Q	DeviceNet, CompoBus/D (OMRON Corp.)
	R1	OMRON Corp.: CompoBus/S System (16 output points)
	R2	OMRON Corp.: CompoBus/S System (8 output points)
	U	JEMANET (JPCN-1)
	V	Mitsubishi Electric Corp.: CC-LINK System
	G	Rockwell Automation: Allen Bradley Remote I/O (RIO) System
	H	NKE Corp.: Uni-wire H System

2 to 12 stations

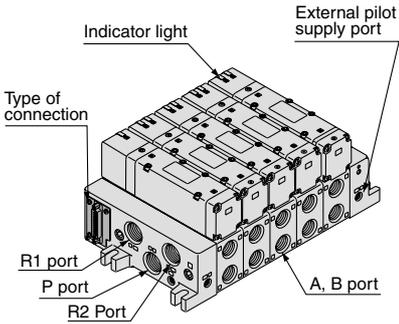

Note) The drawing shows a VV5Q51-0504FDO.

Manifold Specifications

Series	Base model	Type of connection	Porting specifications			Maximum applicable stations	Applicable solenoid valve	5 station weight (kg)
			4(A), 2(B) port location	Port size ^{Note)}				
				1(P), 5(R1), 3(R2)	4(A), 2(B)			
VQ5000	VV5Q51-□□□	<ul style="list-style-type: none"> ■ F kit—D-sub connector ■ T kit—Terminal block box ■ T1 kit—Individual terminal block kit ■ L kit—Lead wire ■ S kit—Serial transmission 	Side Bottom	Rc 3/4 Option { Direct exhaust with silencer box }	Rc 3/8 Rc 1/2 Rc 1/2	F, L, T1 kits 12 stations T kit 11 stations S kit 9 stations	VQ5L00 VQ5L01	4.1 • L kit • Not including solenoid valve weight.













Note) For details about international standard threads other than Rc threads, refer to "Option" on page 2-6-39.

Flow Characteristics at the Number of Manifold Stations (Operated individually)

Model	Passage/Stations		Station 1	Station 5	Station 10
2 position metal seal VQ5 ₂ 00	1 → 4/2 (P → A/B)	C [dm ³ /(s·bar)]	11	11	11
		b	0.24	0.24	0.24
		Cv	2.7	2.7	2.7
	4/2 → 5/3 (A/B → EA/EB)	C [dm ³ /(s·bar)]	12	12	12
		b	0.14	0.14	0.14
		Cv	2.9	2.9	2.9
2 position rubber seal VQ5 ₂ 01	1 → 4/2 (P → A/B)	C [dm ³ /(s·bar)]	12	12	12
		b	0.33	0.33	0.33
		Cv	3.4	3.4	3.4
	4/2 → 5/3 (A/B → EA/EB)	C [dm ³ /(s·bar)]	16	16	16
		b	0.33	0.33	0.33
		Cv	4.4	4.4	4.4

Note) For port size Rc 1/2

Manifold Option

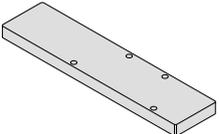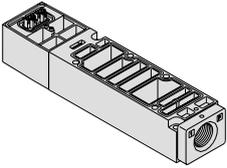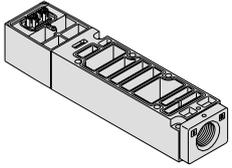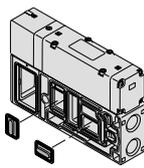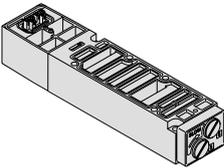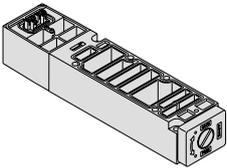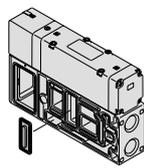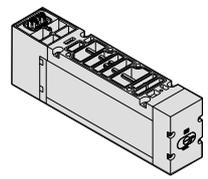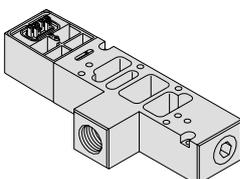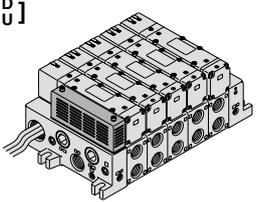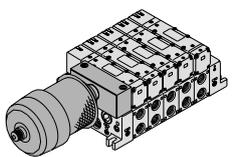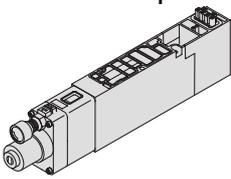Blanking plate assembly VVQ5000-10A-1 	Individual SUP spacer VVQ5000-P-1- ⁰³ / ₀₄ 	Individual EXH spacer VVQ5000-R-1- ⁰³ / ₀₄ 	EXH block plate VVQ5000-16A-2 
Throttle valve spacer VVQ5000-20A-1 	SUP stop valve spacer VVQ5000-37A-1 	SUP block plate VVQ5000-16A-1 	Double check spacer with residual pressure release valve VVQ5000-25A-1 
Release valve spacer VVQ5000-24A-1D 	Direct exhaust with silencer box [-S _U ^D] 	For exhaust cleaner mounting [-C _U ^D □] 	Interface regulator ARBQ5000-00- ^A / _B -1 


 • Refer to pages 2-6-34 to 2-6-38 for detailed dimensions of each option.
 • For replacement parts, refer to page 2-6-43.

VQC

SQ

VQ0

VQ4


VQ5

VQZ

VQD

Series VQ5000

F Kit (D-sub Connector kit)

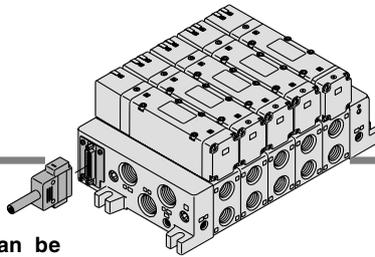

- Simplification and labor savings for wiring work can be achieved by using a D-sub connector for the electrical connection.
- Using connector for flat ribbon cable (25P) conforming to MIL standard permits the use of connectors put on the market and gives a wide interchangeability.
- Connector entry can be selected on either the U side or the D side according to the mounting orientation.
- Maximum stations are 12.

Manifold Specifications


Series	Porting specifications			Applicable stations
	4(A), 2(B) port location	Port size		
VQ5000	Side	Rc 3/4	Rc 3/8 Rc 1/2	Max. 12 stations
	Bottom		Rc 1/2	

D-Sub Connector Kit (25Pins)

Cable assembly ●

AXT100-DS25-015
030
050

(D-sub connector cable assemblies can be ordered with manifolds.)
Refer to How to Order Manifold.

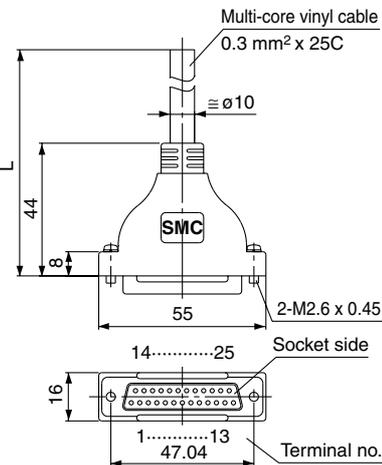

D-sub Connector Cable Assembly (Option)

Cable length (L)	Assembly part no.	Note
1.5 m	AXT100-DS25-015	Cable 25 cores x 24AWG
3 m	AXT100-DS25-030	
5 m	AXT100-DS25-050	

* For other commercial connectors, use a 25 pins type with female connector conforming to MIL-C-24308.

- Connector manufacturers' example
- Fujitsu, Ltd.
 - Japan Aviation Electronics Industry, Ltd.
 - J.S.T. Mfg. Co., Ltd.
 - Hirose Electric Co., Ltd.

Electric Characteristics


Item	Characteristics
Conductor resistance Ω/km, 20°C	65 or less
Voltage limit VAC, 1 min.	1000
Insulation resistance MΩkm, 20°C	5 or less

Note) The min. bending radius of D-sub cable is 20 mm.

D-sub Connector Cable Assembly Terminal No.

Terminal no.	Lead wire color	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Gray	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Blue	White
17	Purple	None
18	Gray	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Gray	Red
24	Black	White
25	White	None

How to Order Manifold

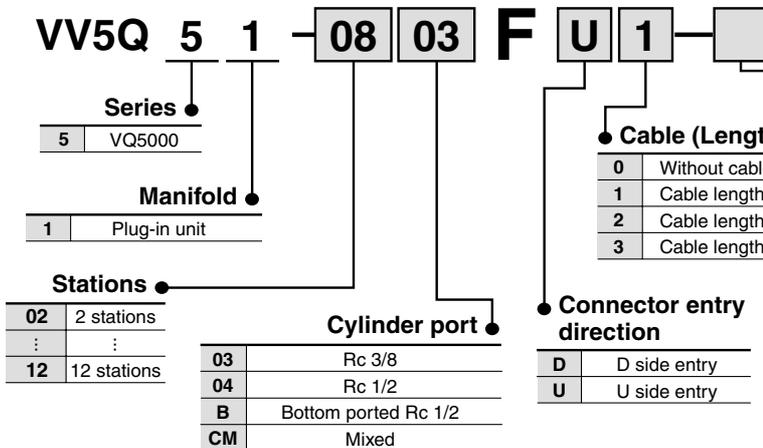

Option

Symbol	Option
Nil	None
CD1	Exhaust cleaner for Rc 1: D side exhaust
CD2	Exhaust cleaner for Rc 1 1/2: D side exhaust
CU1	Exhaust cleaner for Rc 1: U side exhaust
CU2	Exhaust cleaner for Rc 1 1/2: U side exhaust
K ⁽³⁾	Special wiring specifications (Except double wiring)
SB	Direct exhaust with silencer box: For mounting on both D and U sides
SD	Direct exhaust with silencer box: D side exhaust
SU	Direct exhaust with silencer box: U side exhaust


Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -CD1K.

Note 2) Combination of [CU□] and [SD□] is not possible.

Note 3) Specify the wiring specifications on the manifold specification sheet.




● Electrical wiring specifications

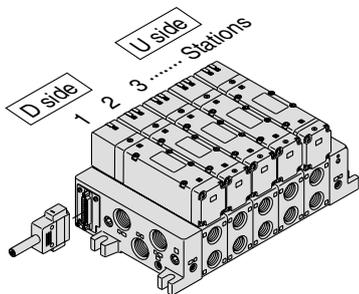

Stations are counted starting from the first station on the D side.

D-sub connector

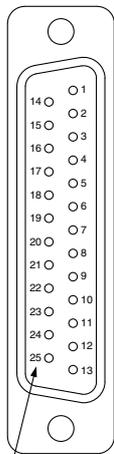

Connector terminal no.

Double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station, regardless of valve and option types.

Mixed single and double wiring is available as an option. For details, refer to below.



Note) There is no polarity. It can also be used as a negative common.

Standard wiring

Terminal no.	Polarity	Lead wire color	Dot marking
1 station SOL.A 1	(-)	(+) Black	None
SOL.B 14	(-)	(+) Yellow	Black
2 stations SOL.A 2	(-)	(+) Brown	None
SOL.B 15	(-)	(+) Pink	Black
3 stations SOL.A 3	(-)	(+) Red	None
SOL.B 16	(-)	(+) Blue	White
4 stations SOL.A 4	(-)	(+) Orange	None
SOL.B 17	(-)	(+) Purple	None
5 stations SOL.A 5	(-)	(+) Yellow	None
SOL.B 18	(-)	(+) Gray	None
6 stations SOL.A 6	(-)	(+) Pink	None
SOL.B 19	(-)	(+) Orange	Black
7 stations SOL.A 7	(-)	(+) Blue	None
SOL.B 20	(-)	(+) Red	White
8 stations SOL.A 8	(-)	(+) Purple	White
SOL.B 21	(-)	(+) Brown	White
9 stations SOL.A 9	(-)	(+) Gray	Black
SOL.B 22	(-)	(+) Pink	Red
10 stations SOL.A 10	(-)	(+) White	Black
SOL.B 23	(-)	(+) Gray	Red
11 stations SOL.A 11	(-)	(+) White	Red
SOL.B 24	(-)	(+) Black	White
12 stations SOL.A 12	(-)	(+) Yellow	Red
SOL.B 25	(-)	(+) White	None
COM. 13	(+)	(-) Orange	Red

Positive common specifications Negative common specifications (Note)

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

Special Wiring Specifications


Double wiring (connected to SOL. A and SOL. B) is used for the internal wiring of each station regardless of valve and option types. Mixed single and double wiring is available as an option.

1. How to Order

Indicate option symbol "K" in the manifold part number and be sure to specify station positions for single or double wiring on the manifold specification sheet.

2. Wiring specifications

Connections begin with the A side solenoid of the first station being connected to terminal no. 1, and continue in the order indicated by the arrows in the drawing without skipping any terminals. However, the maximum number of stations is 12.

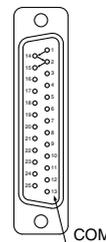

D-sub connector

How to Order Valves

VQ 5 1 0 0 5

Series: 5 VQ5000

Type of actuation:

1	2 position single
2	2 position double
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center
6	3 position double check

Manual override:

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)

Light/Surge voltage suppressor:

Nil	Yes
E	Without light, with surge voltage suppressor

Coil voltage:

1	100 VAC (50/60 Hz)
2	200 VAC (50/60 Hz)
3	110 VAC (50/60 Hz)
4	220 VAC (50/60 Hz)
5	24 VDC
6	12 VDC

Function:

Nil	Standard type (1 W)
Y ⁽¹⁾	Low wattage type (0.5 W)
R ⁽²⁾	External pilot

Seal:

0	Metal seal
1	Rubber seal

Note 1) Applicable to DC specifications.
 Note 2) Refer to page 2-6-39 for details on external pilot specifications.
 Note 3) When two or more symbols are specified, indicate them alphabetically.

How to Order Manifold Assembly


Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>



D-sub connector kit with cable (3 m)
 VV5Q51-0503FD2 -1 set - Manifold base part no.
 *VQ5100-5 2 sets - Valve part no. (Stations 1 and 2)
 *VQ5200-5 2 sets - Valve part no. (Stations 3 and 4)
 *VQ5300-5 1 set - Valve part no. (Station 5)

Prefix the asterisk to the part nos. of the solenoid valve, etc.


Enter in order starting from the first station on the D side. When entry of part numbers becomes complicated, indicate in the manifold specification sheet.

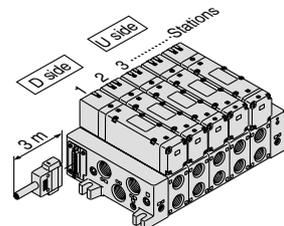

F Kit (D-sub Connector kit)

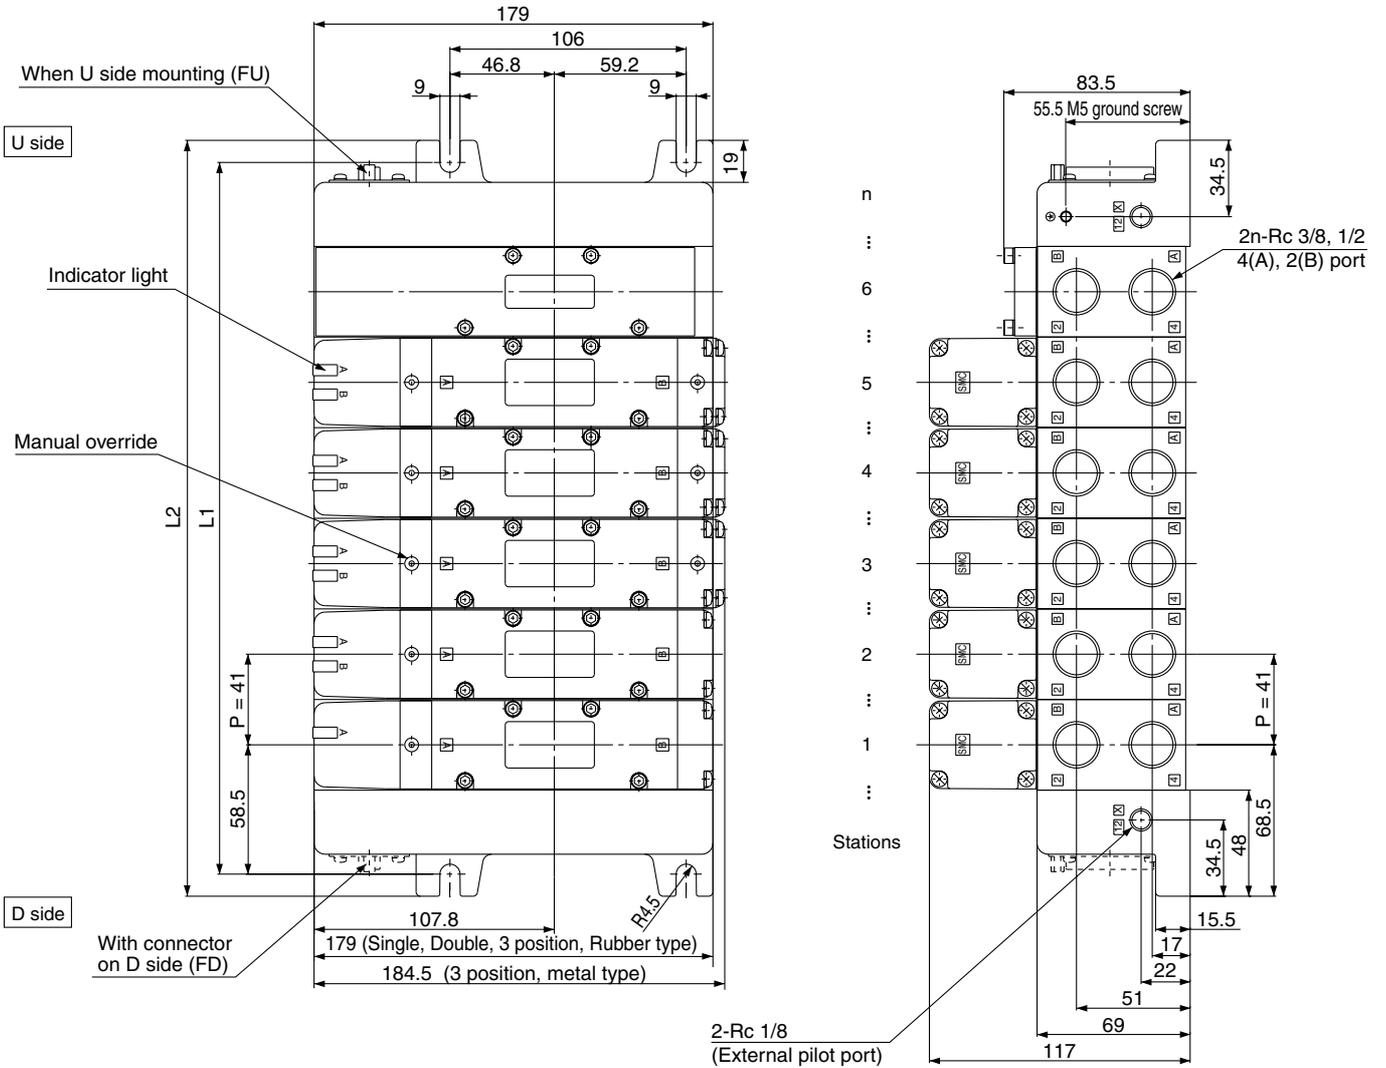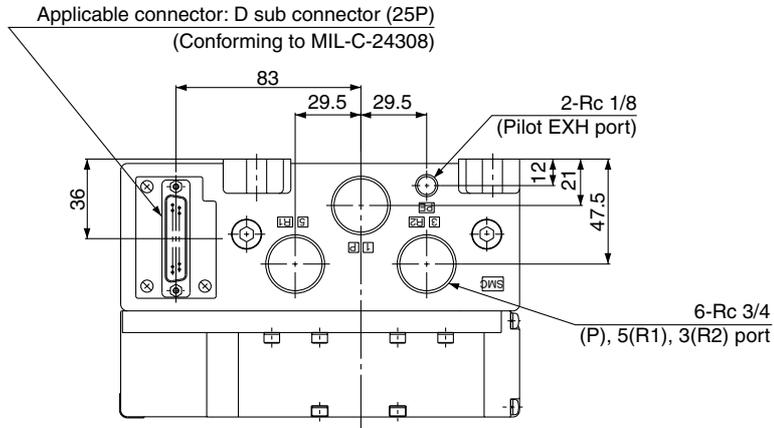

Bottom ported drawing

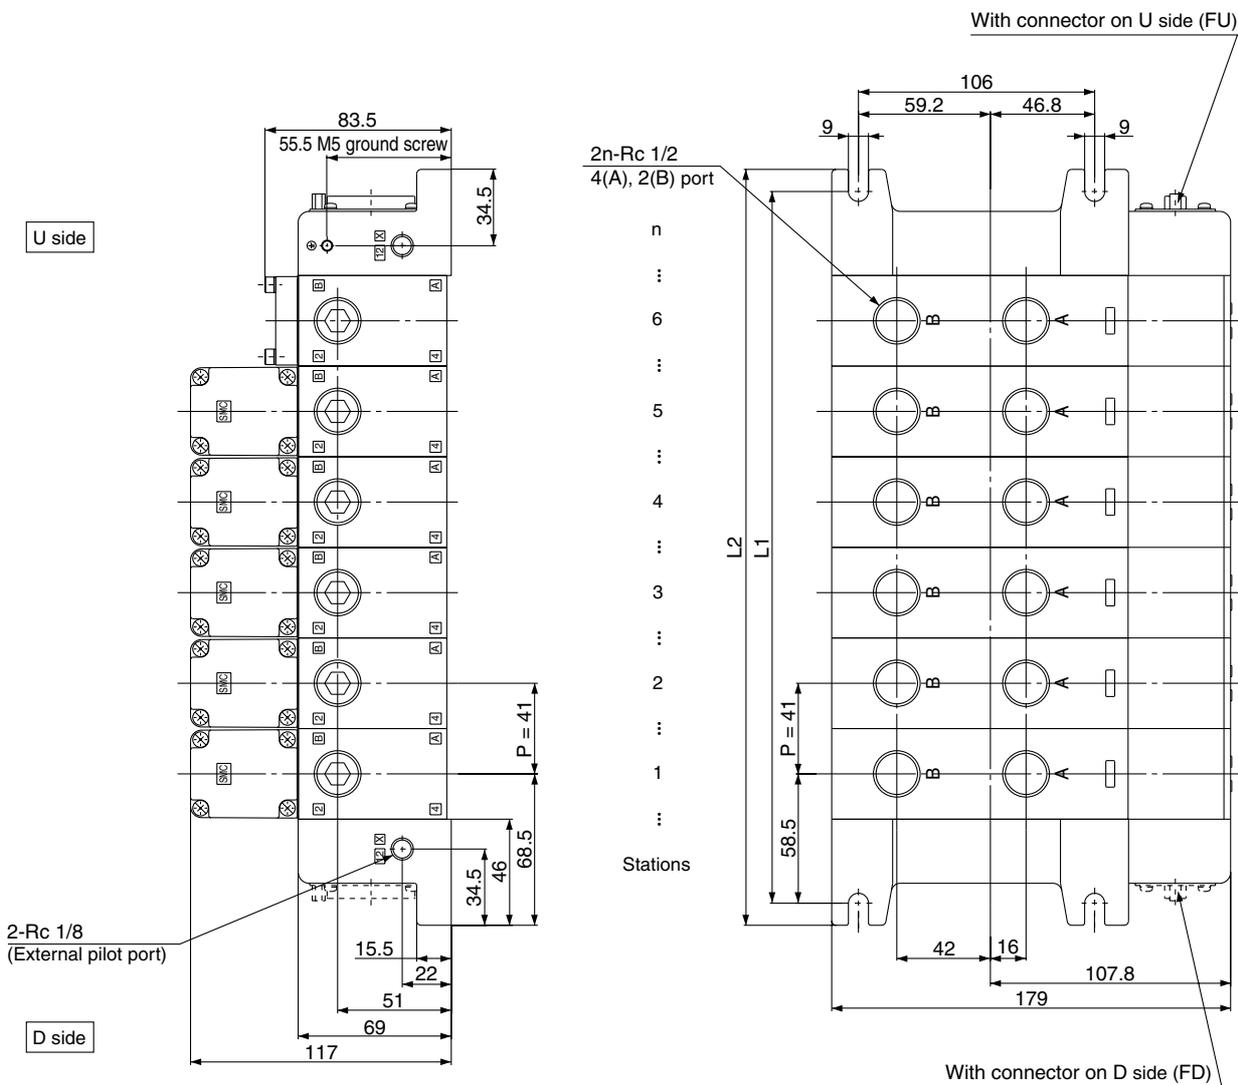

- VQC
- SQ
- VQ0
- VQ4
- VQ5**
- VQZ
- VQD


Dimensions

Formula: L1 = 41n + 76, L2 = 41n + 96
n: Stations (Maximum 12 stations)

L	n	1	2	3	4	5	6	7	8	9	10	11	12
L1		117	158	199	240	281	322	363	404	445	486	527	568
L2		137	178	219	260	301	342	383	424	465	506	547	588

T Kit (Terminal block box kit)

IP65 compliant

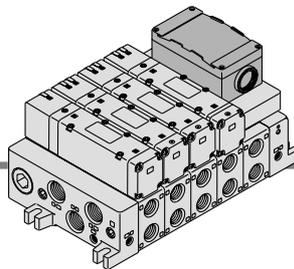


- Enclosure IP65 compliant
- This type has a small terminal block inside a junction box. The provision of a G 3/4 electrical entry allows connection of conduit fittings.
- Maximum stations are 11. (12 stations as an option)
- 1 station is used for terminal block box mounting.

Manifold Specifications


Series	4(A), 2(B) port location	Porting specifications		Applicable stations
		1(P), 5(R1), 3(R2)	4(A), 2(B)	
VQ5000	Side	Rc 3/4	Rc 3/8 Rc 1/2	Max. 12 stations
	Bottom		Rc 1/2	

Terminal Block Connections

Step 1. How to remove terminal block cover
Loosen the 4 mounting screws (M4) and open the terminal block cover.

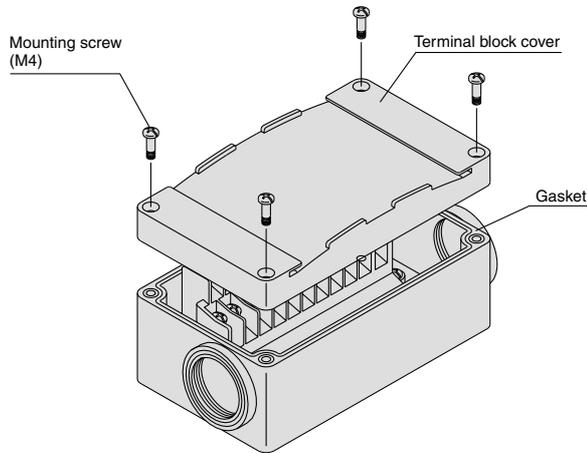

Step 2. The diagram on the right shows the terminal block wiring.
All stations are provided with double wiring regardless of the valves which are mounted.
Connect each wire to the power supply side, according to the markings provided inside the terminal block.

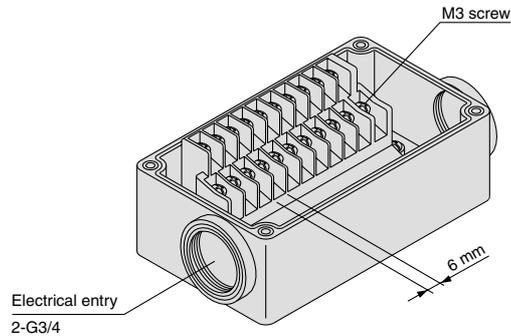

Step 3. How to attach the terminal block cover
Securely tighten the screws with the torque shown in the table below, after confirming that the gasket is installed correctly.

Proper tightening torque (N·m)
0.7 to 1.2

- Applicable terminal 1.25-3s, 1.25Y-3, 1.25Y-3N, 1.25Y-3.5

How to Order Manifold

VV5Q 5 1 -08 03 T □ -K

Series

5	VQ5000
---	--------

Manifold

1	Plug-in unit
---	--------------

Stations

02	2 stations
⋮	⋮
12	12 stations

Note 1) Add 1 station for terminal block box.
Note 2) The maximum number of stations can be expanded with optional special wiring specifications. Refer to page 2-6-15 for details.



Box mounting position

D	D side mounting
U	U side mounting

Cylinder port


03	Rc 3/8
04	Rc 1/2
B	Bottom ported Rc 1/2
CM	Mixed

Option

Symbol	Option
Nil	None
CD1 ⁽²⁾	Exhaust cleaner for Rc 1: D side exhaust
CD2 ⁽²⁾	Exhaust cleaner for Rc 1 1/2: D side exhaust
CU1 ⁽²⁾	Exhaust cleaner for Rc 1: U side exhaust
CU2 ⁽²⁾	Exhaust cleaner for Rc 1 1/2: U side exhaust
K ⁽⁴⁾	Special wiring specification (Except double wiring)
N	Name plate
SD ⁽²⁾	Direct exhaust with silencer box: D side exhaust
SU ⁽²⁾	Direct exhaust with silencer box: U side exhaust
W	IP65 enclosure

Note 1) When two or more symbols are specified, indicate them alphabetically.
Example) -CD1K.
Note 2) Combination of [C□□] and [SU] is not possible.
Note 3) Specify the wiring specifications on the manifold specification sheet.



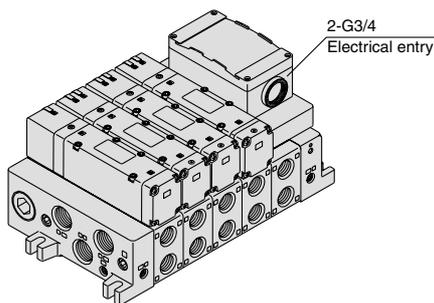

Stations are counted starting from the first station on the D side.

● Electrical wiring specifications (IP65 available)

Double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station, regardless of valve and option types. Mixed single and double wiring is available as an option.

Note) There is no polarity. It can also be used as a negative common.

Standard wiring

	Terminal no.	Polarity
1 station	SOL.A 1A	(-) (+)
	SOL.B 1B	(-) (+)
2 stations	SOL.A 2A	(-) (+)
	SOL.B 2B	(-) (+)
3 stations	SOL.A 3A	(-) (+)
	SOL.B 3B	(-) (+)
4 stations	SOL.A 4A	(-) (+)
	SOL.B 4B	(-) (+)
5 stations	SOL.A 5A	(-) (+)
	SOL.B 5B	(-) (+)
6 stations	SOL.A 6A	(-) (+)
	SOL.B 6B	(-) (+)
7 stations	SOL.A 7A	(-) (+)
	SOL.B 7B	(-) (+)
8 stations	SOL.A 8A	(-) (+)
	SOL.B 8B	(-) (+)
9 stations	SOL.A 9A	(-) (+)
	SOL.B 9B	(-) (+)
10 stations	SOL.A 10A	(-) (+)
	SOL.B 10B	(-) (+)
	COM	(+) (-)

Positive Negative
common common

Special Wiring Specifications


Double wiring (connected to SOL. A and SOL. B) is used for the internal wiring of each station regardless of valve and option types. The optional specification permits mixture of single and double wiring. However, the maximum number of stations is 12.

1. How to Order

Indicate option symbol ("K") in the manifold part number and be sure to specify station positions for single or double wiring on the manifold specification sheet.

2. Wiring specifications

Connections begin with the A side solenoid of the first station being connected to terminal no. 1, and continue in the order indicated by the arrows in the drawing without skipping any terminals.

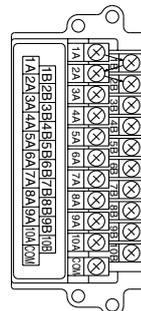

How to Order Valves

VQ 5 1 0 0 5

Series: 5 VQ5000

Type of actuation:

1	2 position single
2	2 position double
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center
6	3 position double check

Seal:

0	Metal seal
1	Rubber seal

Enclosure:

Nil	Dusttight
W	Dusttight/Low jetproof type (IP65)

Manual override:

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)

Light/Surge voltage suppressor:

Nil	Yes
E	Without light, with surge voltage suppressor

Coil voltage:

1	100 VAC (50/60 Hz)
2	200 VAC (50/60 Hz)
3	110 VAC (50/60 Hz)
4	220 VAC (50/60 Hz)
5	24 VDC
6	12 VDC

Function:

Nil	Standard type (1 W)
Y ⁽¹⁾	Low wattage type (0.5 W)
R ⁽²⁾	External pilot

Note 1) Applicable to DC specifications.
 Note 2) Refer to page 2-6-39 for details on external pilot specifications.
 Note 3) When two or more symbols are specified, indicate them alphabetically.

How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.


<Example>

Terminal block box kit

- VV5Q51-0603TU 1 set —Manifold base part no.
- * VQ5100-5 2 sets—Valve part no. (Stations 1 and 2)
- * VQ5200-5 2 sets—Valve part no. (Stations 3 and 4)
- * VQ5300-5 1 set —Valve part no. (Station 5)

Prefix the asterisk to the part nos. of the solenoid valve, etc.

Enter in order starting from the first station on the D side. When entry of part numbers becomes complicated, indicate in the manifold specification sheet.

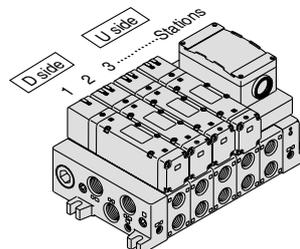

VQC

SQ

VQ0



VQ4

VQ5



VQZ

VQD

T Kit (Terminal block box kit)

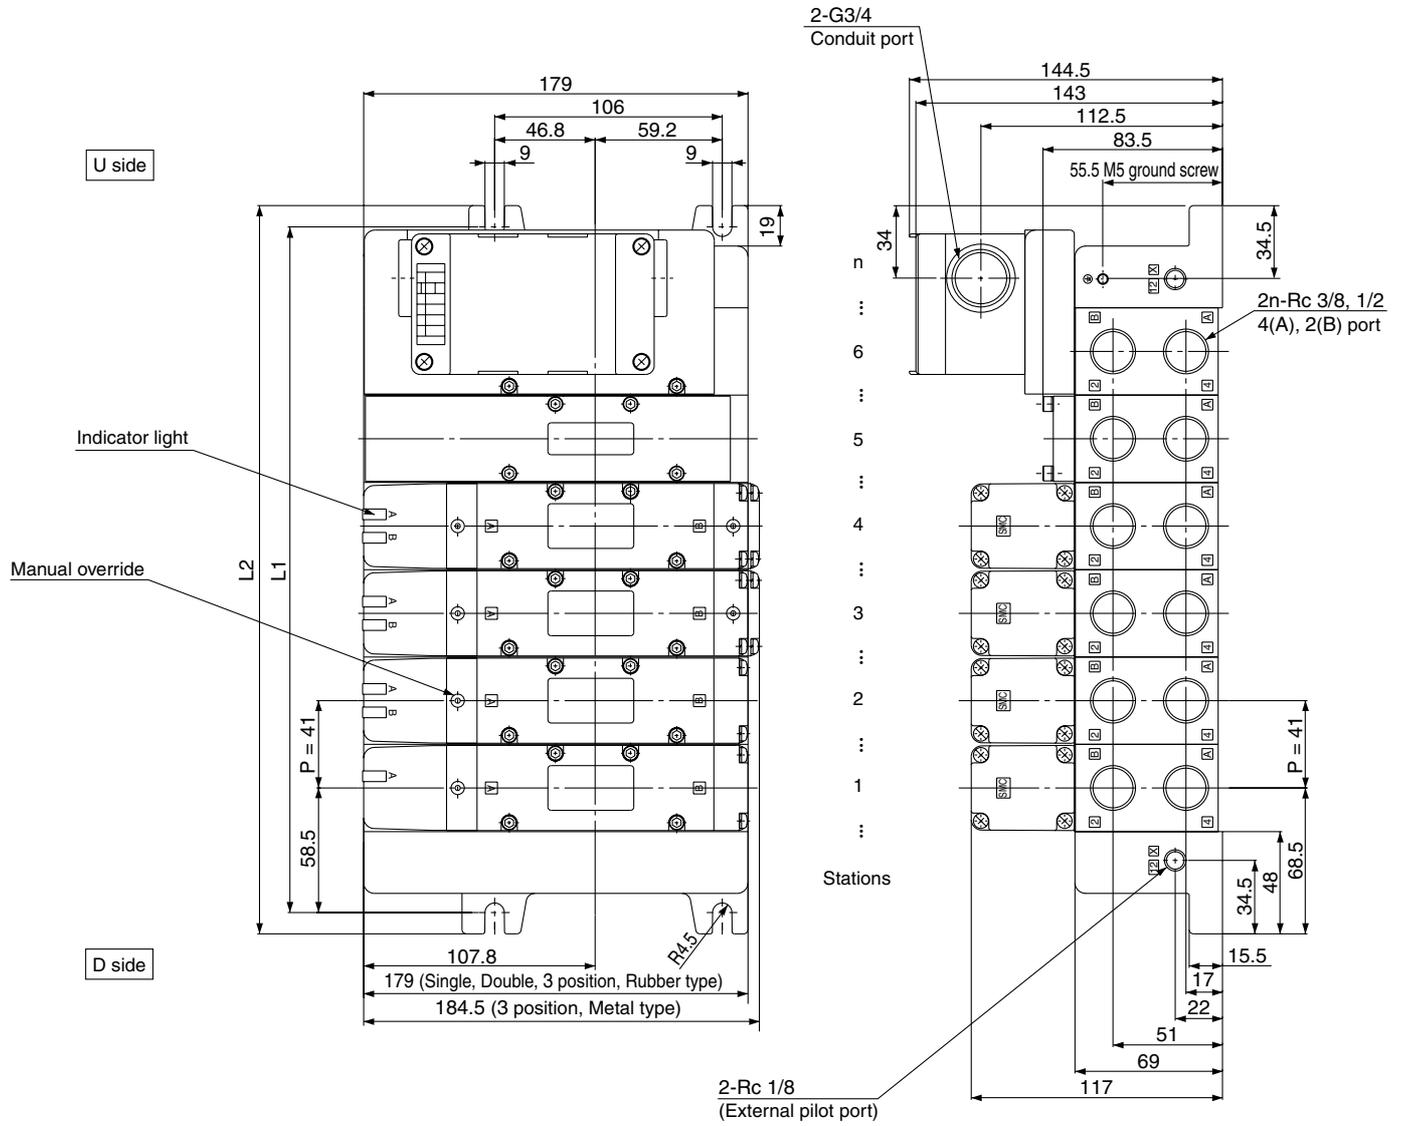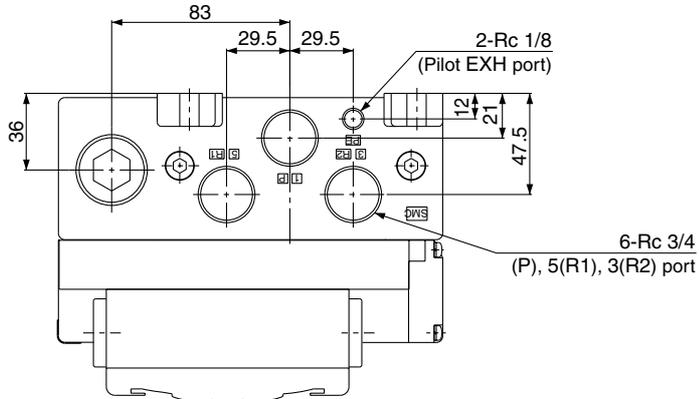

Bottom ported drawing

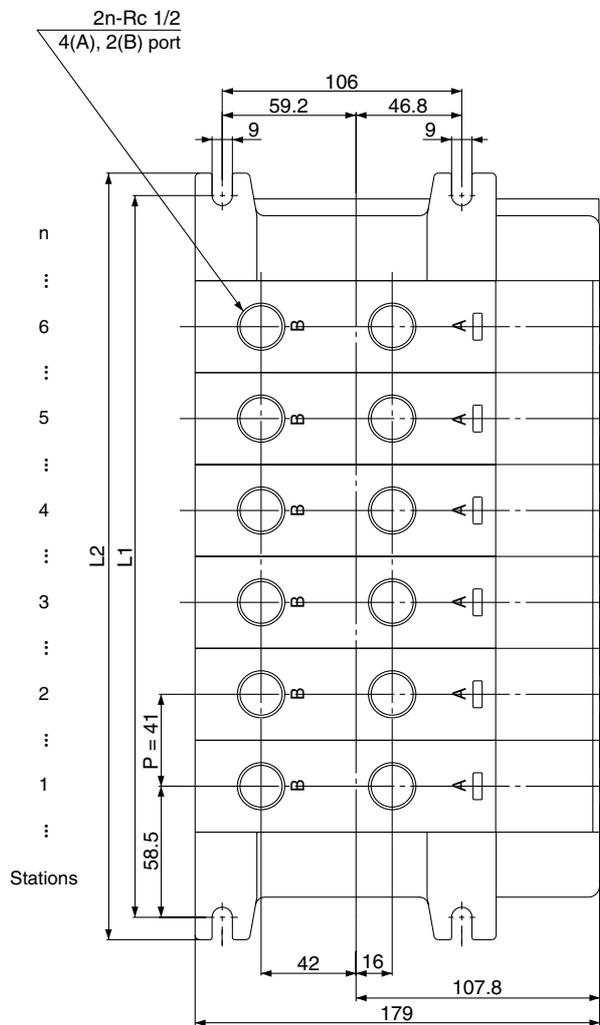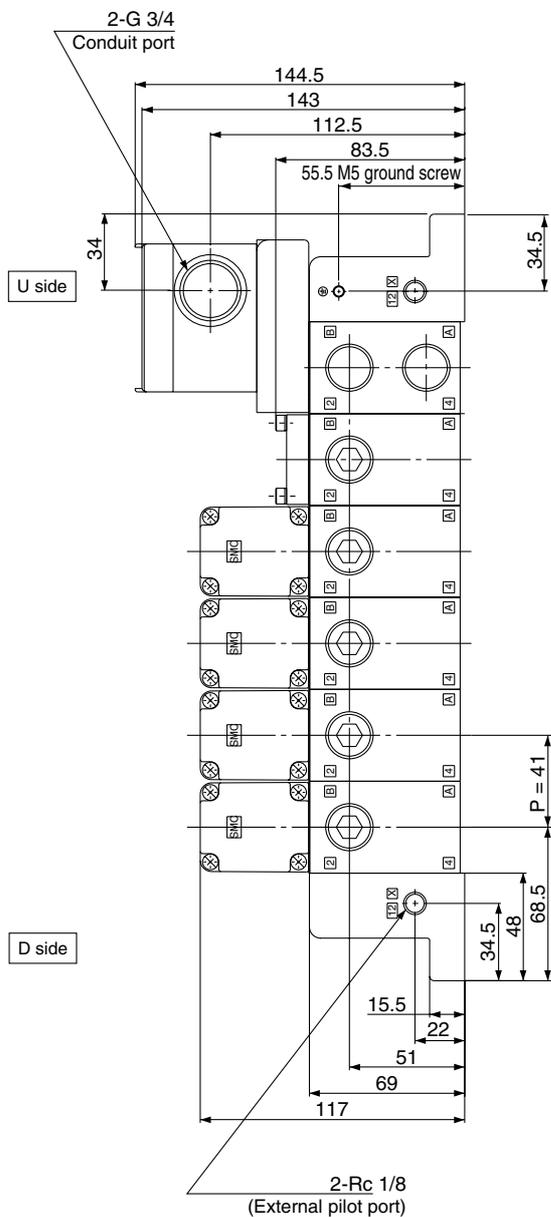

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

Formula: $L1 = 41n + 76$, $L2 = 41n + 96$

n: Stations (Maximum 12 stations)


* Including 1 station for terminal box mounting.

Dimensions

L	n	2	3	4	5	6	7	8	9	10	11	12
L1		158	199	240	281	322	363	404	445	486	527	568
L2		178	219	260	301	342	383	424	465	506	547	588

Series VQ5000

T1 Kit (Individual terminal block kit)

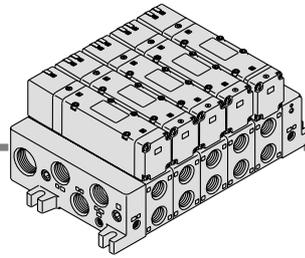

- When the junction cover on the manifold is opened, terminal box is installed in the manifold block. Lead wire from a solenoid is connected with the terminals on the terminal box in the bottom side. (The terminal box is connected with lead wire for both SOL. A and SOL. B and they correspond with the marking 1, 2, 3, 4 on the terminal box. Refer to how to connect with the terminal box.)
- Maximum stations are 12.




Manifold Specifications

Series	Porting specifications		Applicable stations
	4(A), 2(B) port location	Port size	
VQ5000	Side	1(P), 5(R1), 3(R2) 4(A), 2(B)	Max. 12 stations
	Bottom	Rc 3/4 Rc 3/8, 1/2 Rc 1/2	

Terminal Block Connections

Terminal block marking	1	3	2	4
Model VQ510 ₁ ⁰	A side +	A side -		
VQ520 ₁ ⁰	A side +	A side -	B side +	B side -
VQ540 ₅ ³ ₁ ⁰	A side +	A side -	B side +	B side -

- Compatible crimp terminals: 1.25-3S, 1.25Y-3, 1.25Y-3N, 1.25Y-3.5
- There is no polarity (+, -).

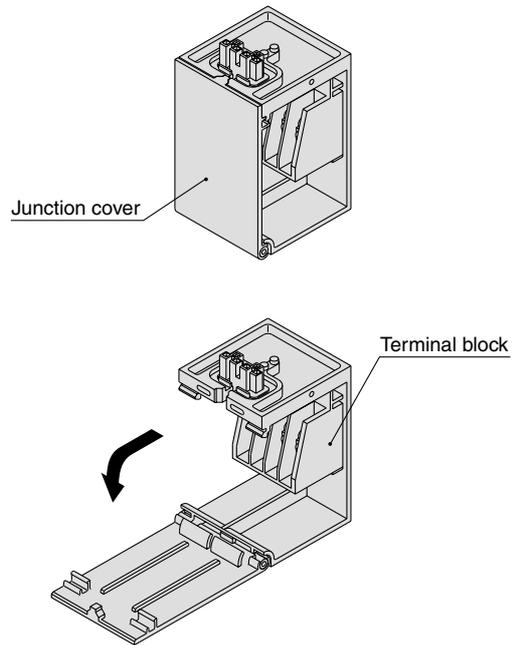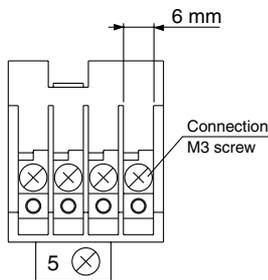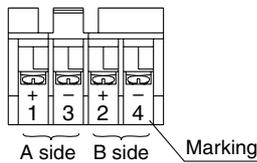

How to Order Manifold

VV5Q 5 1 - 08 03 T1 - SD

Series
5 VQ5000

Manifold
1 Plug-in unit

Stations

1	1 station
⋮	⋮
12	12 stations


Cylinder port

03	Rc 3/8
04	Rc 1/2
B	Bottom ported Rc 1/2
CM	Mixed

Option

Symbol	Option
Nil	None
CD1 ^{Note)}	Exhaust cleaner for Rc 1: D side exhaust
CD2 ^{Note)}	Exhaust cleaner for Rc 1 1/2: D side exhaust
CU1 ^{Note)}	Exhaust cleaner for Rc 1: U side exhaust
CU2 ^{Note)}	Exhaust cleaner for Rc 1 1/2: U side exhaust
SB ^{Note)}	Direct exhaust with silencer box: Exhaust from both U and D side
SD ^{Note)}	Direct exhaust with silencer box: D side exhaust
SU	Direct exhaust with silencer box: U side exhaust

Note) Combination of [C_U^D] and [S_D^D] is not possible.

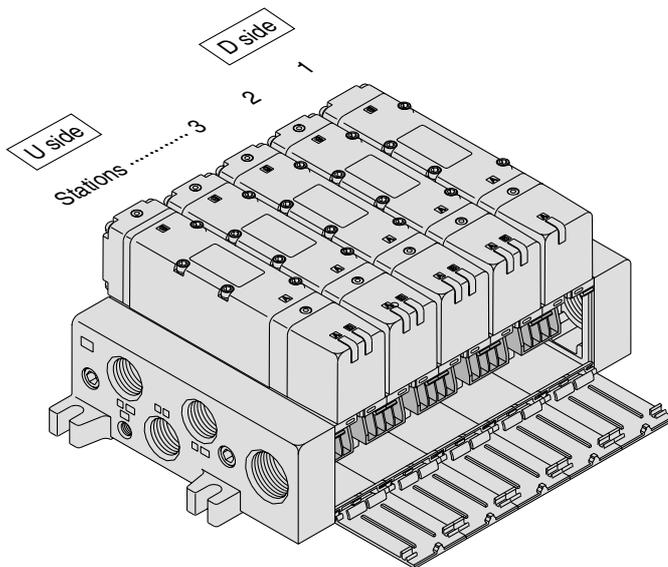

- VQC
- SQ
- VQ0
- VQ4
- VQ5**
- VQZ
- VQD

How to Order Valves



Series
5 VQ5000

Type of actuation

1	2 position single
2	2 position double
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center
6	3 position double check

Seal

0	Metal seal
1	Rubber seal

Function

Nil	Standard type (1 W)
Y ⁽¹⁾	Low wattage type (0.5 W)
R ⁽²⁾	External pilot

Note 1) Applicable to DC specification.
 Note 2) Refer to page 2-6-39 for details on external pilot specifications.
 Note 3) When two or more symbols are specified, indicate them alphabetically.

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)

Light/Surge voltage suppressor

Nil	Yes
E	Without light, with surge voltage suppressor

Coil voltage

1	100 VAC (50/60 Hz)
2	200 VAC (50/60 Hz)
3	110 VAC (50/60 Hz)
4	220 VAC (50/60 Hz)
5	24 VDC
6	12 VDC


How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.

<Example>
Individual terminal block kit
 VV5Q51-0503T1... 1 set—Manifold base part no.
 *VQ5100-5 2 sets—Valve part no. (Stations 1 and 2)
 *VQ5200-5 2 sets—Valve no. (Stations 3 and 4)
 *VQ5300-5 1 set—Valve part no. (Station 5)


Prefix the asterisk to the part nos. of the solenoid valve, etc.

Enter in order starting from the first station on the D side. When entry of part numbers becomes complicated, indicate in the manifold specification sheet.

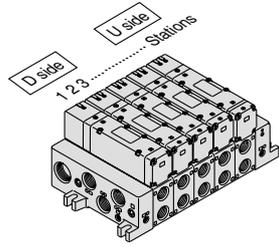

Bottom ported drawing

- VQC
- SQ
- VQ0
- VQ4
- VQ5**
- VQZ
- VQD

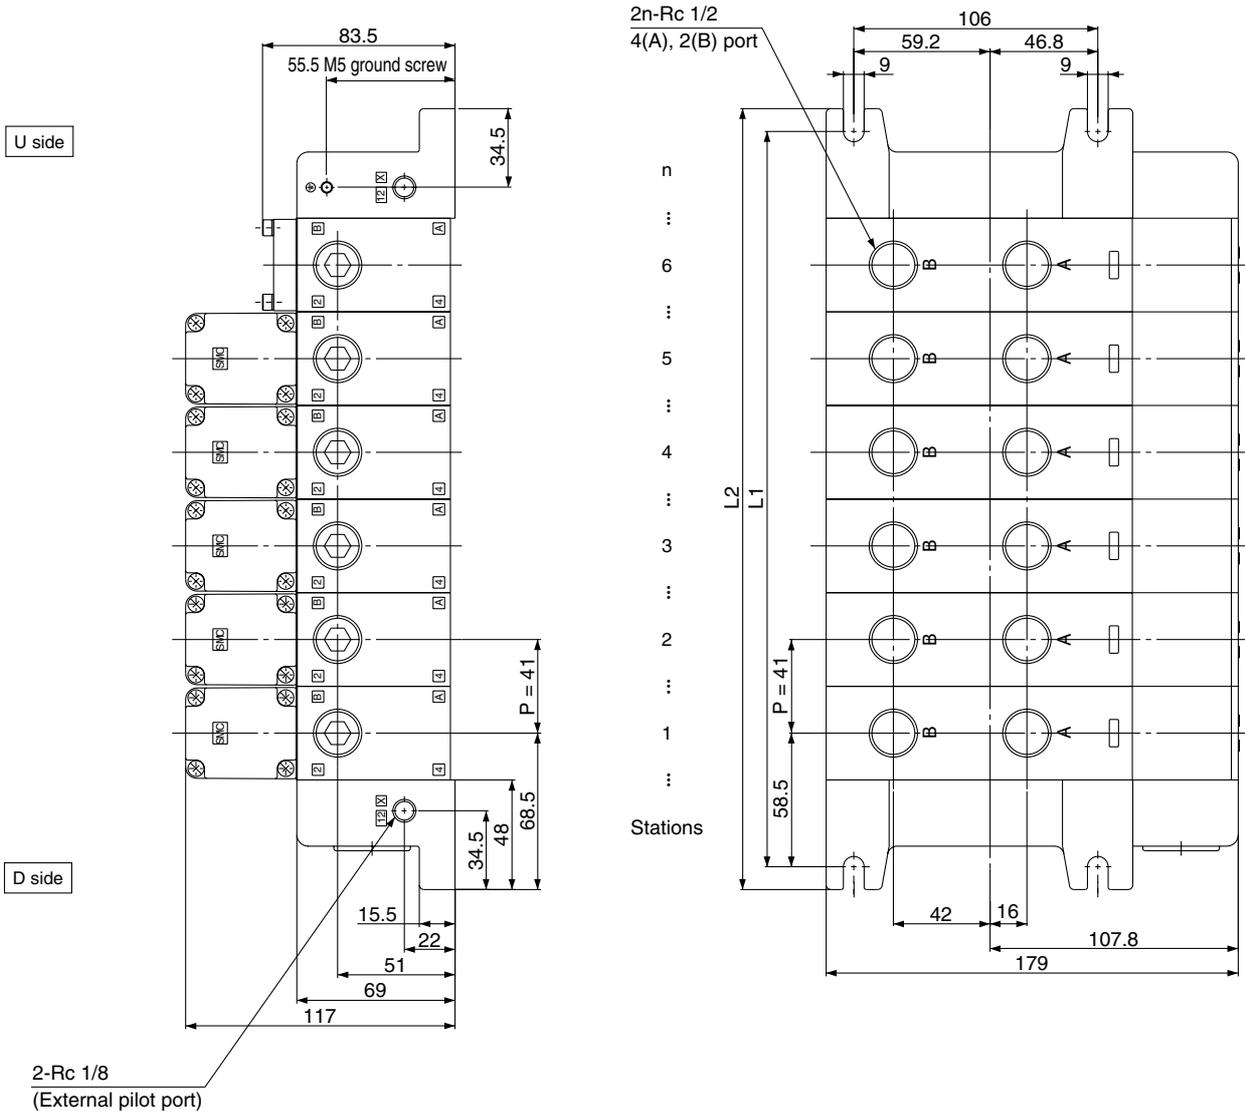


Dimensions

Formula: $L1 = 41n + 76$, $L2 = 41n + 96$
 n: Stations (Maximum 12 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12
L1	117	158	199	240	281	322	363	404	445	486	527	568
L2	137	178	219	260	301	342	383	424	465	506	547	588

L Kit (Lead wire cable)

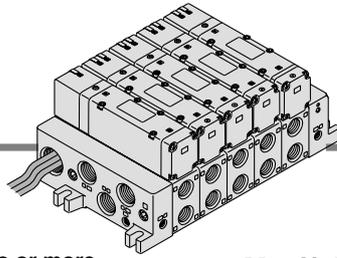

IP65 compliant


- Enclosure IP65 compliant
- Direct electrical entry type available with two or more stations.
- Electrical entry can be selected on either the U side or the D side according to the mounting orientation.
- Maximum stations are 12.

Manifold Specifications

Series	Porting specifications			Applicable stations
	4(A), 2(B) port location	Port size		
VQ5000	Side	Rc 3/4	4(A), 2(B) Rc 3/8 Rc 1/2	Max. 12 stations
	Bottom		Rc 1/2	

Wiring Specifications

Three lead wires are attached to each station regardless of the type of valve which is mounted. The red wire is for COM connection.

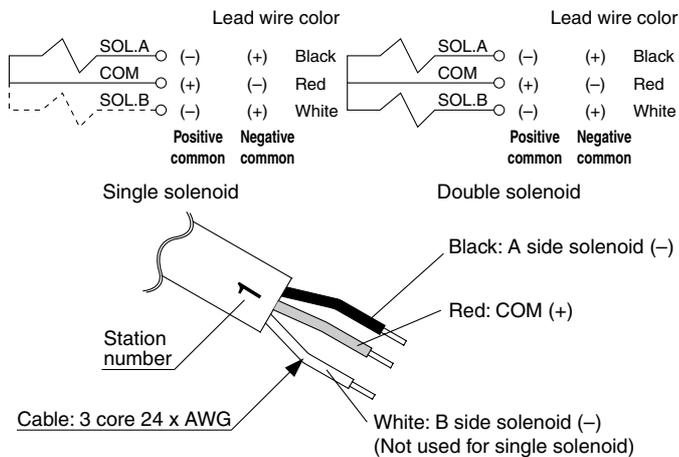


Lead Wire Assembly with Connector

Lead wire length	Part no.
0.6 m	VVQ5000-44A-8-□
1.5 m	VVQ5000-44A-15-□
3 m	VVQ5000-44A-30-□

□: Number of stations 1 to 12

For different lead wire lengths, order a lead wire assembly with connector shown in the table on the right. Note) There is no polarity. It can also be used as a negative common.


How to Order Manifold

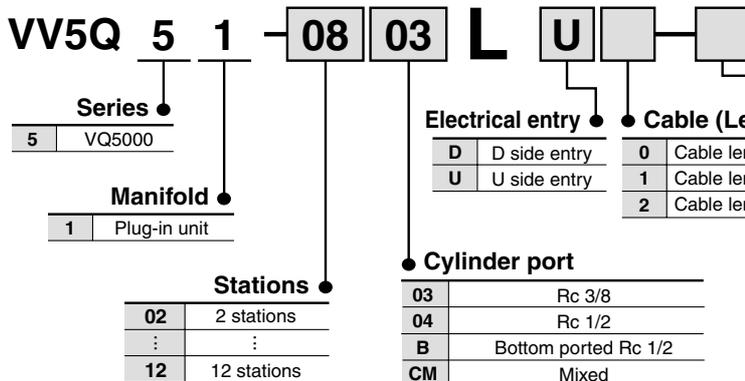

Option

Symbol	Option
Nil	None
CD1 ^{Note)}	Exhaust cleaner for Rc 1: D side exhaust
CD2 ^{Note)}	Exhaust cleaner for Rc 1 1/2: D side exhaust
CU1 ^{Note)}	Exhaust cleaner for Rc 1: U side exhaust
CU2 ^{Note)}	Exhaust cleaner for Rc 1 1/2: U side exhaust
SB	Direct exhaust with silencer box: Exhaust from both U and D sides
SD ^{Note)}	Direct exhaust with silencer box: D side exhaust
SU ^{Note)}	Direct exhaust with silencer box: U side exhaust
W	IP65 enclosure

Note) Combination of [C□□] and [S□] is not possible.

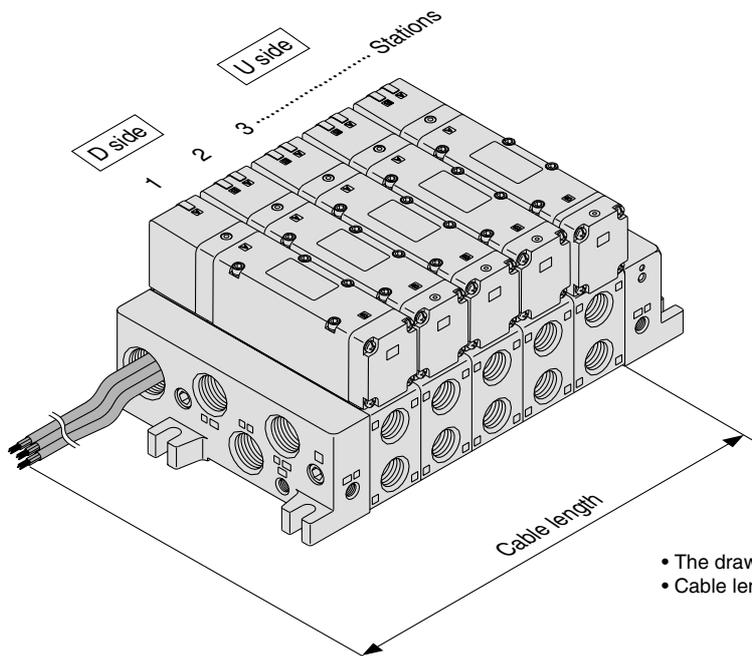

- The drawing shows the electrical entry on the D side.
- Cable length is measured from the solenoid valve body.

- VQC
- SQ
- VQ0
- VQ4
- VQ5**
- VQZ
- VQD

How to Order Valves

VQ 5 1 0 0 — **5** — — — —

Series

5	VQ5000
---	--------

Type of actuation

1	2 position single
2	2 position double
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center
6	3 position double check

Seal

0	Metal seal
1	Rubber seal

Enclosure

Nil	Dusttight
W	Dusttight/Low jetproof type(IP65)

Manual override

Nil	Non-locking push type (Tool required)
B	Locking type (Tool required)

Light/Surge voltage suppressor

Nil	Yes
E	Without light, with surge voltage suppressor

Coil voltage

1	100 VAC (50/60 Hz)
2	200 VAC (50/60 Hz)
3	110 VAC (50/60 Hz)
4	220 VAC (50/60 Hz)
5	24 VDC
6	12 VDC

Function

Nil	Standard type (1 W)
Y ⁽¹⁾	Low wattage type (0.5 W)
R ⁽²⁾	External pilot

Note 1) Applicable to DC specification.
 Note 2) Refer to page 2-6-39 for details on external pilot specifications.
 Note 3) When two or more symbols are specified, indicate them alphabetically.

How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.


<Example>

Lead wire kit with cable (3 m)




- VV5Q51-0503LD2 ...1 set—Manifold base part no.
- *VQ5100-52 sets—Valve part no. (Stations 1 and 2)
- *VQ5200-52 sets—Valve part no. (Stations 3 and 4)
- *VQ5300-51 set—Valve part no. (Station 5)

Prefix the asterisk to the part nos. of the solenoid valve, etc.


Enter in order starting from the first station on the D side. When entry of part numbers becomes complicated, indicate in the manifold specification sheet.

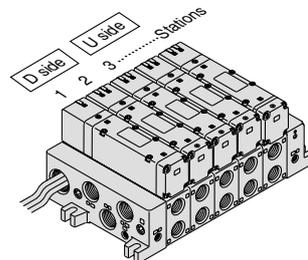

L Kit (Lead wire cable)

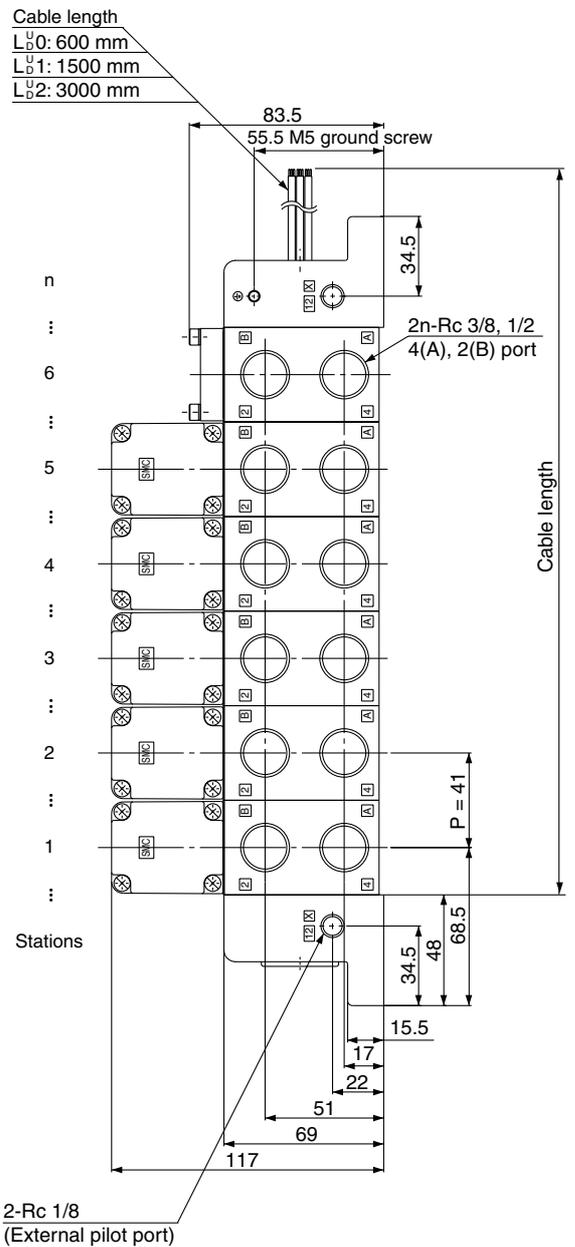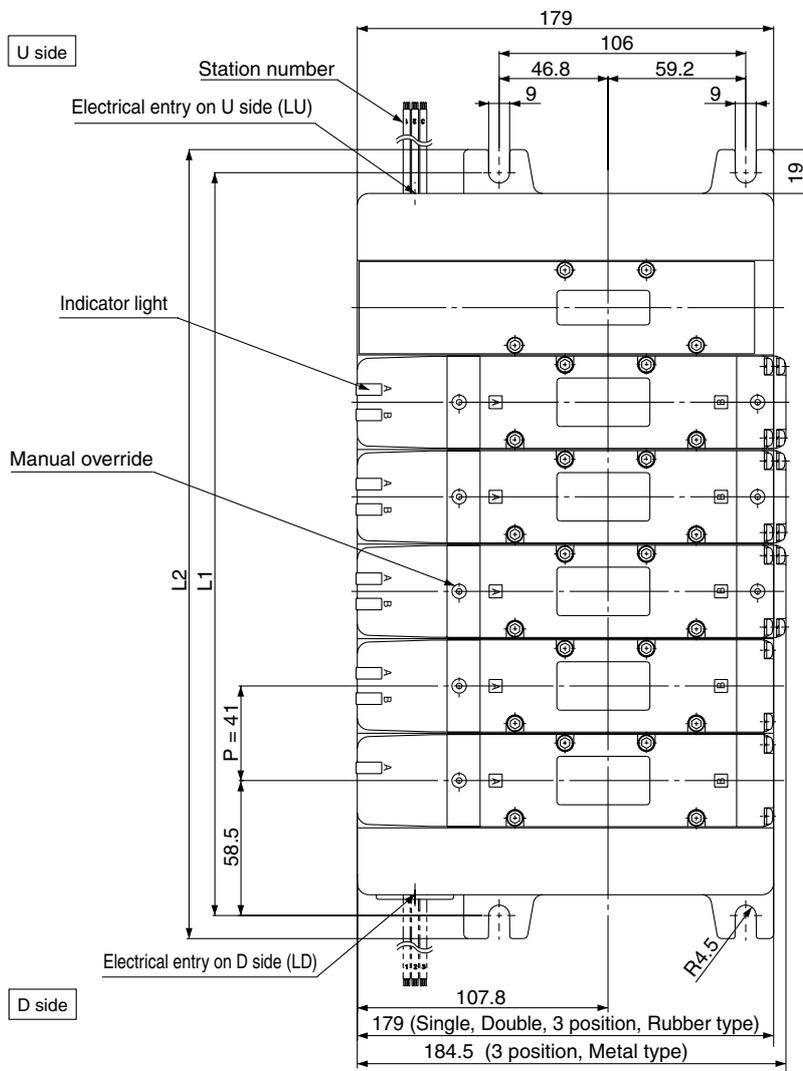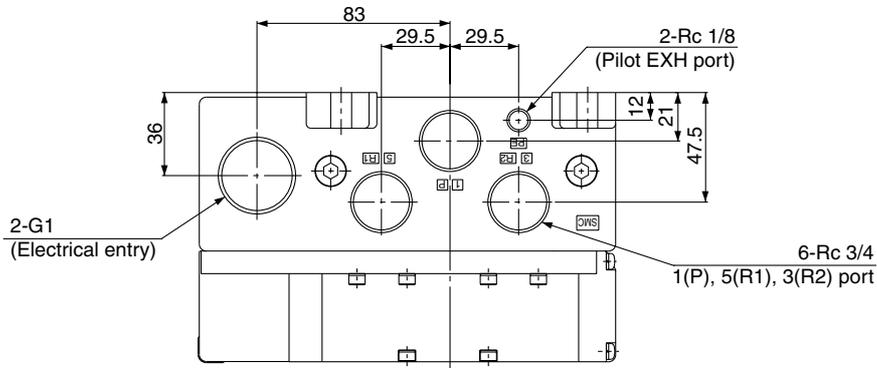

Bottom ported drawing

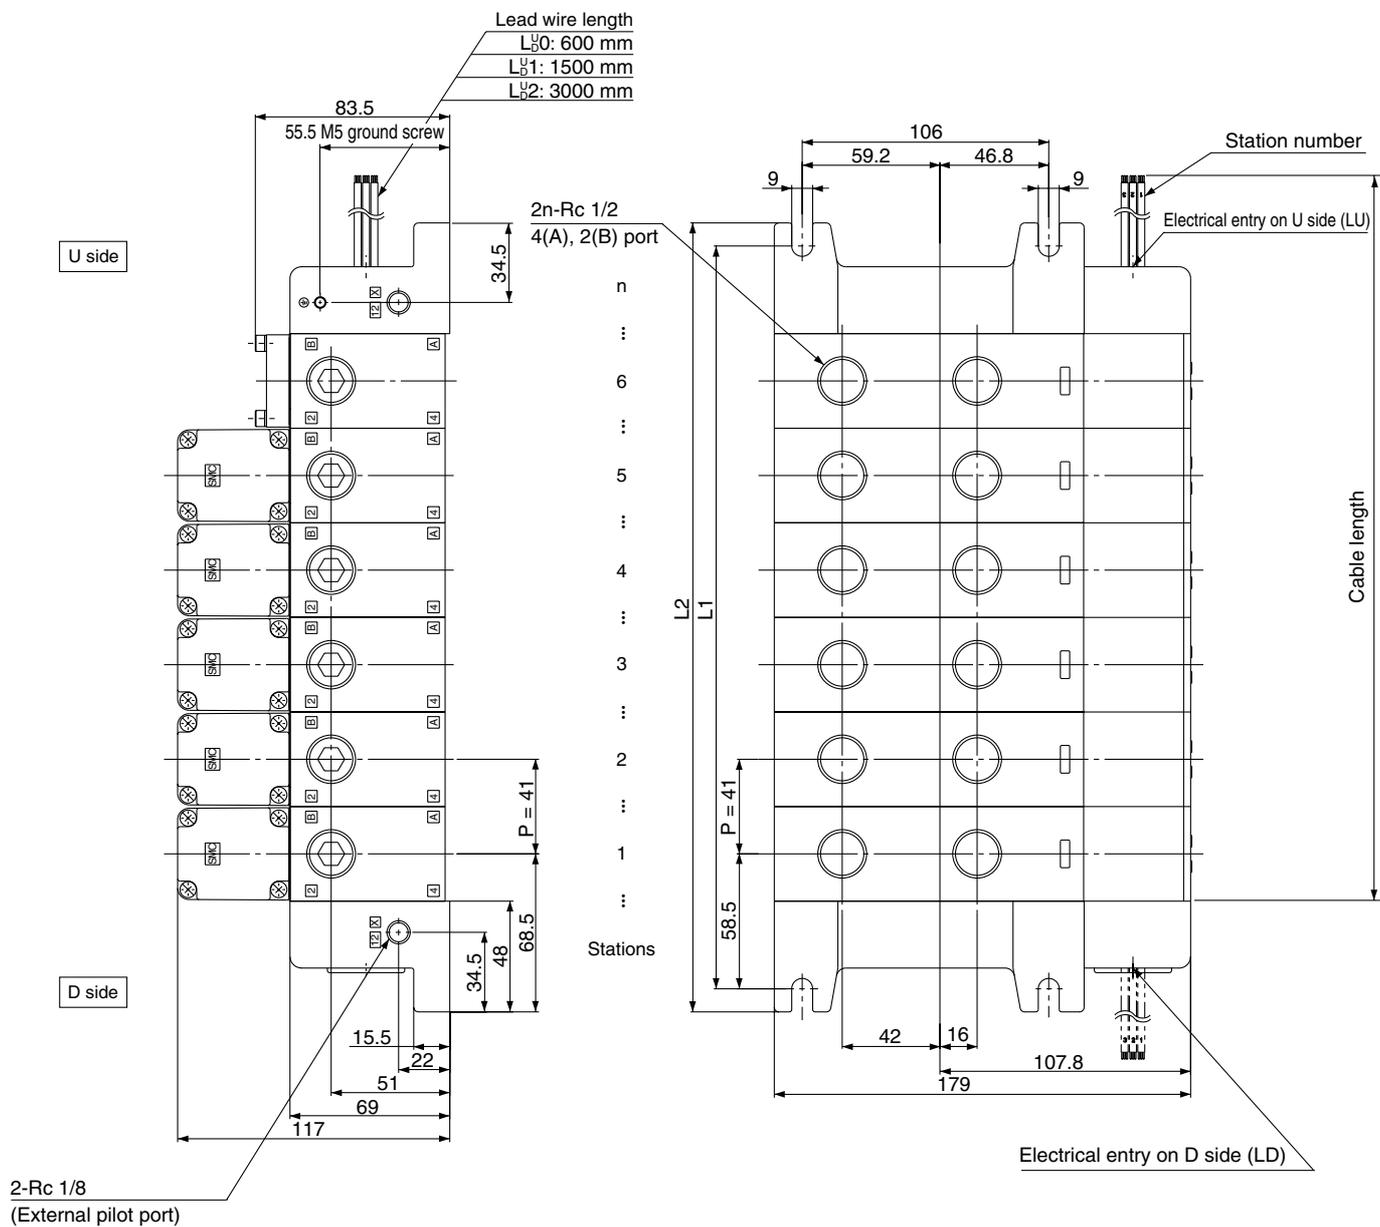

- VQC
- SQ
- VQ0
- VQ4
- VQ5**
- VQZ
- VQD


Formula: $L_1 = 41n + 76$, $L_2 = 41n + 96$
 n: Stations (Maximum 12 stations)

Dimensions

L \ n	1	2	3	4	5	6	7	8	9	10	11	12
L1	117	158	199	240	281	322	363	404	445	486	527	568
L2	137	178	219	260	301	342	383	424	465	506	547	588

S Kit (Serial transmission unit)

- The serial transmission system reduces wiring work, while minimizing wiring and saving space.
- The system is available in types such as the type SA for equipment with a maximum of 32 input/output points (a general purpose type for small scale systems), the type SB capable of controlling up to 512 points of input/output (Mitsubishi Electric compatible), the type SC (OMRON compatible), the type SD (SHARP compatible, 504 points max.), the type SF (NKE compatible, 128 points max.), the type SJ (SUNX compatible), the type SK (Fuji Electric compatible), the type SQ (OMRON Compo Bus/D compatible), and the type SR (OMRON Compo Bus/S compatible).
- Maximum 9 stations (12 stations available as an option. Indicate 10 to 12 stations on the manifold specification sheet.)
- One station is used for serial unit mounting.

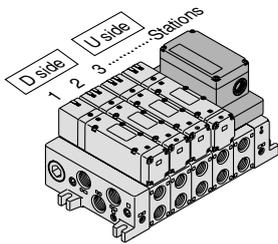

- Stations are counted from station 1 on the D side.
- Double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station, regardless of valve and option types. Mixed single and double wiring is available as an option.

Item	Specifications
External power supply	24 VDC +10%, -5%
Current consumption (Internal unit)	SA, SB, SBB, SD, SF, SJ, SK, SQ, SR, SV: 0.1A SC: 0.3A

Manifold Specifications

Series	Porting specifications		Applicable stations
	4(A), 2(B) port location	Port size	
VQ5000		Side	Rc 3/4
	Bottom	Rc 1/2	

Name of terminal block (LED)	Type SA With general type SI unit (Series EX300)	Type SB Mitsubishi Electric Corporation MELSECNET/MINI-S3 Data Link System																		
		<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>TRD</td> <td>Lighting during data reception</td> </tr> <tr> <td>RUN/ERR</td> <td>Blinking when received data is normal; Lighting when data reception</td> </tr> </tbody> </table>	LED	Description	TRD	Lighting during data reception	RUN/ERR	Blinking when received data is normal; Lighting when data reception	<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>POWER</td> <td>Lighting when power is turned ON</td> </tr> <tr> <td>RUN</td> <td>Lighting when data transmission with the master station is normal</td> </tr> <tr> <td>RD</td> <td>Lighting during data reception</td> </tr> <tr> <td>SD</td> <td>Lighting during data transmission</td> </tr> <tr> <td>ERR.</td> <td>Lighting when reception data error occurs. Light turns off when the error is corrected.</td> </tr> </tbody> </table>	LED	Description	POWER	Lighting when power is turned ON	RUN	Lighting when data transmission with the master station is normal	RD	Lighting during data reception	SD	Lighting during data transmission	ERR.
LED	Description																			
TRD	Lighting during data reception																			
RUN/ERR	Blinking when received data is normal; Lighting when data reception																			
LED	Description																			
POWER	Lighting when power is turned ON																			
RUN	Lighting when data transmission with the master station is normal																			
RD	Lighting during data reception																			
SD	Lighting during data transmission																			
ERR.	Lighting when reception data error occurs. Light turns off when the error is corrected.																			
Note	<ul style="list-style-type: none"> ● T unit Can be connected with PLC I/O card for serial transmission. EX300-TMB1..... For models of Mitsubishi Electric Corporation EX300-TTA1..... For OMRON EX300-TFU1..... For Fuji Electric EX300-T001..... General purpose * T units have 32 control points per unit ● No. of output points, 16 points 	<ul style="list-style-type: none"> ● Master station PLC made by Mitsubishi Electric Corporation Series MELSEC-A AJ71PT32-S3, AJ71T32-S3 A1SJ71PT32-S3 * Max. 64 stations, connected to remote I/O stations (Max. 512 points). ● No. of output points, 16 points. No. of stations occupied, 2 stations 																		

* For details on specifications and handling, refer to the separate technical instruction manual.

How to Order Manifold

VV5Q 5 1 - 08 03 S U Q

Series
5 VQ5000

Manifold
1 Plug-in unit

Stations
02 2 stations
: :
12 12 stations

Note) Add 1 station for serial unit mounting.

Cylinder port
03 Rc 3/8
04 Rc 1/2
B Bottom ported Rc 1/2
CM Mixed

Option

Symbol	Option
Nil	None
CD1 (2)	Exhaust cleaner for Rc 1: D side exhaust
CD2 (2)	Exhaust cleaner for Rc 11/2: D side exhaust
CU1 (2)	Exhaust cleaner for Rc 1: U side exhaust
CU2 (2)	Exhaust cleaner for Rc 11/2: U side exhaust
K (3)	Special wiring specifications (Except double wiring)
SD (2)	Direct exhaust with silencer box: D side exhaust
SU (2)	Direct exhaust with silencer box: U side exhaust
W	IP65 enclosure

Note 1) When two or more symbols are specified, indicate them alphabetically. Example) -CD1K.
Note 2) Combination of [C□□] and [S□] is not possible.
Note 3) Specify the wiring specifications on the manifold specification sheet.

SI unit mounting position



D	D side mounting
U	U side mounting

● Correspondence of SI unit output numbers and solenoid valve coils

Mixed wiring is available as an option.
Use the manifold specification sheet to specify.

<Wiring example 1> Double wiring (Standard)


<Wiring example 2> Single/Double mixed wiring (Option)

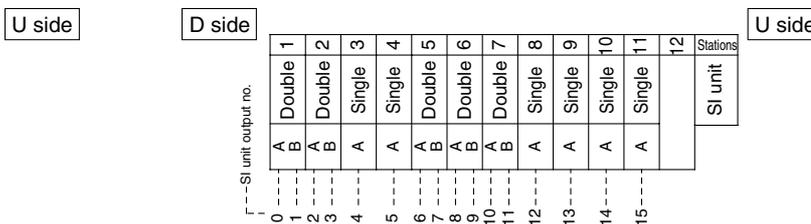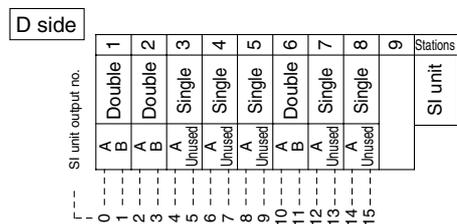

	Type SC OMRON Corporation SYSBUS Wire System	Type SD SHARP Corporation Satellite I/O Link System																
Name of terminal block (LED)																		
	<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>RUN</td> <td>Lights when transmission is normal and PLC is in operation mode</td> </tr> <tr> <td>T/R ERR</td> <td>Blinks during data transmission/reception ON when transmission is abnormal.</td> </tr> </tbody> </table>	LED	Description	RUN	Lights when transmission is normal and PLC is in operation mode	T/R ERR	Blinks during data transmission/reception ON when transmission is abnormal.	<table border="1"> <thead> <tr> <th>LED</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>POWER</td> <td>ON when power supply is ON</td> </tr> <tr> <td>RUN</td> <td>Lights when power is ON and slave stations are operating normally</td> </tr> <tr> <td>ERROR</td> <td>Lights when slave station switch setting is abnormal, communication is abnormal, PLC stopped and defective slave unit</td> </tr> <tr> <td>R.SET HOLD</td> <td>ON for master unit control input</td> </tr> </tbody> </table>	LED	Description	POWER	ON when power supply is ON	RUN	Lights when power is ON and slave stations are operating normally	ERROR	Lights when slave station switch setting is abnormal, communication is abnormal, PLC stopped and defective slave unit	R.SET HOLD	ON for master unit control input
	LED	Description																
RUN	Lights when transmission is normal and PLC is in operation mode																	
T/R ERR	Blinks during data transmission/reception ON when transmission is abnormal.																	
LED	Description																	
POWER	ON when power supply is ON																	
RUN	Lights when power is ON and slave stations are operating normally																	
ERROR	Lights when slave station switch setting is abnormal, communication is abnormal, PLC stopped and defective slave unit																	
R.SET HOLD	ON for master unit control input																	
Note	<ul style="list-style-type: none"> Master station unit OMRON PLC SYSMAC C(CV) series Types C500-RM201 and C200H-RM201 *32 units max., transmission terminal connection (512 points max.) No. of output points, 16 points 	<ul style="list-style-type: none"> Master station unit SHARP Corporation PLC New Satellite Series W ZW-31LM New Satellite Series JW JW-23LM, JW-31LM *Max. 31 units, I/O slave stations connected (504 points max.) No. of output points, 16 points 																

- VQC
- SQ
- VQ0
- VQ4
- VQ5
- VQZ
- VQD

How to Order Valves

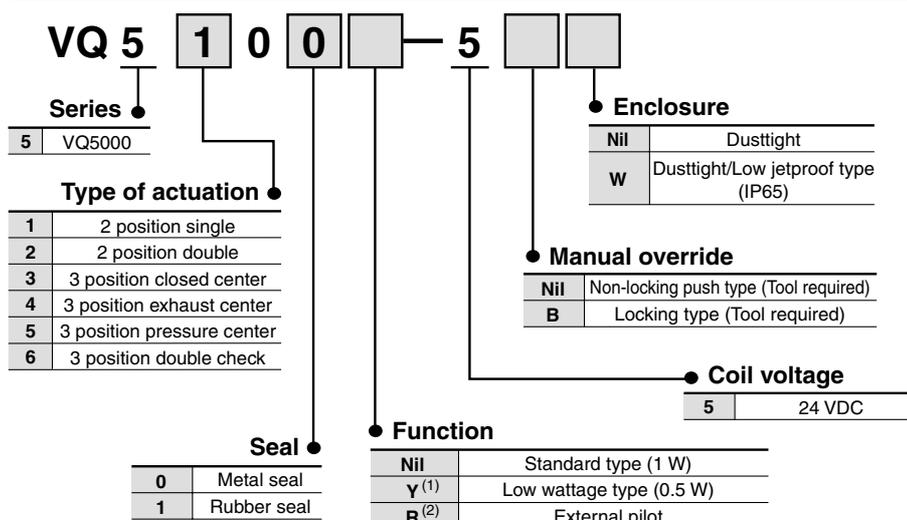


Note 1) Applicable to DC specification.
Note 2) Refer to page 2-6-39 for details on external pilot specifications.
Note 3) When two or more symbols are specified, indicate them alphabetically.

How to Order Manifold Assembly

Specify the part numbers for valves and options together beneath the manifold base part number.




<Example>
Serial transmission unit
VV5Q51-0603SUA ... 1 set —Manifold base part no.
*VQ5100-5 2 sets —Valve part no. (Stations 1 and 2)
*VQ5200-5 2 sets —Valve part no. (Stations 3 and 4)
*VQ5300-5 1 set —Valve part no. (Station 5)

Prefix the asterisk to the part nos. of the solenoid valve, etc.
Enter in order starting from the first station on the D side. When entry of part numbers becomes complicated, indicate in the manifold specification sheet.

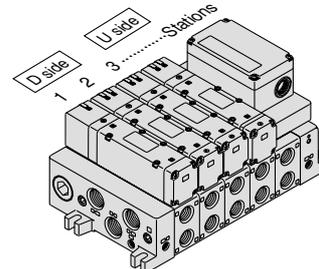



S

Kit (Serial transmission unit)

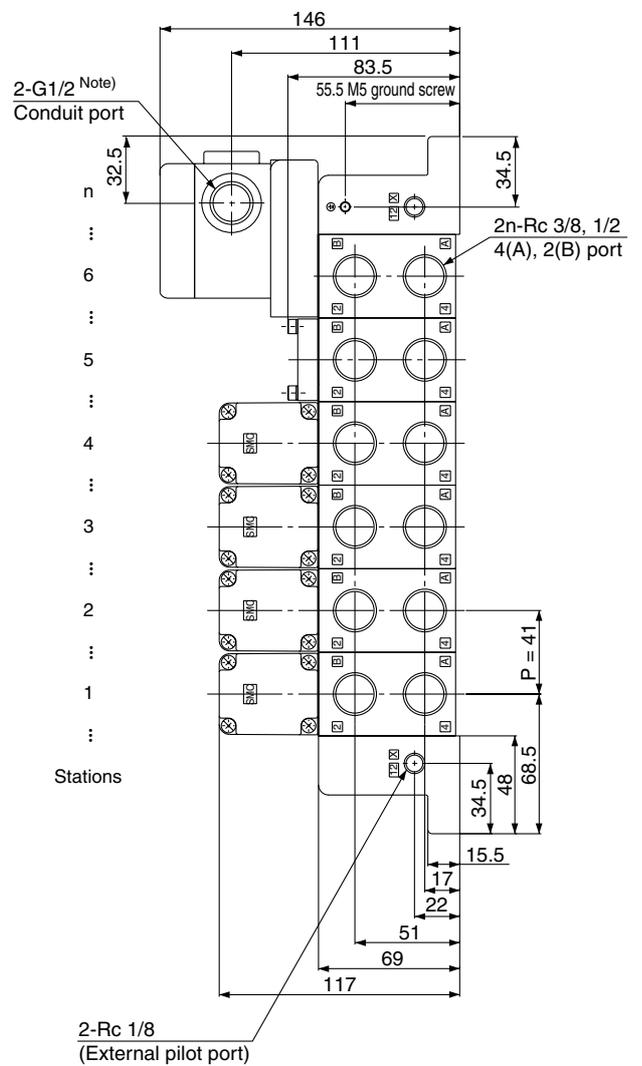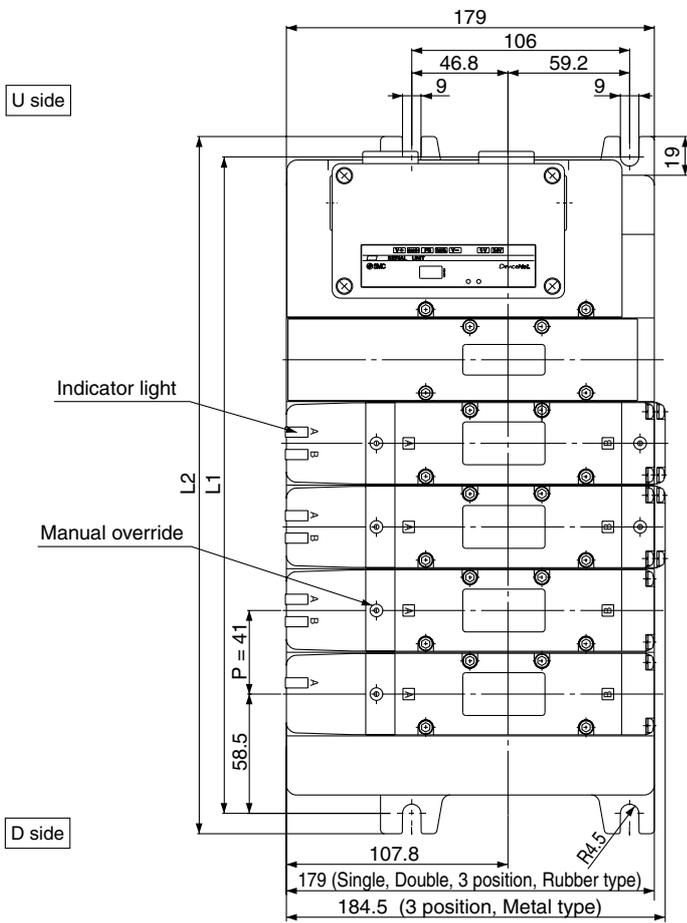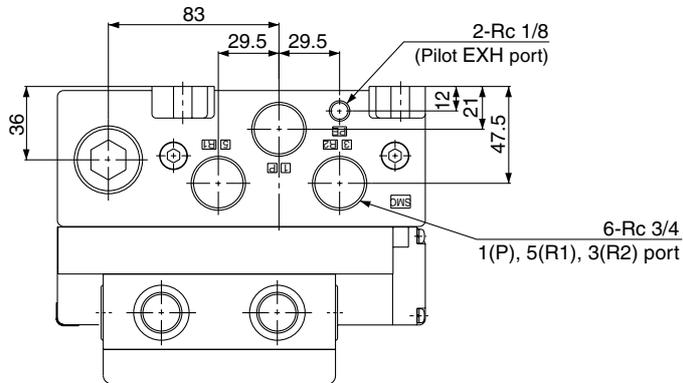

Note) In the case of two power supply systems (separate SI unit and solenoid drive power supplies), there are conduit ports (G 1/2) in four locations. Other models have conduit ports in two locations.

Bottom port drawing

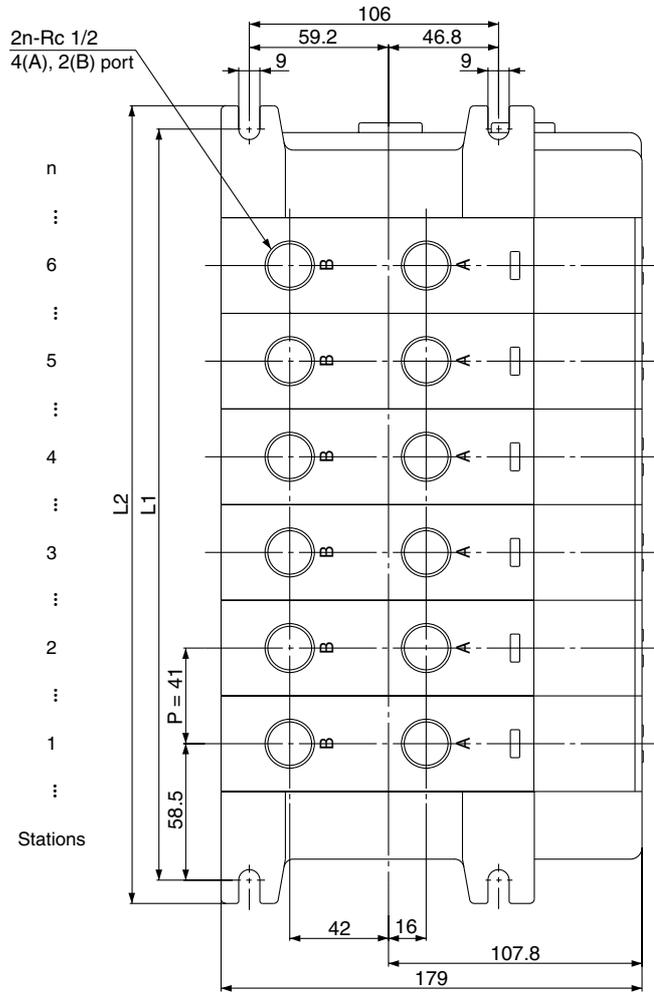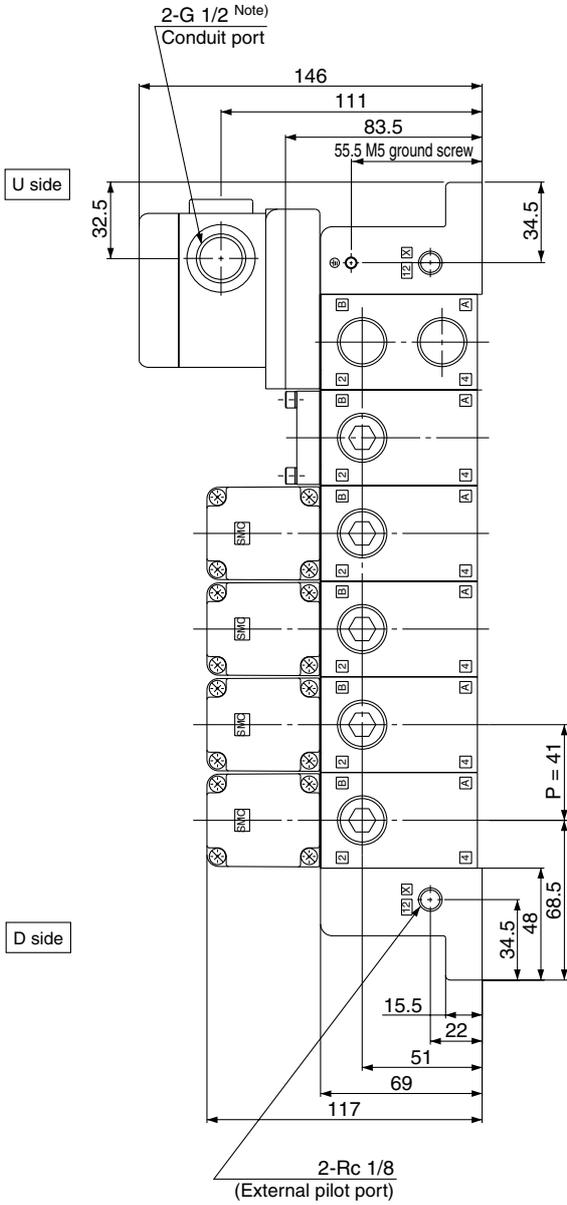

- VQC
- SQ
- VQ0
- VQ4
- VQ5**
- VQZ
- VQD

Formula: $L1 = 41n + 76$, $L2 = 41n + 96$
 n: Stations (Maximum 12 stations)
 * Including 1 station for SI unit box mounting


Dimensions

L \ n	2	3	4	5	6	7	8	9	10	11	12
L1	158	199	240	281	322	363	404	445	486	527	568
L2	178	219	260	301	342	383	424	465	506	547	588

Series VQ5000

Base Mounted


Plug Lead Unit: C Kit (Connector Kit)

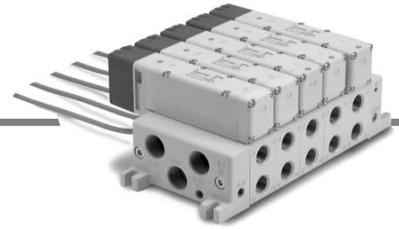

How to Order Manifold

VV5Q 5 5 - 08 03 C-W

Series	
5	VQ5000
Manifold	
5	Plug lead unit
Stations	
01	1 station
⋮	⋮
12	12 stations
Cylinder port	
03	Rc 3/8
04	Rc 1/2
B	Bottom ported Rc 1/2
CM	Mixed

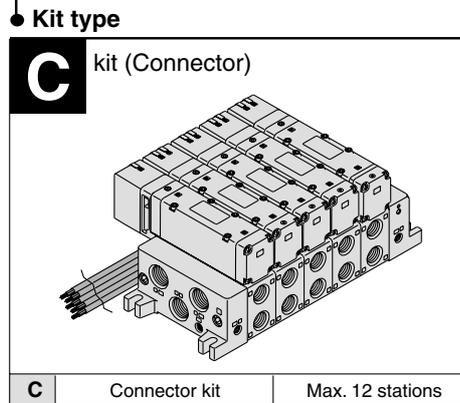

C	Connector kit	Max. 12 stations
----------	---------------	------------------

Option

Symbol	Option
Nil	None
CD1 ^{Note}	Exhaust cleaner for Rc 1: D side exhaust
CD2 ^{Note}	Exhaust cleaner for Rc 1 1/2: D side exhaust
CU1 ^{Note}	Exhaust cleaner for Rc 1: U side exhaust
CU2 ^{Note}	Exhaust cleaner for Rc 1 1/2: U side exhaust
SB	Direct exhaust with silencer box: Exhaust from both U and D sides
SD ^{Note}	Direct exhaust with silencer box: D side exhaust
SU ^{Note}	Direct exhaust with silencer box: U side exhaust
W	IP65 enclosure

Note) Combination of [C_D^U] and [S_D^U] is not possible.



Refer to page 2-6-2 (Grommet style) for wiring specifications.

How to Order Valves

VQ 5 1 5 0 - 5 G

Series	
5	VQ5000
Type of actuation	
1	2 position single
2	2 position double
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center
6	3 position double check

Seal	
0	Metal seal
1	Rubber seal

Function	
Nil	Standard type (1 W)
Y ⁽¹⁾	Low wattage type (0.5 W)
R ⁽²⁾	External pilot

Note 1) Applicable to DC specification.
Note 2) Refer to page 2-6-39 for details on external pilot specifications.



Note 3) When two or more symbols are specified, indicate them alphabetically.

Coil voltage			
1	100 VAC (50/60 Hz)	4	220 VAC (50/60 Hz)
2	200 VAC (50/60 Hz)	5	24 VDC
3	110 VAC (50/60 Hz)	6	12 VDC


Enclosure

Nil	Dusttight
W	Dusttight/Low jetproof type (IP65)

Manual override

Nil: Non-locking push type (Tool required)

B: Locking type (Tool required)

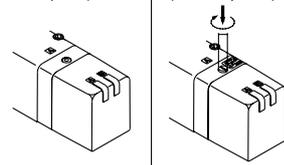

Light/Surge voltage suppressor

Nil	Yes
E	Without light, with surge voltage suppressor

Electrical entry

Grommet	G Lead wire length 0.6 m	
	H Lead wire length 1.5 m	

How to Order Manifold Assembly


Specify the part numbers for valves and options together beneath the manifold base part number.

<Example> Connector kit

W5Q55-05042C-z-1 set — Manifold base part no.
 * VQ5150-5G 2 sets — Valve part no. (Stations 1 and 2)
 * VQ5250-5G 2 sets — Valve part no. (Stations 3 and 4)
 * VQ5350-5G 1 set — Valve part no. (Station 5)

Prefix the asterisk to the part nos. of the solenoid valve, etc.

Enter in order starting from the first station on the D side. When entry of part numbers becomes complicated, indicate in the manifold specification sheet.

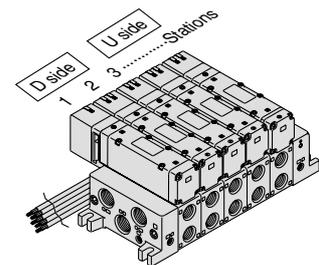

Manifold Specifications

Series	Base model	Type of connection	Porting specifications			Maximum applicable stations	Applicable solenoid valve	5 station weight (kg)
			4(A), 2(B) port location	Port size ^{Note)}				
				1(P), 5(R1), 3(R2)	4(A), 2(B)			
VQ5000	VV5Q55-□□□	■ C kit-Grommet	Side Bottom	Rc 3/4 Option (Direct exhaust with silencer box)	Rc 3/8 Rc 1/2 Rc 1/2	2 to 12 stations	VQ5□50 VQ5□51	3.7 • Except solenoid valve weight













Note) For details about international standard threads other than Rc threads, refer to "Option" on page 2-6-39.

Flow Characteristics at the Number of Manifold Stations (Operated individually)

Model	Passage/Stations		Station 1	Station 5	Station 10
2 position metal seal VQ5 ₂ 100	1 → 4/2 (P → A/B)	C [dm ³ /(s-bar)]	11	11	11
		b	0.24	0.24	0.24
		Cv	2.7	2.7	2.7
	4/2 → 5/3 (A/B → EA/EB)	C [dm ³ /(s-bar)]	12	12	12
		b	0.14	0.14	0.14
		Cv	2.9	2.9	2.9
2 position rubber seal VQ5 ₂ 01	1 → 4/2 (→ RA/B)	C [dm ³ /(s-bar)]	12	12	12
		b	0.33	0.33	0.33
		Cv	3.4	3.4	3.4
	4/2 → 5/3 (A/B → EA/EB)	C [dm ³ /(s-bar)]	16	16	16
		b	0.33	0.33	0.33
		Cv	4.4	4.4	4.4

Note) For port size Rc 1/2

Manifold Option

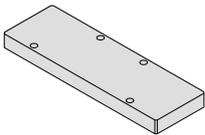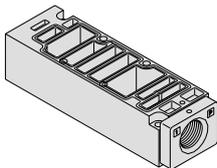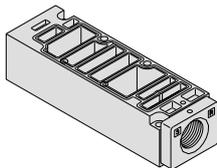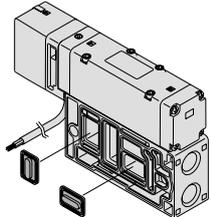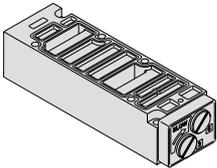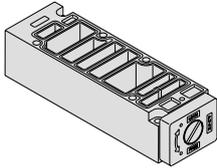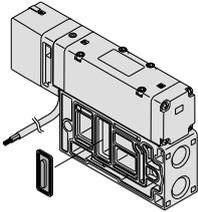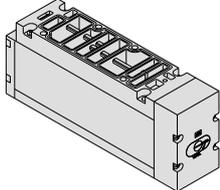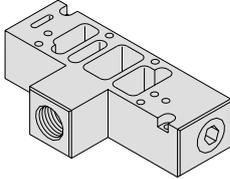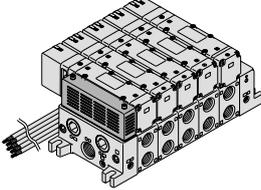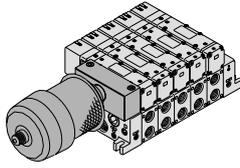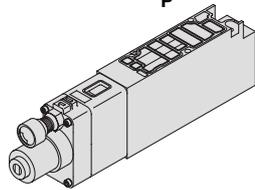Blanking plate assembly VVQ5000-10A-5 	Individual SUP spacer VVQ5000-P-5- ⁰³ / ₀₄ 	Individual EXH spacer VVQ5000-R-5- ⁰³ / ₀₄ 	EXH block plate VVQ5000-16A-2 
Throttle valve spacer VVQ5000-20A-5 	SUP stop valve spacer VVQ5000-37A-5 	SUP block plate VVQ5000-16A-1 	Double check spacer with residual pressure release valve VVQ5000-25A-5 
Release valve spacer VVQ5000-24A-5D 	Direct exhaust with silencerbox [-S□] 	For exhaust cleaner mounting [-C□□] 	Interface regulator ARBQ5000-00- ^A / _P -5 

Refer to pages 2-6-34 to 2-6-39 for detailed dimensions of each option.
For replacement parts, refer to page 2-6-43.



VQC

SQ




VQ0

VQ4


VQ5

VQZ

VQD

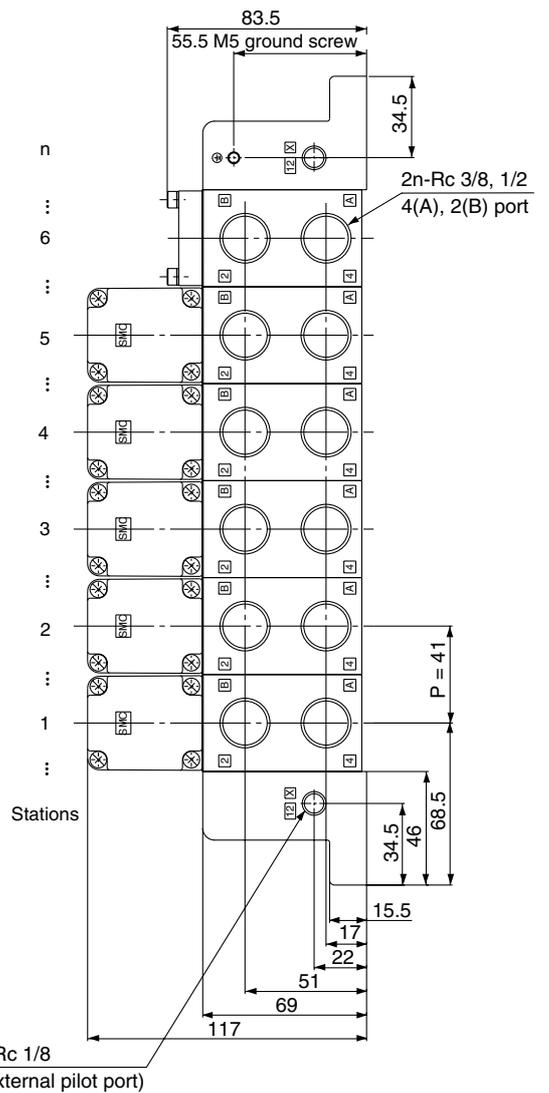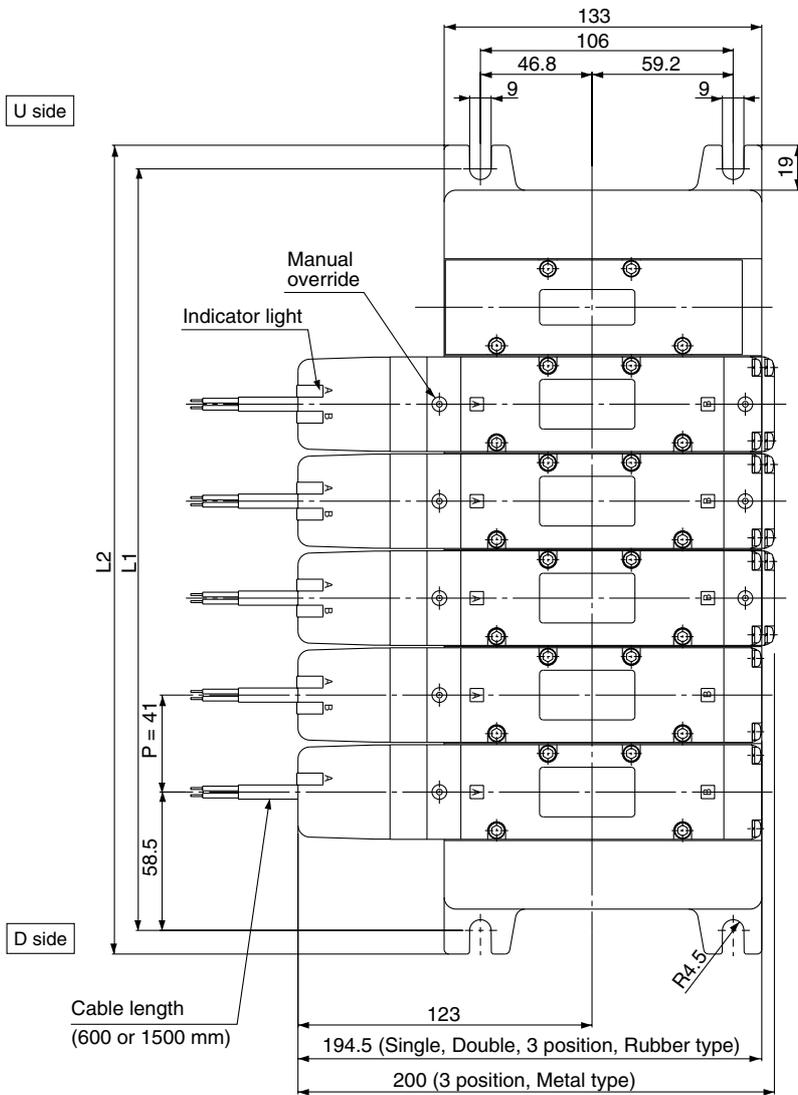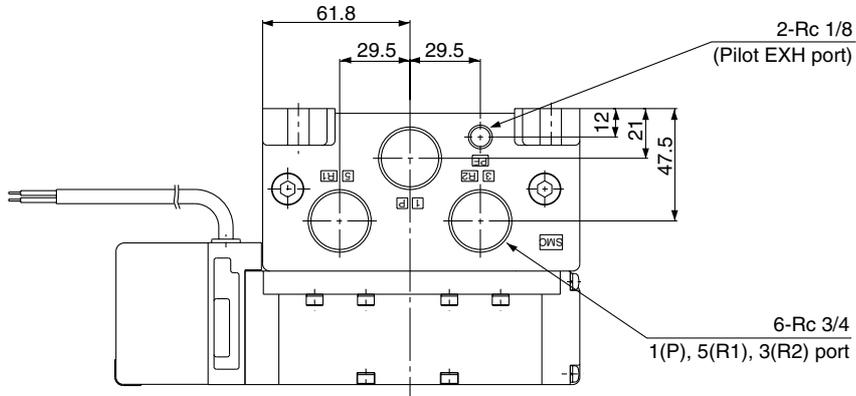

Bottom ported drawing

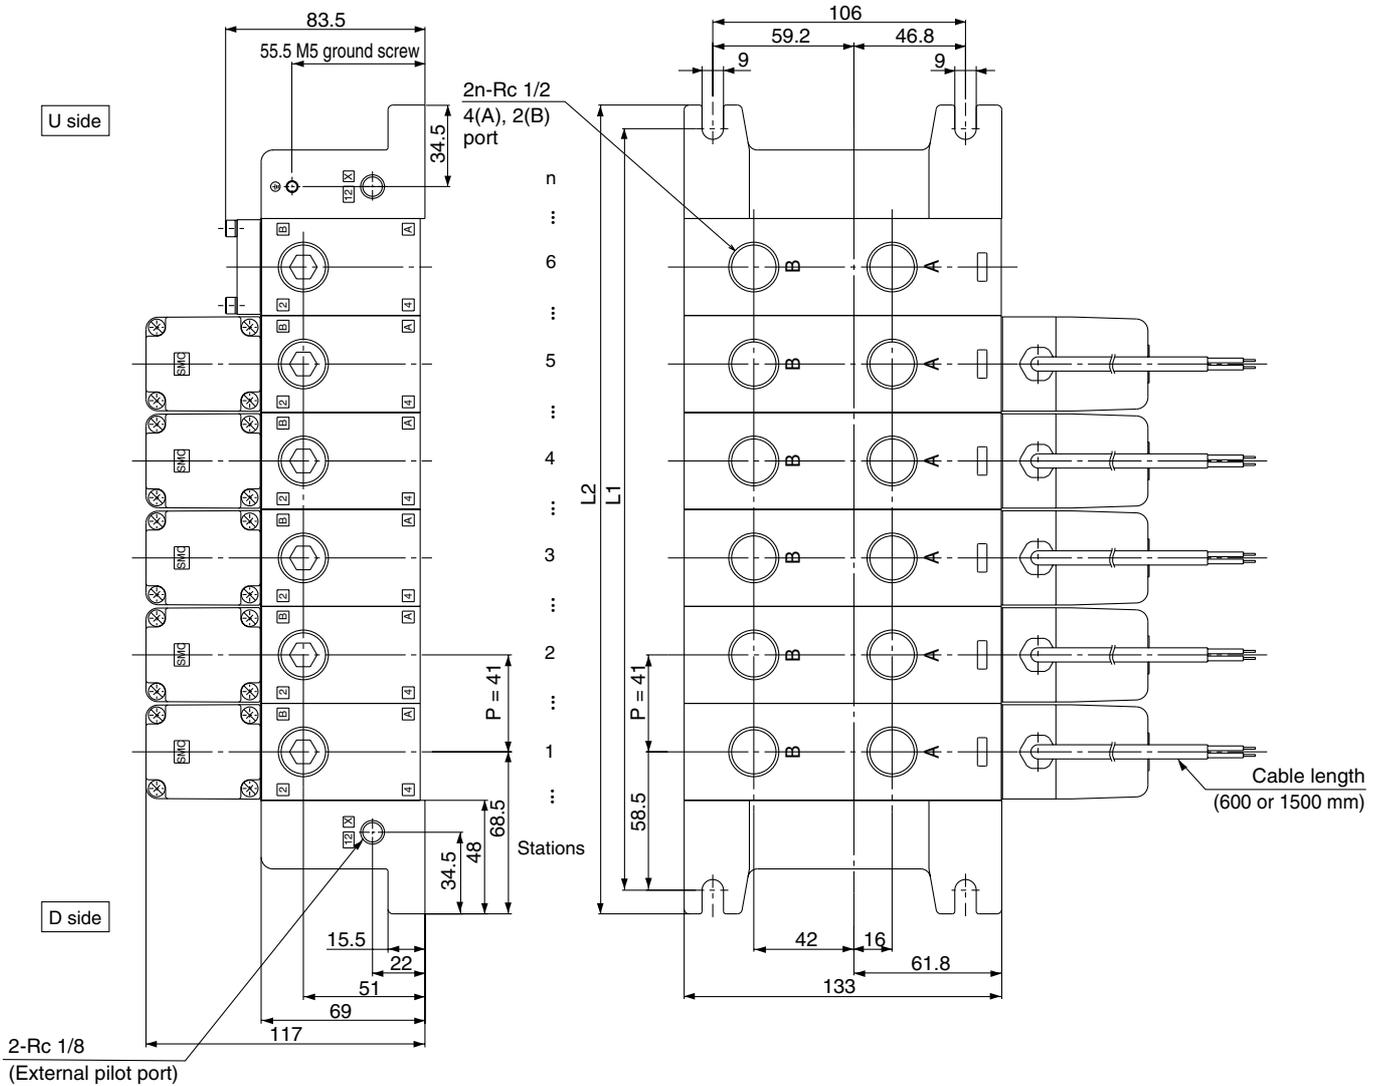

- VQC
- SQ
- VQ0
- VQ4
- VQ5**
- VQZ
- VQD

Dimensions

Formula: $L_1 = 41n + 76$, $L_2 = 41n + 96$
 n: Stations (Maximum 12 stations)

L \ n	1	2	3	4	5	6	7	8	9	10	11	12
L1	117	158	199	240	281	322	363	404	445	486	527	568
L2	137	178	219	260	301	342	383	424	465	506	547	588


Series VQ5000

Manifold Option Parts

Blanking plate assembly


- VVQ5000-10A-1 (Plug-in type)
- VVQ5000-10A-5 (Plug lead type)

It is used by attaching on the manifold block for being prepared for removing a valve for maintenance reasons or planning to mount a spare valve, etc.


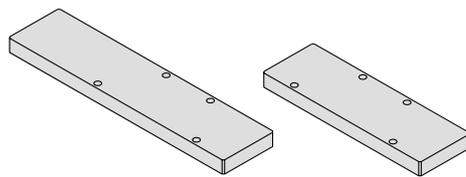


Plug-in type

Plug lead type

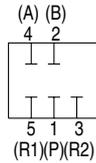


Circuit diagram

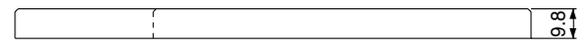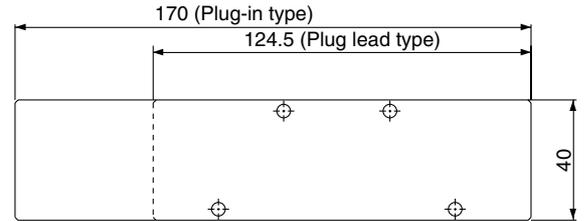

Individual SUP spacer


- VVQ5000-P-1-⁰³/₀₄ (Plug-in type)
- VVQ5000-P-5-⁰³/₀₄ (Plug lead type)

By mounting individual SUP spacers on a manifold block, it is possible to provide individual supply ports for each valve.

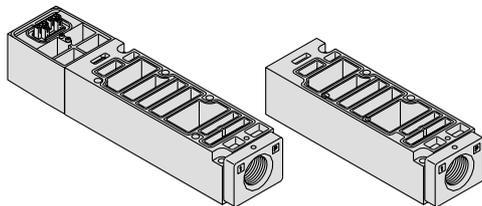


Plug-in type

Plug lead type

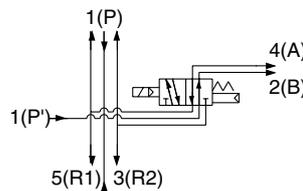


Circuit diagram

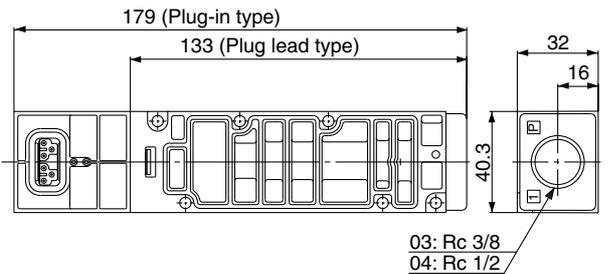

Individual EXH spacer


- VVQ5000-R-1-⁰³/₀₄ (Plug-in type)
- VVQ5000-R-5-⁰³/₀₄ (Plug lead type)

By mounting individual EXH spacers on a manifold block, exhaust ports can be provided individually for each valve. (Common EXH type)


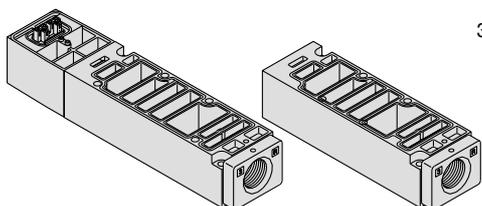


Plug-in type

Plug lead type

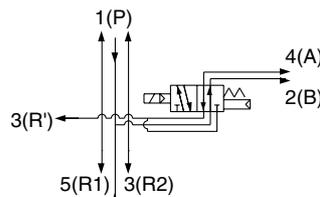


Circuit diagram

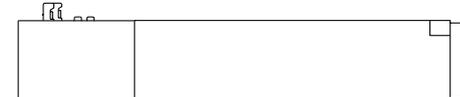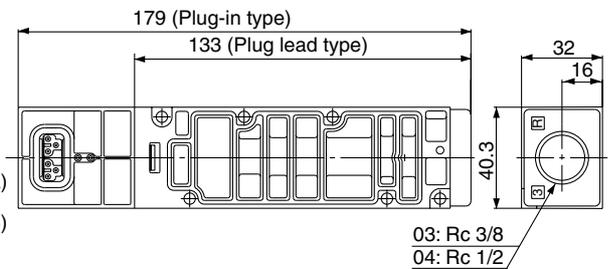

Throttle valve spacer


VVQ5000-20A-1 (Plug-in type)
VVQ5000-20A-5 (Plug lead type)

A throttle valve spacer is mounted on a manifold block to control cylinder speed by throttling exhaust air flow.

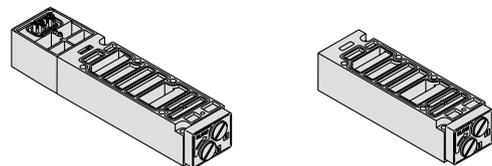


Plug-in type

Plug lead type

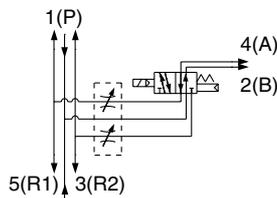


Circuit diagram

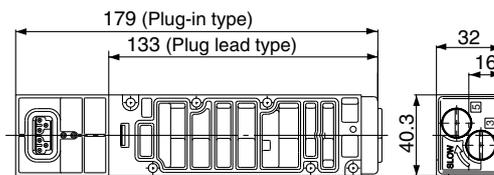

SUP stop valve spacer


VVQ5000-37A-1 (Plug-in type)
VVQ5000-37A-5 (Plug lead type)

A SUP stop valve spacer is mounted on a manifold block, making it possible to individually shut off supply air to each valve.

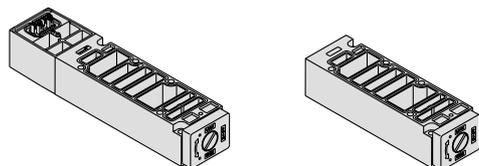


Plug-in type

Plug lead type

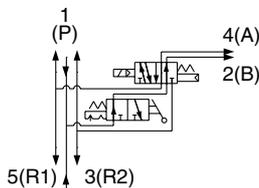


Circuit diagram

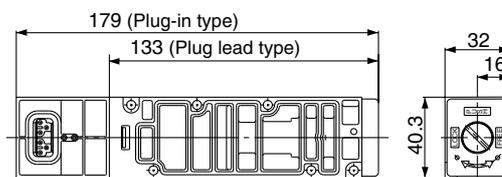

Release valve spacer: For D side mounting


VVQ5000-24A-1D (Plug-in type)
VVQ5000-24A-5D (Plug lead type)

A VQ51□□ (single) valve can be used as an air release valve by combining it with a release valve spacer.
 Note) 2 position double and 3 position cannot be mounted.


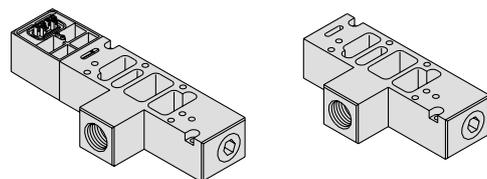


Plug-in type

Plug lead type

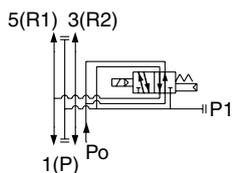

Circuit diagram

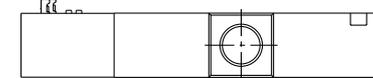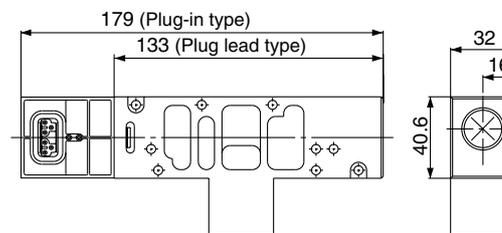


SUP block plate

VVQ5000-16A-1

EXH block plate






VVQ5000-16A-2

When different pressures, high and low, are supplied to manifold, a SUP block plate is inserted between the stations under different pressures.

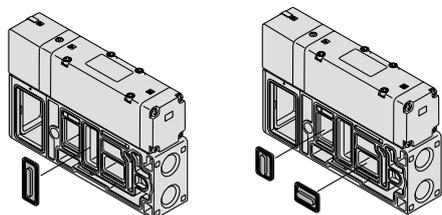

< SUP blocking plate >

< EXH blocking plate >

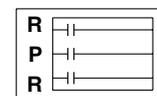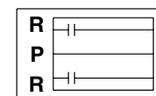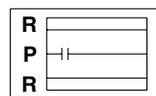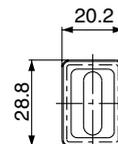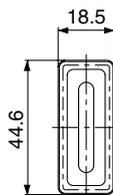

SUP passage blocked

EXH passage blocked

SUP/EXH passage blocked

VQC

SQ

VQ0

VQ4

VQ5

VQZ

VQD

Series VQ5000

Manifold Option Parts

Double check spacer with residual pressure release valve


VVQ5000-25A-1 (Plug-in type)
 VVQ5000-25A-5 (Plug lead type)

Can hold an intermediate cylinder position for an extended time.


When combined with a double check spacer with built-in double check valve, it is unaffected by air leakage between the spool valves, making it possible to hold a cylinder at an intermediate stopping position for an extended time.

Further, a combination of a 2 position type (VQ5₂ □□) and a double check spacer can be used for drop prevention.

Plug-in type

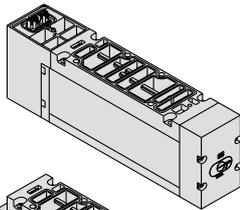

Plug lead type

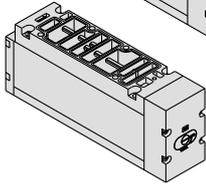

Specifications

Double check spacer part no.	VVQ5000-25A- ₁ / ₅			
	Intermediate stop	Drop prevention		
Applicable solenoid valve	VQ54□□	VQ5 ₂ □□		
Leakage N cm ³ /min	One solenoid energized	1(P)	5 (R1) 3 (R2)	320 or less
		Both solenoids unenergized	1(P)	
	Both solenoids unenergized	4(A)	5 (R1)	0
		2(B)	3 (R2)	

* Supply pressure: 0.5 MPa

Caution

Handling Precautions



- In the case of 3 position double check (VZS65₃□□), check the leakage from piping and fittings in between valve and cylinder by means of synthetic detergent solutions, and ensure that there is no such leakage found there. Also check the leakage from cylinder seal and piston seal. If there is any leakage, sometimes the cylinder, when valve is de-energized, can move without stopping at intermediate position.
- Use caution, as excessive throttling of the double check spacer exhaust can cause a loss of intermediate stopping accuracy and malfunction.
- Combination with a 3 position VQ5₃□□ is not possible.
- Set the cylinder load so that the cylinder pressure will be within two times that of the supply pressure.

Direct exhaust with silencer box


VV5Q5₁-□□□-SD (D side exhaust)
 VV5Q5₁-□□□-SU (U side exhaust)
 VV5Q5₁-□□□-SB (Double side exhaust)

The EXH outlet is placed on the top side of the manifold end plate. The built-in silencer provides highly effective noise reduction. (Noise reduction of 35 dB or more)



Note) Note that when excessive drainage occurs in the air supply, the drainage will be released along with the exhaust.

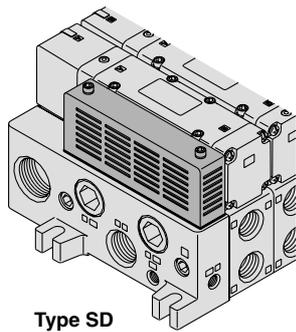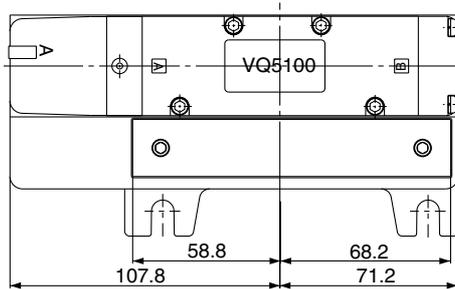

Type SD

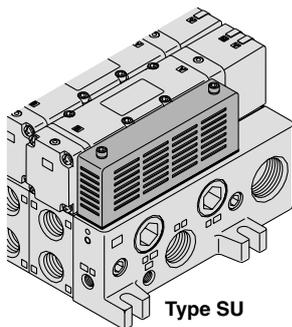

Type SU

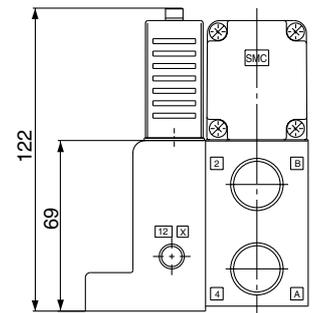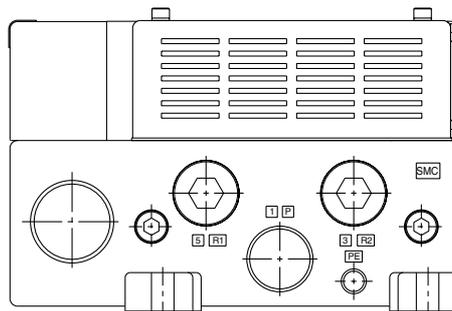


Note) The drawing shows a VV5Q51-□□□-SD.

Manifold mounted exhaust cleaner

VV5Q5¹-□□□-CD (D side mounting)
VV5Q5¹-□□□-CU (U side mounting)


An adapter plate for exhaust cleaner mounting is provided on the top of the manifold end plate. The exhaust cleaner collects drainage and oil mist (99.9% or more) and is highly effective for noise reduction. (Noise reduction of 35 dB or more)

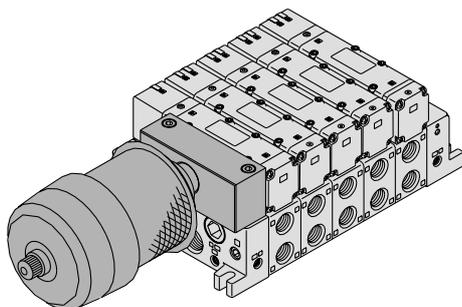

Applicable exhaust cleaners

AMC610-10 (Port size Rc 1), AMC810-14 (Port size Rc 1 1/2)



- Note 1) Exhaust cleaner: AMC610-10 and MC810-14 are not included. (Order separately)
- Note 2) Mount so that the exhaust cleaner is at the lower side.
- Note 3) For details about the exhaust cleaner, refer to Best Pneumatics vol.5.

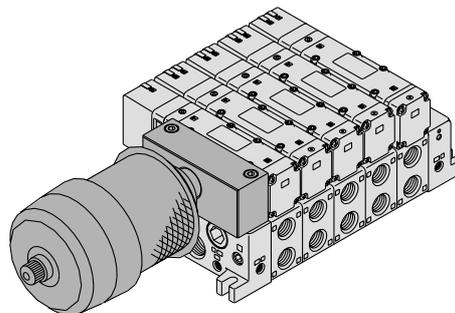

- VQC
- SQ
- VQ0
- VQ4
- VQ5**
- VQZ
- VQD

Plug-in type

Plug lead type

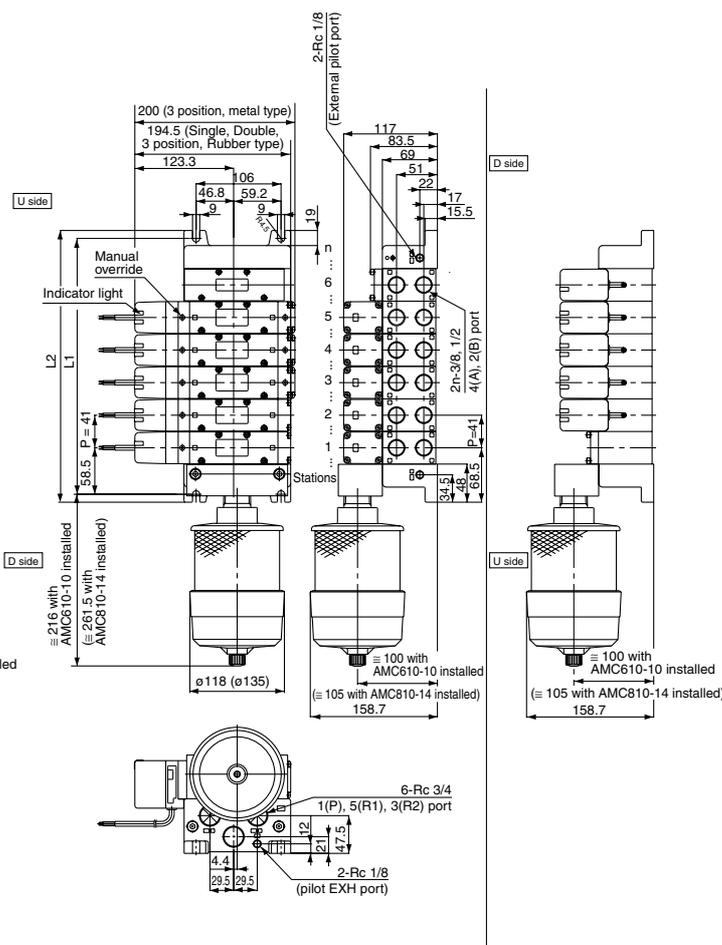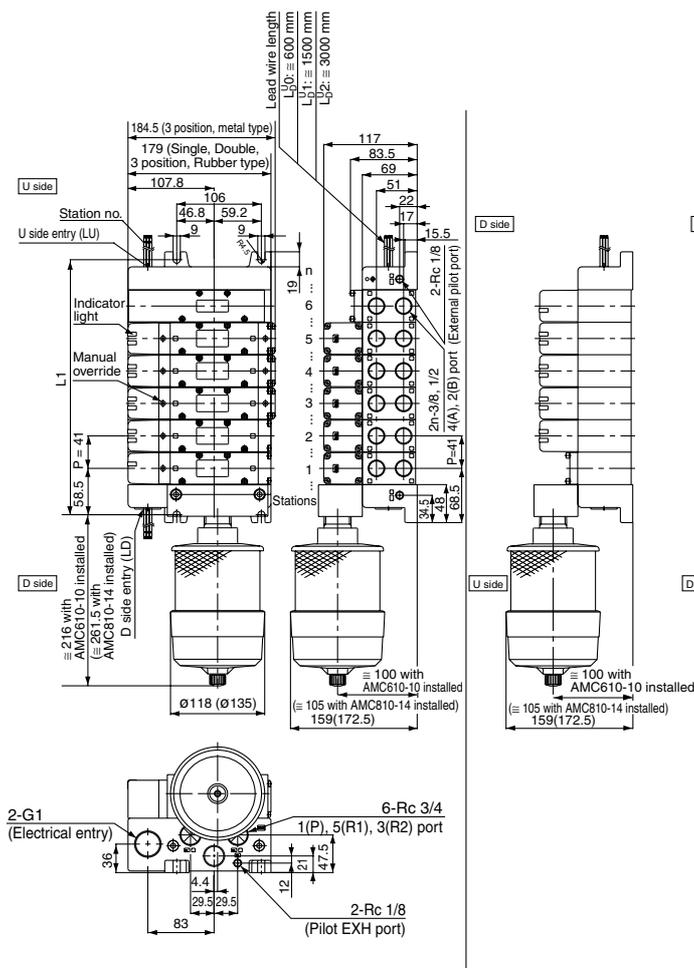

Dimensions

Formula: L1 = 41n + 76, L2 = 41n + 96
 n: Stations (Maximum 12 stations)

L	n	2	3	4	5	6	7	8	9	10	11	12
L1		158	199	240	281	322	363	404	445	486	527	568
L2		178	219	260	301	342	383	424	465	506	547	588

Dimensions

Formula: L1 = 41n + 76, L2 = 41n + 96
 n: Stations (Maximum 12 stations)

L	n	2	3	4	5	6	7	8	9	10	11	12
L1		158	199	240	281	322	363	404	445	486	527	568
L2		178	219	260	301	342	383	424	465	506	547	588



Manifold Option Parts

Interface regulator (P, A, B port regulation)

ARBQ5000-00-□-1 (Plug-in type)

ARBQ5000-00-□-5 (Plug lead type)

By mounting a spacer regulator on the manifold block, it enables to regulate pressure per every valve.

Specifications



Interface regulator		ARBQ5000					
Regulating port		A		B		P	
Applicable solenoid valve		Plug-in	Plug lead	Plug-in	Plug lead	Plug-in	Plug lead
Maximum operating pressure		1.0 MPa					
Set pressure range		0.05 to 0.85 MPa					
Fluid		Air					
Ambient and fluid temperature		-5 to 60°C (No freezing)					
Port size for connection of pressure gauge		M5 x 0.8					
Weight (kg)		0.79	0.74	0.78	0.73	0.79	0.74
Effective area at supply side (mm ²) S at P1 = 0.7 MPa/P2 = 0.5 MPa	P → A	33		75		29	
	P → B	64		33		28	
Effective area at exhaust side (mm ²) S at P2 = 0.5 MPa	A → EA	36		75		78	
	B → EB	68		38		69	

- Note 1) Set the pressure within the operating pressure range of the solenoid valve.
- Note 2) Use a spacer regulator by pressurizing from the P port on the base except the case of being used as a dual pressure valve. Besides, P port regulation is not allowed to use.
- Note 3) When using a perfect spacer, assemble a valve, a spacer regulator and a perfect spacer in this order to use it.
- Note 4) When using in A port regulation, B port regulation by closed center, since there is a problem in its operation, please contact SMC.
- Note 5) Dusttight/splash proof enclosure (IP65) is not available with interface regulator.

How to Order

Solenoid valve	Interface regulator	Regulating port
VQ5□□ (Plug-in type)	ARBQ5000-00-A-1	A
	ARBQ5000-00-B-1	B
	ARBQ5000-00-P-1	P
VQ5□5□ (Plug lead type)	ARBQ5000-00-A-5	A
	ARBQ5000-00-B-5	B
	ARBQ5000-00-P-5	P


Dimensions

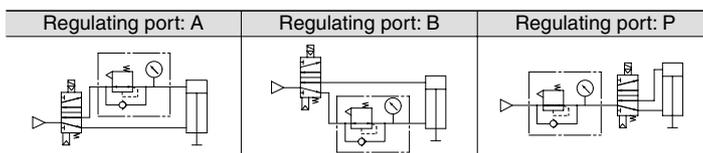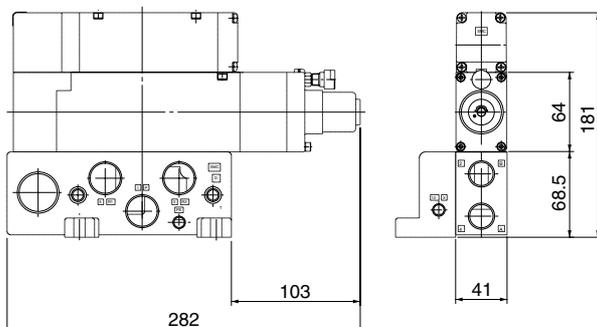


Flow Characteristics

Conditions Inlet pressure: 0.7 MPa


ARBQ5000-00-A (P → A)

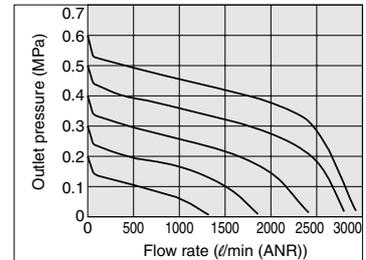


ARBQ5000-00-B (P → B)

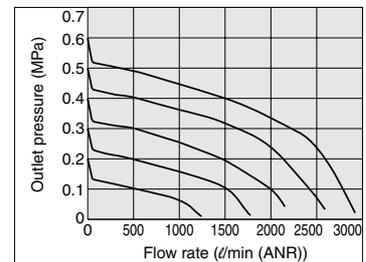

ARBQ5000-00-P (P → A)

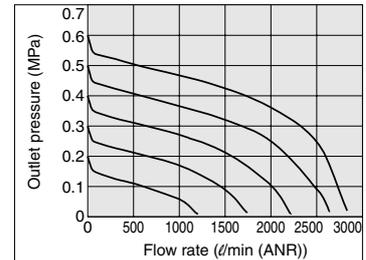

ARBQ5000-00-P (P → B)

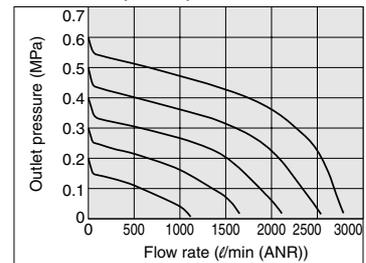


Pressure Characteristics

Conditions

Inlet pressure: 0.7 MPa

Outlet pressure: 0.2 MPa

Flow rate: 20 l/min(ANR)

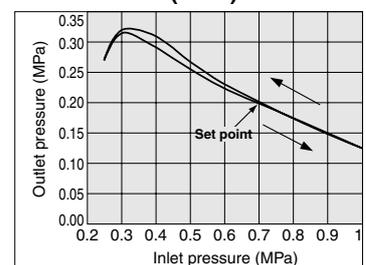

Option

External Pilot Specifications

When the supply pressure is

- lower than the minimum solenoid valve operating pressure of 0.1 to 0.2 MPa, or when it drops below this level,
- used for reverse pressure (R port pressure) or cylinder pressure (A, B port pressure),
- used for vacuum specifications (please contact SMC), it can be used for external pilot specifications.


Order a valve by adding the external pilot specification [R] to the part number.

External pilot is available as standard for manifolds and options.

How to Order Manifold

VQ5100 **R** — 5 — 04

● External pilot specifications

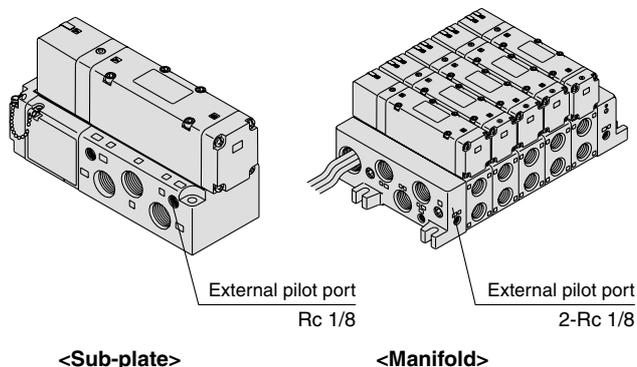

Note) Mixed mounting of internal and external pilots is possible

Pressure Specifications

Valve construction		Metal seal	Rubber seal
Operating pressure range		Vacuum to 1.0 MPa	
External pilot ^{Note)} pressure range	Single	0.1 to 1.0 MPa (0.1 to 0.7 MPa)	0.2 to 1.0 MPa (0.2 to 0.7 MPa)
	Double		0.15 to 1.0 MPa (0.15 to 0.7 MPa)
	3 position	0.15 to 1.0 MPa (0.15 to 0.7 MPa)	0.2 to 1.0 MPa (0.2 to 0.7 MPa)

Note) Values inside () denote the low wattage (0.5 W) specifications.

International Thread Standards Other than Rc

Rc specifications are standard for all ports, however, NPT, NPTF and G are available for international markets.

Add the appropriate symbol following the port size in the standard part number.

How to Order Single Valves (Example)

VQ5100 — 5 — 04

● Cylinder port
● Port size

● Thread type
1(P), 5(R1), 3(R2) and 4(A),
2(B) port

Nil	Rc
N	NPT
T	NPTF
F	G

How to Order Manifold

VV5Q51 — 08 — 03 FU1

● Cylinder port
● Port size

● Thread type
1(P), 5(R1), 3(R2) and 4(A),
2(B) port

Nil	Rc
N	NPT
T	NPTF
F	G

How to Order Sub-plates and Options (Example)

VQ5000 — P — B 04 (Sub-plate)

VVQ5000 — P — 1 — 04 (Option)

● Port size

● Thread type

Nil	Rc
N	NPT
T	NPTF
F	G

VQC

SQ

VQ0

VQ4

VQ5









VQZ

VQD









Series VQ5000 Construction

Plug-in Unit

Metal seal

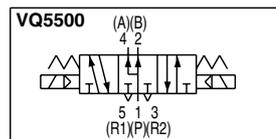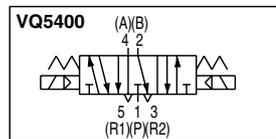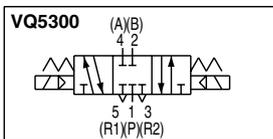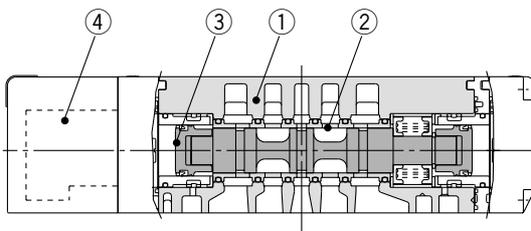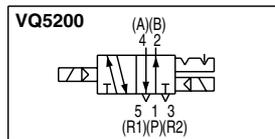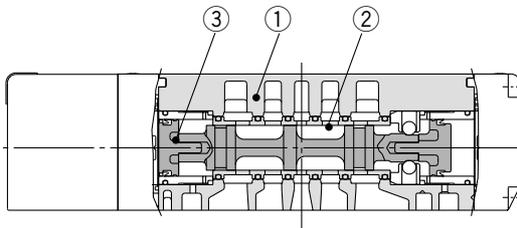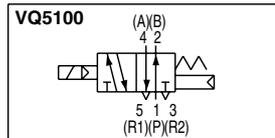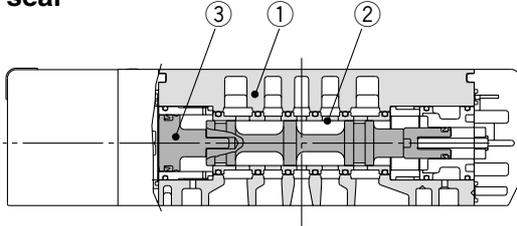

Rubber seal type

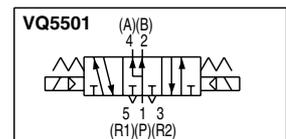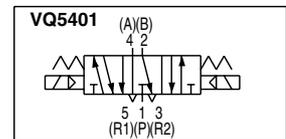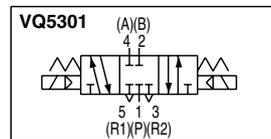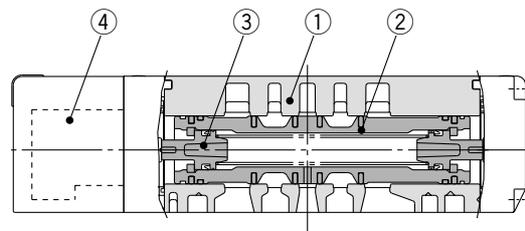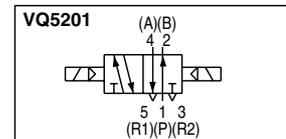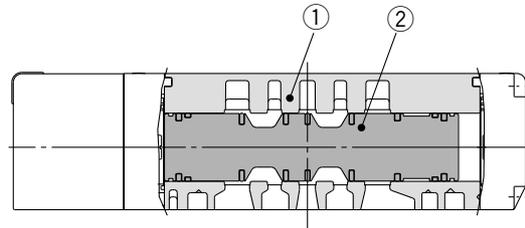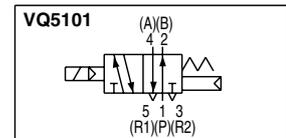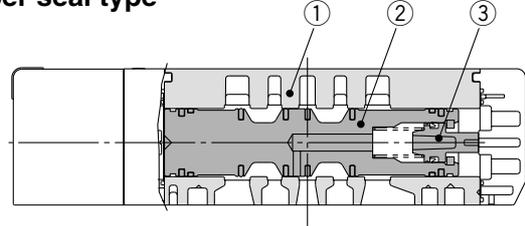

Component Parts

Number	Description	Material	Note
①	Body	Aluminum die-casted	
②	Spool/Sleeve	Stainless steel	
③	Piston	Resin	

Replacement Parts

④	Pilot valve assembly	VQZ111P-□	* Coil rated voltage Example) 24 VDC: 5
---	----------------------	-----------	--

Component Parts

Number	Description	Material	Note
①	Body	Aluminum die-casted	
②	Spool valve	Aluminum, NBR	
③	Piston	Resin	


Replacement Parts

④	Pilot valve assembly	VQZ111P-□	* Coil rated voltage Example) 24 VDC: 5
---	----------------------	-----------	--

Series VQ5000 Construction

Plug Lead Unit

Metal seal

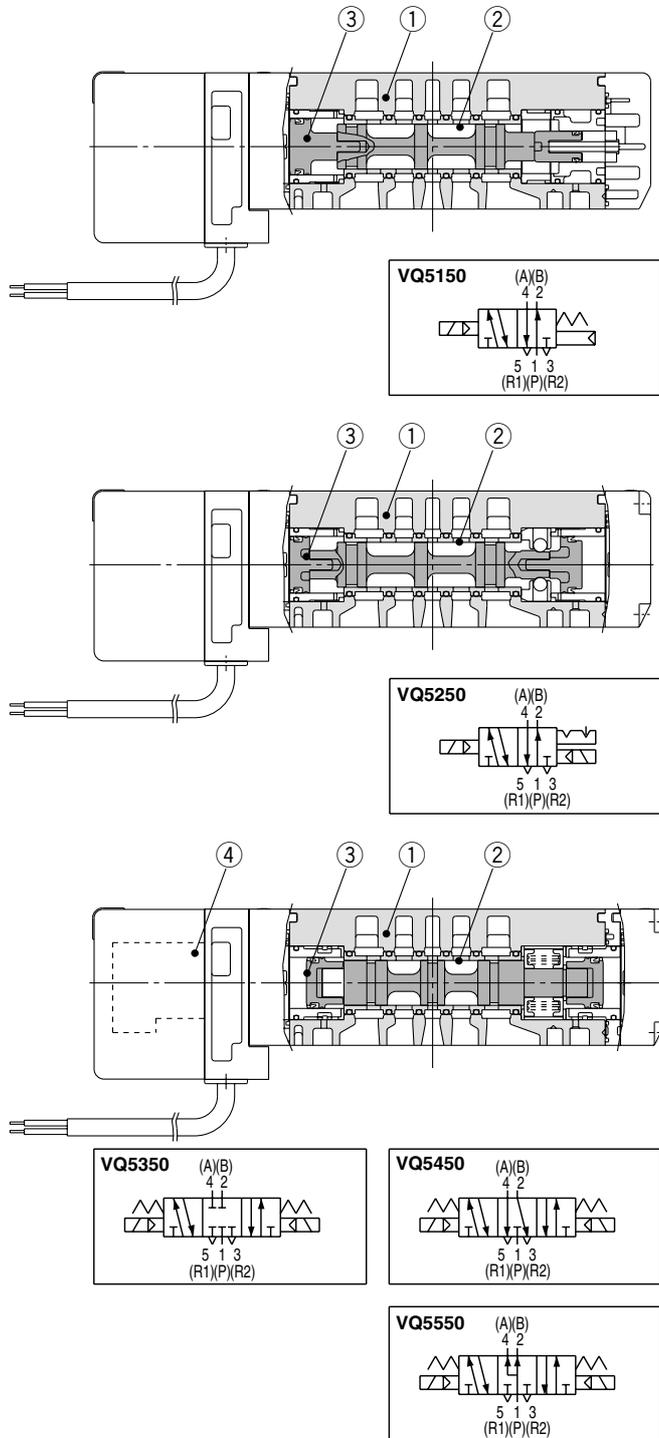


Component Parts

Number	Description	Material	Note
①	Body	Aluminum die-casted	
②	Spool/Sleeve	Stainless steel	
③	Piston	Resin	

Replacement Parts

④	Pilot valve assembly	VQZ111P-□	* Coil rated voltage Example) 24 VDC: 5
---	----------------------	-----------	--

Rubber seal type

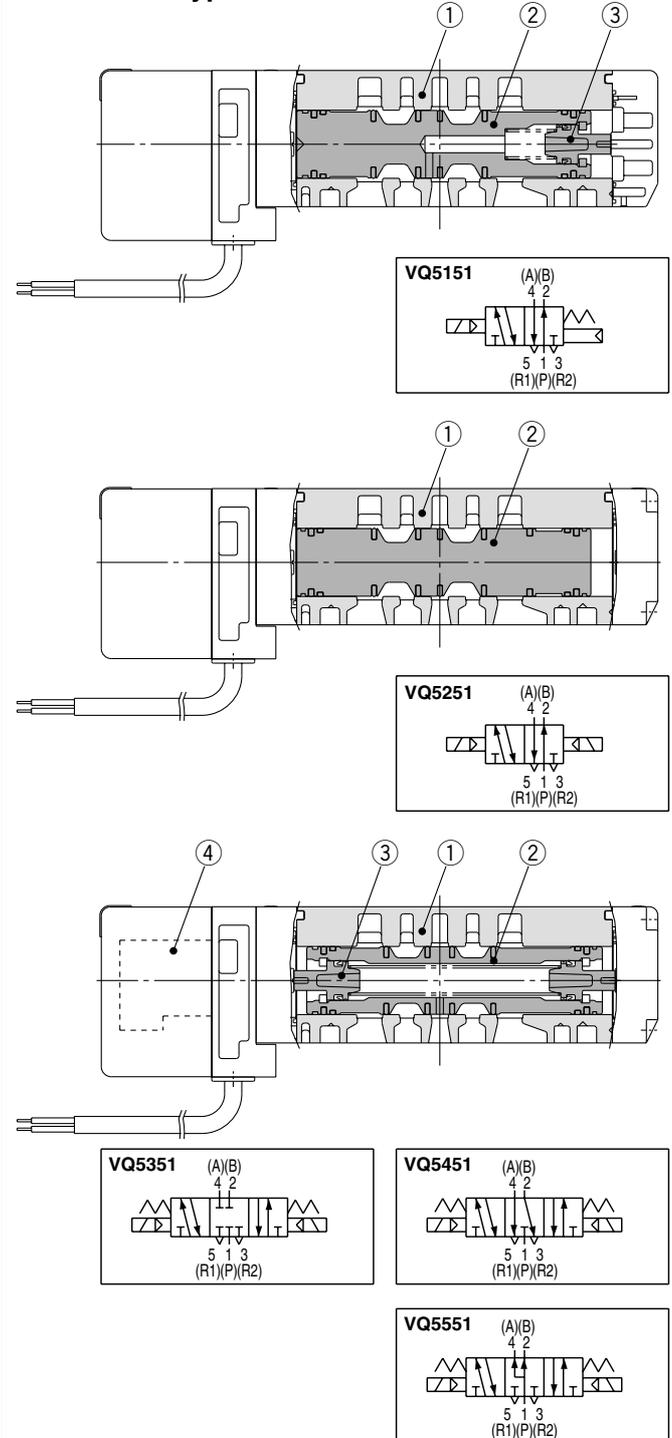

Component Parts

Number	Description	Material	Note
①	Body	Aluminum die-casted	
②	Spool valve	Aluminum, NBR	
③	Piston	Resin	

Replacement Parts

④	Pilot valve assembly	VQZ111P-□	* Coil rated voltage Example) 24 VDC: 5
---	----------------------	-----------	--

VQC

SQ

VQ0

VQ4


VQ5

VQZ

VQD

Series VQ5000

Exploded View of Manifold

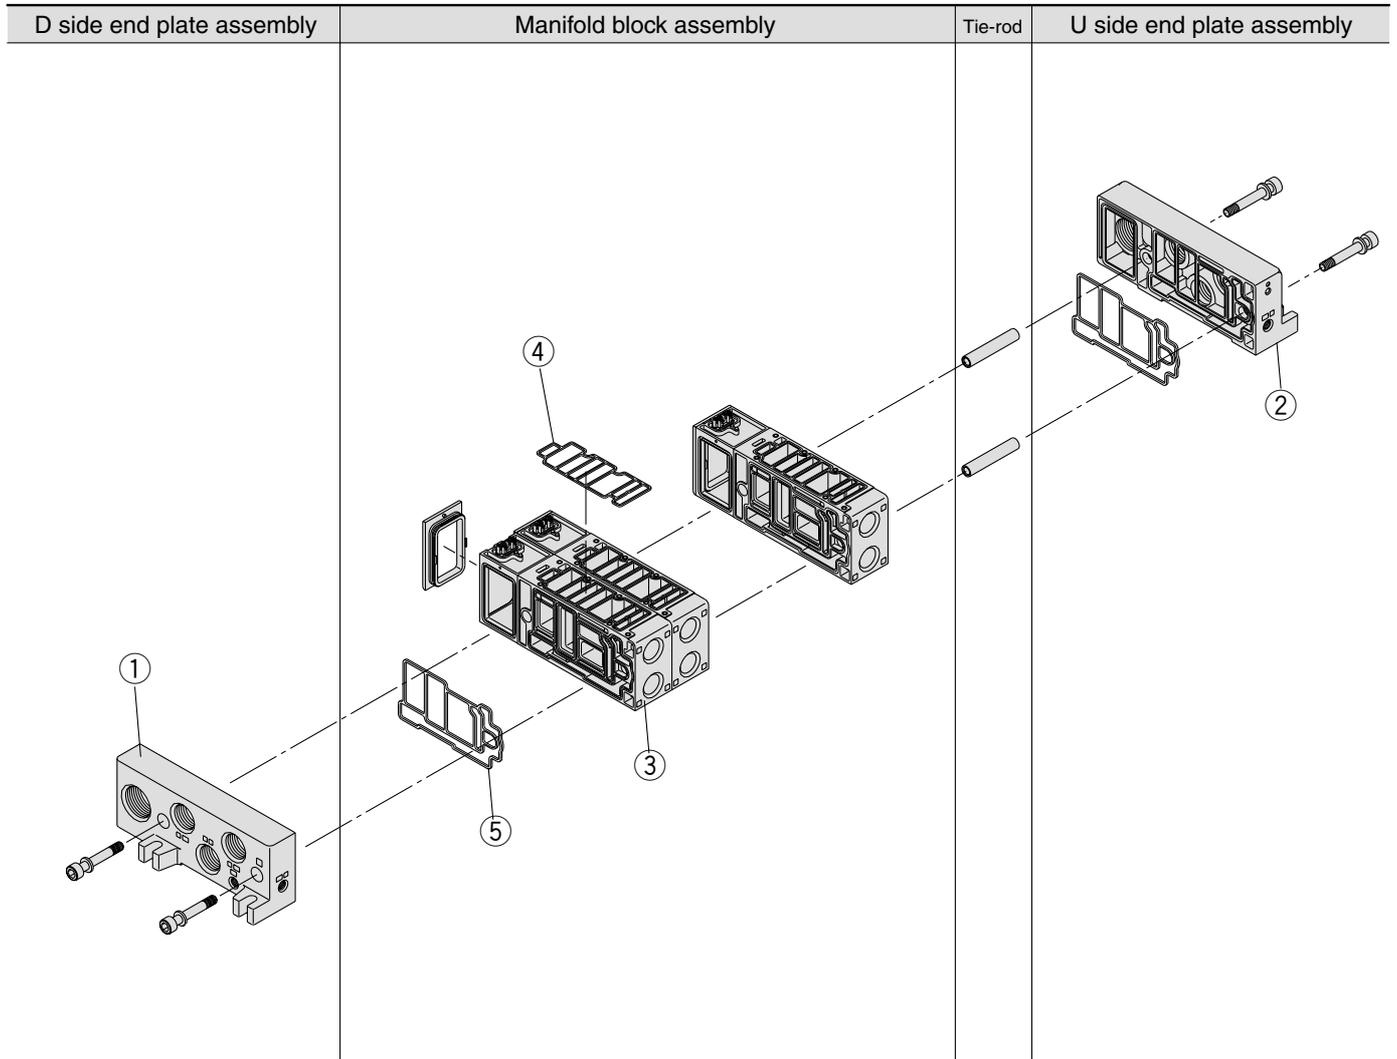

Note) The electrical entry cannot be changed.

The drawing shows a plug-in type.

Exploded View of Manifold Series VQ5000

<D Side End Plate Assembly>

1. D side end plate assembly part no. (for F, L, S, T & T1 kits)

VVQ5000 — 3A — 1

Electrical entry

L	T1, F, L, T, S kits
F ⁽¹⁾	F kit (Connector side)
C	C kit (plug lead type)

Option

Nil	Standard
W ⁽²⁾	IP65 enclosure is dust
CD1	Exhaust cleaner mounting Rc 1
CD2	Exhaust cleaner mounting Rc 1 1/2
SD	Direct exhaust with silencer box

Note 1) D-sub connector is not included.
Note 2) Splashproof specifications is not available for F and T1.

<U Side End Plate Assembly Part No.>

2. U side end plate assembly part no. (for F, L, S, T & T1 kits)

VVQ5000 — 2A — 1

Electrical entry

L	T1, F, L, T, S kits
F ⁽¹⁾	F kit (Connector side)
C	C kit (plug lead type)

Option

Nil	Standard
W ⁽²⁾	IP65 enclosure is dust
CU1	Exhaust cleaner mounting Rc 1
CU2	Exhaust cleaner mounting Rc 1 1/2
SU	Direct exhaust with silencer box

Note 1) D-sub connector is not included.
Note 2) Splashproof specifications is not available for F and T1.

<Manifold Block Assembly>

3. Manifold block assembly part no.

VVQ5000 — 1

Type

A	For 1 station
---	---------------

Option

Nil	Standard
W ⁽²⁾	Enclosure IP65 compliant

Electrical entry

F1	F kit Double wiring
F2	F kit Single wiring
T0	T1 kit (Individual terminal block) Double wiring
T1	T kit (Terminal box) Double wiring
T2	T kit (Terminal box) Single wiring
S1	S kit Double wiring
S2	S kit Single wiring
L0□	L0 kit □: Stations (1 to 12)
L1□	L1 kit □: Stations (1 to 12)
L2□	L2 kit □: Stations (1 to 12)
C	C kit (Plug lead type)

03	Rc 3/8
04	Rc 1/2
B	Bottom ported Rc 1/2

Note 1) Tie-rods (2 pcs.) and lead wire assembly for station addition included.
Note 2) Splashproof specifications is not available for F and T1.

<Manifold Block Replacement Parts>

Replacement Parts

No.	Part no.	Description	Material	Number
④	VVQ5000-80A-1	Gasket	NBR	10
⑤	VVQ5000-80A-2	Gasket	NBR	10

Note) Spare parts consist of sets containing 10 pcs. each.

<SI Unit>

SI Unit Part No.

Type	Model symbol	SI unit part no.		Description
		For U side mounting	For D side mounting	
Dedicated output model	A	EX323U-S001	EX323D-S001	General type SI unit (Series EX300)
	B	EX123U-SMB1	EX123D-SMB1	Mitsubishi Electric Corporation: MELSECNET/MINI-S3 Data Link System
	BB	EX124U-SMB1	EX124D-SMB1	Mitsubishi Electric Corporation: MELSECNET/MINI-S3 Data Link System (2 power supply systems)
	C	EX123U-STA1	EX123D-STA1	OMRON: SYSBUS Wire System
	D	EX123U-SSH1	EX123D-SSH1	SHARP: Satellite I/O Link System
	F1	EX123U-SUW1	EX123D-SUW1	NKE: Uni-wire System (16 output points)
	H	EX123U-SUH1	EX123D-SUH1	NKE: Uni-wire H System
	J1	EX123U-SSL1	EX123D-SSL1	SUNX: S-LINK System (16 point outputs)
	J2	EX123U-SSL2	EX123D-SSL2	SUNX Corporation: S-LINK System (8 output points)
	K	EX123U-SFU1	EX123D-SFU1	Fuji Electric Co.: T-LINK Mini System
	Q	EX124U-SDN1	EX124D-SDN1	OMRON Corp.: DeviceNet, CompoBus/D (2 power supply systems)
	R1	EX124U-SCS1	EX124D-SCS1	OMRON Corp.: CompoBus/S (16 output points, 2 power supply systems)
	R2	EX124U-SCS2	EX124D-SCS2	OMRON Corp.: CompoBus/S (8 output points, 2 power supply systems)
	U	EX124U-SJN1	EX124D-SJN1	JEMANET (2 power supply systems)
	V	EX124U-SMJ1	EX124D-SMJ1	Mitsubishi Electric Corporation: CC-Link System (2 power supply systems)
G	EX124U-SAB1	EX124D-SAB1	Allen-Bradley Remote I/O (RIO) System (2 power supply systems) (Rockwell Automation, Inc.)	